


Serious Steel

822104 ADJUSTABLE SIT-UP BENCH

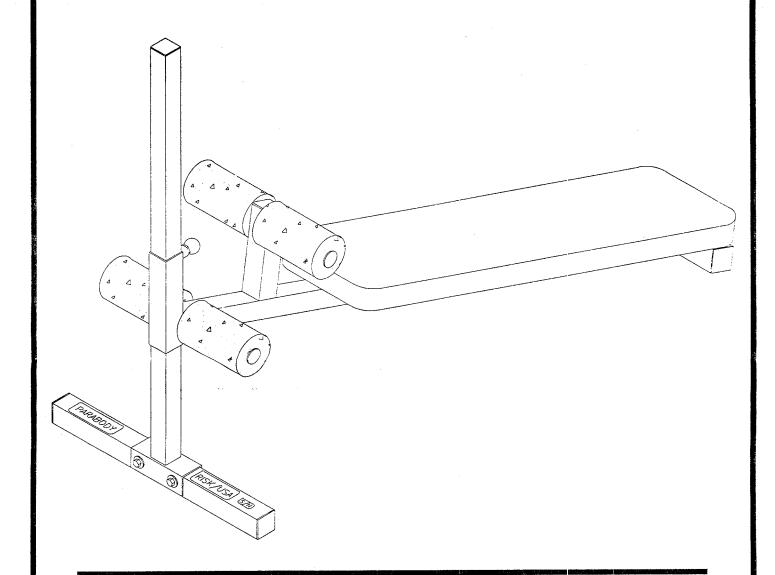


ASSEMBLY INSTRUCTIONS

1


Part # 6797501

Revision: 01/17/00

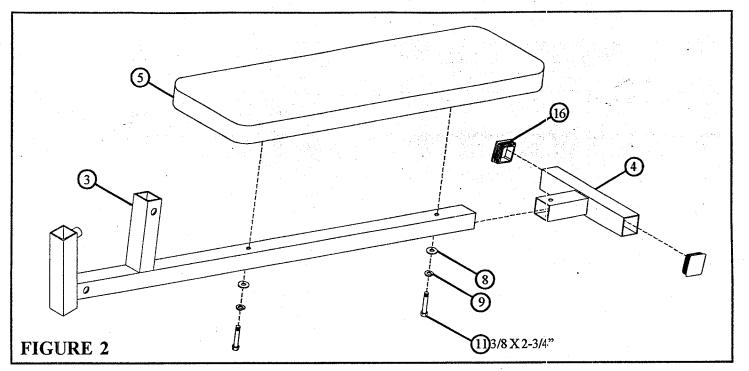

STEP 2:


- Insert two 2" SQ. END CAPS (16) into the ends of the BASE (4) as shown in FIGURE 2.
- SECURELY assemble the PAD (5) to the MAIN PAD SUPPORT (3) and BASE (4) using two 3/8" X 2-3/4" BOLTS (11), two 3/8" LOCK WASHERS (9), two 3/8" WASHERS (8), and two 3/8" LOCK NUTS (10). See FIGURE 2.

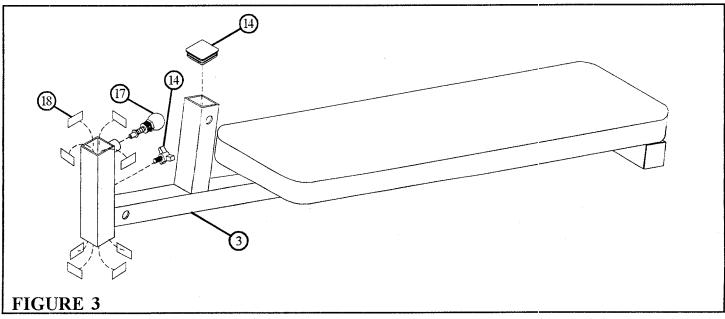

STEP 3:


- Apply eight 1-3/4 X 3/4" PARAGLIDES (18) to the INSIDE of the MAIN PAD SUPPORT (3) as shown in FIGURE 3. (NOTE: Throughly clean the inside surface before attaching PARAGLIDES.)
- Securely assemble one SPRING PIN ASSEMBLY (17) and one THUMBSCREW (14) to the MAIN PAD SUPPORT (3). See FIGURE 3.
- Insert one 2" SQ. END CAP (16) into the end of the tube on the MAIN PAD SUPPORT (3) as shown in FIGURE 3.

			1/2									1/2	
()	1		2	.	. 3	,	. 4	4		5	.	6
	<u> </u>	L						 	<u> </u>	 <u> </u>	 <u> </u>	<u> </u>	

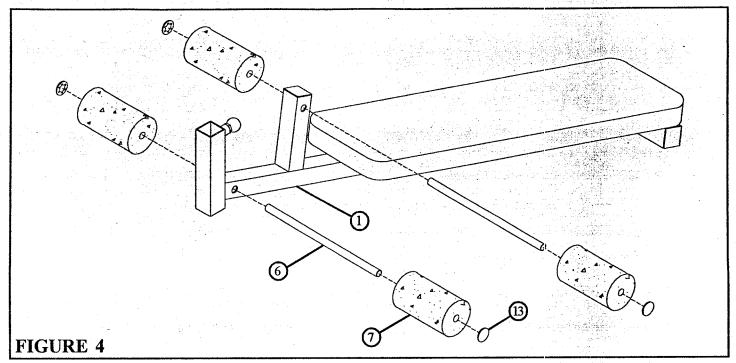

STEP 4:

• Slide the four ROLLER PADS (7) onto the MAIN PAD SUPPORT (3) using two 3/4 X 16" TUBES (6), and four STARLOCK COLLARS (13) as shown in FIGURE 4.

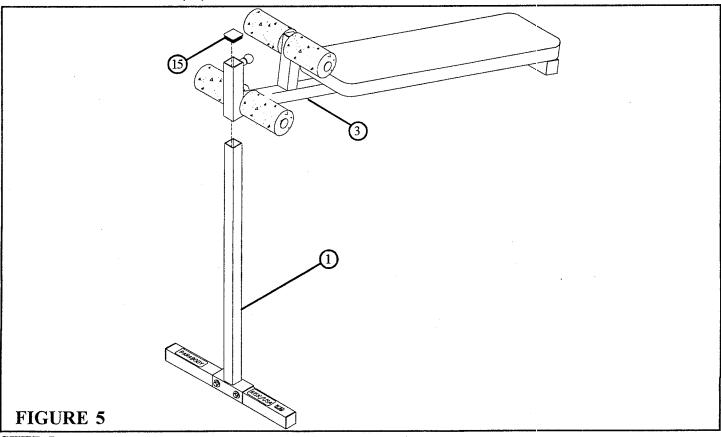

STEP 5:


- Pull back the SPRING PIN and CAREFULLY slide the MAIN PAD SUPPORT (3) over the FRONT BASE SUPPORT (1) as shown in FIGURE 5.
- Insert one 1-3/4" SQ. END CAP (15) into the ends of the FRONT BASE SUPPORT (1) as shown in FIGURE 5.

THIS CONCLUDES THE ASSEMBLY OF THE 822104 ADJUSTABLE SIT-UP BENCH

PARTS LIST

KEY	PART#	DESCRIPTION	QTY
1	6522102	FRONT BASE SUPPORT	1
2	6483302	TUBE	1
3	6522403	MAIN PAD SUPPORT	1
4	6522603	BASE	1
5	6666502	PAD ASSEMBLY	1
6	6125101	3/4 X 16" TUBE	2
7	6194601	ROLLER PAD	2
8	3102501	3/8" WASHER	6
9	3102601	3/8" LOCK WASHER	2

KEY	PART#	DESCRIPTION	QTY
10	3102802	3/8" LOCK NUT	2
11	3102922	3/8 X 2-3/4" BOLT	2
12	3102904	3/8 X 3" BOLT	2
13	3105401	STARLOCK COLLAR	4
14	6145801	THUMBSCREW	1
15	6236701	1-3/4" SQ. END CAP	1
16	6405201	2" SQ. END CAP	5
17	6412001	SPRING PIN ASSEMBLY	1
	6416601	1-1/2 X 3/4" PARAGLIDE (QTY 8)	1

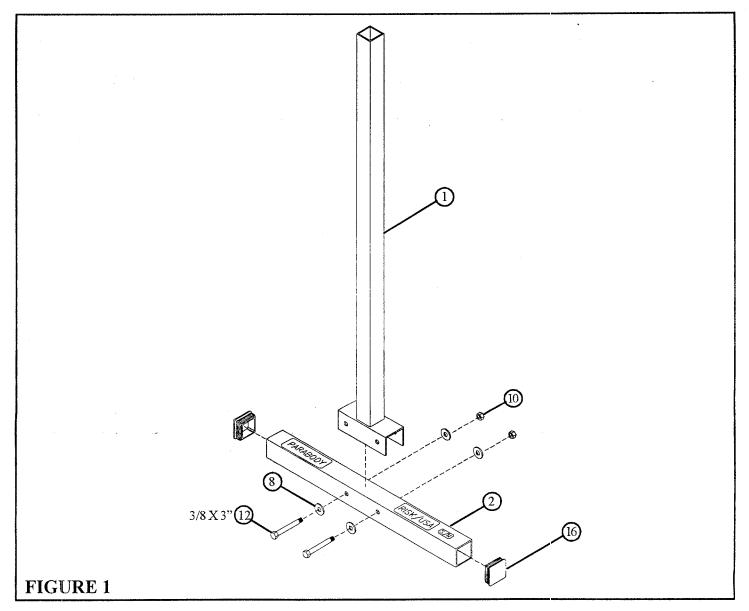

STEP 1:

- Insert two 2" SQ. END CAPS (16) into the ends of the TUBE (2) as shown in FIGURE 1.
- SECURELY assemble the TUBE (2) to the FRONT BASE SUPPORT (1) using two 3/8 X 3" BOLTS (12), four 3/8" WASHERS (8), and two 3/8" LOCK NUTS (10). See FIGURE 1.

IMPORTANT NOTES WELCOME TO THE WORLD OF **Serious Steel!**

Please note:

- * Thank you for purchasing the Parabody 822104 ADHUSTABLE SIT-UP BENCH. Please read these instructions thoroughly and keep them for future reference. This product must be assembled on a flat, level surface to assure its proper function.
- * We recommend cleaning your product (pads and frame) on a regular basis, using warm soapy water. Touch-up paint can be purchased from your Parabody customer service representative at (800) 328-9714.

There is a risk assumed by individuals who use this type of equipment. To minimize risk, please follow these rules:


- 1. Inspect equipment daily. Tighten all loose connections and replace worn parts immediately. Failure to do so may result in serious injury.
- 2. Do not allow minors or children to play on or around this equipment.
- 3. Exercise with care to avoid injury.
- 4. If unsure of proper use of equipment, call your local Parabody distributor or call the Parabody customer service department at (800) 328-9714.


Tools Required for Assembly

- * 9/16" wrench
- * Ratchet with 9/16" socket
- * Adjustable wrench
- * Tape measure

Bolt Length Ruler

NOTE: BOLT LENGTH IS MEASURED FROM THE UNDERSIDE OF THE HEAD OF THE BOLT.

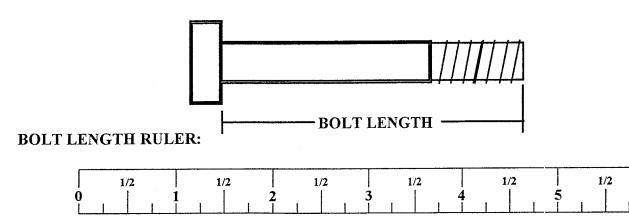

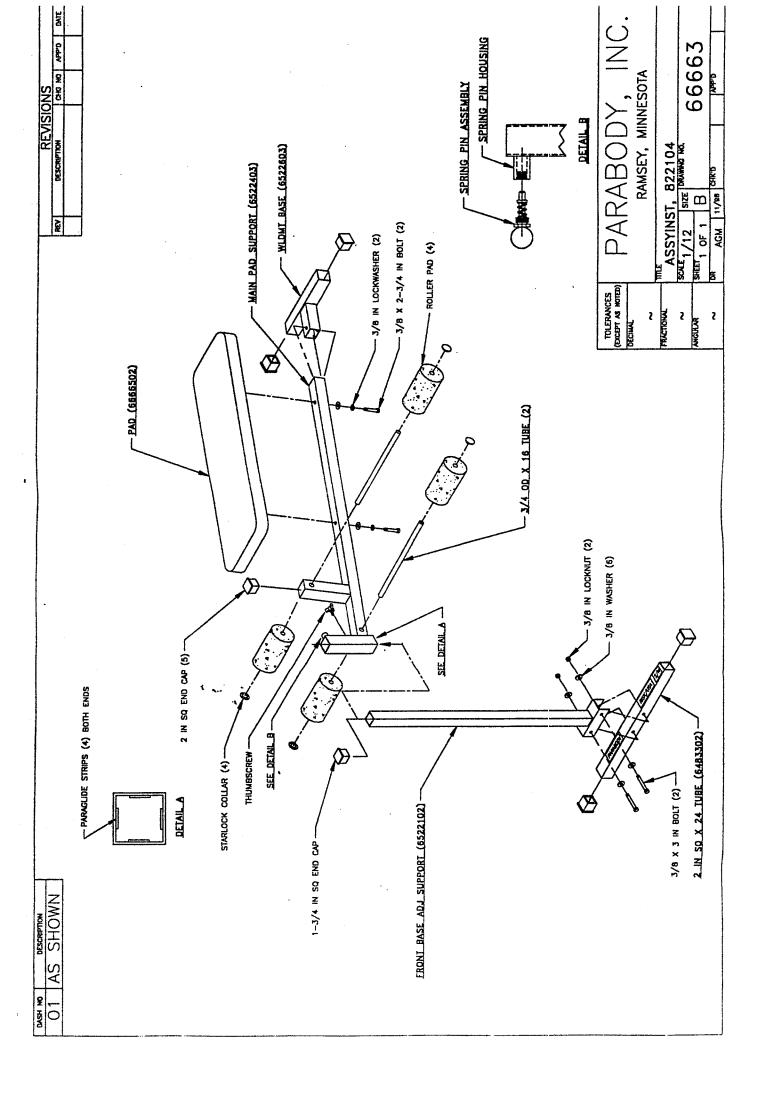

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com