



Owner's Manual

72 in. Hobby Work Station with Mobile Tool Storage



Model No.960-0009

Customer Service Department:

Nexgrill Industries Inc.

280 Machlin Court

City of Industry, CA 91789 USA

Tel: (909) 598-8799 Fax: (909) 598-7699







Office Hours: 8 a.m. – 5 p.m. P.S.T.

<http://www.nexgrill.net>

Parts List

Parts Name		Quantity
1. Solid Birch Wood Top Bar code: HW0501BG00NW500		1
2. Handle, Mobile Tool Storage Bar Code: HD0902AZ00NR490		2
3. Adjustable Leveling Feet Bar Code: SC1105CE14NC115		8
4. Caster with Brake Bar Code: HW0805ZZ00ND075		2
5. Caster without Brake Bar Code: HW0805ZZ00ND075		2
6. Hardware (5/32" & 3/16") Bar Code A: SC1505AA14NC000 Bar Code B: SC1505AA14NC000	 	12

Features

Name		Quantity
a. Aluminum Handle, Drawer Bar Code: HD0105AZ00NR400		12
b. Hydraulic Lift Bar Code: HW3101AZ00NL000		2
c. Adjustable Filing Rod Bar Code: HW1401AA00NR360		2
d. Liner, Drawer Bar Code: HW3701ZZ00NL444		14
e. Removable Divider(two modes) Bar Code A: HW3601CD11NL438 Bar Code B: HW3602CD11NL405		3 Drawer Sets
f. Ball Bearing Glides Bar Code: HW0407ZZ00NL015		30

Assembly Instruction

1. Adjustable Leveling Feet Installation:

- a. Lay the file cabinets on their back and screw in the adjustable leveling feet.



2. Mobile Tool Storage Assembly Instructions:

- a. Screw in four wheels to the cart (2 casters with brake on the left side).



- b. The handles have the necessary screws already inserted in the handles. Unscrew these screws, line up the handle with the holes on the side of top lid, insert the screws from the inside of the lid, and firmly tighten the screws.



3. Wood Top Installation:

- a. There are eight (8) anchor screws already inserted near the tops of the cabinets with two (2) on each side. Unscrew these eight (8) screws.
- b. Place the wood top on the two file cabinets. Two stainless steel frames on the bottom of wood top will fit around the tops of cabinets.
- c. Line up the holes on the stainless steel frame and the side of file cabinet, insert the screws and firmly tighten them.



4. Roll the mobile tool storage in place to complete the installation.





-How to remove the drawer?

Slide the drawer fully out. Note the black plastic levers on both sides of the drawer. Depress the levers and slide the drawer out.



-Drawer Dividers are designed so they may be used in any of the five (5) mid-sized drawers in the two cabinets. There are enough dividers to fully divide three drawers or partially divide more of them.

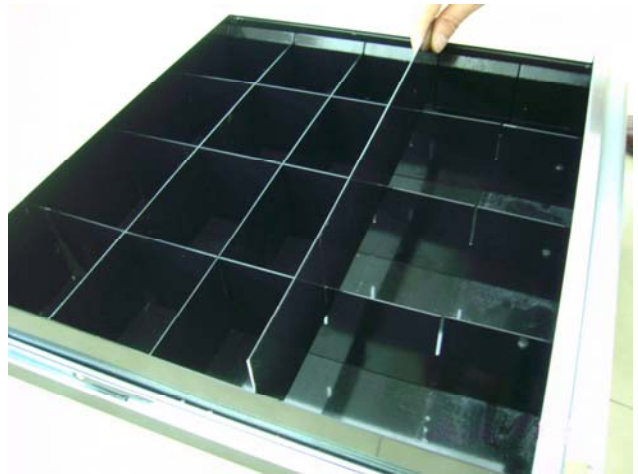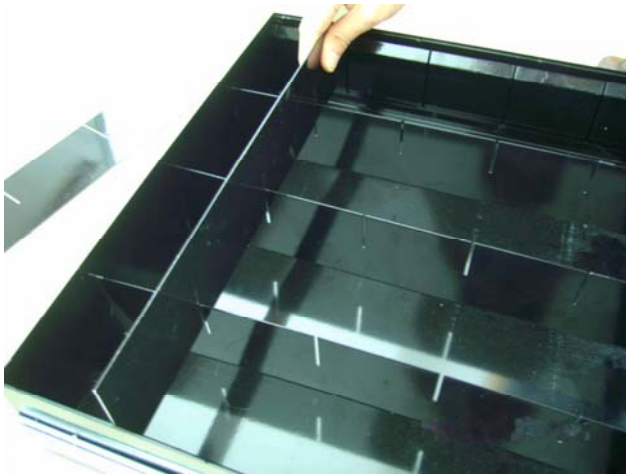

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>