



User Manual

RAR601 lab test cover R2

1/8/04. 6:47 PM

CONTENTS

Contents1
Introduction2
About Oregon Scientific2
Product Overview3
Front View3
Back View4
Remote Sensor5
Getting Started 6
Batteries6
Change Settings 6
Table Stand or Wall Mount6
Remote Sensor 6
Setup Sensor7
Data Transmission7
Search for Sensor8
Clock8
Set Clock8
Switch Clock Display8
Alarm9
View Alarm Settings9
Set Alarm9
Activate Alarm9
Temperature9

Select Temperature Unit	9
Minimum / Maximum Records	9
Reset System	10
Safety and Care	10
Narnings	10
Froubleshooting	11
Specifications	11
Main Unit Dimensions	11
Remote Sensor Dimensions	11
Temperature	11
Temperature	11
Remote Sensor	
Clock	12
Power	12
FCC Statement	12





Thank you for selecting the Oregon Scientific™ Wireless Thermo Clock (RAR601). This device bundles alarm clock and temperature monitoring features into a single tool you can use from the convenience of your home.

In this box, you will find:

- · Main unit
- · Remote sensor

Keep this manual handy as you use your new product. It contains practical step-by-step instructions, as well as technical specifications and warnings you should know.

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about other Oregon Scientific products such as digital cameras, hand-held organizers, health and fitness gear, and projection clocks. The website also includes contact information for our customer service department, in case you need to reach us.





•

PRODUCT OVERVIEW

FRONT VIEW




- Outdoor Temperature Area: Readings, sensor battery and reception status
- Indoor Temperature Area: Readings and main unit battery status.
- 3. Clock / Alarm Area: Time, day of week, month, date, alarm
- 4. A: Press to increase setting
- ▼: Press to decrease setting
- MODE: Press to change display / settings
- MEM: Press to view current or max / min temperature readings
- 8. ((.)): Press to view alarm settings, activate alarm






BACK VIEW

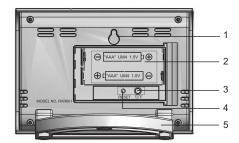


- 1. Wall mount
- 2. Battery compartment
- 3. °C / °F switch
- 4. **RESET** hole
- 5. Table stand

REMOTE SENSOR

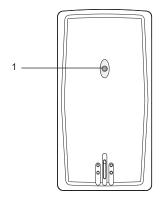



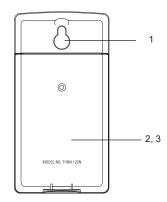

- 1. Wall mount hole
- 2. Battery compartment
- 3. Battery compartment cover

5

RAR601 lab test R2



1/17/04, 4:47 PM





GETTING STARTED

BATTERIES

Batteries are not supplied with this product. You will need to purchase 2 x UM-4 (AAA) 1.5V alkaline batteries for the main unit, and 2 x UM-3 (AA) 1.5V alkaline batteries for the remote sensor.

Insert batteries before first use, matching the polarity as shown in the battery compartment. For best results, install batteries in the remote sensor before the main unit. Press **RESET** after each battery change.

NOTE Do not use rechargeable batteries.

shows when batteries are low.

UNIT	♣ LOCATION
Main	Indoor Temperature Area
Remote	Outdoor Temperature Area.

CHANGE SETTINGS

- Press and hold MODE for 2 seconds to enter setting mode.
- 2. Press UP or DOWN to change settings.
- 3. Press MODE to confirm.

TABLE STAND OR WALL MOUNT

Insert the stand on the back of the product, or mount it on a wall with a nail.





REMOTE SENSOR

This product is shipped with a Sensor that collects temperature readings. Only one sensor can be used with this product.

6





1/17/04, 4:47 PM





SETUP SENSOR

- Open the remote sensor battery compartment with a small Phillips screwdriver.
- 2. Insert the batteries, matching the polarity as shown in the battery compartment.
- 3. Place the sensor near the main unit. Press RESET on the main unit to initiate signal sending between the sensor and the main unit. The reception icon on the main unit will blink for approximately 3 minutes while it is searching for the sensor. (Refer to the Sensor Data Transmission section for more information.)
- 4. Close the remote sensor battery compartment.
- Secure the sensor in the desired location using the wall mount or table stand.

For best results:

- Insert the batteries before you mount the sensor.
- Place the sensor out of direct sunlight and moisture.
- Do not place the sensor more than 30 meters (98 feet) from the main (indoor) unit.
- Position the sensor so that it faces the main (indoor) unit, minimizing obstructions such as doors, walls, and furniture.
- Place the sensor in a location with a clear view to the sky, away from metallic or electronic objects.
- Position the sensor close to the main unit during cold winter months as below-freezing temperatures may affect battery performance and signal transmission.

•

You may need to experiment with various locations to get the best results.


DATA TRANSMISSION

Data is sent from the sensor(s) every 78 seconds. The reception icon shown in the Outdoor Temperature Area shows the status.









SEARCH FOR SENSOR

To search for the sensor, press and hold **UP** and **DOWN** for 2 seconds.

NOTE If the sensor is still not found, check the batteries, obstructions, and remote unit location.

NOTE Signals from household devices such as doorbells, electronic garage doors, and home security systems may cause temporary reception failure. This is normal and does not affect general product performance. The reception will resume once the interference ends.



This product has two displays: Clock with day of week in English, Spanish, French, Italian, or German, and Calendar display with date and month.

SET CLOCK

- Press and hold MODE for 2 seconds. The Clock Area will blink.
- Select the hour format (12 or 24 hour), hour, minute, year, month, day, and language. Press UP or DOWN to change the setting. Press MODE to confirm.

NOTE The language options are (D) German, (E) English, (F) French, (I) Italian, and (S) Spanish.

SWITCH CLOCK DISPLAY

Press MODE to toggle between Clock and Calendar display.









This product is equipped with a 2-minute crescendo alarm.

VIEW ALARM SETTINGS

Press ((,)). The Alarm Time and On/Off status will show in the Clock Area

SET ALARM

- 1. Press ((.)) to switch to Alarm display.
- Press and hold ((.)) again for 2 seconds. The Alarm settings will blink.
- Select the hour and minute. Press UP or DOWN to change settings. Press ((.)) to confirm.

ACTIVATE ALARM

Press ((.)) to activate or deactivate the Alarm. > shows in the Alarm Area when the Alarm is activated.

TEMPERATURE

This product can display current, maximum, and minimum temperature readings collected by the main unit (indoor) and remote sensor (outdoor).

Outdoor temperature data is collected by the remote sensor and displayed every 78 seconds.

SELECT TEMPERATURE UNIT

Press the °C / °F button to switch between temperature units. The button is located in the battery compartment.

MINIMUM / MAXIMUM RECORDS

Press **MEM** to toggle between current, maximum (MAX) and minimum (MIN) records.

To clear the records, press and hold **MEM** for 2 seconds. A beep will sound to confirm that the memory has been cleared.







RESET SYSTEM

The **RESET** button is located in the battery compartments for the main unit. Press **RESET** when you change the batteries and whenever performance is not behaving as expected (for example, unable to establish radio frequency link with remote sensor).

NOTE When you press RESET, all settings will return to default value, and you will lose all stored inform ation.

SAFETY AND CARE

Clean the product with a slightly damp cloth and alcoholfree mild detergent. Avoid dropping the product or placing it in a high-traffic location.

WARNINGS

This product is designed to give you years of service if handled properly. Observe the following guidelines:

- Never immerse the product in water. This can cause electrical shock and damage the product.
- Do not subject the main unit to extreme force, shock, or fluctuations in temperature or humidity.
- · Do not tamper with the internal components.
- Do not mix new and old batteries or batteries of different types.
- Do not use rechargeable batteries with this product.
- Remove the batteries if storing this product for a long period of time.
- · Do not scratch the LCD display.

Do not make any changes or modifications to this product. Unauthorized changes may void your right to use the product. The technical specification of this product and contents of this user guide are subject to change without notice. Images not drawn to scale.



10





1/17/04, 4:47 PM





Check here before contacting our customer service department.

Problem	Symptom	Remedy
Calendar	Strange date / month	Change language (→9)
Temp	Shows "LLL" or "HHH"	Temperature is out-of- range
sensor remote sensor Data does		Check batteries (→6)
		Check location (→7)
	Data does not match main unit	Initiate a manual sensor search (→8)

SPECIFICATIONS

BAAINI	TITY.	100	DOM:	/IIII	13	Tal	vr.
W/ATTN	Tall Ki		ווגשו		[-]	(m)	(P

LxWxH 103 x 48 x 75 mm (4.06 x 1.89 x 2.96 inches) 1.62 ounces with battery Weight

REMOTE SENSOR DIMENSIONS

LxWxH 96 x 50 x 62 mm (3.8 x 2.0 x 2.4 inches) 46 grams without battery Weight

TEMPERATURE

Unit °C or °F Indoor Range -5 °C to 50 °C (23 °F to 122 °F) -20 °C to 60 °C Outdoor Range (-4 °F to 140 °F) Resolution 0.1 °C (0.2° F)

REMOTE SENSOR

RF frequency 433 MHz 30 meters (98 feet) Range with no obstructions every 78 seconds Transmission

Min / Max

CLOCK

Memory

Clock display HH:MM Hour format 12hr AM/PM or 24hr Calendar DD/MM; weekday in 5 languages (D, E, F, I, S) Alarm 2- minute crescendo

Main unit batteries 2 x UM-4 (AAA) 1.5V alkaline 2 x UM-3 (AA) 1.5V Sensor batteries

alkaline

11

1/17/04, 4:47 PM

RAR601 lab test R2



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.







The information below is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com, or on the warranty card for this product) for all inquiries instead.

We

Name: Oregon Scientific, Inc.

Address: 19861 SW 95th Place,

Tualatin, Oregon 97062 USA

Telephone No.: 1-800-853-8883 Fax No.: 1-503-684-8883

declare that the product

Product No.: RAR601

Product Name: Wireless Thermo Clock

Manufacturer: IDT Technology Limited

Address: Block C, 9/F, Kaiser Estate,

Phase 1, 41 Man Yue St.,

Hung Hom, Kowloon,


Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.





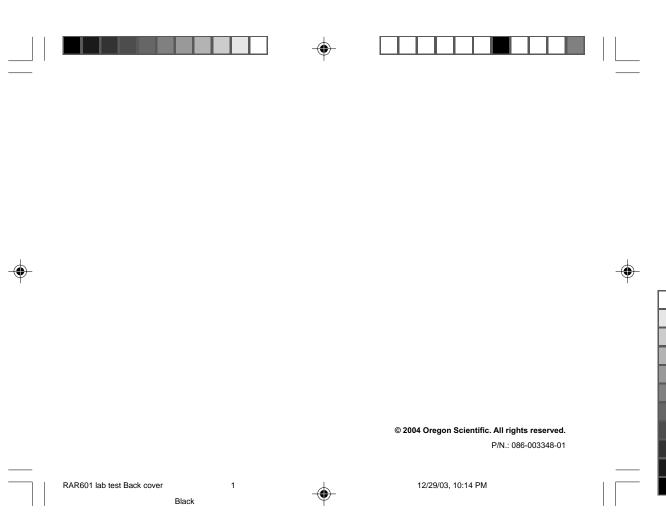

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com