

Wireless Indoor / Outdoor Thermometer with Indoor Humidity and **Self-Setting Atomic Clock** Model: RMR383HGA

USER MANUAL

INTRODUCTION

Thank you for selecting this Oregon Scientific™ Wireless Indoor / Outdoor Thermometer with Indoor Humidity and Self-Setting Atomic clock (RMR383HGA). This clock is supplied with a remote sensor (THN132N) and can support up to 3 sensors in total (additional sensors sold separately).


NOTE Please keep this manual handy as you use your new product. It contains practical step-by-step instructions, as well as technical specifications and warnings you should know

CLOCK OVERVIEW



- **SNOOZE**
- Temperature and Humidity Area Clock / Alarm Area
- ALARM: View alarm status: set alarm

BACK VIEW

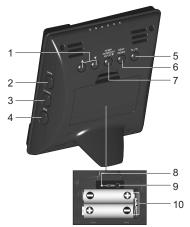

- lack A / lack T : Increase / decrease setting; activate /
- deactivate clock reception signal
- MODE: Change settings / display CHANNEL: Switch remote sensor display
- MEM: View current, maximum and minimum temperature / humidity
- 5. °C / °F: Select temperature unit
- **HEAT INDEX**
- TEMP / HUMIDITY HI / LO : Change settings or enable / disable hi or lo temperature / humidity
- **RESET:** Reset unit to default settings
- ZONE: Toggle US time zone
 Battery compartment

Temperature and Humidity area:



- Heat Index icon
- Hi / lo temperature alarm Max / min temperature icon
- Sensor reception icon
- Comfort Zone Battery low icon
- Hi / lo humidity alarm Max / min humidity icon Ice warning is active
- Temperature trend
 Temperature
- 12. Heat Index warning
- 13. Humidity 14. Humidity trend

Clock / Alarm area



- Clock signal reception
- AM / PM mode selected
- Alarm mode
- AM / PM mode selected
- Alarm time US time zone
- Moon phase



- 1. LED indicator
- 1. Wall mount
- 2. Battery compartment
- . Battery door . Table stand
- 5. RESET
- 6. CHANNEL switch

GETTING STARTED

Insert batteries before first use, matching the polarity (+ and -). Press RESET after each battery change





indicates main unit batteries are low

NOTE Do not use rechargeable batteries. We recommend that you use alkaline batteries with this product for longer usage and lithium batteries in temperatures below freezing.

REMOTE SENSOR

The sensor collects temperature readings approx. every 40 seconds and sends them to the main unit. The main unit can collect data from up to 3 sensors.

To set up the sensor:

- Slide open the battery door.
 Insert the batteries, matching the polarity (+ / -). Reset the sensor after each battery change. Select a channel. Make sure you use a different channel
- 3 for each sensor.





- Close the battery compartment
- Secure the sensor in the desired location using the wall mount or table stand.





For best results:

- Place the sensor out of direct sunlight and moisture
- Do not place the sensor more than 30 m (100 ft) from the main (indoor) unit.
- Position the sensor so that it faces the main (indoor) unit, minimizing obstructions such as doors, walls, and
- Place the sensor in a location with a clear view to the
- sky, away from metallic or electronic objects.

 Position the sensor close to the main unit during cold winter months as below-freezing temperatures may affect battery performance and signal transmission.

The transmission range may vary depending on many factors. You may need to experiment with various locations to get the best results.

Standard Alkaline batteries contain significant amounts of water. Because of this they will freeze in low temperatures of approximately -12°C (10°F). Disposable Lithium batteries have a much lower threshold for temperature with an estimated freezing range of below -30°C (-22°F).

Wireless ranges can be impacted by a variety of factors such as extremely cold temperatures. Extreme cold may temporarily reduce the effective range between the sensor and the base station. If the unit's performance fails due to low temperature, the unit will resume proper functioning as the temperature rises to within the normal temperature range (i.e. no permanent damage will occur to the unit due to low temperatures).

The sensor reception icon in the temperature and humidity area shows the status.

ICON	DESCRIPTION
Ú→Ô	Main unit is searching for the sensor(s)
⑴→Û→Û→Û	A channel has been found and sensor signal is being received
and "" (Temperature and Humidity Area)	The sensor cannot be found. Search for the sensor or check batteries

To search for a sensor: Simultaneously, press and hold **MEM** and **CHANNEL** for

NOTE If the sensor is still not found, check the batteries. obstructions, and remote unit location

CLOCK

This product is designed to synchronize its date and time automatically once it is within range of the WWVB-60 signal from the atomic clock in Fort Collins, Colorado.

The clock collects the radio signals whenever it is within 3219 km (2000 miles) of a signal.

NOTE Press ZONE to select the US time zone: Pacific (P), Eastern (E), Central (C) or Mountain (M).

NOTE Initial reception takes 2-10 minutes for first set up or when RESET is pressed. Once complete, the reception icon will stop blinking. If the signal is weak, it can take up to 24 hours to get a valid signal.

Clock signal reception indicator:

STRONG SIGNAL	WEAK SIGNAL	NO SIGNAL
	ì	A

To enable and force a signal search:

Press and hold **A** for 2 seconds To disable the signal reception:

Press and hold ▼ for 2 seconds.

If the clock signal reception is enabled and a signal is being received the clock does not need to be manually set.

- To manually set the clock:

 1. Press and hold MODE for 2 seconds.

 2. Press ▲ and ▼ to change the settings.

 3. Press MODE to confirm.
- The setting sequence is: 12/24 hour format, hour, minute, year, date / month format, month, date, and display

RMR383HGA_M_R6 2006.4.7, 10:19 AM **NOTE** The language options are English (E), German (D), French (F), Italian (I), and Spanish (S).

To switch the clock display:

- Press **MODE** to toggle between:
- Clock with day Clock with seconds

ALARM

To set the alarm:

- Press and hold ALARM for 2 seconds.
- 2. Press ▲ / ▼ to set alarm time
- Press MODE/SNOOZE to confirm. rindicates alarm is

- To enable / disable the alarm:

 1. Press ALARM to display alarm time
- 2. Press ALARM again to turn alarm ON / OFF.

To silence the alarm:

- Press SNOOZE to silence it for 8 minutes
- OR
- Press any key except **SNOOZE** to turn the alarm off and activate it again after 24 hours.

TEMPERATURE AND HUMIDITY

To toggle temperature unit: Press °C / °F.

To view outdoor sensors temperature readings: Press CHANNEL

To auto-scan between sensors:

Press and hold **CHANNEL** for 2 seconds. Each sensor's data is displayed for 3 seconds.

To end auto-scan: Press CHANNEL or MEM

To toggle between current, minimum and maximum records for the selected sensor: Press MEM repeatedly

To clear the records:

Press and hold **MEM** for 2 seconds.

The temperature and humidity trend icons are based on recent readings.

RISING	STEADY	FALLING
	\rightarrow	

ICE WARNING

If the channel 1 sensor falls between 3°C to -2°C (37°F to 28°F), $\ensuremath{\,^{\,\raisebox{-.2ex}{\star}}}$ flashes to warn you that the temperature is approaching freezing.

NOTE The warning will automatically stop if the temperature goes outside the ice-warning range.

An alarm can be set to sound if sensor set to channel 1 records above or below a temperature / humidity of your

To set alarm ON/OFF:

- 1. Press and hold TEMP / HUMIDITY HI / LO
- Use lacktriangle and lacktriangle to select high / low temperature / humidity alarm. Press TEMP / HUMIDITY HI / LO to confirm.
- Press ▲ / ▼ to set alarm ON / OFF and press TEMP / HUMIDITY HI / LO 🏞 to confirm.
- If alarm has been activated, use lacktriangle and lacktriangle to select the temperature / humidity.
- 5. Press TEMP / HUMIDITY HI / LO to confirm.

To silence the alarm:

Press any key. The alarm resets automatically and will resound if the hi / lo temperature selected is recorded

NOTE The THN132N sensor supplied does not support humidity readings. To enable Hi / Lo Humidity alarm a thermo-hygro sensor must be purchased and set to channel

1. For further information on compatible sensors such as the THGR268 thermo-hygro sensor please check with your local retailer or go to www2.oregonscientific.com.

HEAT INDEX

The heat index combines temperature and humidity data to describe the actual temperature felt. The THN132N sensor supplied does not support heat index display. A thermo-hygro sensor must be purchased to enable heat index display for

WARNING	HEAT INDEX	MEANING
Extreme danger	54.5°C (130°F) or above	Strong risk of dehydration / sun stroke
Danger	40.5 - 54°C (105 - 129°F)	Heat exhaustion likely
Extremecaution	32.2 - 40°C (90 - 104°F)	Possibility of heat dehydration
Caution	26.6-31.7°C (80- 89°F)	Possibility of heat exhaustion

- To display the heat index, press **HEAT INDEX**
- To toggle between current / maximum / minimum readings, press **HEAT INDEX**, then press **CHANNEL** to select channel 1-3 or indoor, followed by **MEM**. To toggle between temperature / humidity and heat index
- press and hold **HEAT INDEX** for 2 seconds. Press **HEAT INDEX** again to stop this featu

 $\begin{tabular}{ll} \textbf{NOTE} & \textbf{If the heat index is below } 80°F / 26°C, \textbf{if the selected sensor does not support humidity measurement or if the channel is not working, the heat index will display NA . \\ \end{tabular}$

The comfort zone assesses the climate based on current temperature and humidity measurements

ICON	TEMPERATURE	HUMIDITY
WET	Any	> 70%
COMF	20 - 25°C (68 - 77°F)	40 - 70%
DRY	Any	< 40%

MOON PHASE

- When calendar is set press ▲ or ▼ to view the moon phase for the next / previous day.
- Press and hold ▲ or ▼ to scan through the years (2001

	New Moon
	Waxing Crescent
•	First quarter
$\overline{\mathbf{O}}$	Waxing Gibbous
0	Full Moon
0	Waning Gibbous
•	Last quarter
	Waning Crescent

RESET

Press RESET to return to the default settings

This product is engineered to give you years of satisfactory service if you handle it carefully. Here are a few precautions:

• Do not subject the unit to excessive force, shock, dust,

- temperature or humidity, which may result in malfunction, shorter electronic life span, damaged battery and
- distorted parts.

 Do not immerse the unit in water. If you spill liquid over it, dry it immediately with a soft, lint-free cloth.

 Do not clean the unit with abrasive or corrosive
- Do not tamper with the unit's internal components. Doing so will invalidate the warranty on the unit and may cause unnecessary damage. The unit contains no user-serviceable parts.
 Only use fresh batteries as specified in the user's
- Only use restrictions. Do not mix new and old batteries.

 Due to printing limitations, the displays shown in this manual may differ from the actual display.

 The contents of this manual may not be reproduced
- without the permission of the manufacturer.
 Do not dispose this product as unsorted municipal waste.
 Collection of such waste separately for special treatment

NOTE The technical specifications for this product and the contents of the user manual are subject to change without

SPECIFICATIONS

TYPE	DESCRIPTION
MAIN UNIT	
LxWxH	110 x 69 x 140 mm
	(4.3 x 2.7 x 5.5 in)
Weight	153 g (5.34 oz) without battery
Temperature unit	°C / °F
Temperature range	-5°C to 50°C (23°F to 122°F)
Resolution	0.1°C (0.2°F)
Clock frequency	WWVB-60
Synchronization	Auto or disabled
Signal frequency	433 MHz
Clock	Auto or manual (disabled)
Humidity range	25% - 95%
Humidity resolution	1%

MEM	Min / Max relative humidity and
	temperature
Alarm duration	2 minutes
Snooze	8 minutes
Clock display	HH:MM:SS
	HH:MM:Day of Week
Hour format	12 / 24 hour format
Calendar	MM / DD or DD / MM language
	selectable: E, D, F, I and S
Power	2 x UM-3 (AA) 1.5 V batteries
REMOTE UNIT	
LxWxH	96 x 50 x 22 mm
	(3.8 x 2.0 x 0.9 in)
Weight	62 g (2.22 oz) without battery
Transmission range	30 m (100 ft) unobstructed
Temperature range	-30°C to 60°C (-22°F to 140°F)
Power	1 x UM-3 (AA) 1.5 V battery

NOTE It is recommended that you use alkaline batteries with this product for longer performance.

ABOUT OREGON SCIENTIFIC

Visit our website (www.oregonscientific.com) to learn more about Oregon Scientific products such as digital cameras; MP3 players; children's electronic learning products and games; projection clocks; health and fitness gear; weather stations; and digital and conference phones. The website also includes contact information for our Customer Care department in case you need to reach us, as well as frequently asked questions and customer downloads

We hope you will find all the information you need on our website, however if you're in the US and would like to contact the Oregon Scientific Customer Care department directly, please visit:

www2.oregonscientific.com/service/default.asp

Call 1-800-853-8883

For international inquiries, please visit:

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

WARNING Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

- receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician

The following information is not to be used as contact for support or sales. Please call our customer service number (listed on our website at www.oregonscientific.com), or on the warranty card for this product) for all inquiries instead.

We

Manufacturer:

Address:

Name: Oregon Scientific, Inc.
Address: 19861 SW 95th Ave.,Tualatin,
Oregon 97062 USA
Telephone No.: 1-800-853-8883

declare that the product Product No.: RMR383HGA

Product Name:

Wireless Indoor / Outdoor Thermometer with Indoor Humidity and Self-Setting Atomic Clock

AUTHO CHOCK
IDT Technology Limited
Block C, 9/F, Kaiser Estate,
Phase 1,41 Man Yue St.,
ung Hom, Kowloon,
Hong Kong

is in conformity with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept any interference received, including interference that may cause undesired operation.

© 2006 Oregon Scientific. All rights reserved.

086L004390-014

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com