



MC3800 Series 1/3-Inch Monochrome Camera

Installation/ Operation Manual

C1901M (4/99)

Pelco • 3500 Pelco Way • Clovis, CA 93612-5699 USA • www.pelco.com In North America and Canada: Tel (800) 289-9100 or FAX (800) 289-9150 International Customers: Tel (1-559) 292-1981 or FAX (1-559) 348-1120

Download from Www.Somanuals.com. All Manuals Search And Download.

## **IMPORTANT SAFEGUARDS AND WARNINGS**

- 1. Installation and servicing should only be done by qualified service personnel and conform to all local codes.
- 2. To prevent fire or shock hazard, do not expose the unit to rain or moisture.

The product and/or manual may bear the following marks:



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



Please thoroughly familiarize yourself with the information in this manual prior to installation and operation.

# DESCRIPTION

The MC3800 Series cameras are 1/3-inch format monochrome CCD (charge coupled device) cameras. They have the following features:

- High resolution and high sensitivity
- CCD iris function
- AGC (automatic gain control)
- AC line lock
- C/CS lens mount
- Auto-iris connector for DC-driven lenses
- Level and backlight control (BLC) for various lighting conditions
- Isolated power circuit


#### MODELS

MC3800-2	24 VAC, EIA standard
MC3800-2X	24 VAC, CCIR standard
MC3800-3	230 VAC, CCIR standard

#### LOCATION AND FUNCTION OF PARTS

T


Refer to Illustration B for the location of the camera parts.

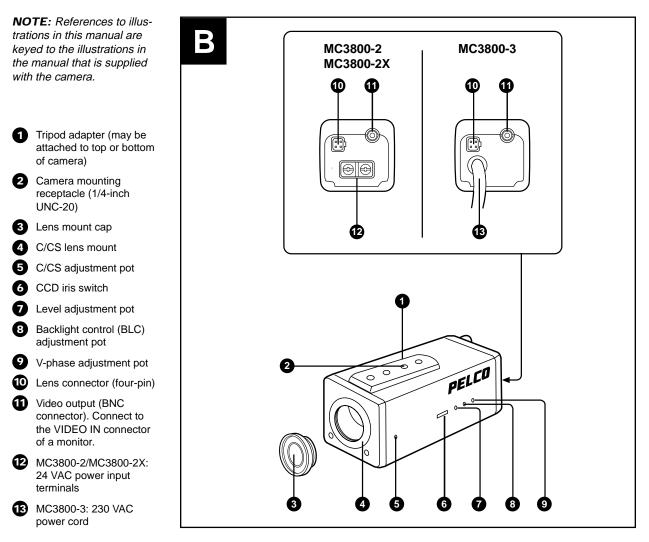

Top/Front/Side/Rear Views of MC3800 Series Cameras

# **INSTALLATION**

### LENS



(1) C-mount lens 1/2-inch (12 mm) or less

(2) CS-mount lens 9/32-inch (7 mm) or less protrusion behind the mounting surface must be within the limits shown in Illustration C.

(1) (2) 2) 1) 


**Compatible Lenses** 

Be sure to attach the lens mount cap when the lens is not mounted.

When using an auto-iris lens, use only a DC-driven type or a direct current drive coil with a resistance value over 150 ohms.

When using an auto-iris lens, attach  $% \left( {{\rm T}} \right)$  it as follows. For a manual lens, omit step 3. Refer to Illustration E.

- 1. Unscrew the lens mount cap.
- 2. Screw in the lens. Make sure the C/CS adjustment ring is set properly.
- 3. Check the plug wiring on the lens cable against Illustration D and the pin-outs in the "Plug Change on Auto-Iris Lens Cable" box. If you need to replace the existing plug, follow the instructions in the box.
- 4. Adjust the backfocus. Follow the appropriate instructions in the "Lens/Camera Setup and Backfocusing" Information Box. These instructions cover the setting of the CCD IRIS switch (Illustration A in the owner's manual). Also, if necessary, refer to the "Camera/Lens Geometry-General Information" sheet.

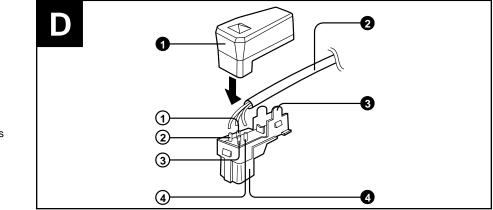



Changing the Plug on an Auto Iris Lens Cable

#### PLUG CHANGE ON AUTO IRIS LENS CABLE


- 1. Remove the old lens plug from the cable.
- Remove the plug cover ①, add heat shrink tubing to the wires and solder the lens cable wires ② to the pins ① thru ④ on the plug supplied. Apply heat to the heat shrink tubing. The pin assignments are as follows:

Pin #		DC-servo Lens
1	Pin 3:	Drive (+)
2	Pin 1:	Control (-)
3	Pin 2:	Control (+)
4	Pin 4:	Drive (-) (Ground)






3. Put the cover on the plug.




 Rib (If the cable is thick and the plug cover does not seat properly, cut away this rib.)

Lens plug (supplied)


A

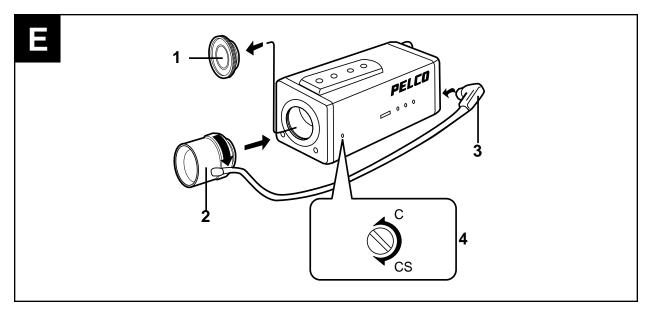

Lens Installation

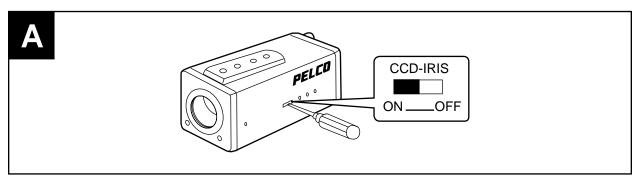

**CCD-Iris Function** 

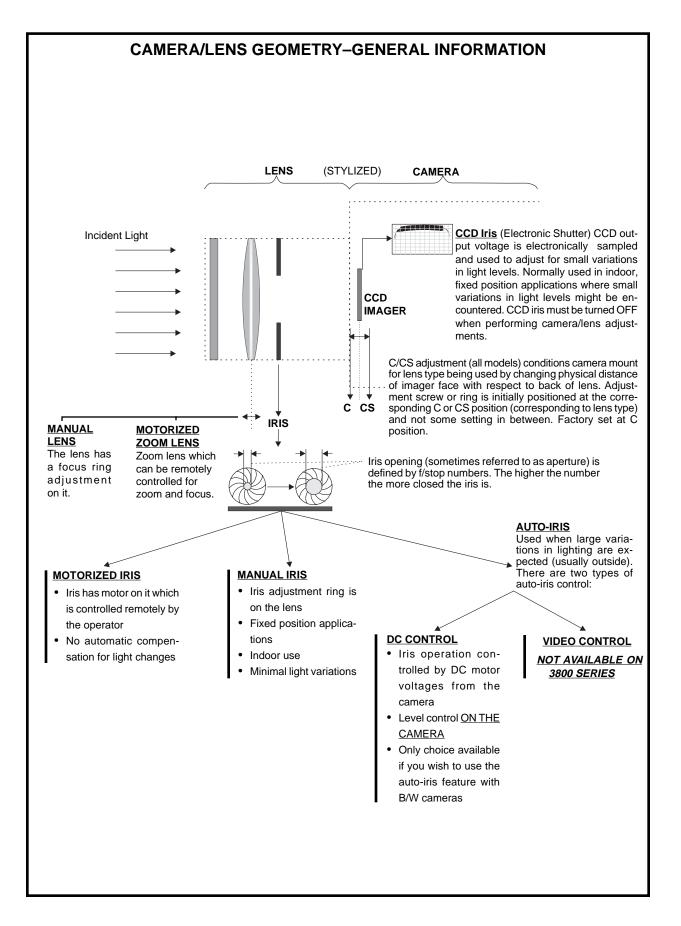


Information Box

Lens/Camera Setup and Backfocusing

**Information Box** 


The purpose of backfocusing is to make the adjustments necessary for the picture to remain in focus throughout the camera's zoom range, which is the case for instance, in motorized zoom, auto iris configurations. Manual Iris lens/camera combinations also need to be backfocused. Follow the general instructions listed below to adjust backfocus appropriate to your camera/lens combination.

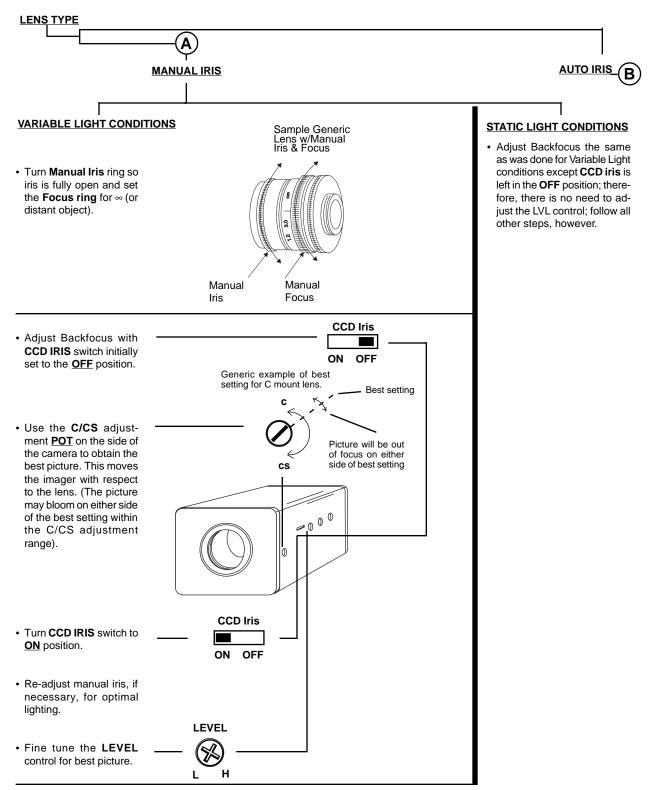


#### Information Box

The purpose of backfocusing is to make the adjustments necessary for the picture to remain in focus throughout the camera's zoom range, which is the case for instance, in motorized zoom, auto iris configurations. Manual Iris lens/camera combinations also need to be backfocused. Follow the general instructions listed below to adjust backfocus appropriate to your camera/lens combination.

LENS TYPE

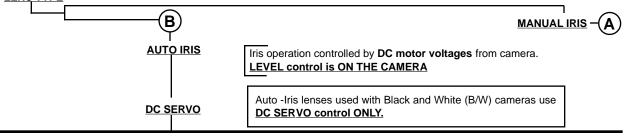

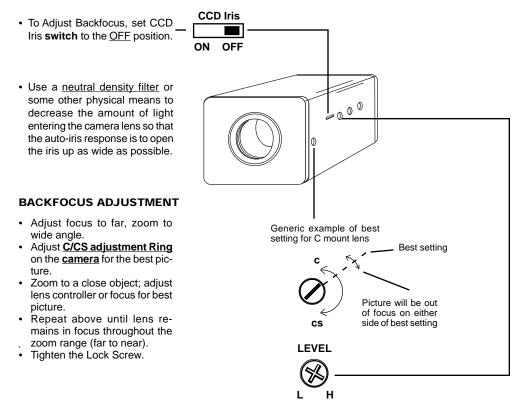

The ability of a zoom lens to remain in focus throughout its zoom range is known as Tracking

- Adjust the LEVEL POT on the camera for best picture.
- Adjust other settings on camera as needed.

#### CAMERA

Install the camera where it will not be affected by fluorescent lights or window reflections. If the camera is used under illumination that is not steady, the picture may flicker.


The MC3800-2 must be operated with a 24 VAC, 60 Hz, Class 2 power supply. The MC3800-2X must be operated with a 24 VAC, 50 Hz power supply. The MC3800-3 must be operated with a 220-240 VAC, 50 Hz, power supply.

To connect the camera:


- 1. Refer to Illustration G. Connect the video cable (2) from the monitor to the VIDEO OUT connector (1) on the camera.
- 2. MC3800-2/MC3800-2X: Connect the power leads to the camera. Refer to Illustration F.
  - a. Remove the insulation from the power cable wires.
  - b. Attach the terminal tips.
  - c. Connect the wires to the terminals on the camera.
  - d. Ground the unit or an irregular voltage may be generated in the AC power cord and may cause malfunction or damage to the video camera. Ground the camera at the screw labeled "G."

Maximum cable lengths for 24 VAC: 18 AWG, 200 ft (60 m); 16 AWG, 325 ft (100 m).

3. Refer to Illustration G. Connect the power cord or leads (3) to a power source (4). For the MC3800-3, the brown wire is the hot lead, the blue wire is neutral, and the green and yellow wire is ground.

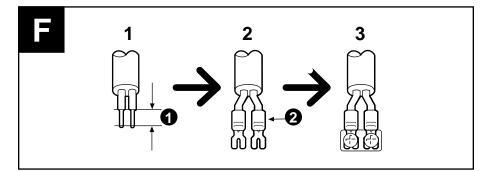

Connecting the MC3800-2

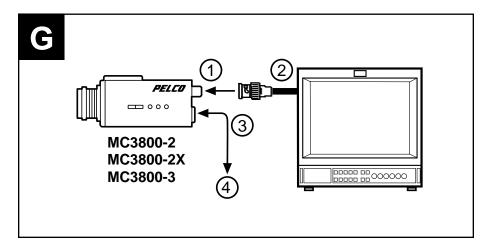


Connecting the Monitor to the MC3800 Series Cameras

#### **V-PHASE ADJUSTMENT**

Vertical phase adjustment is required only if your system uses two or more cameras.

The vertical phase can be manually adjusted within the range of approximately -90 degrees to +90 degrees (refer to Illustration H).

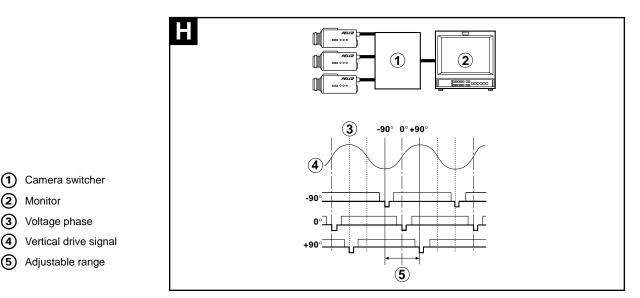

AC Line Lock Adjustment


Vertical phase adjustment is not vertical roll adjustment. Each camera is adjusted to the AC zero crossover point at the factory. Problems arise, however, especially in larger systems, when:

- Switching rapidly between widely separated cameras with manual or sequential 1. switchers.
- Switching between cameras not operating off the same phase of the AC line. When 2. using a single power source, make sure each AC line lead is connected to the same input terminal on all cameras.
- Both of the above. 3.

In such cases camera switching may produce what appears to be vertical roll on the monitor between the two views (Illustration I).

To adjust the vertical phase:

Turn the V-phase pot (while switching as rapidly as possible between the two camera views) to adjust the relative phase angle between the two cameras and the point at which one camera synchronizes to the AC line with respect to the other. Adjust the pot until the switching is clean and there is no vertical roll or flip.

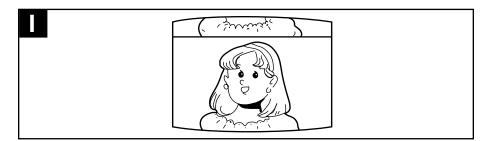

Vertical Phase

# Pelco Manual C1901M (4/99)


(2)

3

(4)

#### INCIDENT LIGHT LEVEL ADJUSTMENT

Since the incident light level has been preset at the factory, usually no further adjustment is required. If the picture is too dark, however, or if the picture's highlights are extremely overexposed, adjust the LEVEL adjustment screw. This adjustment can only be used for auto-iris lenses or CCD iris control.

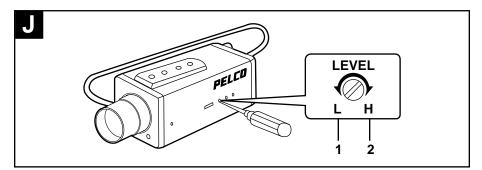

Adjusting the Incident Light Level

- 1. Turn toward L (low) to make the picture darker.
- 2. Turn toward H (high) to make the picture brighter.

### **BACKLIGHT CONTROL ADJUSTMENT**

You can compensate for backlight conditions by turning the backlight control (BLC) screw. When using this unit under backlight conditions, turn the BLC screw toward AV.

## **SPECIFICATIONS**

Image Device:	1/3-inch CCD (charge coupled device)
Picture Elements: MC3800-2: MC3800-2X: MC3800-3:	250,000: 510 H x 492 V 290,000: 500 H x 582 V 290,000: 500 H x 582 V
Sensing Area:	3.3 mm x 4.4 mm
Signal System: MC3800-2: MC3800-2X: MC3800-3:	EIA standard CCIR standard CCIR standard
Sync System:	AC line lock
Horizontal Resolution:	Approximately 380 lines (at center of screen)
Lens Mount:	C/CS mount
Minimum Illumination:	0.1 lux (f/1.2)
S/N:	45 dB (AGC off)
S/N: Automatic Control:	45 dB (AGC off) Electronic iris (exposure priority, up to 1/100,000 second linear shutter speed control); AGC (automatic gain control)
	Electronic iris (exposure priority, up to 1/100,000 second
Automatic Control: Power Requirements: MC3800-2: MC3800-2X:	Electronic iris (exposure priority, up to 1/100,000 second linear shutter speed control); AGC (automatic gain control) 24 VAC, 60 Hz, screw terminal 24 VAC, 50 Hz, screw terminal

Power Consumption: MC3800-2: MC3800-2X: MC3800-3:	Approximately 4.5 W Approximately 4.5 W Approximately 6.0 W
Operating Temperature:	14° to 122°F (-10° to 50°C)
Humidity:	20 to 80%
Storage Temperature:	-40° to 140°F (-40° to 60°C)
Acceptable Lens Weight:	Less than 2.2 lb (1 kg)
Construction:	Aluminum case
Finish:	Neutral beige
Tripod Receptacle:	1/4-inch UNC-20
Dimensions: MC3800-2/MC3800-2X MC3800-3	5.19 in. L x 2.25 in. H x 2.09 in. W (131.83 x 57.15 x 53.09 cm) 7.03 in. L x 2.25 in. H x 2.09 in. W (178.56 x 57.15 x 53.09 cm)
Weight: MC3800-2: MC3800-2X: MC3800-3:	10.6 oz (0.30 kg) 10.6 oz (0.30 kg) 1 lb 9 oz (0.70 kg)

(Design and specifications are subject to change without notice.)

#### **REGULATORY NOTICES**

NOTE: This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### **REVISION HISTORY**

Manual #	Date	Comments
C1901M	11/96	Original version.
	4/99	Added MC3800-2X model. Revised manual to new format.

® Pelco and the Pelco logo are registered trademarks of Pelco.

© Copyright 1999, Pelco. All rights reserved.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com