

STERLCO TEMPERATURE CONTROL UNIT

SERVICE AND INSTRUCTION MANUAL

MODEL 6414-A

SAMPLE

STERLING, INC.
5200 West Clinton Avenue
Milwaukee, Wisconsin

Please note that our address and phone information has changed. Please reference this page for updated contact information.



These manuals are obsolete and are provided only for their technical information, data and capacities. Portions of these manuals detailing procedures or precautions in the operation, inspection, maintenance and repair of the products may be inadequate, inaccurate, and/or incomplete and shouldn't be relied upon. Please contact the ACS Group for more current information about these manuals and their warnings and precautions.

Parts and Service Department

The ACS Customer Service Group will provide your company with genuine OEM quality parts manufactured to engineering design specifications, which will maximize your equipment's performance and efficiency. To assist in expediting your phone or fax order, please have the model and serial number of your unit when you contact us. A customer replacement parts list is included in this manual for your convenience. ACS welcomes inquiries on all your parts needs and is dedicated to providing excellent customer service.

For immediate assistance, please contact:

- North, Central and South America, 8am – 5pm CST +1 (800) 483-3919 for drying, conveying, heating and cooling and automation. For size reduction: +1 (800) 229-2919.
North America, emergencies after 5pm CST (847) 439-5855
North America email: acsuscanadacustserv@corpemail.com
- Mexico, Central & South America
Email: acslatinamericacustserv@corpemail.com
- Europe, Middle East & Africa +48 22 390 9720
Email: acseuropecustserv@corpemail.com
- India +91 21 35329112
Email: acsindiacustserv@corpemail.com
- Asia/Australia +86 512 8717 1919
Email: acsasiacustserv@corpemail.com

Sales and Contracting Department

Our products are sold by a worldwide network of independent sales representatives. Contact our Sales Department for the name of the sales representative nearest you.

Let us install your system. The Contract Department offers any or all of these services: project planning; system packages including drawings; equipment, labor, and construction materials; and union or non-union installations.

For assistance with your sales or system contracting needs please Call:

North, Central and South America +1 (262) 641-8600 or +1 (847) 273-7700 Monday–Friday, 8am–5pm CST

Europe/Middle East/Africa +48 22 390 9720

India +91 21 35329112

Asia/Australia +86 512 8717 1919

Facilities:

ACS offers facilities around the world to service you no matter where you are located. For more information, please visit us at www.acscorporate.com

United States:

ACS Schaumburg – Corporate Offices

1100 E. Woodfield Road
Suite 588
Schaumburg, IL 60173
Phone: + 1 847 273 7700
Fax: + 1 847 273 7804

ACS New Berlin – Manufacturing Facility

2900 S. 160th Street
New Berlin, WI 53151
Phone : +1 262 641 8600
Fax: + 1 262 641 8653

Asia/Australia:

ACS Suzhou

109 Xingpu Road SIP
Suzhou, China 215126
Phone: + 86 8717 1919
Fax: +86 512 8717 1916

Europe/Middle East/Africa:

ACS Warsaw

Ul. Działkowa 115
02-234 Warszawa
Phone: + 48 22 390 9720
Fax: +48 22 390 9724

India

ACS India

Gat No. 191/1, Sandbhor Complex
Mhalunge, Chakan, Tal Khed,
Dist. Pune 410501, India
Phone: +91 21 35329112
Fax: + 91 20 40147576

INDEX PAGE

DESCRIPTION (2 pages)

INSTALLATION (3 pages)

HOSES (Drawings 14289-14339)

OPERATION

WIRING DIAGRAM (20668, 20678)

FLOW DIAGRAM (19018)

"TROUBLE SHOOTING"

Component Bulletins:

WESTINGHOUSE CIRCUIT BREAKER BULLETIN (Bul. FA-3035)

ALLEN-BRADLEY CONTACTOR AND STARTER BULLETINS (Bu. 702-BOD 92, Bul. 709 AOD)

ASCO SOLENOID BULLETIN (82623, 115 V., N. C.)

ELECTRIC MOTOR BULLETIN

FORM I-4100-EI Pump and Motor Instructions

"OTHER STERLCO FEATURES"

PARTS LIST

WARRANTY PAGE

DESCRIPTION

The Model 6414 Sterl-Tronic temperature control unit is built to comply to JIC specifications as best they can be interpreted to apply to a portable device of this nature.

The Model 6414 Sterl-Tronic temperature control unit is a single zone unit designed to circulate water through your process and to precisely, automatically, and reliably maintain process water at the selected temperature. The operating range of the Sterl-Tronic unit is from supply water temperature up to 250° F. maximum. The unit is well suited for use with a city water supply, water from portable or central chillers, towers, or with well water.

Many new improved design features have been incorporated into the Sterl-Tronic; among them solid-state electronic thermostat, improved pump design, automatic mechanical proportioning of heating and cooling, dual electronic sensing probes, pushbutton air vent, pressure switch, and an improved circuitry design.

The relatively small total amount of water, rapidly recirculated by the Sterl-Tronic, provides assurance of a close and uniform temperature relationship between the delivery and return lines of the unit. This assures uniform and stable temperature control as well as a very even temperature throughout the work area. Also, the high rate of recirculation, combined with the large immersion heater and high cooling rate, gives the unit exceptionally fast response in bringing the process up to temperature and in making changes of settings when necessary.

THE PUMP is a 1/2 HP straight centrifugal type, bronze-fitted. It has a high output capacity with good discharge pressure and is well suited for the conditions under which the unit is designed to operate. The circulating capacity available to the user, outside the unit, is 15 GPM @ 20 psi. A special seal-flush system in the pump helps keep the seal clean thereby extending seal life. The seal itself is the finest type available for this type of service and provides an excellent combination of long wearing ability, high abrasion resistance, and heat resistance.

THE HEATER is a three phase immersion heater, 9 KW capacity, of low watt-density construction to minimize fouling and to promote longer heater life. A 4-1/2 KW low watt-density heater may be provided as an alternate.

COOLING is accomplished by automatic release of the required amount of warm water from the system to the drain. This permits an equal amount of cool water to enter the system from the plant water supply. Naturally, the plant water supply temperature will govern the minimum operating temperature of the unit. The cool water enters the system immediately ahead of each pump which blends it with system water.

THERMOSTATIC CONTROL of the system is maintained by a newly developed solid-state ~~electronic controller with heating and cooling relay output.~~ Two stable, wire-wound temperature sensors, one sensing the need for heating and the other sensing the need for cooling, monitor process temperatures and relay readings back to the controller. Should either of these sensors fail, the system will be protected against a rise in temperature. The solid-state design of these components assures

DESCRIPTION

PAGE 2.

exceptionally precise and trouble-free operation. The single-set controller energizes either the heater or the cooling circuitry as required. A narrow band neutral zone between heating and cooling is preset into the controller.

SYSTEM TEMPERATURES are easily read on the 2-1/2" diameter vapor tension thermometer. Its long thin needle with close calibration permits the detection of small temperature variations.

ELECTRICAL: While the pump motor and heater operate on full line voltage, (either 230, 460 or 550 volt, 3 phase), the control circuit is 115 volt single phase. Control circuit voltage is provided by a single phase transformer wired across two legs of the three phase power supply. A fused disconnect switch (or circuit breaker) is provided, interlocked with the door, to interrupt the main power supply if the electrical control panel is opened. A magnetic starter with overload and high and low voltage protection is used for the pump motor. Heating and cooling control circuitry are interlocked with the pump motor starter to prevent heating and cooling when the pump is not running. The 110 V. control circuit is fused, and a terminal is available on the transformer secondary for grounding the control circuitry on delta type power supplies with a center-leg ground. The (green) flush head oiltight "START" pushbutton starts the pump motor and the (green push-to-test) "RUN" pilot indicates when it is running and power is provided to the controller. The (red) extended head oiltight "STOP" pushbutton stops the pump motor and de-energizes the controller.

A PUSHBUTTON VENT OR PRIME permits quick and complete purge of air from the unit, hoses and process from the operator's panel, before the unit is started. The (yellow) "VENT" pushbutton actuates the solenoid valve which permits the flow of trapped air and water out through the drain, insuring that the unit is properly filled and primed prior to startup.

PRESSURE SWITCH PROTECTION is built into each unit to insure that the unit will not start until the water supply has been turned "on" and the unit subjected to water supply pressure. This is intended to provide a measure of protection for the pump seal and the heater so that they will not be damaged through operation without water. The final measure of protection, however, must come from the operator in venting before startup. The pressure switch itself is set at approximately 6 psi prior to leaving Sterling.

INSTALLATION

There are three very important phases to the installation procedure necessary to insure optimum performance of your Model 6414 Sterl-Tronic water temperature control unit. First, a safe, well-grounded electrical power connection must be made; secondly, hoses and other fittings must be large enough to allow plenty of water to flow - not just trickle; and thirdly, an adequate water supply with sufficient pressure, and a drain with minimum back pressure, must be run to the unit.

Each of these three factors serves an important function in providing you with safe, accurate, efficient operation of your Sterl-Tronic with a minimum of maintenance.

DELIVERY AND RETURN CONNECTIONS

For your convenience, the delivery and return lines are brought out to 3/4" elbows at the back of the unit. This permits the user to run his hoses and fittings directly toward the process area and also serves to further isolate the water connections from the instrument panel. If supply and delivery lines smaller than 3/4" are to be used, we suggest installing tees at the 3/4" elbows and running at least two delivery and return lines in parallel from these tees. Several parallel runs are far more practical than one long serpentine run, and in many cases can make a difference between precise control and erratic operation.

It is well to bear in mind that in general the flow rate of the entire system is dependent upon the total resistance to flow. Since hoses create resistance, they should be as large in diameter as possible and as short as convenient. Even though the passages in the mold may be small, hoses and fittings with a low restriction to flow will at least help keep the total resistance to a minimum. Expressed in other terms, we might say that it is well to use the pump horsepower inside the process area and not in trying to overcome the resistance going to and from it.


The sketches on the following pages illustrate hoses and fittings which have been found quite acceptable. The hoses and fittings selected for use with the Sterl-Tronic must be well suited for operation at the temperature and pressures expected to be encountered, and must permit a free flow of water. Quick disconnect fittings with check valves in each half should be avoided, since the check valves themselves obstruct flow considerably. In many cases, the check valves can be removed from the quick disconnect rather simply.

WATER SUPPLY

The water supply connection is a 1/2" elbow at the back of the unit. It is very important that the water supply meet certain requirements. We recommend a full 1/2" hose without restricting fittings. Usable supply pressure must be in excess of 20 psig and preferably over 25 psig at the unit, if the unit is expected to operate at temperature over 200° F. This minimum pressure is necessary to keep the process water from flashing to steam at the pump inlet where water pressure is the lowest in the system. The pressure switch inside the unit will keep the unit from running until the unit has been subjected to a minimum water supply pressure.

DWG. NO. 14289

NO.	CHANGE	DATE	BY NO.	CHANGE	DATE	BY	USED ON

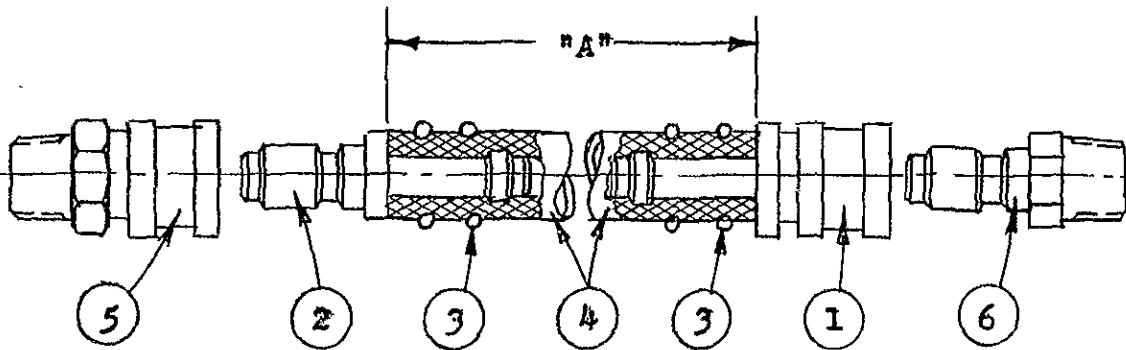

UNLESS OTHERWISE SPECIFIED USE
 ± .005" TOLERANCE ON DECIMAL DIMENSIONS.
 ± .010" TOLERANCE ON FRACTIONAL DIMENSIONS.

Item No.	No. Parts Req.	Purch. Part No.	Name	Material
1	1	J-91-C	Socket	Hansen #4-S27, Type ST, Brass, 1/2" Hose Con.
2	1	J-91-B	Plug	Hansen #4-T27, Type ST, Steel, 1/2" Hose Con.
3	2	J-91-E	Hose Clamp	Wedgon Or Staput, Narrow Width, to Fit 27/32" O.D. Hose.
4	See Chart	J-91-F	Hose	Ortac 1/2" I.D. X 27/32" O.D. 1 Braid, (200°)
5	1	J-91-A	Socket	Hansen #4-S25, Type ST, Brass, 1/2" M.P.T. Con.
6	1	J-91-D	Plug	Hansen #4-T25, Type ST, Steel, 1/2" M.P.T. Con.

Sub. Assembly Part No.	"A" Hose Length
14289-1	17" Lg.
14289-5	5' 0" Lg.
14289-10	10' 0" Lg.
14289-15	15' 0" Lg.

MATERIAL FINISH


STERLING, INC.
MILWAUKEE, WIS.

TITLE 1/2" Hose S.A. For Temp. Control Units

CH'K. HWS	DATE 1-25-56	SCALE None	ISSUE 3	DRG. NO. 14289
-----------	--------------	------------	---------	----------------

DWG. NO. 14339

NO.	CHANGE	DATE	BY NO.	CHANGE	DATE	BY	USED ON

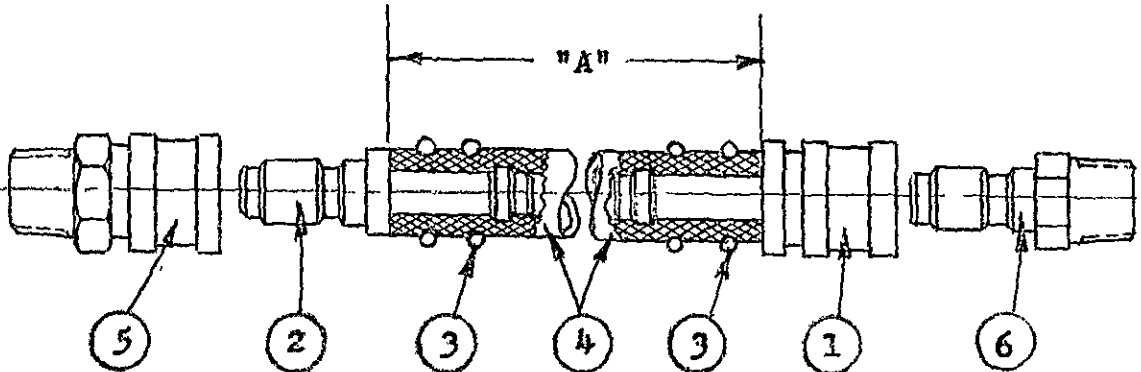

UNLESS OTHERWISE SPECIFIED USE
 ± .005" TOLERANCE ON DECIMAL DIMENSIONS.
 ± .010" TOLERANCE ON FRACTIONAL DIMENSIONS.


Item No.	No. Parts Req.	Purch. Part No.	Name	Material
I	1	J-91-R	Socket	Hansen #6-S32, Type ST, Brass With 3/4" Hose Stem Connection.
2	1	J-91-P	Plug	Hansen #6-T32, Type ST, Steel, 3/4" Hose Stem Con.
3	2	J-91-T	Hose Clamps	Wedgon Or Sta put, Narrow Width, to Fit 1 9/32" O.D. Hose.
4	See Chart	J-91-U	Hose	#21W86 Creamery Type, 3/4" I.D. X 1 9/32" O.D. 4 Ply,
5	1	J-91-N	Socket	Hansen #6-S30, Type ST, Brass, 3/4" M.P.T. Con.
6	I	J-91-S	Plug	Hansen #6-T30, Type ST, Steel, 3/4" M.P.T. Con.

Sub. Assembly Part No.	"A" Hose Length
14339-5	5' 0" Lg.
14339-10	10' 0" Lg.
14339-15	15' 0" Lg.

TITLE **3/4" Hose & Temp. Control Units**
 DR. **HWS**
 CHK. **HWS**
 DATE **1-25-56**
 SCALE **None**
 ISSUE **2**
 DRG. NO. **14339**

MATERIAL FINISH
STERLING, INC.
 MILWAUKEE, WIS.

DWG. NO. 19018

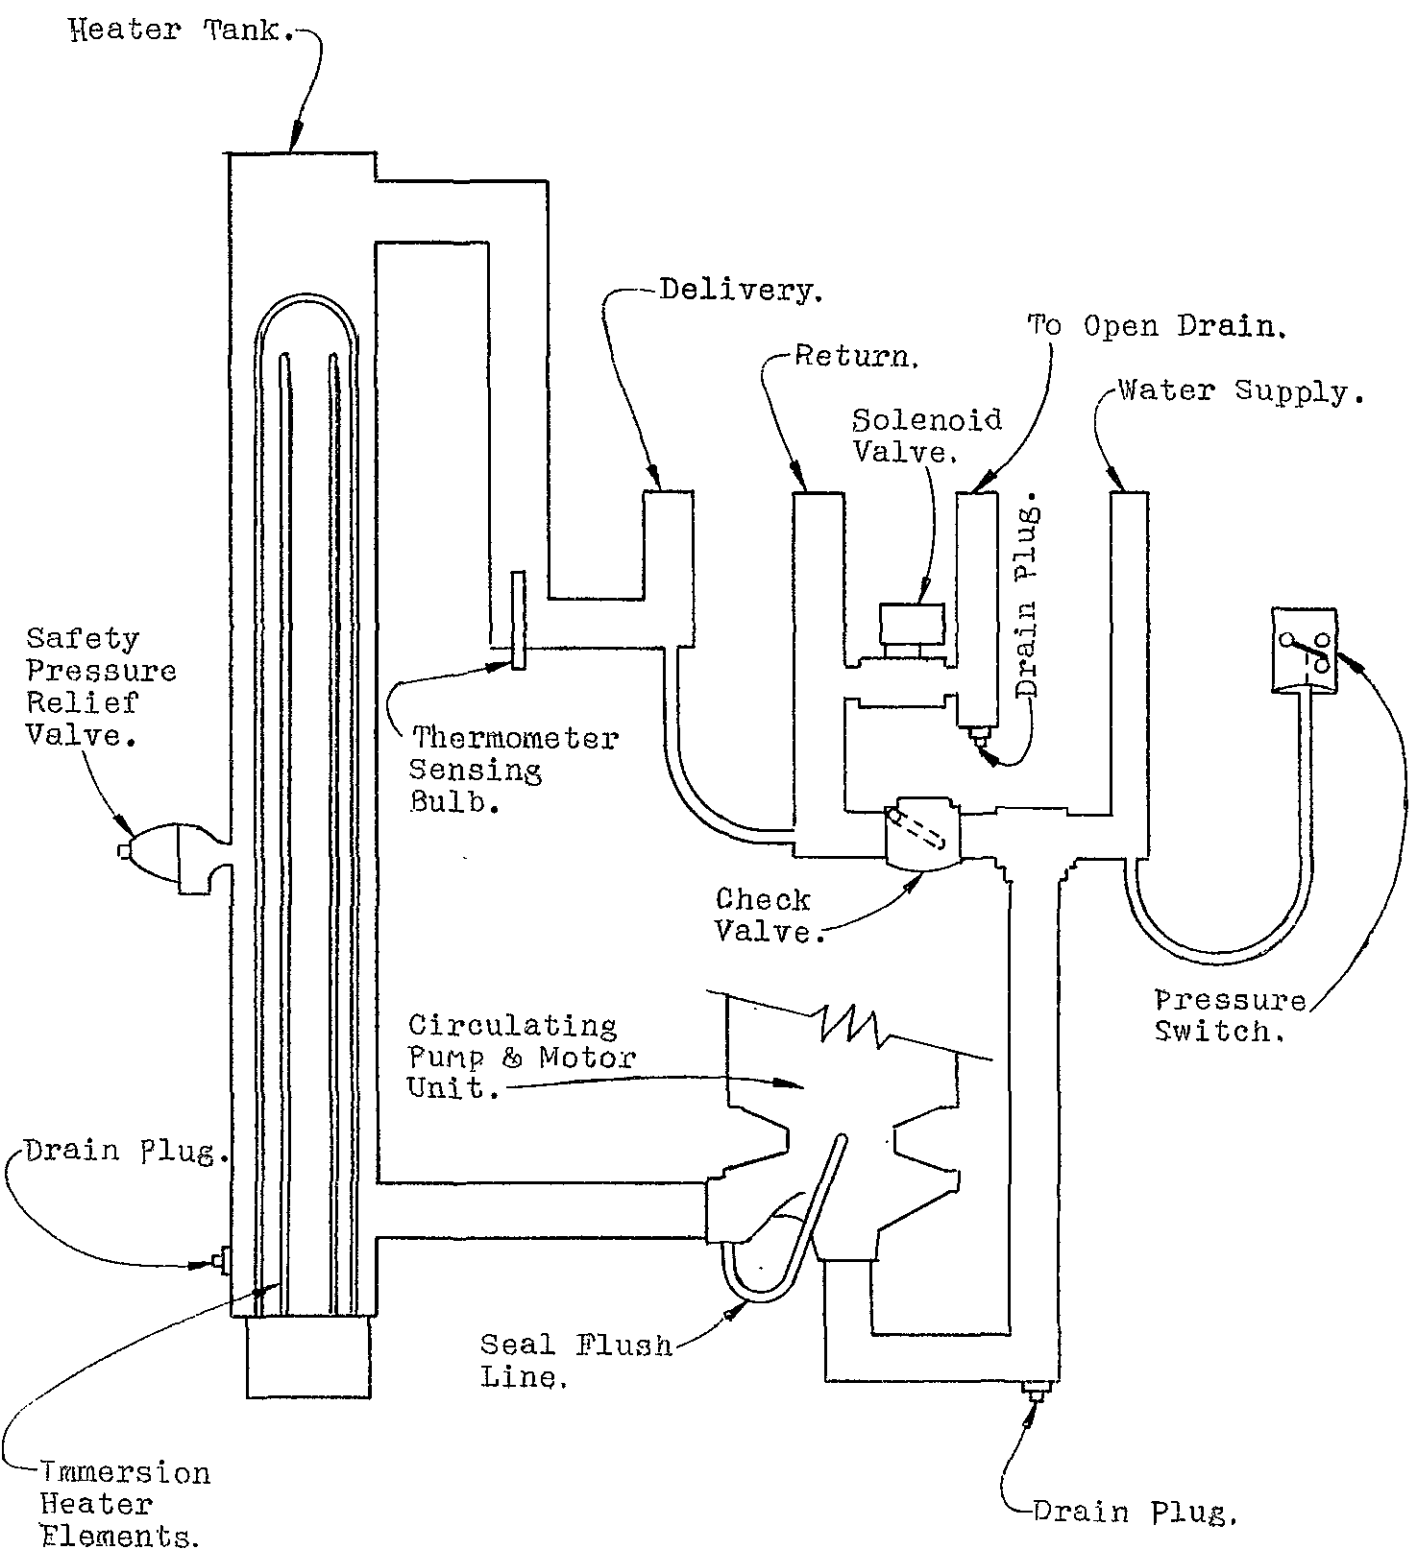

FOR THE FOLLOWING UNITS:
6412-A

DRG. NO.	19018
ISSUE	1
SCALE	None
DATE	8-26-68
CH'K.	
DR. D.C.	
TITLE SCHEMATIC PIPING DIAGRAM	
STERLING, INC. MILWAUKEE, WIS.	

SPARE PARTS LIST

MODEL 6414-A STERL-TRONIC TEMPERATURE CONTROL UNITS

CONTROLS

J-42-709	Solid State Thermostat, with 16059 potentiometer, dial and knob, without probes	\$ 80.00
J-42-713	Thermistor probe - for dual installation (each)	17.00
J-17-EN	Thermometer	14.00
J-42-214	"START" Pushbutton	7.00
J-42-688	"STOP" Pushbutton	9.00
J-42-739	"VENT" Pushbutton	7.00
J-42-653	"RUN" Pilot Light, with bulb	21.00

#55 Auto Bulb for above .60

ELECTRICALS

J-42-302	Starter, pump motor, Size "1" 115 V. coil	53.00
J-42-231	Heater contactor, Size I with 115 V. coil (for 230 V. units)	39.00
J-42-149	Heater contactor, Size O with 115 V. coil (for 460 V. units)	33.00
J-42-263	Pressure Switch	24.00
J-42-154	Transformer, control circuit	19.00
J-42-106	Electric Immersion Heater, 9 KW, 3 Phase, 230 Volt,	32.00
J-42-107	Electric Immersion Heater, 9 KW, 3 Phase, 460 Volt,	32.00

PUMPS-PUMP PARTS

10410-8	Complete pump and motor assembly, ½ HP, 3 Phase, TENV (with Delco TENV motor - \$113.00; G.E. TEFC motor \$108.00)	102.00
16119-3	Motor and impeller assembly, ½ HP, 3 Phase, 230/460 TENV (with Delco TENV motor - \$104.00; G.E. TEFC motor \$ 99.00)	93.00
J-42-309	Pump motor, ½ HP, 3450 RPM, 3 Phase, 60 Cycle, 230/460 TENV (Delco TENV motor - \$65.00; G.E. TEFC motor - \$60.00)	54.00
J-81-M	Rotary Seal Assembly, ceramic and carbon (Part H, Form I-4100-E1)	9.50
J-18-CJ	Housing Gasket (Part K)	.25
13359	Pump impeller, standard brass (Part I)	10.00
13359-1	Pump impeller, cast iron (Part I)	17.00
J-79-B	Impeller Screw (Part J)	.20
10404	Water Slinger (Part C)	.08
13341-1	Bracket (Part E)	11.00
13801-1	Volute (Part LA)	8.50


VALVES

J-42-631	Solenoid Valve (110 V. Coil)	
	Solenoid coil only for above	7.00
J-44-BM	Check Valve	5.70
J-44-87	Pressure Relief Valve	4.00

NOTE: WHEN ORDERING PLEASE SHOW MODEL AND SERIAL NUMBER OF STERLCO UNIT FOR WHICH PARTS ARE DESIRED. ABOVE PART NUMBERS AND PRICES APPLY TO STANDARD STERLCO PARTS. IF PARTS MADE BY OTHER SOURCES ARE REQUIRED BY CUSTOMER, THE SELLING PRICES MAY BE ADJUSTED ACCORDINGLY.


All prices are f.o.b. Milwaukee, Wisconsin. Terms are Net 30 Days. Prices are subject to change without notice.

STERLING, INC. 5200 West Clinton Avenue,
Milwaukee, Wisconsin 53223

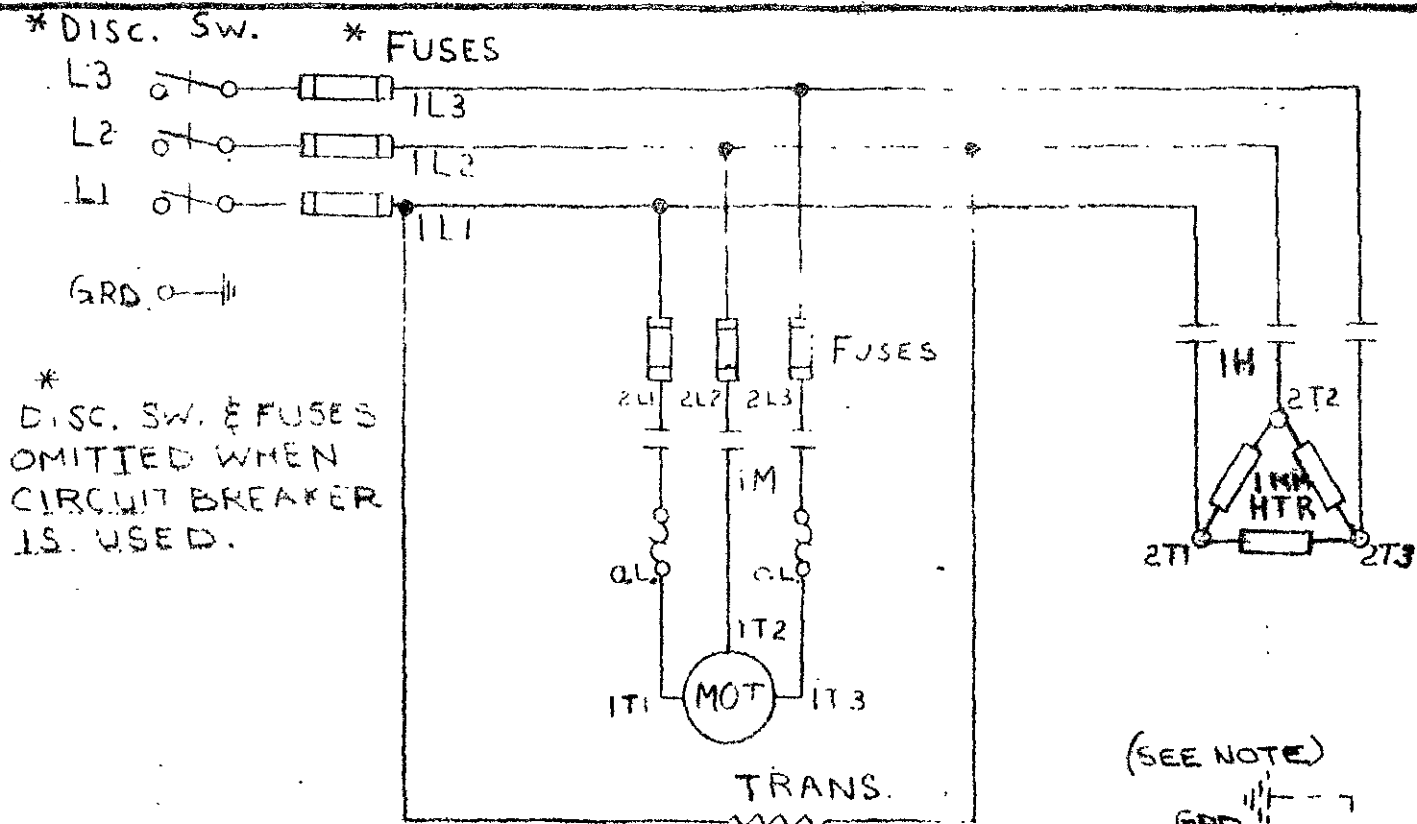

* DISC. SW. & FUSES OMITTED WHEN CIRCUIT BREAKER IS USED.

(SEE NOTE)
GRD.

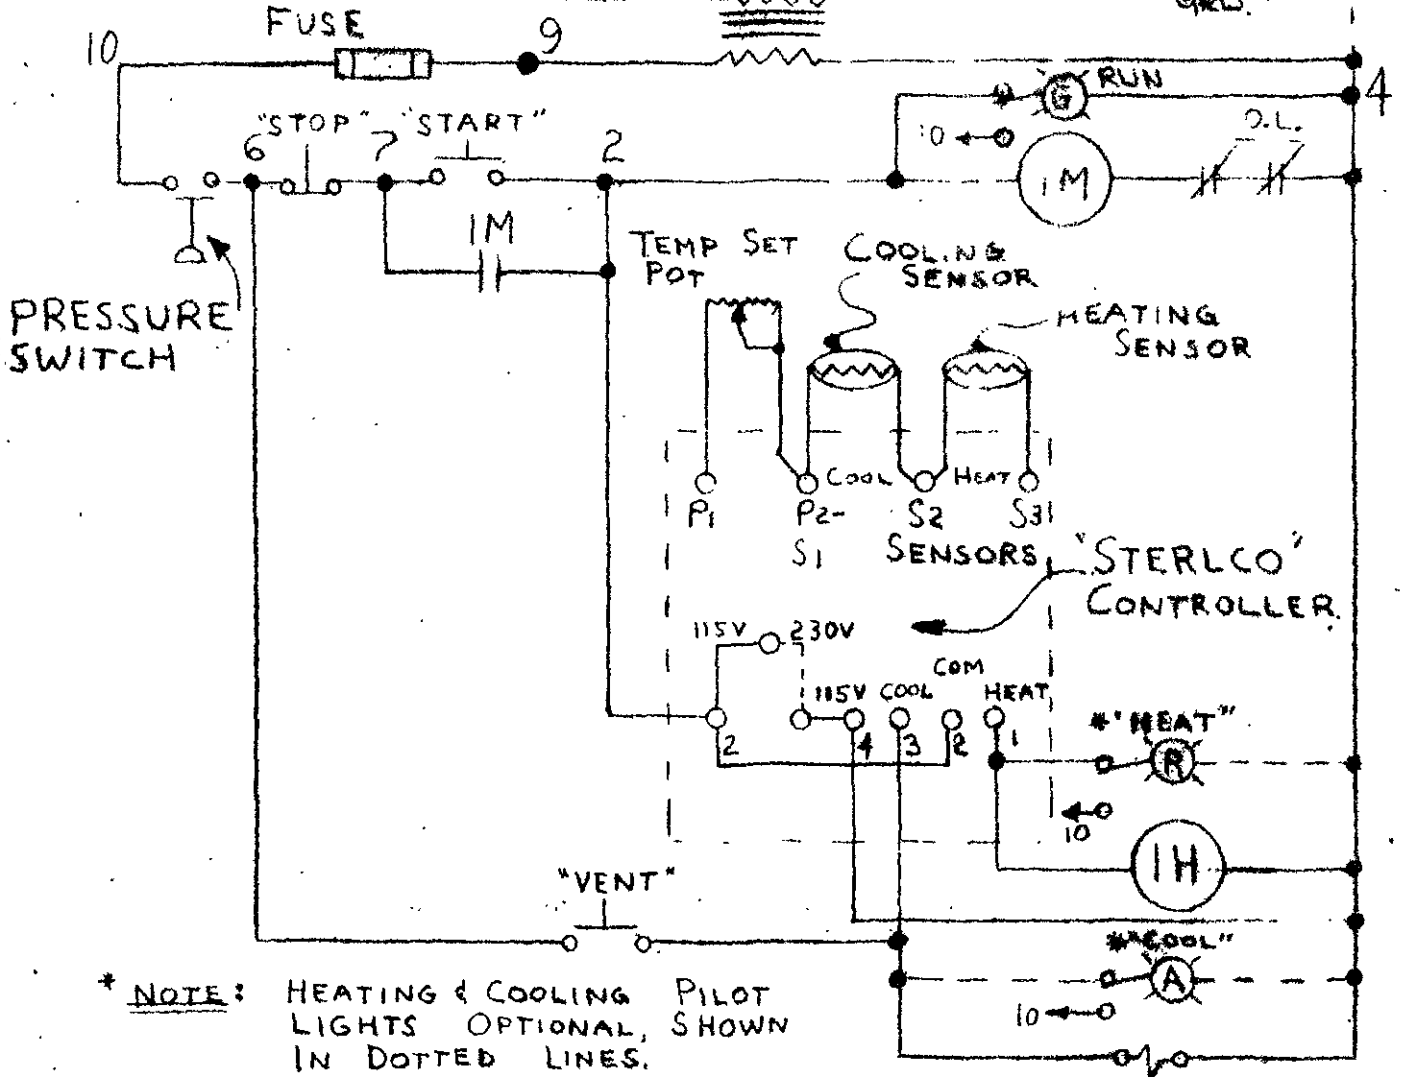

* NOTE: HEATING & COOLING PILOT LIGHTS OPTIONAL, SHOWN IN DOTTED LINES.

NOTE: TRANS. NOT GROUNDED BY STERLING, CUSTOMER GROUND IF POWER SUPPLY PERMITS.

DRS. NO.	20668
ISSUE	1
SCALE	None
DATE	6-16-69
CHK.	
DR. S.P.	
TITLE	ELEM. WIRING DIAG. 6414
STERLING, INC.	MILWAUKEE, WIS.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>