

Font Memory Card Kit User's Guide

(For use with Hewlett-Packard 3005 Series Printers)

This User's Guide is for TROY Font Memory Card Kit users only. If you purchased a TROY Security Printing Solutions Printer, please refer to the TROY Security Printing Solutions User's Guide provided on the TROY Security Printing Solutions CD.

Document #50-70407-002 Rev. A

Acknowledgements

Some of the TROY products include cryptographic software written by Eric Young (<u>eay@cryptsoft.com</u>) The Twofish encryption/decryption source code used in the TROY Memory Card is provided by Crytopane.

TROY is a registered trademark. TROYmark[™] and AutoProtect[™] are registered trademarks of TROY Group, Inc. All rights reserved.

Microsoft Windows, PostScript, TrueType, LaserJet, and all other product names mentioned in this publication are trademarks or registered trademarks of their respective companies.

Information and descriptions contained herein are the property of TROY Group, Inc. Such information and descriptions may not be copied, disseminated, or distributed without the express written consent of TROY Group, Inc. This publication is subject to change without notice.

© 2003 – 2006 TROY Group, Inc. Printed in the United States of America September 22, 2006

Preface

This manual is designed and formatted for use as an online document (viewed on your computer screen). The document can also be printed; however, it is recommended that you print only the pages applicable to your security printing solution. Printing the entire document will print all the pages for all of the TROY Security Printing Solutions covered in this manual. For best results, you <u>must</u> use Adobe Acrobat Reader 5.0 or higher to view or print this document. Earlier versions of Adobe Acrobat Reader will not produce a properly formatted document on your computer screen. The latest version of Adobe Acrobat Reader is available as a free download from the Adobe website at http://www.adobe.com.

Conventions

This User's Guide uses these conventions:

Bold indicates emphasis or a minor heading.

Italic refers to a document title or is used for emphasis.

COURIER type indicates text visible on a computer screen or keys on your computer keyboard.

DISPLAY FONT indicates text visible on the printer control panel display.

The letter l is used in examples to distinguish the small letter l from the numeral 1 (one).

The character \emptyset is used in examples to distinguish the letter O from the numeral 0 (zero).

<Esc>, <CR>, <LF>, <FF>, etc. are control characters. Use a text editor to enter the equivalent of the character. For example, to get <Esc> using a DOS text editor, hold down the **Ctrl** key; and press the [(left square bracket) key. Other text editors may vary.

NOTE: Notes contain important information set off from the text.

- CAUTION: Caution messages appear before procedures, which if not observed, could result in loss of data or in damage to equipment.
- WARNING: Warning messages alert you to a specific procedure or practice, which if not followed correctly, could cause serious personal injury.



Section 1 – Features Overview	
Introduction	1-1
TROY Security Fonts	1-1
Section 2 – Using the TROY Printer Utility	
Introduction	2-1
Menu Structure	2-1
Basic Printer Utility Operations	2-2
Printing Demo Pages	2-3
Accessing Fonts Using Non-Windows Applications	2-3
Verifying Windows Font Support	2-3
Verifying PCL 5e Communication	2-5
Downloading Files to the Printer	2-6
Obtaining Technical Assistance	2-7
Section 3 – Using TROY Fonts	
Introduction	
Accessing and Using TROY Fonts	3-1
Accessing the TROY Fonts Using Windows Applications	3-1
Accessing the TROY Fonts Using Non-Windows Applications	3-1
Using TROY MICR Fonts	
Using the Convenience Amount Fonts	
Using the TROY Security Fonts	3-2
Using the TROY OCR Fonts	3-2
	······································
Using the Reverse Helvetica Font	
Using the Reverse Helvetica Font Using the TROY POSTNET Font	



MICR Font Guidelines
Font Character Mapping
Determining a Character Mapping3-6
Accessing Unmapped Characters3-6
Standard ASCII Character Set
TROY MICR E-13B 12-Point Font3-8
TROY MICR CMC-7 12-Point Font
TROY Enhanced Convenience Amount (Scalable)
TROY Large Convenience Amount 18-Point Font
TROY Small Convenience Amount 24-Point Font
TROY Security Font
TROY Security Font (Spanish)
TROY Reverse Helvetica Font
TROY OCR-A Font (Scalable)
TROY OCR-B Font (Scalable)
TROY UPC-A Barcode
TROY UPC-E Barcode
TROY EAN-8 Barcode
TROY EAN-13 Barcode
TROY BC25 Barcode
TROY BC39 Barcode
TROY BC128 Barcode
TROY POSTNET
TROY POSTNET Reverse (optional)
International Convenience Amount Fonts
British Large Convenience Amount Font
French Large Convenience Amount Font



Italian Large Convenience Amount Font	
Spanish Large Convenience Amount Font	
British Small Convenience Amount Font	
French Small Convenience Amount Font	
Italian Small Convenience Amount Font	
Spanish Small Convenience Amount Font	

Section 4 – Troubleshooting / Error Messages

Troubleshooting by Symptom4	1-1
Troubleshooting by Printer Control Panel Display Message	1-9



Introduction Thank you for purchasing

Thank you for purchasing your TROY Font Memory Card Kit. You have chosen the highest quality MICR (Magnetic Ink Character Recognition) printing solution available today that offers convenience, flexibility, and precision for printing high-quality MICR documents.

The TROY Font Memory Card is designed for use in selected Hewlett-Packard LaserJet printers and features an enhanced collection of MICR, OCR (Optical Character Recognition), and security fonts designed for printing financial documents. The TROY Font Memory Card can be added to a standard Hewlett Packard printer. Refer to the TROY Quick-Start Guide for information on installing the TROY Font Memory Card into a Hewlett-Packard printer and for installing the necessary TROY support files.

TROY Security Fonts

Your TROY Font Memory Card Kit includes a collection of high-quality MICR fonts (E13-B, CMC-7) and other security fonts programmed into the TROY Font Memory Card. See Section 3 - Using TROY Fonts for more information. The TROY Security font collection includes the following fonts:

TROY Font	Description
E13-B MICR Font	Used to print the MICR line at the bottom of the check (United States and selected countries)
CMC-7 MICR Font	Used to print the MICR line at the bottom of the check (if your bank of deposit requires this font)
Enhanced Convenience Font	Used to print the convenience amount information on the check (this font is scalable)
Large Convenience Font	Used to print the convenience amount information on the check (this font is non-scalable)
Small Convenience Font	Used to print the convenience amount information on the check (this font is non-scalable)
TROY Reverse Helvetica Font	Used to print names and addresses on the back of transparent envelope windows for use in pressure-seal machines
British Pound and Euro Currency Symbols	Used as the British or European currency symbol for the respective country (replaces the U.S. dollar sign). These symbols can be selected to print in the audit reports.
TROY Barcode and POSTNET Fonts	Used to print several types of industry-standard barcodes for a variety of uses, and also includes a POSTNET font for printing the U.S. postal bar code that represents the 9-digit zip code printed below the postal address
TROY Security Font	Used to print the amount information on the check (English / Spanish) (this font is scalable)
TROY OCR Font (type A and B)	Used to print any information (names, addresses, amounts) that is to be read by automated readers using optical character recognition (this font is scalable)
International Convenience Fonts	Used to print the convenience amount on the check in any one of five languages (available on the TROY Security Printing Solutions CD supplied with your TROY Font Memory Card Kit)



Introduction The TROY Printer Utility is an easy-to-use Microsoft Windows-based utility designed to assist you with the management of a TROY Font Memory Card. The TROY Printer Utility allows the system administrator to perform the following functions: View system information ٠ Print Windows Security and Barcode demonstration pages Print PCL Security/Barcode Font demonstration page Obtain technical assistance Access the TROY Web site for printer firmware updates, drivers, and product/supplies information. ٠ The TROY Printer Utility is included on the **TROY Security Printing Solutions** CD supplied with your TROY Font Memory Card Kit. Follow the instructions in the TROY Font Memory Card Kit Quick-Start Guide to install the TROY Printer Utility. Menu The user-friendly features of the TROY Printer Utility are conveniently grouped under three pull-down menus as shown below. An arrow (>) next to the menu selection indicates that additional selections are available for that **Structure** menu item. It is suggested that you print out this page for use as a convenient reference when using the TROY Printer Utility. **TROY Printer Utility Menu Tree RESOURCES** FILE HELP Install New Resources Print **TROY Printer Utility Help F1** Windows Security Font Demo Fonts **TROY on the Web** Windows Barcode Font Demo Macros/Forms **Technical Support** PCL Security/Barcode Font Demo **System Information Download File Firmware Update** Exit About

<u>NOTE</u>: The grayed-out menu items displayed in the TROY Printer Utility are for features that apply only to TROY printers and Hewlett-Packard printers that have the TROY MICR Secure Memory Card installed.



Basic Printer Utility Operations

TO ACCESS THE TROY PRINTER UTILITY:

- 1. Click on the Microsoft Windows *Start* button, select *Programs*, *MICR by TROY*, and then click on the *TROY Printer Utility* icon. The Printer Utility main window will appear.
- 2. Click on the Hewlett-Packard printer you wish to manage.

TROY Printer Utility	
File Settings Resources Help	
Select the printer to configure from the following list:	Selected printer location (port):
HP 4250 PCL 5e LaserJet Printer	LPT1:
Selected Printer Information	
Admin Password TROY Security Printing So	lution Windows Printer Driver
Font Card / DIMM	Winspool

3. Select *Font Card / DIMM* from the TROY Security Printing Solution drop-down menu. For convenience, this setting is saved when you exit the TROY Printer Utility. This option simplifies the TROY Printer Utility interface by allowing access to features that are only available within your product type.



The TROY Printer Utility provides the ability to generate a Windows Security Font, Windows Barcode Font, and PCL Security/Barcode Font demonstration page. Use the Windows Security Font demonstration page if you are using a Windows-based printing application, or use the PCL Security/Barcode Font demonstration page if you are using a non-Windows-based printing application. Use these demonstration pages to verify the TROY Security fonts generated by your printer.
If you are using a non-Windows application to print MICR documents, the escape sequence for each font must be programmed into the application in order to "call" each of the selected fonts. The $\langle Esc \rangle$ character is ASCII character number 27 (hexadecimal number 1B). Refer to Section 3 – <i>Using TROY Fonts</i> for the specific escape sequence (displayed above each character map) used to call each of the TROY fonts.
To verify that the TROY Windows font support files were properly installed on your system, demonstration documents are provided through the TROY Printer Utility in Windows that can be printed out to visually identify all security and/or barcode fonts downloaded to the TROY printer. Make sure your TROY printer is properly setup, powered ON, and is online before printing the Windows Security Font or Windows Barcode Font Demonstration page(s).
1. From the <i>Main Window</i> , click on the printer you wish to manage.
 From the <i>Main Window</i>, click on <i>File</i>, <i>Print</i>, and then click on <i>Windows Security (MICR) Font Demo</i>. The printer will automatically print the Windows Security Font Demonstration page (see example on next page).
3. Compare the actual TROY security fonts (the actual fonts generated by your printing system) shown in the right-hand column with the facsimile image of these fonts printed in the center column (a digitized image designed to look exactly like the actual fonts generated by your system – see example on the next page).
If the support files were properly installed, the actual TROY security and/or barcode fonts displayed in the right-hand column should appear identical to the facsimile fonts displayed in the center column. If the actual fonts do not match the facsimile fonts printed on the demonstration document (fonts not printed correctly or fonts missing on the printout), review the installation steps in this document. If further assistance is required, contact TROY Technical Support.



Section 2	Using the TROY Printer Utility				
Verifying		TROY Security Font Collection			
Windows Font Support (cont.)		Microsoft Windows Test Page			
	This document displays how the TROY Security Font Collection should appear when printed through Microsoft Windows (Facsimile Font Image) and how they actually print through your Microsoft Windows printer driver configuration (Actual Printed Font) to a TROY Security Printing Solution. Compare the fonts printed in the Facsimile Font Image column of this page to the fonts printed in the Actual Printed Font column. If the Windows support files (PCM) were properly installed into the Hewlett Packard PCL 5e printer driver, the fonts in the two columns should match. If the fonts in both columns do not match (fonts in the Actual Printed Fonts column not printed correctly or missing from this page), review the Windows Support File installation steps in the user documentation. If further assistance is needed, please contact TROY Technical Support 1-800-332-6427, or email techsupport@troygroup.com				
	Font Name	Facsimile Font Image	Actual Printed Font		
	TROY E-13B	1234567890	1234567890		
	TROY CMC7	1234567898	1234567890		
	TROY ECF	01234567890	0 1 2 3 4 5 6 7 8 9 0		
	TROY LCF	1 2 3 4 5 6 7 8 9 0	1 2 3 4 5 6 7 8 9 0		
	TROY SCF	1 2 3 4 5 6 7 8 9 0 bet Two helds four risk six styles four next state	1 2 3 4 5 6 7 8 9 0 off two takes from fire for even bour fine into		
	TROY HELV Rev	1234567890	1234567890		
	TROY MICRO	MPMPMP	MPMPMP		
	TROY OCRA	1234567890ABCD	1234567890ABCD		
	TROY OCRB	1234567890ABCD	1234567890ABCD		
	TROY Security	1232567890	1234567890		



Using the TROY Printer Utility

Communicationhs12	 The PCL Security/Barcode Font demonstration page can be used to verify PCL 5e communication between the host computer and your printer. If the PCL 5 communication between the host computer and your printer is successful, then the selected demonstration page should print out exactly as shown in the example below. <u>TO PRINT THE PCL SECURITY/BARCODE FONT DEMONSTRATION PAGE</u>: 1. From the <i>Main Window</i>, click on the printer you wish to access. 2. Type in the current administrator password in the password box at the bottom of the <i>Main Window</i>. If a password is not set, then leave the password box blank. 3. From the <i>Main Window</i>, click on <i>File</i>, <i>Print</i>, and then click on <i>PCL Security/Barcode Font Demo</i>. The 			
	printer will autom	TROY SECURITY		example below).
	Font Name	PCL 5e Font Demo Page (non- PCL5e Font Call Escape Sequence	Microsoft Windows) Print Example	
	TROY E-13 *	<esc>(0Q<esc>(s1p12.0v0s0b0T <esc>(0Q<esc>(s0p8.00h8.8v0s0b0T</esc></esc></esc></esc>	1234567890:://#*** 1234567890:://#***	
	TROY CMC7 *	<pre><esc>(0Q<esc>(s1p12.0v0s0b1T <esc>(0Q<esc>(s0p8.00h8.8v0s0b1T</esc></esc></esc></esc></pre>	4234567890000000 4234567890000000	
	TROY ECF *	<esc>(3Q<esc>(s1p<height>v0s0b0T <esc>(3Q<esc>(s1p18v0s0b0T</esc></esc></height></esc></esc>	1234567890 01234567898 *	
	TROY LCF	<esc>(1Q<esc>(s0p5.01h16.0v0s0b0T</esc></esc>	1234567890\$ \$€€*	
	TROY SCF	<esc>(2Q<esc>(s0p6.00h22.0v0s0b0T</esc></esc>	1 2 3 4 5 6 7 8 9 0 \$ € € * , M THE INTER THE THE INTER AND ADD IN A DIAL AND ADD I	
	TROY Micro Font	<esc>(10U<esc>(s0p80h.8v0s33b0T</esc></esc>	PPPPPPPPPPPP	
	TROY Helvetica (Rev)	<esc>(9U<esc>(s1p<height>v0s33b24580T</height></esc></esc>	1234567890 ABCDEFGHIJKLMnopqrstuvwxyz	
	TROY OCR-A	<esc>(0O<esc>(s1p<height>v0s0b104T</height></esc></esc>	1234567890 ABCDEFGHIJKLMnopqrstuvwxyz	
	TROY OCR-B	<esc>(1O<esc>(s1p<height>v0s0b110T</height></esc></esc>	1234567890 ABCDEFGHIJKLMnopqrstuvwxyz	
	TROY Security	<esc>(4Q<esc>(s1p<height>v0s0b0T</height></esc></esc>	1234567890 .¢\$€&,	
		Notes		
	<esc> represents the non-printa</esc>	ble escape character (AscII27/Hex1B).		
	<height> represents the point-siz</height>	e value of the scalable font. Value is represented in points	1/72 inch increments.	
	* Multiple PCL5e font calls are s	hown for some fonts. Refer to the printer documentation to	verify which calls your specific model supports.	
		nted in place of them; this is normal. If you would like to add	printer document for details. If these fonts are not included, alternate these fonts to your printer-resident font collection, please contact	
TROY	Font Memory Card Kit User's Gui	de Document # 50-70407-002 Rev. A		2-5

Using the TROY Printer Utility

Downloading The TROY Printer Utility provides the ability to download any PCL or text file directly to the printer without embedding additional information. A download option is provided to enhance the download file (see the Files to the Download File window for the specific options). To include the advanced option to the download, place a **Printer** checkmark next to the option. The advanced download option is provided for advanced users only. TO DOWNLOAD A FILE TO THE PRINTER: 1. From the *Main Window*, click on the printer you **Download File** X wish to manage. File Help 2. From the *Main Window*, click on *File*, and click File Name: on Download File. Ê 3. Enter the file name or click on **Browse** to locate the desired file. 4. For advanced users: Place a checkmark next to **I**Include Administrator and Password data to file the download option if you wish to include the ■ Include NVRAM download enter and exit data to file additional data with the download file. For **I**Include job initialize and job exit data to file normal use, it is recommended that the checkbox be left blank. 5. Click on *Download* to send the file to the Download printer's memory. Click on OK to finish. 6. Click on **OK** to continue.



Obtaining Technical Assistance

The TROY Printer Utility provides several help screens to guide you through the features and functions of your TROY Font Memory Card. TROY technical support is available to assist you with any questions concerning the setup, operation, and maintenance of your TROY Font Memory Card. Specific system information about the configuration of your TROY product is also available through the TROY Printer Utility. You are also encouraged to visit the TROY website for latest FAQs (Frequently Asked Questions), information on the latest TROY products, and for ordering MICR toner and other printing supplies.

TO VIEW TECHNICAL SUPPORT INFORMATION:

From the *Main Window*, click on *Help*, and then click on *Technical Support* to view the TROY Technical Support HTML page for telephone numbers and hours of business.

TO VIEW INFORMATION ON THE TROY WEBSITE:

From the *Main Window*, click on *Help*, and then click on *TROY on the Web* to access the TROY website. Click on the *Support and Downloads* button at the top of the web page to view the available topics. You can access the TROY website directly at <u>http://www.troygroup.com</u>.

TO VIEW ON-SCREEN HELP FOR THE TROY PRINTER UTILITY:

From the *Main Window*, click on *Help*, and then click on *TROY Printer Utility Help F1* to view the Printer Utility help documents. You can press the *F1* key at any time while using the TROY Printer Utility to access the help screens.

TO VIEW INFORMATION ABOUT THE PRINTER UTILITY:

From the *Main Window*, click on *Help*, and then click on *About* to view the version level and other information about the TROY Printer Utility.

TO VIEW SYSTEM INFORMATION:

From the *Main Window*, click on *Help*, and then click on *System Information* to view the version level and other information about your computer and printer's hardware and software environment.



Introduction

The TROY MICR E-13B and CMC-7 MICR fonts have been specifically engineered for your TROY Security Printing Solution to ensure the highest quality MICR printing in the industry. The TROY font collection provides seamless integration and security within your Windows-based check printing application. All TROY fonts are permanently programmed into the TROY Font Memory Card to ensure consistent high-quality MICR printing and to prevent unauthorized use of these fonts on another printing system. Your TROY Security Printing Solution includes the following fonts:

- TROY MICR Font (E-13B and CMC-7)
- TROY Security Font (English and Spanish)
- TROY Convenience Fonts (Enhanced, Large, and Small)
- TROY Reverse Helvetica Font
- TROY OCR Fonts (type A and B)
- British Pound and Euro symbols
- TROY POSTNET and Barcode Fonts

Accessing and Using TROY Fonts

Accessing TROY Fonts Using Windows Applications

Accessing TROY Fonts Using Non-Windows Applications The following paragraphs provide some basic information for accessing and using the TROY fonts. It is important that these fonts are kept secure to prevent unauthorized use and that the fonts remain unaltered to ensure accurate rendering by your printer. All TROY fonts are permanently programmed into the TROY Font Memory Card and cannot be directly accessed through the printer control panel or other external means.

To access the TROY fonts in a Windows environment, you must first install the Windows printer driver for the model of HP printer being installed. Follow the instructions in *TROY Font Memory Card Kit Quick-Start Guide* (provided on the *TROY Security Printing Solutions* CD) to install the printer driver and Windows support files, enabling you to select these fonts from any Windows-based application. To print the TROY E13-B and CMC-7 MICR fonts, your printer must be set to MICR enabled mode, and a TROY MICR toner cartridge must be installed in the printer. Many commercial MICR check-printing applications are pre-programmed to access the TROY MICR fonts.

If you are using a non-Windows application to print MICR documents, the escape sequence for each font must be programmed into your check-printing application in order to "call" each of the selected fonts. The <Esc> character is ASCII character number 27 (hexadecimal number 1B). Refer to the end of this section for each escape sequence (displayed above each character map) used to call each TROY font.



Section 3	Using TROY Fonts
Using TROY MICR Fonts	The E-13B MICR font (TROY E-13B, TROY CMC-7) can be used for printing the MICR line in many countries, including the United States. In some European and Latin American countries, the CMC-7 MICR font is used instead. MICR document processing requires that the MICR characters be precise in size, shape, and spacing For this reason, the TROY MICR font is supplied as a TrueType font; it must not be altered by scaling or other size manipulation. TROY can provide customer support for your MICR applications only if you use the supplied TROY MICR fonts.
Using the	Your TROY Security Printing Solution includes a large, small and enhanced convenience amount font (TROY
Convenience	ECF, TROY LCF, TROY SCF). These fonts consist of numbers with their alphabetic spellings placed directly
Amount Fonts	below the numerical character. These fonts are designed for use in the <i>Legal Amount</i> field only (located directly below the <i>Payee</i> field). You can enter alphanumeric symbols representing the amount of the check into this field.
Using the TROY Security Fonts	The TROY Security font (TROY SECURITY, TROY SECURITY SPANISH) is designed to prevent fraudulent alteration to the <i>Amount</i> field on the check. The font consists of numbers with their alphabetic spellings placed directly below the numerical character with a wavy lined pattern running through each character. These fonts are designed for use in the <i>Legal Amount</i> field only (located directly below the <i>Payee</i> field on the check). You can enter numeric symbols representing the amount of the check into this field. During document processing, convenience amounts may be visually read and encoded on the check by bank personnel. In this case, a large <i>Security Amount</i> font may best meet your bank's requirements.
Using the TROY OCR Fonts	The TROY OCR fonts (TROY OCR-A AND TROY OCR-B) are used to print any information (names, addresses, amounts) on the check that is to be read by automated readers using optical character recognition.
Using the Reverse Helvetica Font	The TROY Reverse Helvetica font is used to print names and addresses on the back of transparent envelope windows for use in pressure-seal machines.
Using the TROY	The POSTNET (Postal Numeric Encoding Technique) font (TROY POSTNET) is used to represent the nine-digit

tal Numeric Encoding Technique) font (TROY POSTNET) is used to represent the nine-digit postal zip code below the postal address line. Using the POSTNET font on your mailing envelopes and postcards will significantly decrease postal processing time and reduce the chance of errors when manual data entry is required at the post office.

The British Pound and European currency symbols are used in place of the U.S. dollar sign for the respective European country and can be selected to print in the audit reports.



POSTNET Font

Using the British

Pound and Euro

Symbols

Using Printer	In addition to the TROY <i>printer</i> fonts that are permanently	TROY E-13B Screen Font:	□ュჇョ⊾₅ႺჇჇႤぱぱ┉
Fonts and	fonts that are permanently programmed into the TROY Font	TROY CMC-7 Screen Font:	0423456789/mm+A
Screen Fonts	Memory Card, the TROY screen fonts have been developed for	TROY LCF Screen Font:	0123456789
	screen display use only as a visual	TROY SCF Screen Font:	0 1 2 3 4 5 6 7 8 9
	reference and for making positional adjustments to the	TROY ECF Screen Font:	0123456789
	MICR line. The TROY <i>screen</i> fonts display differently than the actual <i>printer</i> fonts in order to	TROY Security Screen Font:	(142215167489)
	prevent unauthorized printing	TROY Messaging Screen Font:	A Message ForYou
	using the MICR <i>screen</i> fonts on other Windows-installed printers.	TROY AutoProtect Screen Font:	VOID VOID VOID
	If the E-13B MICR screen font is	TROY OCR-A Screen Font:	ABCDEFGHIJKLMNOP@RSTUVWXYZ
	used for printing, the inversely printed (white characters on a	TROY OCR-B Screen Font:	ABCDEFGHIJKLMNOPQRSTUVWXYZ
	black background) MICR screen	TROY Reverse Helvetica Screen Font:	ABCDEFGHIJKLMNOPQRSTUVWXYZ
	font will not be readable by the	TROY Microprint Screen Font:	
	bank reader/sorter machines. The	TKO I Microphini Screen Font.	
	uniquely displayed <i>screen</i> fonts ensure that the MICR font printed	TROY Code 128 Screen Font:	0 1 2 3 4 5 6 7 8 9 É
	on your MICR documents is generated by the TROY Font	TROY Code 2 of 5 Screen Font:	1516171819202122324
	Memory Card and <u>not</u> by the	TROY Code 3 of 9 Screen Font:	0 1 2 3 4 5 6 7 8 9
	Windows operating system using the resident TrueType ^{TM} font. The	TROY EAN-8 Screen Font:	012345678001
	TROY screen fonts are provided	TROY EAN-13 Screen Font:	0123434778901
	on the TROY Security Printing Solutions CD supplied with your	TROY POSTNET Screen Font:	0,1,2,3,4,5,6,7,8,9
	TROY Font Memory Card	TROY Reverse POSTNET Screen Font:	
	product.	TROY UPC-A Screen Font:	0123456784001



TROY UPC-E Screen Font:

012345678901

MICR Font Guidelines

The TROY E-13B and CMC-7 MICR fonts were developed using strict specifications designed specifically for high-speed magnetic-read processing. To maintain these strict specifications, the TROY MICR fonts were designed as <u>non-scalable</u> fonts (fixed fonts) that are fixed in pitch (spacing) and point size (height). Because Windows TrueTypeTM technology allows fonts to be scalable by changing the point size, it is imperative to maintain the 12-point size of the MICR fonts installed in Windows. Selecting a point size other than 12-point for the MICR font in Windows will not visibly enlarge or reduce the size of the characters; however, the horizontal spacing <u>will be</u> affected. Any alteration to the spacing of the characters will result in incorrect placement of the MICR characters in the MICR line at the bottom of your checks, causing your financial documents to be rejected by the bank.

The Convenience Amount fonts were also designed as non-scalable fonts, but can be changed (increased or decreased) from the default point size to meet your check printing requirements. Changing the point size of a fixed font in Windows will only affect the horizontal spacing of the characters and not affect the vertical size of the characters. The TROY Enhanced Convenience Amount font and TROY Security font were designed as scalable fonts that can be changed (increased or decreased) from the default point size to meet your check printing requirements.

<u>NOTE</u>: It is highly recommended that you verify the MICR line at the bottom of your printed checks using the TROY MICR Document Template (p/n 54-17373-001) to verify the positioning of each character. Refer to the TROY MICR Basics Handbook for details (provided on the *TROY Security Printing Solutions* CD supplied with your TROY Font Memory Card product).




Font Character Mapping	Each character or symbol in a font set corresponds to a specific ASCII (American Standard Code for Information Interchange) number (e.g., the capital letter "A" = ASCII number 65). Pressing a key on your computer keyboard automatically generates the ASCII number (32 through 127) associated with the character or symbol displayed on the key. Likewise, any character or symbol <u>not</u> represented on your computer keyboard (ASCII numbers above 127) can be accessed by manually entering the associated ASCII number using the numeric keypad.
	The fonts provided on the <i>TROY Security Printing Solutions</i> CD have each of the characters and symbols in each font set (shown on the following pages) "mapped" (associated) to standard computer keyboard characters using the corresponding ASCII number for each character and symbol on the keyboard.
	For example, the transit symbol (one of the industry-standard symbols used in a MICR line at the bottom of a check) contained in the TROY E-13B MICR character table (shown on page 9) does not exist on a standard computer keyboard but has been "mapped" to the standard ASCII keyboard capital letter "A", designated as ASCII number 65.
	Therefore, after loading and then selecting the TROY E-13B MICR Font, typing the capital letter "A" on your computer keyboard will produce the MICR transit symbol instead of the capital letter "A". The TROY E-13B character table (shown on page 9) associates the transit symbol with ASCII number 65 (the same ASCII number used for the capital letter "A" if you had selected a standard ASCII font set instead of the TROY E-13B MICR font set).



Determining a Character Mapping

Accessing Unmapped Characters To determine which key on your computer keyboard that a TROY character or symbol is "mapped" to, simply compare the ASCII number of the selected TROY character or symbol to the same ASCII number listed in the *Standard ASCII Character Map* (shown on the next page) to determine which keyboard key can be used to access the selected TROY character or symbol.

Some of the font sets provided on the *TROY Security Printing Solutions* CD contain more characters or symbols than can be "mapped" to the available keys on a standard computer keyboard. In this case, these characters can be accessed by manually entering the ASCII number (see example at right) designated for each character (refer to the character tables on the following pages). The hexadecimal number shown below the ASCII number is used for programming mainframe computers.

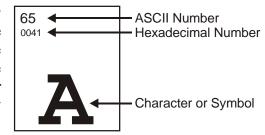

To access a character or symbol that is <u>not</u> "mapped" to one of the keys on your Windows computer keyboard, you can manually enter the ASCII number by holding down the **ALT** key on your keyboard, entering the associated ASCII number for the character you wish to access, and then releasing the **ALT** key.

<u>NOTE</u>: You <u>must</u> use the numerical keypad on your keyboard to enter the ASCII number. The number keys along the top of the keyboard will not work for this application.



Standard ASCII Character Set

(reference only)

24	25	26	27	28	29	30	31	32 0020	33 0021	34 0022 ♥♥	35 0023 #
36 0024 \$	37 0025 %	38 0026 &	39 0027	40 0028	41 0029	42 002A	43 002B	44 002C	45 002D	46 002E	47 002F
48 0030 0	49 0031	2000 2000 2000 2000	3 ⁵¹ 3	52 0034 4	53 0035 5	54 0036 6	⁵⁵ ⁰⁰³⁷ 7	56 0038 8	⁵⁷ 0039 9	58 003A	59 003B
60 003C	61 003D	62 003E	63 003F ?	64 0040	⁶⁵ 0041 А	⁶⁶ 0042 В	⁶⁷ ⁰⁰⁴³ С	68 0044 D	69 0045	70 0046	71 0047 G
72 0048	73 0049	74 004A J	⁷⁵ 004В К	76 004C	77 004D	78 004E N	79 004F	P	⁸¹ 0051	R	83 0053 S
84 0054	85 0055 U	86 0056 V	87 0057 W	88 0058 X	89 0059 Y	⁹⁰ ооба Z	91 005B	92 005C	93 005D	94 005E	95 005F
96 0060	97 0061 a	98 0062 b	99 0063 C	100 0064 d	101 0065 e	102 0066 f	103 0067 g	104 0068 h	105 0069	106 006A	107 ообв k
108 006C	109 006D M	110 006E	111 006F O	p	113 0071 Q	114 0072	115 0073 S	116 0074 t	117 0075 U	118 0076 V	119 0077 W
120 0078 X	121 0079 y	122 007A Z	123 007В {	124 007C	125 007D }	126 007E	127	128	129	130	131



24	25	26	27	28	29	30	31	32 F020	33	34	35
36 F024	37	38 F026	39	40	41	42	43	44 .	45 F02D	46	47 F02F
48 F030	49 F031	50 F032	51 F033	52 F034	53 ^{F035}	54 ^{F036}	55 F037	56 F038	57 ^{F039}	58 F03A	59 ^{F03B}
60	61 F03D	62	63	64	65 F041	66 F042	67 F043	68 F044	69	70	71
72	73	74	75	76	77	78	79 F04F	80	81	82	83
84 F054	85	86	87	88	89	90	91	92	93	94	95
96	97	98	99	100	101	102	103	104	105	106	107
108	109	110	111 F06F	112	113	114	115	116 F074	117	118	119

TROY MICR E-13B 12-Point Font (Troy E-13B)

TROY

Font Memory Card Kit User's Guide -- Document # 50-70407-002 Rev. A

<Esc>(ØQ<Esc>(slpl2vØsØbØT

Using TROY Fonts

Section 3

TROY MICR CMC-7 12-Point Font

<Esc>(ØQ<Esc>(slp12vØsØblT

(Troy CMC7)

TROY Enhanced Convenience **Amount Font** (Troy ECF)

24	25	26	27	28	29	30	31	32 F020	33	34	35
36	37	38	39	40	41	42	43	44	45	46	47
48 F030	49 F031 IIIIII	50 F032	51 F033 	52 F034	53 F035	54 ^{F036}	55 ^{F037}	56 ^{F038} 	57 F039	58	59
60	61	62	63	64	65 ^{F041}	66 ^{F042}	67 F043	68 ^{F044}	69 ^{F045}	70	71

<Esc>(3Q<Esc>(s1p□vØsØb1ØT

 \Box = desired point size

24	25	26	27	28	29	30	31	32 F020	33	34	35
36 F024	37	38	39	40	41	42 F02A	43	44 F02C	45	46 F02E	47
48 F030	49 F031	50 F032 2 Two	51 F033	52 F034	53 F035	54 F036	55 F037	56 F038	57 F039	58	59
60	61	62	63	64	65 F041 O CTS	66 F042 1 CTS	67 F043 2 CTS	68 F044 3 CTS	69 F045 4 CTS	70 F046 5 CTS	71 ^{F047} 6 CTS
72 F048 7	73 ^{F049} 8 CTS	74 ^{F04A} 9 CTS	75	76	77	78	79	80	81	82	83



NOTE: The TROY Enhanced Convenience Amount font can be used in place of the TROY Convenience Amount font in the legal amount field of the check. To write the cents amount on the check, type the capital letter that corresponds to the smaller cent characters shown in the example above (i.e., A=0, B=1, C=2). **TROY Large** <Esc>(1Q<Esc>(sØp5.Øh16.ØvØsØbØT Convenience Char Char Key Char Key Key Key Char **Amount 18-Point** Font (Troy LCF) €≣€ Ø 5 FIVE 6 SIX 7 SEVEM 8 EIGHT 9 NINE \$ 5 \$ % 0 DOLLAR 1 ONE 2 TWO 3 THREE 4 FOUR × & 1 6 ASK ¢ 2 С 7 COM , 3 8 PER 4 9 **TROY Small** <Esc>(2Q<Esc>(sØp6.ØØh22.ØvØsØbØT Convenience Char Char Key Char Char Key Key Key **Amount 24-Point Font (Troy SCF)** € 0 5 \$ % 5 \$ 0 ZERO FIVE EURO DOLLAR € 6 1 × * 1 6 & SIX ONE ASK 2 7 . 2 7 , TWO SEVEN COM 3 8 ٠ 3 8 THREE EIGHT PER 4 9 9 4 FOUR



TROY Security <Esc>(4Q<Esc>(s1p□vØsØbØT □ = desired point size Font (Troy 32 F020 27 29 30 31 33 34 35 24 25 26 28 **Security**) F023 ¢ 43 39 41 45 36 37 38 40 42 44 46 47 F026 F02A F02C F02E F02F F024 F025 PROPERTY REALING REALING REALING FER 8 ACCORDER SCORDER SCORDER SCORDER SCORDER BLANK E * S 48 F030 49 F031 52 F034 54 55 F037 56 57 58 59 50 51 53 F032 F033 F035 F036 F038 F039 2 3 6 7 8 9 5 1 4 0

TROY Security Font (Spanish) (Troy Security Spanish)

<Esc>(4Q<Esc>(s1p_vØsØb4T

= desired point size

24	25	26	27	28	29	30	31	32 F020	33	34	35 F023
36 F024	37 F025	38 F026	39	40	41	42 F02A	43	44 F02C	45	46 F02E	47 F02F
48 F030	49 F031	50 F032	51 F033	52 ^{F034}	53 F035	54 ^{F036}	55 F037	56 F038	57 ^{F039}	58	59

<u>NOTE</u>: The TROY Security Spanish Font is included in the International Font Collection provided on the *TROY Security Printing Solutions* CD.



TROY Reverse Helvetica Font (Troy Helvetica (Rev))

32 20	33 21	34 22	35 23	36 24	37 25	38 26	39 27	40 28	41 29
	;		#	\$	20	ଷ		1	١
42 2A	43 2B	44 2C	45 2D	? 48 2E	47 2F	0 48 30	49 31	50 32	51 33
*	+	١	_		١	0		7	2
52 34	53 35	54 36	55 37	56 38	\ 57 39	58 3A	59 3B	0 3C	5 61 3D
H	0	0	、	0	Э		、	<	=
62 3E	63 3F	64 40	65 41	<u>8</u> 66 42	0 67 43	• 68 44	• 69 45	70 46	71 47
		6	J		0		-		0
72 48	ک	74 4A	75 4B	<u>В</u> 76 40	77 40	78 4E	₽ 79 4F	80 50	81 51
		~		_					đ
H 82 52	83 53	84 54	K 85 55	86 56	87 57	88 58	89 59	90 5A	91 5B
	_		-					_	
92 5C	93 2D	94 5E	95 5F		97 61	98 62	99 63	100 64	101 65
			_						
102 66	103 67	► 104 68	105 69	, 106 6A	9 107 68	р 108 6С	09 6D	<u>q</u> 110 бе	6 111 6F
t	a	<u>р</u>	115 73	116 74	К 117 75	118 76	119 77	U 120 78	O
b	d 123 78	L	2	f 126 7E	П 127 7F	Λ 128 80	M	X	λ 131 83
122 /A	123 78	124 7C	120 70	120 /E	127 /1	120 80	128 81	130 82	131 83
Ζ	{		}	~					



TROY OCR-A (Troy OCR-A)

<Esc>(Ø0<Esc>(s1p□vØsØb1Ø4T

 \Box = desired point size

24	25	26	27	28	29	30	31	32 0020	33 0021	34 0022	35 0023
36 0024	37 0025	38 0026	39 0027	40 0028	41 0029	42 002A	43 002B	44 002C	45 002D	46 002E	47 002F
48 0030	49 0031	50 0032	51 0033	52 0034	53 0035	54 0036	55 0037	7 56 0038	57 0039	58 003A	59 0038
60 003C	61 003D	62 003E	63 003F	64 0040	65 0041	66 0042	67 0043	68 0044	69 0045	70 0046	71 0047
7 2 0048	73 0049	74 004A	75 004B	76 004C	77 004D	8 004E	79 004F	D 80 0050	81 0051	82 0052	83 0053
H 84 0054	85 0055	86 0056	87 0057	88 0058	89 0059	90 005A	91 005B	92 005C	Q 93 005D	R 94 005E	95 005F
96 0060	97 0061	98 0062	99 0063	100 0064	101 0065	102 0066	103 0067	104 0068	105 0069	106 006A	107 006B
108 006C	109 006D	110 006E	C	112 0070	1 13 0071	114 0072	g 115 0073	h	117 0075	J	119 0077
120 0078	n	122 007A	123 007B	P	125 007D	126 007E	S	128 20AC	U 129	V	U 131
X 132	y	Z	-	136	}	Л 138	139 2039	140	141	142	143
144	145 2018	146 2019	147 201C	148 201D	149	150 2013	K	152	153	154	155 203A
	1	T	Π			-	_				>



TROY OCR-A (continued)

157	158	159	160 00A0	161	162 00A2	163 00A3	164 :	165 00A5	166	167
169	170	171	172	173	174	175	176	177	178	179
181	182	183 00B7	184 00B8	185	186	187	188	189	190	191 00BF
193	194	∎ 195	196 00C4	197 00C5	198 00C6	199	200	201	202	203
205	206	207	208	209 00D1	210	211	212	213	214 00D6	215
217	218	219	220 00DC	221	222	223	224	225	226	227
	169 181 193 205	169 170 181 182 193 194 205 206	169 170 171 181 182 183 193 194 195 205 206 207	169 170 171 172 181 182 183 0087 184 0088 193 194 195 196 00C4 205 206 207 208 217 218 219 220	169 170 171 172 173 181 182 183 0087 184 0088 185 193 194 195 196 00C4 197 00C5 205 206 207 208 209 0001 217 218 219 220 221	00A0 00A0 00A2 169 170 171 172 173 174 181 182 183 184 185 186 193 194 195 196 197 198 205 206 207 208 209 210 217 218 219 220 221 222	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$

NOTE: This OCR font must be used at the designated point size to ensure optical readability.

- Size I must use 12-point size (upper and lower case characters can be used)
- Size III must use 16-point size (only upper case characters can be used)
- Size IV must use 20-point size (only upper case characters can be used)



TROY OCR-B (Troy OCR-B)

<Esc>(10<Esc>(s1p□vØsØb11ØT

 \Box = desired point size

24	25	26	27	28	29	30	31	32 0020	33 0021	34 0022	35 0023 #
36 0024	37 0025 %	38 0026 &	39 0027	40 0028	41 0029	42 002A	43 002B	44 002C	45 002D	46 002E	47 002F
48 0030	49 0031 1	50 0032	51 0033 X	52 0034	53 0035 5	54 0036	55 0037 7	56 0038	57 0039	58 003A	59 0038
60 003C	61 003D	62 003E	63 003F ?	64 0040	65 0041	66 0042	67 0043	68 0044	69 0045	70 0046	71 0047
72 0048	73 0049	74 004A	75 004B	76 004C	77 004D	78 004E	79 004F	80 0050	81 0051	82 0052	83 0053 C
84 0054	85 0055	86 0056	87 0057	88 0058 V	89 0059	90 005A	91 005B	92 005C	93 005D	94 005E	95 005F
96 0060	97 0061	98 0062	99 0063	100 0064	101 0065	102 0066 f	103 0067	104 0068	105 0069	106 006A	107 006B
108 006C	109 006D	110 006E	111 006F	112 0070	113 0071	114 0072	115 0073	116 0074	117 0075	118 0076	119 0077
120 0078	121 0079	122 007A	123 007B	124 007C	125 007D	126 007E	127 007F	128	129	130 201A	131
132 201E	133 2026	2 134 2020 ↓	135 2021 4	136 02C6	137 2030 0/	138 0160	139 2039	140 0152	141	142 017D	143
144	145 2018	146 2019	147 201C	148 201D	149 2022	150 2013	1 51 2014	152 02DC	153	154 0161	155 203A



TROY OCR-B (continued)

169 181 00B5	Ž 170 00AA a 182	Y 171 00AB ≪	172 00AC	173 00AD	174	175	Я	T	I	§
	182			_		175 00AF	176 00B0	177 00B1	178	179
u		183 00B7	184 00B8	185	186 00BA	187 00BB	188	189	190	191 00BF
193 00C1	194 00C2	195 00C3	196 00C4 *X'	197 00C5	198 00C6	199 00C7	200 00C8	201 00C9	202 00CA	203 00CB
205 00CD	206 00CE	207 00CF	208 00D0	209 00D1	210 00D2	211 00D3	212 00D4	213 00D5	214 00D6	215 00D7
217 00D9	218 00DA	219 00DB	220 00DC	221 00DD	222 00DE	223 00DF	224 00E0	225 00E1	226 00E2	227 00E3 ã
229 00E5	230 00E6	231 00E7	232 00E8	233 00E9	234 00EA	235 00EB	236 00EC	237 00ED	238 00EE	239 00EF
241 ^{00F1}	242 00F2	243 00F3	244 00F4	245 00F5	246 00F6	247 00F7	248 00F8	249 00F9	250 00FA	251 00FB
253 00FD	254 00FE	255 00FF	0 256 E000	257 E001	0 258 E002	÷	Ø	u	u	u
	оост А 205 00СС С С С С С С С С С С С С С С С С	A 00C2 Á Â 205 206 Í Î Í Î 217 218 Ú Ú Ú Ú 229 230 00E5 8 8 241 00F1 Ô 241 242 00F1 Ô 253 254	193 194 195 100C1 104 195 100C2 100 195 11 195 100 11 100 110 11 110 110 110 110 110	193 194 195 196 100C1 10C2 195 100C3 196 11 1100 1100 1100 1100 1100 11 1100 1100 1100 1100 1100 1100 11 11 110 110 110 1100	193 194 195 196 197 100C1 194 100C2 137 100C5 137 11 <t< td=""><td>193 194 195 196 197 198 Á Â â</td><td>193 194 195 196 197 198 198 199 Á Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â A A A A A A A A A A A C 0007 Á Â Â Â Â Â Â Â A<!--</td--><td>193 194 195 196 197 198 199 200 A A</td><td>193 194 195 196 197 198 199 200 200 \dot{A} \hat{A} <t< td=""><td>193 194 195 196 197 198 199 200 211 200 212 213 214 2005 0005 0005 0000 00000 00000</td></t<></td></td></t<>	193 194 195 196 197 198 Á Â â	193 194 195 196 197 198 198 199 Á Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â Â A A A A A A A A A A A C 0007 Á Â Â Â Â Â Â Â A </td <td>193 194 195 196 197 198 199 200 A A</td> <td>193 194 195 196 197 198 199 200 200 \dot{A} \hat{A} <t< td=""><td>193 194 195 196 197 198 199 200 211 200 212 213 214 2005 0005 0005 0000 00000 00000</td></t<></td>	193 194 195 196 197 198 199 200 A	193 194 195 196 197 198 199 200 200 \dot{A} \hat{A} <t< td=""><td>193 194 195 196 197 198 199 200 211 200 212 213 214 2005 0005 0005 0000 00000 00000</td></t<>	193 194 195 196 197 198 199 200 211 200 212 213 214 2005 0005 0005 0000 00000

NOTE: This OCR font must be used at the designated point size to ensure optical readability.

- Size I must use 10-point size (upper and lower case characters can be used)
- Size III (not supported)
- Size IV must use 16-point size (upper and lower case characters can be used)



ROY UPC-A arcode	<esc< th=""><th>>(8Y</th><th><es< th=""><th>c>(;</th><th>s1</th><th>r Oc</th><th>vØs</th><th>øb:</th><th>246</th><th>ØØ</th><th>Г</th><th></th><th></th><th></th><th>= c</th><th>les</th><th>ire</th><th>ed l</th><th>nei</th></es<></th></esc<>	>(8Y	<es< th=""><th>c>(;</th><th>s1</th><th>r Oc</th><th>vØs</th><th>øb:</th><th>246</th><th>ØØ</th><th>Г</th><th></th><th></th><th></th><th>= c</th><th>les</th><th>ire</th><th>ed l</th><th>nei</th></es<>	c>(;	s1	r Oc	vØs	øb:	246	ØØ	Г				= c	les	ire	ed l	nei
	32	20 33	21	34	22	35	23	36	24	37	25	38	26	39	27	40	28	41	29
	42	2A 43	2B	44	2C	45	2D	46	2E	47	2F	48	30	49	31	50	32	51	33
	52	34 53	35	54	36	55	37	56	38	57	39	58	3A	59	3B	60	3C	61	3D
	62	3E 63	3F	64	40	65	41	66	42	67	43	68	44	69	45	70	46	71	47
		48 73	49	74	4A	75	4B	76	4C	77	4D	78	4E	79	4F	80	50	81	51
	82	52 83	53	84	54	85	55	86	56	87	57	88	58	89	59	90	5A	91	5B
	92	5C 93	5D	94	5E	95	5F	96	60	97	61	98	62	99	63	100	64	101	65
	102	66 103	67	.104	68	105		106	6A	107	6B	108	6C	109	6D	110	6E	111	
		70 113	71	114	72	115	73		74	117	75	118	76	119	77	120	78	121	79
	122	7A 123	7B	124	7C	125	7D	126	7E	127	7F	128	80	129	81	130	82	131	83
	132	84 133	85	134	86	135	87	136	88	137	89	138	8A	139	8B	140	8C	141	8D
	142	8E 143	8F	144	90	145	91	146	92	147	93	148	94	149	95	150	96	151	97
	152	98 153	99	154	9A	155	9B	156	9C	157	9D	158	9E	159	9F	160	A0	161	A1
	162	A2 163	A3	164	A4	165	A5	166	A6	167	A7	168	A8	169	A9	170	AA	171	AB
	172	AC 173	AD	174	AE	175	AF	176	В0	177	B1	178	B2	179	B3	180	B4	181	B5
	182	B6 183	B7	184	B8	185	B9	186	BA	187	BB	188	BC	189	BD	190	BE	191	BF



TROY UPC-E Barcode	<esc>(8Y<esc>(s1p□vØsØb2461ØT □ = desired heig</esc></esc>	Jht
	32 20 33 21 34 22 35 23 36 24 37 25 38 26 39 27 40 28 41 29	
	42 2A 43 2B 44 2C 45 2D 46 2E 47 2F 48 30 49 31 50 32 51 33	
	52 34 53 35 54 36 55 37 56 38 57 39 58 3A 59 3B 60 3C 61 3D 4 5 6 7 8 9 3A 59 3B 60 3C 61 3D	
	62 3E 63 3F 64 40 65 41 66 42 67 43 68 44 69 45 70 46 71 47 0 1 2 3 4 5 6 6	
	72 48 73 49 74 4A 75 4B 76 4C 77 4D 78 4E 79 4F 80 50 81 51	
	82 52 83 53 84 54 85 55 86 56 87 57 88 58 89 59 90 5A 91 5B	
	92 5C 93 5D 94 5E 95 5F 96 60 97 61 98 62 99 63 100 64 101 65	
	102 66 103 67 104 68 105 69 106 6A 107 6B 108 6C 109 6D 110 6E 111 6F	
	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	
	122 7A 123 7B 124 7C 125 7D 126 7E 127 7F 128 80 129 81 130 82 131 83	
	132 84 133 85 134 86 135 87 136 88 137 89 138 8A 139 8B 140 8C 141 8D	
	142 8E 143 8F 144 90 145 91 146 92 147 93 148 94 149 95 150 96 151 97	
	152 98 153 99 154 9A 155 9B 156 9C 157 9D 158 9E 159 9F 160 A0 161 A1	
	162 A2 163 A3 164 A4 165 A5 166 A6 167 A7 168 A8 169 A9 170 AA 171 AB	
	172 AC 173 AD 174 AE 175 AF 176 B0 177 B1 178 B2 179 B3 180 B4 181 B5	
	182 B6 183 B7 184 B8 185 B9 186 BA 187 BB 188 BC 189 BD 190 BE 191 BF	



TROY EAN-8 Barcode	<esc>(8Y<esc>(s1p□vØsØb2462ØT □ = desired height</esc></esc>
Durcouc	32 20 33 21 34 22 35 23 36 24 37 25 38 26 39 27 40 28 41 29
	42 2A 43 2B 44 2C 45 2D 46 2E 47 2F 48 30 49 31 50 32 51 33
	52 34 53 35 54 36 55 37 56 38 57 39 58 3A 59 3B 60 3C 61 3D /
	62 3E 63 3F 64 40 65 41 66 42 67 43 68 44 69 45 70 46 71 47 62 3E 63 3F 64 40 65 41 66 42 67 43 68 44 69 45 70 46 71 47 0 1 2 3 4 5 6 6
	72 48 73 49 74 4A 75 4B 76 4C 77 4D 78 4E 79 4F 80 50 81 51
	82 52 83 53 84 54 85 55 86 56 87 57 88 58 89 59 90 5A 91 5B
	92 5C 93 5D 94 5E 95 5F 96 60 97 61 98 62 99 63 100 64 101 65
	102 66 103 67 104 68 105 69 106 6A 107 6B 108 6C 109 6D 110 6E 111 6F
	112 70 113 71 114 72 115 73 116 74 117 75 118 76 119 77 120 78 121 79
	122 7A 123 7B 124 7C 125 7D 126 7E 127 7F 128 80 129 81 130 82 131 83
	132 84 133 85 134 86 135 87 136 88 137 89 138 8A 139 8B 140 8C 141 8D
	142 8E 143 8F 144 90 145 91 146 92 147 93 148 94 149 95 150 96 151 97
	152 98 153 99 154 9A 155 9B 156 9C 157 9D 158 9E 159 9F 160 A0 161 A1
	162 A2 163 A3 164 A4 165 A5 166 A6 167 A7 168 A8 169 A9 170 AA 171 AB
	172 AC 173 AD 174 AE 175 AF 176 B0 177 B1 178 B2 179 B3 180 B4 181 B5
	182 B6 183 B7 184 B8 185 B9 186 BA 187 BB 188 BC 189 BD 190 BE 191 BF



TROY EAN-13	<esc>(8Y<esc>(slp□vØsØb2463ØT □ = desired height</esc></esc>								
Barcode	32 20 33 21 34 22 35 23 36 24 37 25 38 26 39 27 40 28 41 29								
	42 2A 43 2B 44 2C 45 2D 46 2E 47 2F 48 30 49 31 50 32 51 33								
	52 34 53 35 54 36 55 37 56 38 57 39 58 3A 59 3B 60 3C 61 3D 4 5 6 7 8 9 9 58 3A 59 3B 60 3C 61 3D								
	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$								
	72 48 73 49 74 4A 75 4B 76 4C 77 4D 78 4E 79 4F 80 50 81 51 1 1 1 1 1 1 2 3 4 5 6								
	82 52 83 53 84 54 85 55 86 56 87 57 88 58 89 59 90 5A 91 5B								
	92 5C 93 5D 94 5E 95 5F 96 60 97 61 98 62 99 63 100 64 101 65								
	102 66 103 67 104 68 105 69 106 6A 107 6B 108 6C 109 6D 110 6E 111 6F								
	112 ⁷ 0 113 ⁷¹ 114 ⁷² 115 ⁷³ 116 ⁷⁴ 117 ⁷⁵ 118 ⁷⁶ 119 ⁷⁷ 120 ⁷⁸ 121 ⁷⁹								
	122 7A 123 7B 124 7C 125 7D 126 7E 127 7F 128 80 129 81 130 82 131 83								
	132 84 133 85 134 86 135 87 136 88 137 89 138 8A 139 8B 140 8C 141 8D								
	142 8E 143 8F 144 90 145 91 146 92 147 93 148 94 149 95 150 96 151 97								
	152 98 153 99 154 9A 155 9B 156 9C 157 9D 158 9E 159 9F 160 A0 161 A1								
	162 A2 163 A3 164 A4 165 A5 166 A6 167 A7 168 A8 169 A9 170 AA 171 AB								
	172 AC 173 AD 174 AE 175 AF 176 B0 177 B1 178 B2 179 B3 180 B4 181 B5								
	182 B6 183 B7 184 B8 185 B9 186 BA 187 BB 188 BC 189 BD 190 BE 191 BF								



TROY BC25 Barcode	<esc>(4</esc>	<esc>(4Y<esc>(s1p□vØsØb2464ØT □ = desired height</esc></esc>								
		33 21	34 22	35 23	36 24	37 25	38 26	39 27	40 28	41 29
	42 2A	43 2B	44 2C	45 2D	46 2E	47 2F	48 30	49 31	50 32	51 33
		53 35	54 36	55 37	56 38	57 39	58 3A	59 3B	60 3C	61 3D
		63 3F	64 40	65 41	66 42	67 43	68 44	69 45	70 46	71 47
		73 49		75 4B	76 4C			79 4F	80 50	81 51
		83 53	84 54	85 55	86 56	87 57	88 58	89 59	90 5A	91 5B
		93 5D	94 5E	95 5F	96 60	97 61	98 62	99 63	100 64	101 65
						107 6B			110 6E	
			114 72		116 74		118 76			121 79
				125 7D						131 83
			134 86	135 87	136 88	137 89	138 8A	139 8B	140 8C	141 8D
	142 8E	143 8F	144 90	145 91	146 92	147 93	148 94	149 95	150 96	151 97
	152 98	153 99	154 9A	155 9B	156 9C	157 9D	158 9E	159 9F	160 A0	161 A1
	162 A2	163 A3	164 A4	165 A5	166 A6	167 A7	168 A8	169 A9	170 AA	171 AB
	172 AC	173 AD	174 AE	175 AF	176 B0	177 B1	178 B2	179 B3	180 B4	181 B5
	182 B6	183 B7	184 B8	185 B9	186 BA	187 BB	188 BC	189 BD	190 BE	191 BF



<Esc>(ØY<Esc>(s1p□vØsØb2467ØT = desired height **TROY BC39 Barcode** 38 26 39 40 28 41 29 32 20 33 21 34 22 35 23 36 24 37 25 27 2E 47 50 32 51 33 42 2A 43 2B 44 2C 45 2D 46 2F 48 30 49 31 54 3B 52 34 53 35 36 55 37 56 38 57 39 58 3A 59 60 3C 61 3D 69 70 46 71 47 62 63 3F 64 40 65 41 66 67 43 68 44 45 3E 42 72 48 73 49 74 4A 75 4B 76 4C 78 4E 79 4F 80 50 81 51 77 4D 82 83 53 84 85 55 86 87 88 89 90 5A 91 5B 52 54 56 57 58 59 92 5C 93 5D 94 5E 95 5F 96 60 97 61 98 62 99 63 100 64 101 65 105 69 106 6A 107 6B 108 6C 109 6D 110 6E 111 6F 102 66 103 67 104 68 112 70 113 71 114 72 115 73 116 74 117 75 118 76 119 77 120 78 121 79 122 7A 123 7B 124 7C 125 7D 126 7E 127 7F 128 80 129 81 130 82 131 83 132 84 133 85 134 86 135 87 136 88 137 89 138 8A 139 8B 140 8C 141 8D 142 8E 143 8F 144 90 145 91 146 92 147 93 148 94 149 95 150 96 151 97 152 98 153 99 154 9A 155 9B 156 9C 157 9D 158 9E 159 9F 160 A0 161 A1 162 A2 163 A3 164 A4 165 A5 166 A6 167 A7 168 A8 169 A9 170 AA 171 AB 172 AC 173 AD 174 AE 175 AF 176 B0 177 B1 178 B2 179 B3 180 B4 181 B5 182 B6 183 B7 184 B8 185 B9 186 BA 187 BB 188 BC 189 BD 190 BE 191 BF



FROY BC128	<esc>(ØY<esc>(s1p□vØsØb247ØØT □ = desired heigh</esc></esc>
Barcode	0 00 1 01 2 02 3 03 4 04 5 05 6 06 7 07 8 08 9 09
	10 0A 11 0B 12 0C 13 0D 14 0E 15 0F 16 10 17 11 18 12 19 13
	20 14 21 15 22 16 23 17 24 18 25 19 26 1A 27 1B 28 1C 29 1D
	30 1E 31 1F 32 20 33 21 34 22 35 23 36 24 37 25 38 26 39 27
	40 28 41 29 42 2A 43 2B 44 2C 45 2D 46 2E 47 2F 48 30 49 31
	50 32 51 33 52 34 53 35 54 36 55 37 56 38 57 39 58 3A 59 3B
	60 3C 61 3D 62 3E 63 3F 64 40 65 41 66 42 67 43 68 44 69 45
	70 46 71 47 72 48 73 49 74 4A 75 4B 76 4C 77 4D 78 4E 79 4F III IIII IIIII IIIII IIIII IIIII IIIII IIIIIII IIIIII IIIIII IIIIII IIIIIIIII IIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIIII
	80 50 81 51 82 52 83 53 84 54 85 55 86 56 87 57 88 58 89 59 Image: Second secon
	90 5A 91 5B 92 5C 93 5D 94 5E 95 5F 96 60 97 61 98 62 99 63
	100 64 101 65 102 66 103 67 104 68 105 69 106 6A 107 6B 108 6C 109 6D
	110 6E 111 6F 112 70 113 71 114 72 115 73 116 74 117 75 118 76 119 77
	120 78 121 79 122 7A 123 7B 124 7C 125 7D 126 7E 127 7F 128 80 129 81
	130 82 131 83 132 84 133 85 134 86 135 87 136 88 137 89 138 8A 139 8B
	140 8C 141 8D 142 8E 143 8F 144 90 145 91 146 92 147 93 148 94 149 95
	150 96 151 97 152 98 153 99 154 9A 155 9B 156 9C 157 9D 158 9E 159 9F



Font Memory Card Kit User's Guide -- Document # 50-70407-002 Rev. A

TROY POSTNET	<es< th=""><th>5C>(</th><th>(15)</th><th>Y<e< th=""><th>sc></th><th>• (s</th><th>1p(</th><th>⊃v¢</th><th>ðsØ</th><th>b24</th><th>177¢</th><th>ðТ</th><th></th><th></th><th></th><th>=</th><th>de</th><th>siı</th><th>ced</th><th>he</th><th>ight</th></e<></th></es<>	5C>((15)	Y <e< th=""><th>sc></th><th>• (s</th><th>1p(</th><th>⊃v¢</th><th>ðsØ</th><th>b24</th><th>177¢</th><th>ðТ</th><th></th><th></th><th></th><th>=</th><th>de</th><th>siı</th><th>ced</th><th>he</th><th>ight</th></e<>	sc>	• (s	1p(⊃v¢	ðsØ	b24	177¢	ðТ				=	de	siı	ced	he	ight
	32	20	33	21	34	22	35	23	36	24	37	25	38	26	39	27	40	28	41	29	
	42	2A	43	2B	44	2C	45	2D	46	2E	47	2F	48	30	49	31	50	32	51		
	52	пĪ	53	35	54	36	55	37	56	38	57		58	ЗA	59	3B	60	3C	61	3D	
	62	3E	63	3F	64	40	65	41	66	42	67	43	68	44	69	45	70	46	71	47	
	72	48	73	49	74	4A	75	4B	76	4C	77	4D	78	4E	79	4F	80	50	81	51	
	82	52	83	53	84	54	85	55	86	56	87	57	88	58	89	59	90	5A	91	5B	
	92	5C	93	5D	94	5E	95	5F	96	60	97	61	98	62	99	63	100	64	101	65	
	102	66	103	67	104	68	105	69	106	6A	107	6B	108	6C	109	6D	110	6E	111	6F	
	112	70	113	71	114	72	115	73	116	74	117	75	118	76	119	77	120	78	121	79	
	122	7A	123	7B	124	7C	125	7D	126	7E	127	7F	128	80	129	81	130	82	131	83	
	132	84	133	85	134	86	135	87	136	88	137	89	138	8A	139	8B	140	8C	141	8D	
	142	8E	143	8F	144	90	145	91	146	92	147	93	148	94	149	95	150	96	151	97	
	152	98	153	99	154	9A	155	9B	156	9C	157	9D	158	9E	159	9F	160	A0	161	A1	
	162	A2	163	A3	164	A4	165	A5	166	A6	167	A7	168	A8	169	A9	170	AA	171	AB	
	172	AC	173	AD	174	AE	175	AF	176	B0	177	B1	178	B2	179	B3	180	B4	181	B5	
	182	B6	183	B7	184	B8	185	B9	186	BA	187	BB	188	BC	189	BD	190	BE	191	BF	



= desired height

TROY POSTNET Reverse (optional)

32	20	33	21	34	22	35	23	36	24	37	25	38	26	39	27	40	28	41	29
42	2A	43	2B	44	2C	45	2D	46	2E	47	2F	48	30	49 	31	50	32	51	33
52	34	53	35	54	36	55	37	56	38	57		58	3A	59	3B	60	3C	61	3D
62	3E	63	3F	64	40	65	41	66	42	67	43	68	44	69	45	70	46	71	47
72	48	73	49	74	4A	75	4B	76	4C	77	4D	78	4E	79	4F	80	50	81	51
82	52	83	53	84	54	85	55	86	56	87	57	88	58	89	59	90	5A	91	5B
92	5C	93	5D	94	5E	95	5F	96	60	97	61	98	62	99	63	100	64	101	65
102	66	103	67	104	68	105	69	106	6A	107	6B	108	6C	109	6D	110	6E	111	6F
112	70	113	71	114	72	115	73	116	74	117	75	118	76	119	77	120	78	121	79
122	7A	123	7B	124	7C	125	7D	126	7E	127	7F	128	80	129	81	130	82	131	83
132	84	133	85	134	86	135	87	136	88	137	89	138	8A	139	8B	140	8C	141	80
142	8E	143	8F	144	90	145	91	146	92	147	93	148	94	149	95	150	96	151	97
152	98	153	99	154	9A	155	9B	156	9C	157	9D	158	9E	159	9F	160	A0	161	A
162	A2	163	A3	164	A4	165	A5	166	A6	167	A7	168	A8	169	A9	170	AA	171	A
172	AC	173	AD	174	AE	175	AF	176	B0	177	B1	178	B2	179	B3	180	B4	181	B
182	B6	183	B7	184	B8	185	B9	186	BA	187	BB	188	BC	189	BD	190	BE	191	В




Font Memory Card Kit User's Guide -- Document # 50-70407-002 Rev. A

<Esc>(15Y<Esc>(s1p_vØs33b2477ØT

International In addition to the CMC-7 font used for International MICR applications, TROY provides the following Convenience Amount font sets in a variety of languages (see examples below). These fonts are provided only on Convenience the **TROY Security Printing Solutions** CD. These fonts can be easily downloaded into the printer's memory Amount using the TROY Printer Utility. **Fonts** The following TROY International fonts are non-scalable (fixed in size) and can be used in the convenience *amount* field of the check. The escape sequence used to call each font set in a non-Windows environment is provided directly above each example. The examples below may not be to scale. **British Large Convenience Amount Font (Troy LCF British)** <Esc>(10<Esc>(sØp5.14h16.Ø9vØsØb1T 7890 b EIGHT French Large Convenience Amount Font (Troy LCF French) <Esc>(10<Esc>(sØp5.14h16.Ø9vØsØb2T 7890FF€€* Italian Large Convenience Amount Font (Troy LCF Italian) <Esc>(10<Esc>(sØp5.14h16.Ø9vØsØb3T 7890€ ERO E 5 6 TRE QUATRO CINQUE SEI SETTE OTTO **Spanish Large Convenience Amount Font (Troy LCF Spanish)** <Esc>(10<Esc>(sØp5.14h16.Ø9vØsØb4T 0 890\$ TRES CUATRO CINCO SEIS SIETE OCHO NUEVE CERO DOLAR EURO



Font Memory Card Kit User's Guide -- Document # 50-70407-002 Rev. A

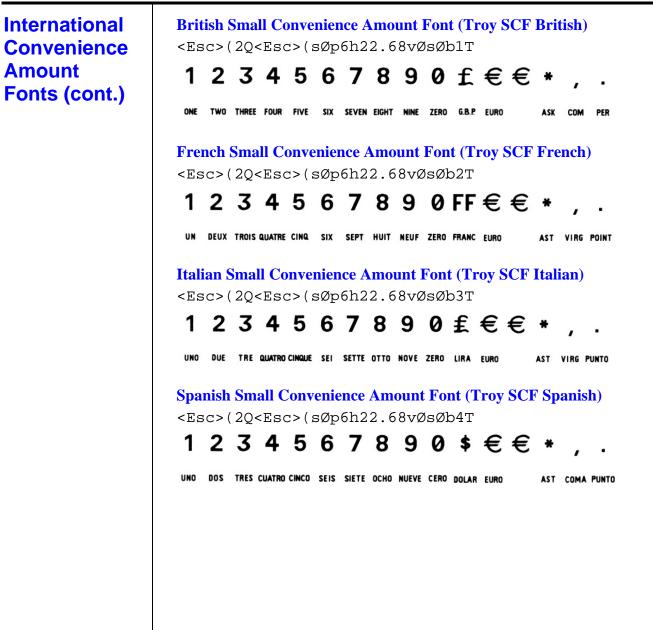



Troubleshooting / Error Messages

Troubleshooting by Symptom

The following troubleshooting table provides solutions to the most common MICR printing problems. Some of the messages may not apply to your TROY Security Printing Solution. Visually inspect your MICR documents using the *TROY MICR Document Template* where appropriate.

<u>NOTE</u>: This table does not cover all of the ANSI and banking specifications that MICR-encoded documents must meet. Refer to the *TROY MICR Basics Handbook* (provided on the *TROY Security Printing Solutions* CD) for more information on MICR specifications and check design.

Condition	Possible Cause	Solution
Incorrect data in MICR line (account #, bank #, etc.).	Error typing in the account #, etc.	Re-enter the correct data.
Incorrect format of fields in MICR line (according to your bank's specifications).	Error typing in the field information.	Re-enter the correct data. Ask your bank for its specification sheet or copy the field format from your old checks, including any spaces.
Vertical streaking or smearing throughout document.	Problem with the Hewlett-Packard printer or TROY MICR toner cartridge.	Refer to the troubleshooting section in the printer user's manual.
Horizontal streaking in MICR clear band during document processing.	Problem with the reader/sorter machine.	The reader/sorter machine must be cleaned and checked or adjusted.



Trouble- shooting by Symptom (cont.)	600 dpi MICR font not used in MICR line (an incorrect font such as Courier or Times Roman was used instead).	No MICR font installed. MICR mode disabled and an attempt was made to use a TROY MICR font.	Install the TROY Font Memory Card and reprint the document. Consult your software dealer.
		Software error.	Enable MICR mode by issuing the appropriate escape sequence via your check writing software.
		MICR font requested orientation (portrait or landscape) not installed in the printer.	Install the correct orientation of MICR font via the TROY Memory Card.
		Non-TROY MICR font was used.	Use the TROY MICR font or consult the non-TROY MICR font manufacturer for assistance.
		Font escape sequence coding error.	Verify the escape sequence accuracy.
	MICR clear band has magnetically chargeable printing besides the MICR line on front or backside of document.	Border, signature, or other printing extends into MICR clear band on front or back. Laser-printed items extend into MICR	Reformat your document design to ensure nothing besides the MICR line appears in the MICR clear band. Reformat your document design or
		clear band on backside of the check.	other laser-printed items so that there is no MICR information on the check.



Trouble- shooting by Symptom (cont.)	MICR clear band has extra printing (such as toner splatter) besides the MICR line on front or backside of document.	Printer density setting is too dark. Printer fusing unit is contaminated. Faulty MICR toner cartridge. Use on Non-TROY MICR toner cartridge.	Use TROY MICR defaults. Refer to printer user's manual for cleaning instructions. Try another TROY MICR toner cartridge. If cartridge is faulty, return to the dealer. Try another TROY MICR toner cartridge, or consult the non-TROY manufacturer for assistance.
	MICR line is skewed on document.	Your MICR paper was cut or perforated inaccurately (lower edge of paper is not perpendicular to the right and left edges of paper).	Measure your MICR paper and/or perforation lines to ensure your MICR- encoded documents fall within ANSI specifications for document size. Ask your paper vendor for correctly sized MICR paper.
		Your MICR paper has changed properties due to environmental conditions in storage or handling.	Measure your MICR paper and/or perforation lines to ensure your MICR- encoded documents fall within ANSI specifications for document size.
		Paper incorrectly loaded.	If using MP tray, paper width guide should lightly touch right side of paper stack.
		Faulty paper transport system in printer.	Try non-MICR paper to verify the problem. Contact TROY Technical Support if problem is verified on non- MICR paper.



Trouble-			
shooting by Symptom (cont.)	MICR line not positioned correctly on the document (vertically and horizontally).	Your MICR paper was cut or perforated inaccurately (paper is too short/long or narrow/wide).	Measure your MICR paper and/or perforation lines to ensure your MICR- encoded documents fall within ANSI specifications for document size. Ask your paper vendor for correctly sized MICR paper.
		Software registration is off (software is positioning data incorrectly on the printed page).	Make adjustments in your software application to adjust the positioning of the MICR line, or consider purchasing the TROY MICR Secure Memory Card, which includes the ExPT feature that allows you to reposition the MICR line via the printer control panel. Use the TROY MICR Document Template to verify all adjustments to the MICR line.
		Printer registration discrepancies (small inconsistencies in positioning of the image on the printed page)	Small errors in the printer's registration can change the position of the MICR line, which is most noticeable on the trailing edge of the printed page. If the MICR line on your checks is positioned on trailing edge of the page (the edge of the page that exits the printer last), try using the TROY printer's Auto- Rotate feature to place the MICR line on the leading edge of the page to avoid any small registration errors that would significantly change the position of the MICR on your printed checks.
		Faulty paper transport system in printer.	Measure your MICR paper. If cut to correct size, consult your software vendor for assistance. Try non-MICR paper to verify the problem. Consult the printer user's manual or TROY Technical support if problem is verified on non-MICR paper.



Trouble- shooting by Symptom	MICR characters are too thick or too thin.	Printer density setting is too dark or too light.	Use TROY MICR defaults.
(cont.)		Your MICR toner cartridge is nearly empty.	TROY MICR toner cartridge should not be used if a LOW TONER message appears on the printer control panel display. (There should be no visual fading across the document).
		Your MICR paper is out of specification so that toner does not adhere properly to the paper.	Refer to TROY MICR paper specifications elsewhere in this guide and consult your paper vendor to ensure you have the correct paper (including correctly preprinted background areas). Also, check to ensure your paper has not altered due to environmental conditions during storage and handling.
		Faulty MICR toner cartridge.	Try another TROY MICR toner cartridge. If the cartridge is faulty, return to dealer.
		Use of Non-TROY MICR toner or font.	Try TROY MICR toner or font or consult non-TROY manufacturer for assistance.



Trouble- shooting by Symptom (cont.)	MICR characters are broken, there are voids in characters or toner rubs off.	Your MICR paper is out of specification so that toner does not adhere properly to the paper.	Refer to the TROY MICR paper specifications and consult your paper vendor to ensure you have the correct paper (including correctly preprinted background areas). Also, check to ensure your paper has not altered due to environmental conditions during storage and handling.
		Faulty MICR toner cartridge.	Try another TROY MICR toner cartridge. If cartridge is faulty, return to dealer.
		Use of Non-TROY MICR toner cartridge.	Try TROY MICR toner cartridge or consult non-TROY manufacturer for assistance.
		Printer fusing unit is faulty.	Confirm by verifying with a non-MICR application. Contact TROY Technical Support for instructions.
	Voids in characters in MICR line or other text.	Transfer roller wear (check for page count of greater than 100,000).	Replace transfer roller.
	MICR character spacing and positioning is not correct.	Error in typing MICR line information.	Re-enter correct data. (Do not forget to enter the correct number of spaces where required.) If using TROY MICR fonts in Windows, ensure the point size is set to 12 pt.
		Software placement of characters is incorrect.	Consult your software dealer, or consider purchasing the TROY MICR Secure Memory Card, which includes the ExPT feature that allows you to reposition the MICR line via the printer control panel.



Trouble- shooting by Symptom (cont.)	Your bank reports a high reject rate when processing your TROY MICR- printed documents.	A Non-TROY MICR toner was used.	Print test documents using TROY MICR toner or consult the non-TROY manufacturer for assistance.
	NOTE: This section covers conditions not addressed above. You should also investigate all of the items described above as possible causes of bank rejects as well as the other ANSI MICR specifications not covered in this table.	The bank-of-deposit made a typing or imprinting error when they encoded the check AMOUNT onto the right end of the MICR line.	Ask your bank or one of the document testing facilities in the list following this table to determine if the MICR line error is in the TROY MICR-printed portion of the bank-encoded portion (many errors are bank induced).
		Your MICR paper is out of specification so that your documents tend to jam or tear inside bank processing equipment.	Observe the condition of your processed checks. Refer to this guide for information on TROY and ANSI MICR paper specifications. Your paper vendor or bank may also provide assistance.
		Documents were folded, spindled, or otherwise roughly handled before they reached the bank-of-deposit.	Consider sturdier MICR paper or improved check-handling processes with your regular recipients.
		Your bank's reader/sorter equipment is out of adjustment.	Ask your bank for assistance in determining the cause of your rejects.



Trouble- shooting by Symptom (cont.)	MICR characters appear smeared after processing by a bank.	A Non-TROY MICR toner was used.	Print test documents using TROY MICR toner or consult the non-TROY manufacturer for assistance.
		Your MICR paper is out of specification so that toner does not adhere properly to the paper.	Refer to TROY MICR paper specifications and consult your paper vendor to ensure you have the correct paper (including correctly preprinted background areas). Also, check to ensure your paper has not altered due to environmental conditions before printing the checks.
		Your bank's reader/sorter equipment is out of adjustment.	Ask your bank for assistance in determining the cause of your rejects.
	NO MICR TONER message displayed in the printer control panel.	No TROY MICR toner cartridge installed.	Install a TROY MICR toner cartridge.
		Detect device on TROY MICR toner cartridge is damaged.	Install a new TROY MICR toner cartridge.
		TROY MICR toner cartridge detect sensor failed.	Call TROY Technical Support.
		TROY Memory Card has failed.	Call TROY Technical Support.



Troubleshooting / Error Messages

Troubleshooting by Printer Control Panel Display Message The following table contains the printer control panel display messages generated by TROY Security Printing Solutions. Some of the messages may not apply to your TROY Security Printing Solution. Refer to the Hewlett-Packard Printer User's Manual for other display panel messages.

Message	Description	Action
LOW TONER	The TROY MICR toner cartridge is low on toner.	Replace the TROY MICR toner cartridge with a new TROY MICR toner cartridge. Do not re-install the old cartridge.
TROY INTERNAL RELIANCE MONITOR	The TROY firmware contains advanced internal self-diagnostics checks to ensure constant data integrity. When the firmware detects an exception condition that may result in compromised data integrity, it halts printer operation. This message will be followed automatically with diagnostic information that may assist TROY engineers in evaluating the exception condition.	Contact TROY Technical Support.
49.4C18 SERVICE ERROR	A firmware update has been uploaded to the printer. This error message may appear immediately after the update process has been completed, indicating that the printer has registered the new firmware.	Re-initialize the printer (cycle printer power), or perform a cold reset. Wait for the initialization sequence to finish before continuing to use the printer. The printer must be re-initialized in order for the firmware update to take effect.
53.ØX.1Ø ERROR	Your printer detected the presence of a second system DIMM or memory card.	Remove the DIMMs or memory cards one at a time until the message is cleared, or contact your TROY service representative.
61.X SERVICE 62.X ERROR	Indicates that the TROY Font Memory Card is improperly installed or has failed.	Re-install the TROY Font Memory Card.
68.1 ERROR	A firmware update has been uploaded to the printer. This error message may appear immediately after the update process has been completed, indicating that the printer has registered the new firmware.	Re-initialize the printer (cycle printer power), or perform a cold reset. Wait for the initialization sequence to finish before continuing to use the printer. The printer must be re-initialized in order for the firmware update to take effect.



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com