# **3M 8210***Plus***/8210/07048/8110S**

Particulate Respirator

3M recommended for sanding, grinding, sawing, sweeping and insulating *User Instructions* 

(Keep these instructions for reference)



WARNING

This respirator helps protect against certain particles. **Misuse may result in sickness or death.** For proper use, see supervisor, or *User Instructions*, or call 3M in U.S.A., 1-800-247-3941. In Canada, call Technical Service at 1-800-267-4414.

## IMPORTANT

Before use, the wearer must read and understand these *User Instructions*. Keep these instructions for reference.

## **Use For**

Particles such as those from grinding, sanding, sweeping, sawing, bagging, or processing minerals, coal, iron ore, flour, metal, wood, pollen, and certain other substances. Liquid or non-oil based particles from sprays that do not also emit oil aerosols or vapors. For additional information on 3M use recommendations for this class of respirator please consult the 3M Respirator Selection Guide found on the 3M OH&ESD web site at <u>www.3M.com/occsafety</u> or call 1-800-243-4630 in U.S.A. In Canada call 1 800 267-4414.

## **Do Not Use For**

Gases and vapors, oil aerosols, asbestos, arsenic, cadmium, lead, 4,4'-methylene dianiline (MDA) or sandblasting; concentrations that exceed 10 times the PEL/OEL, specific OSHA standards, or applicable government regulations, whichever is lower. This respirator does not supply oxygen.

## **Biological Particles**

This respirator can help reduce inhalation exposures to certain airborne biological particles (e.g. mold, *Bacillus anthracis, Mycobacterium tuberculosis*, etc.) but cannot eliminate the risk of contracting infection, illness or disease. OSHA and other government agencies have not established safe exposure limits for these contaminants.

### **Use Instructions**

- 1. Failure to follow all instructions and limitations on the use of this respirator and/or failure to wear this respirator during all times of exposure can reduce respirator effectiveness and may result in sickness or death.
- 2. Before occupational use of this respirator, a written respiratory protection program must be implemented meeting all the requirements of OSHA 29 CFR 1910.134 such as training, fit testing, medical evaluation, and applicable OSHA substance specific standards. In Canada, CSA standard Z94.4 requirements must be met and/or requirements of the applicable jurisdiction, as appropriate.
- 3. The particles which can be dangerous to your health include those so small that you cannot see them.
- 4. Leave the contaminated area immediately and contact supervisor if dizziness, irritation, or other distress occurs.
- 5. Store the respirator away from contaminated areas when not in use.
- 6. Filtering facepieces are to be inspected prior to each use to assure there are no holes in the breathing zone other than the punctures around staples and no damage has occurred. Enlarged holes resulting from ripped or torn filter material around staple punctures are considered damage. Immediately replace respirator if damaged. Staple perforations do not affect NIOSH approval. (For 8110S only)

7. Dispose of used product in accordance with applicable regulations.

#### **Use Limitations**


- 1. This respirator does not supply oxygen. Do not use in atmospheres containing less than 19.5% oxygen.
- 2. Do not use when concentrations of contaminants are immediately dangerous to life and health, are unknown or when concentrations exceed 10 times the permissible exposure limit (PEL) or according to specific OSHA standards or applicable government regulations, whichever is lower.
- 3. Do not alter, abuse or misuse this respirator.
- 4. Do not use with beards or other facial hair or other conditions that prevent a good seal between the face and the sealing surface of the respirator.
- 5. Respirators can help protect your lungs against certain airborne contaminants, however, they will not prevent entry through other routes such as the skin, which would require additional personal protective equipment (PPE).
- 6. This respirator is designed for occupational/professional use by adults who are properly trained in their use and limitations. Respirators are not designed to be used by children.
- 7. Individuals with a compromised respiratory system, such as asthma or emphysema, should consult a physician and complete a medical evaluation prior to use.


#### **Time Use Limitation**

If respirator becomes damaged, soiled, or breathing becomes difficult, leave the contaminated area immediately and replace the respirator.

#### **Fitting Instructions**

Must be followed each time respirator is worn.

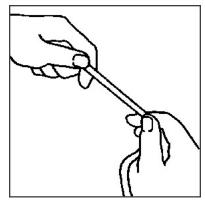

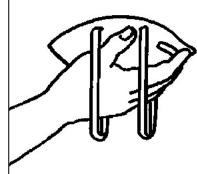


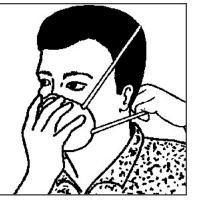


Fig. 1

Fig. 2



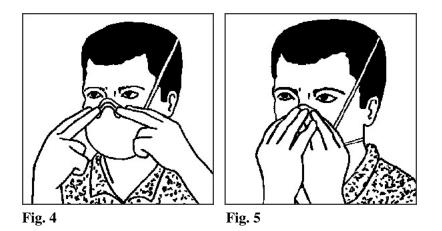

- 1. Prestretch top and bottom straps before placing respirator on the face (8210 only).
- 2. Cup the respirator in your hand, with the nosepiece at your fingertips, allowing the headbands to hang freely below your hand.
- 3. Position the respirator under your chin with the nosepiece up. Pull the top strap over your head resting it high at the top back of your head. Pull the bottom strap over your head and position it around the neck below the ears.
- 4. Place your fingertips from both hands at the top of the metal nosepiece. Using two hands, mold the nose area to the shape of your nose by pushing inward while moving your fingertips down both sides of the nosepiece.

! Pinching the nosepiece using one hand may result in improper fit and less effective respirator performance. Use two hands.

5. Perform a User Seal Check prior to each wearing. To check the respirator-to-face seal, place both hands completely over the respirator and exhale. Be careful not to disturb the position of the respirator. If air leaks around nose, readjust the nosepiece as described in step 4. If air leaks at the respirator edges, work the straps back along the sides of your head. If you CANNOT achieve a proper seal, DO NOT enter the contaminated area. See your supervisor.

#### **Removal Instructions**

See step 3 of *Fitting Instructions* and cup respirator in hand to maintain position on face. Pull bottom strap over head. Still holding respirator in position, pull top strap over head and remove respirator.

#### **NIOSH Approved: N95**

At least 95% filtration efficiency against solid and liquid aerosols that do not contain oil.

THIS RESPIRATOR IS APPROV		3M ST. PAUL, MN, USA 1-800-243-4630				because intelliging for the state
TC-	Protection 1	Respirator				Cautions and Limitations <sup>2</sup>
		8210	8210 Plus	7048	8110S	
84A-0007	N95	X	X	X	X	ABCJMNOP
level) effective against p free of oil: time use res 2. CAUTIONS AND LIMITATIONS		J				
A - Not for use in atmospheres cor						
B - Not for use in atmospheres imr						
C - Do not exceed maximum use of						
J - Failure to properly use and mai					Dila and all	er engligghle regulations
M - All approved respirators shall b N - Never substitute, modify, add, or a substitute.						
O - Refer to users instructions, and						
	rators for use as surgical masks.		use and maint		inese respire	avio.

This respirator contains no components made from natural rubber latex.

#### FOR MORE INFORMATION In United States, contact:

## Internet

www.3m.com/occsafety

Technical Assistance 1-800-243-4630

**For other 3M products:** 1-800-3M-HELPS or 1-651-737-6501

#### Exported by/Exporté par/Exportado por: 3M Occupational Health and Environmental Safety Division

3M Center, Building 235-2W-70 P.O. Box 33010 St. Paul, MN 55133-3010 Made in U.S.A.

©3M 2003

38-9017-9661-5

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com