ЛОС

LCD Monitor User Manual **e**2795Vh



National Conventions. 4 Power 5 Installation. 6 Cleaning 7 Other 8 Setup 9 Contents in Box 9 Adjusting Viewing Angle. 10 Adjusting Viewing Angle. 11 Connecting the Monitor. 12 Wall Mounting 13 Adjusting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows XP 16 Windows XP 16 Uminance 20 Image Setup 22 Color Temperature 24 Color Temperature 24 Color Temperature 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows XP 38 Windows Vista 44 Windows Vista 42 Vindows Vista 38
Installation 6 Cleaning 7 Other 8 Setup 9 Contents in Box 9 Setup Stand & Base 10 Adjusting Viewing Angle 11 Connecting the Monitor 12 Wall Mounting 13 Adjusting Optimal Resolution 14 Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows XP 16 Uminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 Undicator 37 Driver 38 Windows 7. 3
Cleaning 7 Other 8 Setup 9 Contents in Box 9 Setup Stand & Base 10 Adjusting Viewing Angle. 11 Connecting the Monitor 12 Wall Mounting 13 Adjusting Optimal Resolution 14 Setting Optimal Resolution 14 Windows Vista 14 Windows Vista 16 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows Vista 42 Windows Vista 42 Windows Vista 42 Windows XP 38
Other 8 Setup 9 Contents in Box 9 Setup Stand & Base 10 Adjusting Viewing Angle. 11 Connecting the Monitor 12 Wall Mounting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows Vista 14 Windows XP 16 Windows KIP2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows Vista 42 Windows Vista 42 Windows Vista
Setup 9 Contents in Box 9 Setup Stand & Base 10 Adjusting Viewing Angle 11 Connecting the Monitor 12 Wall Mounting 13 Adjusting 13 Adjusting 13 Adjusting 13 Adjusting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7
Contents in Box 9 Setup Stand & Base 10 Adjusting Viewing Angle 11 Connecting the Monitor 12 Wall Mounting 13 Adjusting Optimal Resolution 14 Windows Vista 14 Windows Vista 16 Windows Net/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Dost Boost 26 Picture Boost 26 Picture Boost 30 Extra 33 Keset 34 Exit 36 LED Indicator 37 Driver 38 Windo
Setup Stand & Base 10 Adjusting Viewing Angle 11 Connecting the Monitor. 12 Wall Mounting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows XP 16 Windows XP 16 Windows XP 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows Vista 42 Windows Vista 42 Windows Vista 42 Windows Vista 42 Windows Vista 44 Windows XP 44 Windows ME 47 i
Adjusting Viewing Angle. 11 Connecting the Monitor. 12 Wall Mounting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows Vista 14 Windows Vista 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows Vista 42 Windows Vista 42 Windows XP 44 Window
Connecting the Monitor 12 Wall Mounting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows 82P 44 Windows 8200 47 Windows 8E 47 i-Menu 48
Wall Mounting 13 Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows Vista 14 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 33 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows 7 38 Windows XP 44 Windows ME 47 i-Menu 48
Adjusting 14 Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows XP 44 Windows XP 44 Windows XP 44 Windows XP 44 Windows ME 47 i-Menu 48
Setting Optimal Resolution 14 Windows Vista 14 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows XP 44 Windows XP 44 Windows XP 44 Windows XP 44 Windows XP 47 Windows ME 47 Windows ME 47 Windows ME 47
Windows Vista 14 Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows XP 44 Windows ME 47 i-Menu 48
Windows XP 16 Windows ME/2000 17 Hotkeys 18 OSD Setting 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7 38 Windows 7 38 Windows XP 44 Windows XP 44 Windows XP 44 Windows ME 47 i-Menu 48
Windows ME/2000
Hotkeys. 18 OSD Setting. 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7. 38 Windows 7. 38 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
OSD Setting. 19 Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Windows 7. 38 Windows 7. 38 Windows XP 42 Windows XP 44 Windows 2000 47 Windows ME 47 I-Menu 48
Luminance 20 Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Image Setup 22 Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Color Temperature 24 Color Boost 26 Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Color Boost. 26 Picture Boost. 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Picture Boost 28 OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
OSD Setup 30 Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows XP 44 Windows ME 47 Windows ME 47 Windows ME 47
Extra 32 Reset 34 Exit 36 LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows XP 44 Windows ME 47 Windows ME 47 i-Menu 48
Reset .34 Exit .36 LED Indicator .37 Driver .38 Monitor Driver .38 Windows 7 .38 Windows Vista .42 Windows XP .44 Windows 2000 .47 Windows ME .42 Monitor Menu .48
Exit
LED Indicator 37 Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Driver 38 Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 i-Menu 48
Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 48 48
Monitor Driver 38 Windows 7 38 Windows Vista 42 Windows XP 44 Windows 2000 47 Windows ME 47 48 48
Windows 7 .38 Windows Vista .42 Windows XP .44 Windows 2000 .47 Windows ME .47 47 .47 48 .48
Windows Vista .42 Windows XP .44 Windows 2000 .47 Windows ME .47 44 .44
Windows XP .44 Windows 2000 .47 Windows ME .47 i-Menu .48
Windows 2000
Windows ME
e-Saver /0
Screen+
Troubleshoot
Specification
General Specification
Preset Display Modes
Pin Assignments
-
Plug and Play

	FCC Notice	57
	WEEE Declaration	58
	EPEAT Declaration	59
Serv	vice	60
	Warranty Statement for Europe	60
	Warranty Statement for North & South America (excluding Brazil)	62
	Warranty Statement for AP	64

Safety

National Conventions

The following subsections describe notational conventions used in this document.

Notes, Cautions, and Warnings

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, cautions, and warnings, and they are used as follows:



NOTE: A NOTE indicates important information that helps you make better use of your computer system.

"For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces."

⚠

CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

Δ

WARNING: A WARNING indicates the potential for bodily harm and tells you how to avoid the problem. Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the warning is mandated by regulatory authority.

Power

The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.

The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.

Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.

A Do not overload power strips and extension cords. Overloading can result in fire or electric shock.

To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 5A

A The wall socket shall be installed near the equipment and shall be easily accessible.

For use only with the attached power adapter (Output 12Vdc) which have UL,CSA listed license (Only for monitors with power adapter).

Installation

Do not place the monitor on an unstable cart, stand, tripod, bracket, or table. If the monitor falls, it can injure a person and cause serious damage to this product. Use only a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with this product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care.


Never push any object into the slot on the monitor cabinet. It could damage circuit parts causing a fire or electric shock. Never spill liquids on the monitor.

⚠️Do not place the front of the product on the floor.

If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.

Leave some space around the monitor as shown below. Otherwise, air-circulation may be inadequate hence overheating may cause a fire or damage to the monitor.

See below the recommended ventilation areas around the monitor when the monitor is installed on the wall or on the stand:

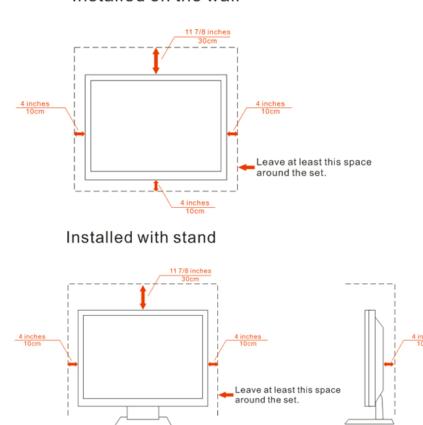


Installed on the wall

Cleaning

Clean the cabinet regularly with the cloth provided. You can use soft-detergent to wipe out the stain, instead of strong-detergent which will cauterize the product cabinet.

When cleaning, make sure no detergent is leaked into the product. The cleaning cloth should not be too rough as it will scratch the screen surface.

Please disconnect the power cord before cleaning the product.

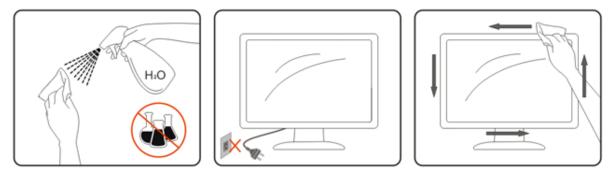

Other

If the product is emitting a strange smell, sound or smoke, disconnect the power plug IMMEDIATELY and contact a Service Center.


AMake sure that the ventilating openings are not blocked by a table or curtain.

LOD not engage the LCD monitor in severe vibration or high impact conditions during operation.

LO not knock or drop the monitor during operation or transportation.

Setup

Contents in Box

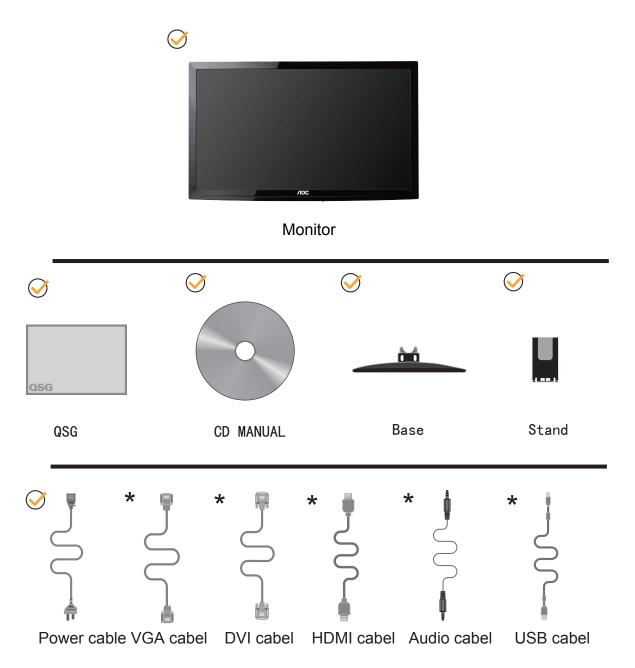


* Not all signal cables (Analog, USB, DVI, and HDMI cables) will be provided for all countries and regions. Please check with the local dealer or AOC branch office for confirmation.


Setup Stand & Base

Please setup or remove the base following the steps as below.

Setup:

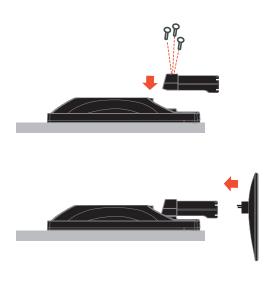

Remove:

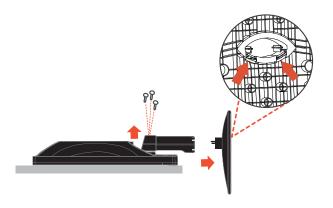


Adjusting Viewing Angle

For optimal viewing it is recommended to look at the full face of the monitor, then adjust the monitor's angle to your own preference.

Hold the stand so you will not topple the monitor when you change the monitor's angle.

You are able to adjust the monitor's angle from -4° to 18 °.

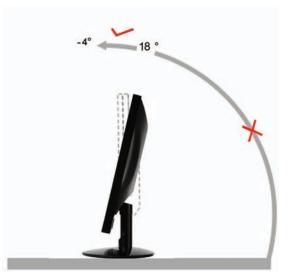




Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.

Connecting the Monitor

Cable Connections On Back of Monitor and Computer:

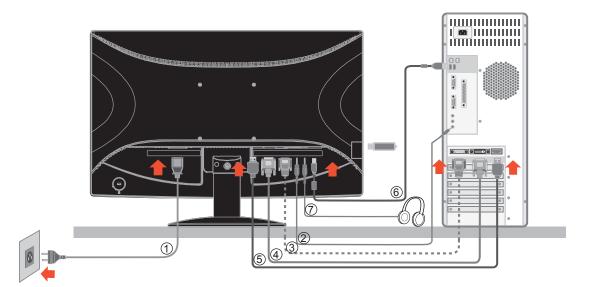

- 1. Power
- 2. Audio
- 3. Analog (DB-15 VGA cable)
- 4 .DVI
- 5. HDMI
- 6.USB
- 7.Earphone

To protect equipment, always turn off the PC and LCD monitor before connecting.

1 Connect the power cable to the AC port on the back of the monitor.

2 Connect the audio cable to audio in port on the back of the monitor.

3 Connect one end of the 15-pin D-Sub cable to the back of the monitor and connect the other end to the computer's D-Sub port.

4 (Optional – Requires a video card with DVI port) - Connect one end of the DVI cable to the back of the monitor and connect the other end to the computer's DVI port.

5 (Optional-Requires a video card with HDMI port)- Connect one end of the HDMI cable to the back of the monitor and connect the other end to the computer's HDMI port.

6 (Optional-Requires a video card with USB port)- Connect one end of the USB cable to the back of the monitor and connect the other end to the computer's USB port.


7 (Optional-Requires a Earphone)- Connect the earphone cable to earphone in port on the back of the monitor.

8 Turn on your monitor and computer.

If your monitor displays an image, installation is complete. If it does not display an image, please refer Troubleshooting.

Wall Mounting

Preparing to Install An Optional Wall Mounting Arm.

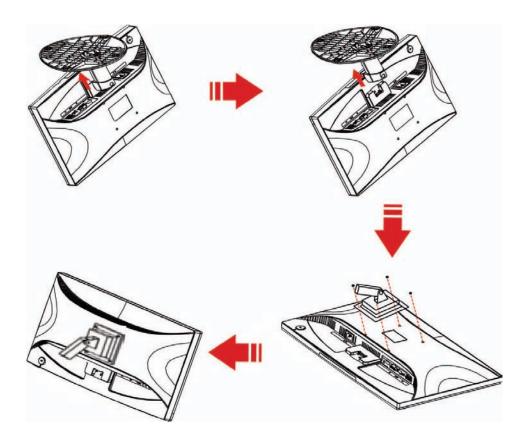

This monitor can be attached to a wall mounting arm you purchase separately. Disconnect power before this procedure. Follow these steps:

1 Remove the base and stand.

2 Follow the manufacturer's instructions to assemble the wall mounting arm.

3 Place the wall mounting arm onto the back of the monitor. Line up the holes of the arm with the holes in the back of the monitor.

4 Insert the 4 screws into the holes and tighten.

5 Reconnect the cables. Refer to the user's manual that came with the optional wall mounting arm for instructions on attaching it to the wall.

Noted : VESA mounting screw holes are not available for all models, please check with the dealer or official department of AOC.

Adjusting

Setting Optimal Resolution

Windows Vista

For Windows Vista:

- 1 Click START.
- 2 Click CONTROL PANEL.



3 Click Appearance and Personalization.



4 Click Personalization



5 Click Display Settings.



6 Set the resolution **SLIDE-BAR** to 1920 by 1080.

ntor	
reg the icons to metch your monitors.	Jdentify Monitors
1	
	4
. (Multiple Monitors) on NVEDA GeForce 6600	LE (Microsoft Corporation
) [his is my main monitor	LE (Microsoft Corporation
	LE (Microsoft Corporation - •
This is my main monitor Estand the deditop onto this monitor	55763
Ethis is my main monitor Ethind the Solitop onto this monitor esolution	Solove

Windows XP

For Windows XP:


1 Click START.




2 Click SETTINGS.

3 Click CONTROL PANEL.

4 Click Appearance and Themes.

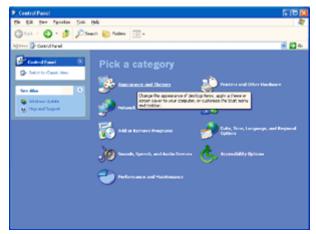

5 Double click **DISPLAY**.

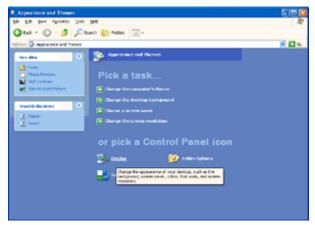

6 Click SETTINGS.

7 Set the resolution **SLIDE-BAR** to 1920 by 1080.

Display Properties 🛛 😨 🔀				
Themes Desktop Screen Saver Appearance Sottings				
Display: Play and Play <u>Monitor</u> on 3D Prophet III				
Less More History				
1024 by 769 pixele				
Iroubleshoot Advanced				
OK Cancel Apply				

Windows ME/2000

For Windows ME/2000:

- 1 Click START.
- 2 Click SETTINGS.
- 3 Click CONTROL PANEL.
- 4 Double click **DISPLAY**.
- 5 Click SETTINGS.
- 6 Set the resolution **SLIDE-BAR** to 1920 by 1080.

Hotkeys



Power

Press the Power button to turn 0n/off the monitor.

Volume/-

When there is no OSD.press Volume - to active volume adjustment bar.press - or + to adjust volume.

4:3 or wide image ratio / +

When there is no OSD, press hotkey continuously to change 4:3 or wide image ratio. (If the product screen size is 4:3 or input signal resolution is wide format, the hot key is disable to adjust.).

Auto / Exit

When the OSD is closed, press Auto button will be auto configure hot key function .

Source hot key

When the OSD is closed, press Source button will be Source hot key function. Press Source button continuously to select the input source showed in the message bar, press Menu/Enter button to change to the source selected.

OSD Setting

Basic and simple instruction on the control keys.



1) Press the MENU-button to activate the OSD window.

2) Press - or + to navigate through the functions. Once the desired function is highlighted, press the **MENU-button** to activate sub-menu. Once the desired function is highlighted, press **MENU-button** to activate it.

Press - or + to change the settings of the selected function. Press - or + to select another function in sub-menu.
 Press AUTO to exit. If you want to adjust any other function, repeat steps 2-3.

4) OSD Lock Function: To lock the OSD, press and hold the **MENU button** while the monitor is off and then press **power button** to turn the monitor on. To un-lock the OSD - press and hold the **MENU button** while the monitor is off and then press **power button** to turn the monitor on.

Notes:

1) If the product has only one signal input, the item of "Input Select" is disable to adjust.

2) If the product screen size is 4:3 or input signal resolution is wide format, the item of "Image Ratio" is disable to adjust.


3) One of DCR, Color Boost, and Picture Boost functions is active, the other two function is turned off accordingly.

Luminance

Press MENU (Menu) to display menu.

Press - or + to select



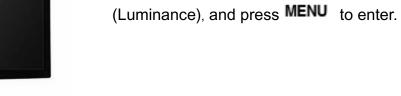




Press - or + to select submenu, press **MENU** to enter, and press - or + to adjust.




	Brightness	0-100		Backlight Adjustment
	Contrast	0-100		Contrast from Digital-register.
		Standard	>	Standard Mode
		Text	Т	Text Mode
	Eco mode	Internet		Internet Mode
1		Game		Game Mode
*		Movie	0	Movie Mode
		Sports	32	Sports Mode
		Gamma1		Adjust to Gamma1
	Gamma	Gamma2		Adjust to Gamma 2
		Gamma3		Adjust to Gamma 3
	DCR	Off	DXR	Disable dynamic contrast ratio
		On	DCR	Enable dynamic contrast ratio

Image Setup

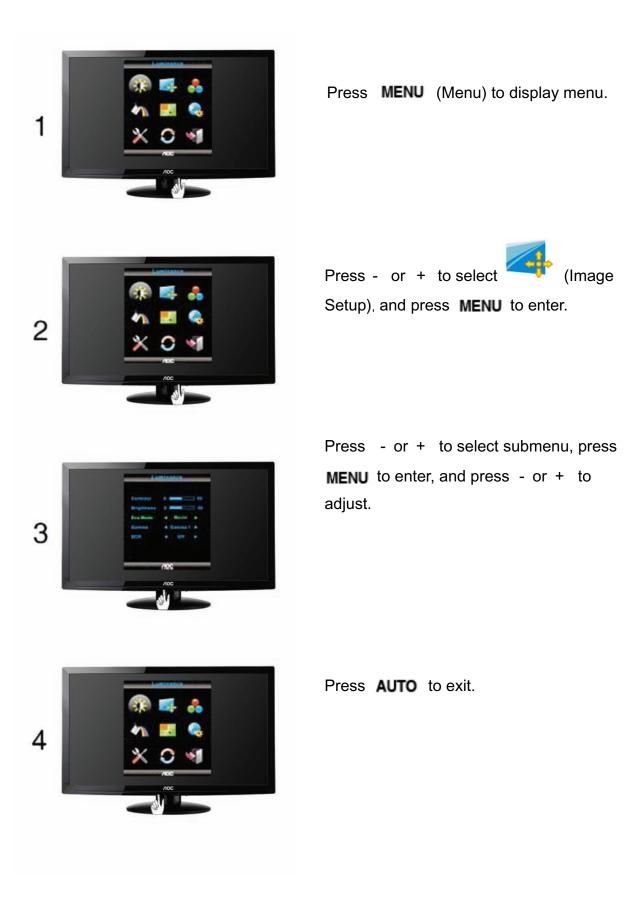


Clock	0-100	Adjust picture Clock to reduce Vertical-Line noise.
Phase	0-100	Adjust Picture Phase to reduce Horizontal-Line noise
H.Position	0-100	Adjust the horizontal position of the picture.
V.Position	0-100	Adjust the vertical position of the picture.

Color Temperature

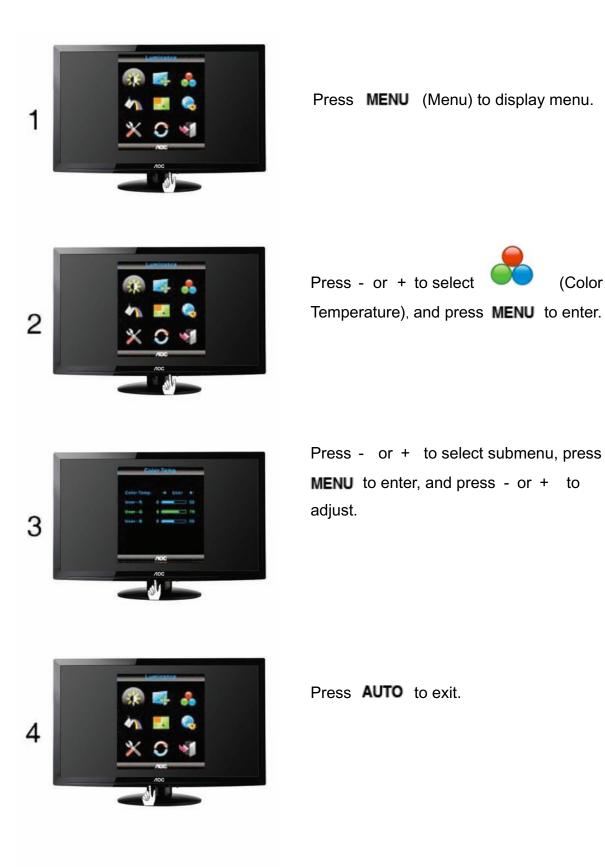


(Color

	Warm	6500K	Recall Warm Color Temperature from EEPROM.
	Normal	7300K	Recall Normal Color Temperature from EEPROM.
	Cool	9300K	Recall Cool Color Temperature from EEPROM.
	sRGB		Recall SRGB Color Temperature from EEPROM.
	User	Red	Red Gain from Digital-register
		Green	Green Gain Digital-register.
		Blue	Blue Gain from Digital-register

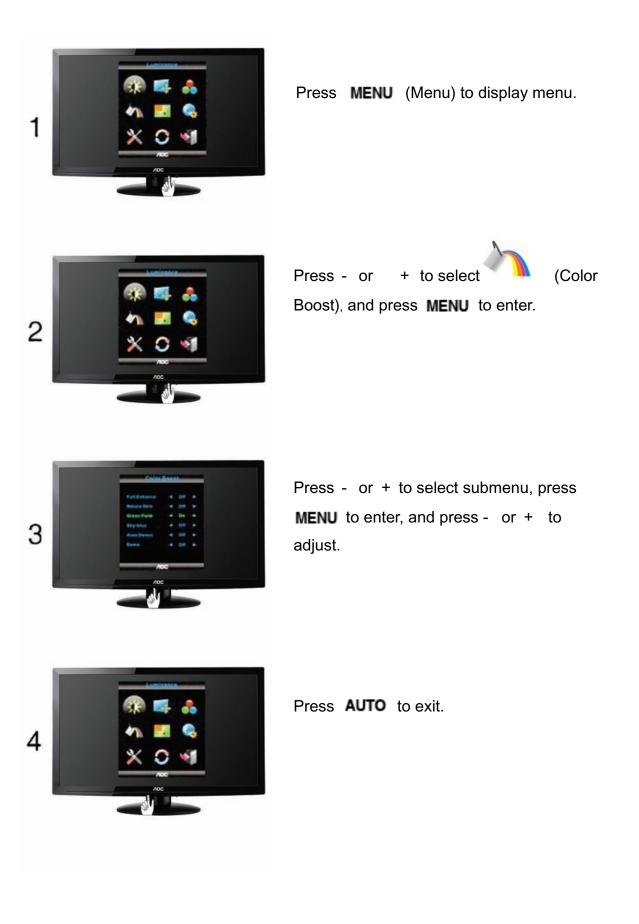

	Full Enhance	on or off	Disable or Enable Full Enhance Mode
	Nature Skin	on or off	Disable or Enable Nature Skin Mode
	Green Field	on or off	Disable or Enable Green Field Mode
_	Sky-blue	on or off	Disable or Enable Sky-blue Mode
	AutoDetect	on or off	Disable or Enable AutoDetect Mode
	Demo	on or off	Disable or Enable Demo

Picture Boost

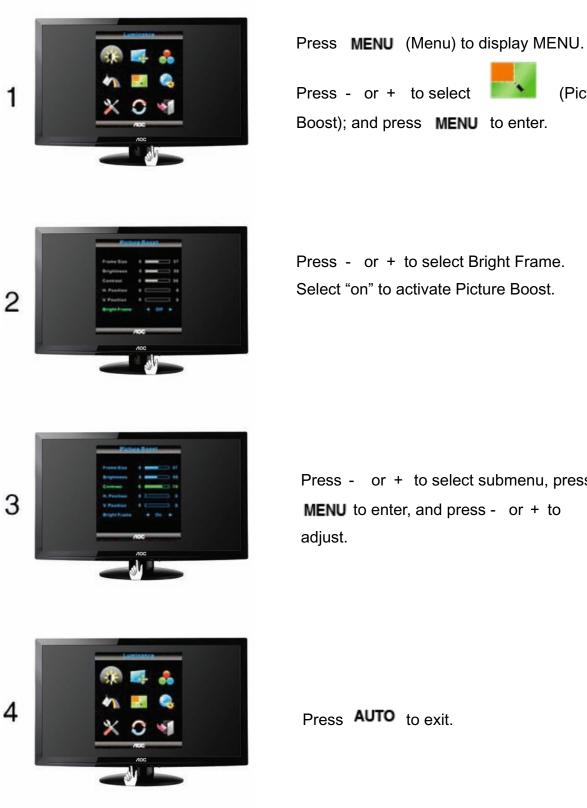

Press - or + to select (Picture Boost); and press MENU to enter.

Press - or + to select Bright Frame. Select "on" to activate Picture Boost.

Press - or + to select submenu, press MENU to enter, and press - or + to

28

	Frame Size	14-100	Adjust Frame Size
	Brightness 0-100	0-100	Adjust Frame Brightness
	Contrast	0-100	Adjust Frame Contrast
•	H. position	0-100	Adjust Frame horizontal Position
	V.position	0-100	Adjust Frame vertical Position
	Bright Frame	on or off	Disable or Enable Bright Frame

OSD Setup



Press MENU (Menu) to display menu.







Press - or + to select submenu, press **MENU** to enter, and press - or + to adjust.




OSD Setup		
H.Position	0-100	Adjust the horizontal position of OSD
V.Position	0-100	Adjust the vertical position of OSD
 Timeout	5-120	Adjust the OSD Timeout
Transparence	0-100	Adjust the transparence of OSD
Language		Select the OSD language

Extra



Press MENU (Menu) to display menu.

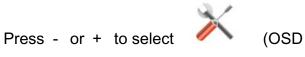

Setup), and press MENU to enter.



Press - or + to select submenu, press **MENU** to enter, and press - or + to

		Auto	Select to Auto Detect input signal
	Input Select	Analog	Select Analog Signal Source as Input
		DVI	Select DVI Source as Input
		HDMI	Select HDMI Source as Input
21	Auto Config	yes or no	Auto adjust the picture to default
	Image Ratio	wide or 4:3	Select wide or 4:3 format for display
	DDC-CI	yes or no	Turn ON/OFF DDC-CI Support
	Off Timer	0~24hours	Select timing to turn off the monitor.
	Information		Show the information of the main ima ge and
			sub-image source

Reset



Press MENU (Menu) to display menu.



Press - or + to select and press MENU to enter.






Press - or + to select YES or NO.







Press MENU (Menu) to display menu.

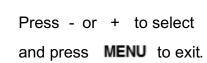



(Exit);

*	Exit	Exit the main OSD

LED Indicator

Status	LED Color
Full Power Mode	Blue
Active-off Mode	Amber

Driver

Monitor Driver


Windows 7

1.Start Windows® 7

2.Click on the 'Start' button and then click on 'Control Panel'.



3. Click on the 'Display' icon.

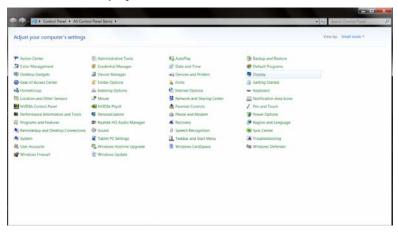

4.Ckick on the "Change display settings" button.

🕒 🔁 - 🖣 + Control Panel +	All Control Panel Berns + Display		• • • Teach Central Parel P
Control Pasel Home Adjust resolution Calibrate color	Make it easier to read what's on You can change the size of text and other temporarily enlarge just part of the sizeer	items on your screen by choosing one of these options. To	0
Charge display settings Adjust ClearType test	(C) Smaller - 100%	Preview	
Set custom text size (DPI)	🗰 Medium - 125% (default)	_mm_	
	© Larger - 150%		
		Αρψη	
See also			
Personalization Devices and Printers			


5.Click the "Advanced Settings" button.

😧 🔊 - 🔍 • Control Panel • Ali Control Panel Items • Display	Screen Resolution	• In Sector Caretor Power P
Change th	e appearance of your display	
	. 0 -	Date: Sdentify
Display: Resolution:	1. Nvidia Default Fist Panel .= 1920 = 1080 (recommendes) =	
Orientation	Landicape •	
	d other items larger or smaller settings should I choose?	Advectored.activitya
	OK G	ncel Approx


6.Click the "Monitor" tab and then click the "Properties" button.

Monite	r Type Generic PnP M	fonitor	Properties
	r Settings n refresh rate:		 Propenies
60 H	ertz		•
canni		allows you to selec . This may lead to	
	r.		
Color			
	Color (32 bit)	•	
	Color (32 bit)	•	

7.Click the "Driver" tab.

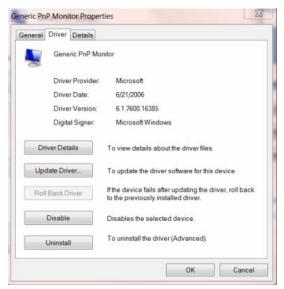

8. Open the "Update Driver Software-Generic PnP Monitor" window by clicking on "**Update Driver...** "and then click the **"Browse my computer for driver software"** button.

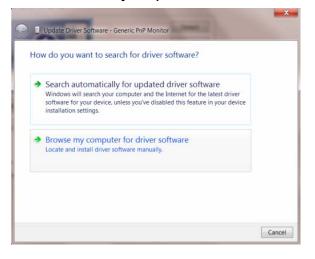

9. Select "Let me pick from a list of device drivers on my computer".



10. Click the "Have Disk" button. Click on the "Browse" button and navigate to the following directory:X:\Driver\module name (where X is the drive letter designator for the CD-ROM drive).



11. Select the "xxx.inf" file and click the "Open" button. Click the "OK" button.

12. Select your monitor model and click the "**Next**" button. The files will be copied from the CD to your hard disk drive.

13. Close all open windows and remove the CD.

14. Restart the system. The system will automatically select the maximum refresh rate and corresponding Color Matching Profiles.

Windows Vista



1. Click "Start " and "Control Panel". Then, double-click on "Appearance and Personalization".

2. Click "Personalization" and then "Display Settings".




3. Click "Advanced Settings...".



4. Click "Properties" in the "Monitor" tab. If the "Properties" button is deactivated, it means the configuration for your monitor is completed. The monitor can be used as is.


If the message "Windows needs..." is displayed, as shown in the figure below, click "Continue".

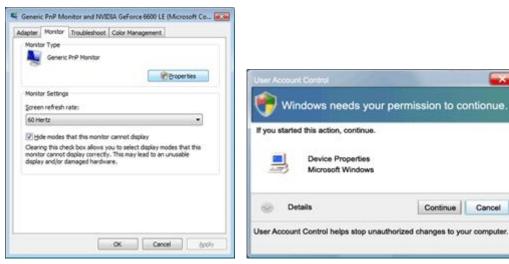

5. Click "Update Driver..." in the "Driver" tab.

eneric PnP Monitor Properties	Generic PnP Monitor Properties
General Driver Details	General Driver Details
Genetic PvP Montor	Generic Pri/P Monitor
Device type: Monitors Manufacturer: (Standard monitor types) Location: on IV/DIA GeForce 6600 LE (Microsoft Corpo	Driver Provider: Microsoft Driver Date: 6/21/2006 Driver Version: 6.0 6000 16386
Device status	Dgtal Sgner: microsoft windows
Pis device is working property.	Driver Databasis To view database about the driver files. Update Driver To update the driver software for this device. Biol Back Criver If the device fails after update the driver, roll back to the previously installed driver. Deable Deables the selected drivice.
OK Cancel	Uninitial To uninitial the driver (Advanced).

6. Check the "Browse my computer for driver software" checkbox and click "Let me pick from a list of device drivers on my computer".

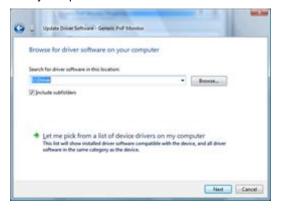

7. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F:\Driver (CD-ROM Drive).

8. Select your monitor model and click on the 'Next' button.


9. Click "Close" \rightarrow "Close" \rightarrow "OK" \rightarrow "OK" on the following screens displayed in sequence.

Windows XP


- 1. Start Windows® XP
- 2. Click on the 'Start' button and then click on 'Control Panel'.



3. Select and click on the category 'Appearance and Themes'

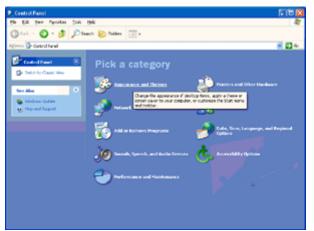

4. Click on the 'Display' Item.

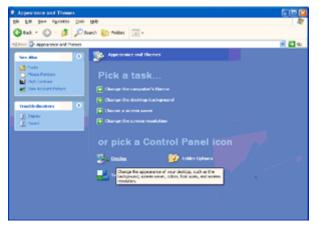

5. Select the 'Settings' tab then click on the 'Advanced' button.

Display Properties 🛛 😨 🔀
Themes Desktop Screen Saver Appearance Settings
Display: Phg and Play Monitor on 3D Prophet III
Screen retolution Less More 1024 by 769 pixele
Iroubleshoot Adgenced
OK Cancel Apply

- 6. Select 'Monitor' tab
- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.
- If the 'Properties' button is active, click on 'Properties' button.

Please follow the steps below.

ug and Play Monito	r and 3D Prophet II	l Properties 👘 <table-cell> 👔</table-cell>
GeForce3	Selection	Color Correction
General Adapter	Monitor Troubleshe	oot Color Management
Plug and Play	y Monitor	Properties
Monitor settings		
Screen refresh rate:		
60 Hertz		~
	ox allows you to select dis y correctly. This may lead Iware.	

7. Click on the 'Driver' tab and then click on 'Update Driver...' button.

Plug and Play Monitor Properties 🛛 😰 🔀	
General Driver	Plug and Play Monitor Properties 🛛 🛜 🔯
Plug and Play Monitor	General Driver
Device type: Monitors	Plug and Play Monitor
Manufacturer: (Standard monitor types)	Driver Provider: Microsoft
Location: on 3D Prophet III	Driver Date: 6/6/2001
Device status	Driver Version: 5.1.2001.0
This device is working properly.	Digital Signer: Microsoft Windows XP Publisher
If you are having problems with this device, click Troubleshoot to start the troubleshooter.	Driver Details To view details about the driver files.
<u></u>	Ugdate Driver To update the driver for this device.
Iroubleshoot	Boll Back Driver If the device fails after updating the driver, roll back to the previously installed driver.
Device usage: Use this device (enable)	Uninstall To uninstall the driver (Advanced).
OK Cancel	OK. Cancel

8. Select the 'Install from a list or specific location [advanced]' radio button and then click on the 'Next' button.



9. Select the 'Don't Search. I will choose the driver to install' radio button. Then click on the 'Next' button.



10. Click on the 'Have disk...' button, then click on the 'Browse...' button and then select the appropriate drive F: (CD-ROM Drive).

Hardware Update Wizard	
Select the device driver you want to insta	Il for this hardware.
Select the manufacturer and model of your have a disk that contains the driver you wa	hardware device and then click Next. If you nt to install, click Have Disk.
Model	
Plug and Play Monitor	
This driver is digitally signed. Tell me why driver signing is important	Have Disk
C	< <u>B</u> ack Next> Cancel

11. Click on the 'Open' button, then click the 'OK' button.

12. Select your monitor model and click on the 'Next' button.

- If you can see the 'has not passed Windows® Logo testing to verify its compatibility with Windows® XP' message, please click on the 'Continue Anyway' button.

13. Click on the 'Finish' button then the 'Close' button.

14. Click on the 'OK' button and then the 'OK' button again to close the Display Properties dialog box.

Windows 2000

- 1. Start Windows® 2000
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select 'Monitor'

- If the 'Properties' button is inactive, it means your monitor is properly configured. Please stop installation.

- If the 'Properties' button is active. Click on 'Properties' button. Please follow the steps given below.
- 6. Click on 'Driver' and then click on 'Update Driver...' then click on the 'Next' button.

7. Select 'Display a list of the known drivers for this device so that I can choose a specific driver', then click on 'Next' and then click on 'Have disk...'.

8. Click on the 'Browse...' button then select the appropriate drive F: (CD-ROM Drive).

- 9. Click on the 'Open' button, then click on the 'OK' button.
- 10. Select your monitor model and click on the 'Next' button.
- 11. Click on the 'Finish' button then the 'Close' button.

If you can see the 'Digital Signature Not Found' window, click on the 'Yes' button.

Windows ME

- 1. Start Windows® Me
- 2. Click on the 'Start' button, point to 'Settings', and then click on 'Control Panel'.
- 3. Double click on the 'Display' Icon.
- 4. Select the 'Settings' tab then click on 'Advanced...'.
- 5. Select the 'Monitor' button, then click on 'Change...' button.
- 6. Select 'Specify the location of the driver(Advanced)' and click on the 'Next' button.
- 7. Select 'Display a list of all the drivers in a specific location, so you can choose the driver you want', then click on 'Next' and then click on 'Have Disk...'.
- 8. Click on the 'Browse...' button, select the appropriate drive F: (CD-ROM Drive) then click on the 'OK' button.
- 9. Click on the 'OK' button, select your monitor model and click on the 'Next' button.
- 10. Click on 'Finish' button then the 'Close' button.

i-Menu



Welcome to "i-Menu" software by AOC. i-Menu makes it easy to adjust your monitor display setting by using on screen menus instead of the OSD button on the monitor. To complete installation, please follow the installation guide.

i-Menu	Lumii	nance	
		×	
Contrast	<u> </u>	🔆 Brightness	<u> </u>
γ Gamma	🖣 Gamma 1 🕨	Eco Mode	∢ ☑ ▶
DCR	⊠		
			\$
	Л	OC	

e-Saver



Welcome to use AOC e-Saver monitor power management software! The AOC e-Saver features Smart Shutdown functions for your monitors, allows your monitor to timely shutdown when PC unit is at any status (On, Off, Sleep or Screen Saver); the actual shutdown time depends on your preferences (see example below). Please click on "driver/e-Saver/setup.exe" to start installing the e-Saver software, follow the install wizard to complete software installation.

Under each of the four PC status, you may choose from the pull-down menu the desired time (in minutes) for your monitor to automatically shutdown. The example above illustrated:

- 1) The monitor will never shutdown when the PC is powered on.
- 2) The monitor will automatically shutdown 5 minutes after the PC is powered off.
- 3) The monitor will automatically shutdown 10 minutes after the PC is in sleep/stand-by mode.
- 4) The monitor will automatically shutdown 20 minutes after the screen saver appears.



You can click "RESET" to set the e-Saver to its default settings like below.



Screen+



Screen+ software is a desktop screen splitting tool, it splits the desktop into different panes, each pane displays a different window. You only need to drag the window to a corresponding pane, when you want to access it. It supports multiple monitor display to make your task easier. Please follow the installation software to install it.

	Ħ	
--	---	--

Troubleshoot

Problem & Question	Possible Solutions
Power LED Is Not ON	Make sure the power button is ON and the Power Cord is properly connected to a grounded power outlet and to the monitor.
No images on the screen	 Is the power cord connected properly? Check the power cord connection and power supply. Is the cable connected correctly? (Connected using the D-sub cable) Check the DB-15 cable connection. (Connected using the DVI cable) Check the DVI cable connection. * DVI input is not available on every model. If the power is on, reboot the computer to see the initial screen (the login screen), which can be seen. If the initial screen (the login screen) appears, boot the computer in the applicable mode (the safe mode for Windows ME/XP/2000) and then change the frequency of the video card. (Refer to the Setting the Optimal Resolution) If the initial screen (the login screen) does not appear, contact the Service Center or your dealer. Can you see "Input Not Supported" on the screen? You can see this message when the signal from the video card exceeds the maximum resolution and frequency that the monitor can handle properly. Make sure the AOC Monitor Drivers are installed.
Picture Is Fuzzy & Has Ghosting Shadowing Problem	Adjust the Contrast and Brightness Controls. Press to auto adjust. Make sure you are not using an extension cable or switch box. We recommend plugging the monitor directly to the video card output connector on the back .
Picture Bounces, Flickers Or Wave Pattern Appears In The Picture	Move electrical devices that may cause electrical interference as far away from the monitor as possible. Use the maximum refresh rate your monitor is capable of at the resolution your are using.

Monitor Is Stuck In Active Off-Mode''	The Computer Power Switch should be in the ON position. The Computer Video Card should be snugly fitted in its slot. Make sure the monitor's video cable is properly connected to the computer. Inspect the monitor's video cable and make sure no pin is bent. Make sure your computer is operational by hitting the CAPS LOCK key on the keyboard while observing the CAPS LOCK LED. The LED should either turn ON or OFF after hitting the CAPS LOCK key.
Missing one of the primary colors (RED, GREEN, or BLUE)	Inspect the monitor's video cable and make sure that no pin is damaged. Make sure the monitor's video cable is properly connected to the computer.
Screen image is not centered or sized properly	Adjust H-Position and V-Position or press hot-key (AUTO).
Picture has color defects (white does not look white)	Adjust RGB color or select desired color temperature.
Horizontal or vertical disturbances on the screen	Use Windows 95/98/2000/ME/XP shut-down mode Adjust CLOCK and FOCUS. Press to auto-adjust.

Specification

General Specification


	Model number	e2795Vh
Panel	Driving system	TFT Color LCD
	Viewable Image Size	68.6cm diagoanl
	Pixel pitch	0.311mm(H) x 0.311mm(V)
	Video	R, G, B Analog Interface
	Separate Sync.	H/V TTL
	Display Color	16.7M Colors
	Dot Clock	210 MHz
	Horizontal scan range	30 kHz - 83 kHz
	Horizontal scan Size(Maximum)	597.6mm
	Vertical scan range	55 Hz - 75 Hz
	Vertical scan Size(Maximum)	366.15mm
	Optimal preset resolution	1920 x 1080 (60 Hz)
Resolution	Highest preset resolution	1920 x 1080 (60 Hz)
	Plug & Play	VESA DDC2B/CI
	Input Connector	D-Sub 15pin & DVI 24pin,HDMI 19pin
	Input Video Signal	Analog: 0.7Vp-p(standard), 75 OHM, Positive,19-pin HDMI
	*	& DVI-D Digital Interface (TMDS)
	Power Source	100~240VAC, 50/60Hz
	Power Consumption	Active < 70 W
		Standby < 2 W
	Connector Type	15-pin D-Sub,24-pin DVI,19-pin HDMI
	Signal Cable Type	Detachable
	Dimensions & Weight:	
Physical Characteristics	Height (with base)	439.2 mm
	Width	642 mm
	Depth	209.9 mm
	Weight (monitor only)	5.9 kg
Environmental	Temperature:	
	Operating	0°C to 50° C
	Non-Operating	-20°C to 60°C
	Humidity:	
	Operating	5% to 85% (non-condensing)
	Non-Operating	5% to 90% (non-condensing)

Altitude:	
Operating	0~ 3,658m (0~ 12,000 ft)
Non-Operating	0~ 12,192m (0~ 40,000 ft)


Preset Display Modes

STANDARD	RESOLUTION	HORIZONTAL	VERTICAL
		FREQUENCY(KHz)	FREQUENCY(Hz)
	-		. ,
	640x480@60Hz	31.469	59.94
VGA	640x480@72Hz	37.861	72.809
	640x480@75Hz	37.5	75
	800x600@56Hz	35.156	56.25
SVGA	800x600@60Hz	37.879	60.317
JVGA	800x600@72Hz	48.077	72.188
	800x600@75Hz	46.875	75
	1024x768@60Hz	48.363	60.004
XGA	1024x768@70Hz	56.476	70.069
	1024x768@75Hz	60.023	75.029
	1280x1024@60Hz	63.981	60.02
SXGA	1280x1024@75Hz	79.976	75.025
	1280x960@60HZ	60	60
WXGA 1440x900@60Hz		55.935	55.887
WSXGA	1680x1050@60Hz	65.29	59.95
WUXGA	1920x1080@60HZ	67.5	59.934
IBM-MODE DOS	720x400@70Hz	31.469	70.087
MAC MODE VGA	640x480@67Hz	35	66.667
MAC MODE SVGA	832x624@75Hz	49.725	74.551


Pin Assignments

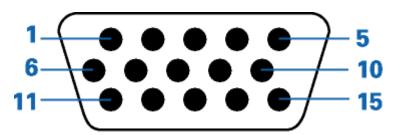

Pin Number	15-Pin Side of the Signal Cable			
1	Video-Red			
2	Video-Green			
3	Video-Blue			
4	N.C.			
5	Detect Cable			
6	GND-R			
7	GND-G			
8	GND-B			
9	+5V			
10	Ground			
11	N.C.			
12	DDC-Serial data			
13	H-sync			
14	V-sync			
15	DDC-Serial clock			

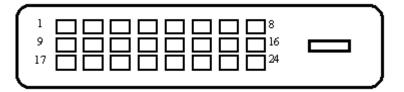

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2-	9	TMDS Data 1-	17	TMDS Data 0-
2	TMDS Data 2+	10	TMDS Data 1+	18	TMDS Data 0+
3	TMDS Data 2/4 Shield	11	TMDS Data 1/3 Shield	19	TMDS Data 0/5 Shield
4	TMDS Data 4-	12	TMDS Data 3-	20	TMDS Data 5-
5	TMDS Data 4+	13	TMDS Data 3+	21	TMDS Data 5+
6	DDC Clock	14	+5V Power	22	TMDS Clock Shield
7	DDC Data	15	Ground(for+5V)	23	TMDS Clock +
8	N.C.	16	Hot Plug Detect	24	TMDS Clock -

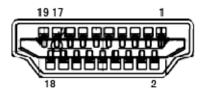

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	TMDS Data 2+	9	TMDS Data 0	17	DDC/CEC Ground
2	TMDS Data 2 Shield	10	TMDS Clock +	18	+5V Power
3	TMDS Data 2	11	TMDS Clock Shield	19	Hot Plug Detect
4	TMDS Data 1+	12	TMDS Clock		
5	TMDS Data 1Shield	13	CEC		
6	TMDS Data 1	14	Reserved (N.C. on		
			device		
7	TMDS Data 0+	15	SCL		
8	TMDS Data 0 Shield	16	SDA		

Plug and Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I2C protocol. The host can request EDID information over the DDC2B channel.

Regulation

FCC Notice

FCC Class B Radio Frequency Interference Statement WARNING: (FOR FCC CERTIFIED MODELS)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibilities of the user to correct such interference. It is the responsibility of the user to correct such interference.

WEEE Declaration

Disposal of Waste Equipment by Users in Private Household in the European Union.



This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste.Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment.The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product .

EPEAT Declaration



EPEAT is a system to help purchasers in the public and private sectors evaluate, compare and select desktop computers, notebooks and monitors based on their environmental attributes. EPEAT also provides a clear and consistent set of performance criteria for the design of products, and provides an opportunity for manufacturers to secure market recognition for efforts to reduce the environmental impact of its products.

AOC believes in protecting the environment.

With a key concern for the conservation of natural resources, as well as land II protection, AOC announces the launch of AOC monitor's packaging recycling program. This program is designed to help you discard of your monitor carton and IIer materials properly. If a local recycling center is not available, AOC will recycle the packaging material for you, including foam IIer and carton. AOC Display solution will only recycle AOC monitor packaging. Please refer to the following website address:

Only for North and South American, excluding Brazil:

http://us.aoc.com/about/environmental_impact

For Germany: http://www.aoc-europe.com/en/service/tco.php

For Brazil:

http://www.aoc.com.br/2007/php/index.php?req=pagina&pgn_id=134

Service

Warranty Statement for Europe

LIMITED THREE-YEAR WARRANTY*

AOC Color Monitors sold within Europe

AOC International (Europe) GmbH warrants this product to be free from defects in material and workmanship for a period of Three (3) years after the original date of consumer purchase. During this period, AOC International (Europe) GmbH will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The defective products that are replaced become the property of AOC International (Europe) GmbH.

If the product appears to be defective, please contact your local dealer or refer to the warranty card when attached to the product.

Deliver the product freight pre-paid, along with the dated proof of purchase, to the AOC Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

AOC International (Europe) GmbH is responsible neither for any damage or loss during inbound transport damage nor to inbound product that was not properly packaged.

AOC International (Europe) GmbH will pay the return shipping charges within one of the countries specified within this warranty statement. AOC International (Europe) GmbH is not responsible for any costs associated with the transportation of product across international borders. This includes the international border within the European Union.

- * This limited warranty does not cover any losses or damages that occur as a result of
- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical powers failures, surges, or other irregularities

This limited warranty does not cover any of the product firmware or hardware that you or any third party have

modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD.

AOC INTERNATIONAL (EUROPE) GMBH OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. AOC INTERNATIONAL (EUROPE) GMBH LIABILITY, WHETHER BASED ON CONTRACT, TORT, WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL AOC INTERNATIONAL (EUROPE) GMBH BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT, OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS, WHICH MAY VARY FROM COUNTRY TO COUNTRY. THIS LIMITED WARRANTY IS ONLY VALID FOR PRODUCTS PURCHASED IN THE MEMBER COUNTRIES OF THE EUROPEAN UNION.

Information in this document is subject to change without notice. For more details, please visit: http://www.aoc-europe.com/en/service/index.php

Warranty Statement for North & South America (excluding Brazil)

WARRANTY STATEMENT

for AOC Color Monitors

Including those Sold within North America as Specified

Envision Peripherals, Inc. warrants this product to be free from defects in material and workmanship for a period of three (3) years for parts & labor and one (1) year for CRT Tube or LCD Panel after the original date of consumer purchase. During this period, EPI (EPI is the abbreviation of Envision Peripherals, Inc.) will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The parts or product that are replaced become the property of EPI.

In the USA to obtain service under this limited warranty, call EPI for the name of the Authorized Service Center closest to your area. Deliver the product freight pre-paid, along with the dated proof of purchase, to the EPI Authorized Service Center. If you cannot deliver the product in person:

- Pack it in its original shipping container (or equivalent)
- Put the RMA number on the address label
- Put the RMA number on the shipping carton
- Insure it (or assume the risk of loss/damage during shipment)
- Pay all shipping charges

EPI is not responsible for damage to inbound product that was not properly packaged.

EPI will pay the return shipment charges within one of the countries specified within this warranty statement. EPI is not responsible for any costs associated with the transportation of product across international borders. This includes the international borders of the countries within this warranty statements.

In the United States and Canada contact your Dealer or EPI Customer Service, RMA Department at the toll free number (888) 662-9888. Or you can request an RMA Number online at www.aoc.com/na-warranty.

* This limited warranty does not cover any losses or damages that occur as a result of:

- Shipping or improper installation or maintenance
- Misuse
- Neglect
- Any cause other than ordinary commercial or industrial application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an EPI Authorized Service Center
- Improper environment
- Excessive or inadequate heating or air conditioning or electrical power failures, surges, or other irregularities

This three-year limited warranty does not cover any of the product's firmware or hardware that you or any third party have modified or altered; you bear the sole responsibility and liability for any such modification or alteration.

ALL EXPRESS AND IMPLIED WARRANTIES FOR THIS PRODUCT (INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) ARE LIMITED IN DURATION TO A PERIOD OF THREE (3) YEARS FOR PARTS AND LABOR AND ONE (1) YEAR FOR CRT TUBE OR LCD PANEL FROM THE ORIGINAL DATE OF CONSUMER PURCHASE. NO WARRANTIES (EITHER EXPRESSED OR IMPLIED) APPLY AFTER THIS PERIOD. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EPI OBLIGATIONS AND YOUR REMEDIES HEREUNDER ARE SOLELY AND EXCLUSIVELY AS STATED HERE. EPI' LIABILITY, WHETHER BASED ON CONTRACT, TORT. WARRANTY, STRICT LIABILITY, OR OTHER THEORY, SHALL NOT EXCEED THE PRICE OF THE INDIVIDUAL UNIT WHOSE DEFECT OR DAMAGE IS THE BASIS OF THE CLAIM. IN NO EVENT SHALL ENVISION PERIPHERALS, INC. BE LIABLE FOR ANY LOSS OF PROFITS, LOSS OF USE OR FACILITIES OR EQUIPMENT OR OTHER INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGE. IN THE UNITED STATES OF AMERICA, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

In the United States of America, this limited warranty is only valid for Products purchased in the Continental United States, Alaska, and Hawaii.

Outside the United States of America, this limited warranty is only valid for Products purchased in Canada.

Information in this document is subject to change without notice. For more details, please visit:

USA: http://us.aoc.com/support/find_service_center ARGENTINA: http://ar.aoc.com/support/find_service_center BOLIVIA: http://bo.aoc.com/support/find_service_center CHILE: http://cl.aoc.com/support/find_service_center **COLOMBIA:** http://co.aoc.com/support/find_service_center COSTA RICA: http://cr.aoc.com/support/find_service_center DOMINICAN REPUBLIC: http://do.aoc.com/support/find_service_center ECUADOR: http://ec.aoc.com/support/find_service_center EL SALVADOR: http://sv.aoc.com/support/find_service_center GUATEMALA: http://gt.aoc.com/support/find_service_center HONDURAS: http://hn.aoc.com/support/find_service_center NICARAGUA: http://ni.aoc.com/support/find_service_center PANAMA: http://pa.aoc.com/support/find_service_center PARAGUAY: http://py.aoc.com/support/find_service_center PERU: http://pe.aoc.com/support/find_service_center URUGUAY: http://pe.aoc.com/support/find_service_center VENEZUELA: http://ve.aoc.com/support/find_service_center IF COUNTRY NOT LISTED: http://latin.aoc.com/support/find_service_center

Warranty Statement for AP

LIMITED THREE-YEAR WARRANTY*

AOC Color Monitors sold within AP

AOC is one internal brand for its professional monitor ,TV technology ,affordable price and available service .Customer satisfaction-oriented is always what we are pursuing .

We provide 3 years standard warranty for AOC monitor and 1-3 years standard warranty for AOC TV .However There is some slight warranty difference due to AOC different service strategic in different area/country ,so any question against warranty or any other AOC products warranty ,please leave the message via service.support@aoc.com or check with the dealer or reseller in your country where you bought the product .We will response to you with top priority .

AOC warrants this product to be free from defects in material and workmanship .

During the warranty period, TPV will, at its option, either repair the defective product with new or rebuilt parts, or replace it with a new or rebuilt product at no charge except as *stated below. The defective products that are replaced become the property of AOC.

- *This limited warranty does not cover any losses or damages that occur as a result of
- Shipping or improper installation or maintenance
- Misuse or Neglect
- Any cause other than ordinary application
- Adjustment by non-authorized source
- Repair, modification, or installation of options or parts by anyone other than an AOC Authorized Service Center
- Improper environment- Excessive or inadequate heating or air conditioning or electrical powers failures, surges or other irregularities
- Fire, flood, earthquake, terrorist attack or other accidents

This limited warranty does not cover any of the product firmware or hardware that you or any third party have modified or altered; customer bear the sole responsibility and liability for any such modification or alteration. It's the right of AOC to issue or terminate the warranty terms. For exception cases, subject to report of our investigation, we reserve the right to terminate or modify terms of warranty policy.

How to get your Warranty ?

- 1. Please keep the purchase invoice ,and our service partner will take over the service against the invoice
- 2. If you can not show the invoice ,please contact local dealer /.reseller for getting special support

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com