
SUPERTOOTH 3


Quick Start Guide

First Time Turn ON and Pairing



Press the green button until the LED will blinks red/blue.

2



Confirm language selection by pressing the green button as soon as your language is spoken on the **SUPERTOOTH 3**.

3

The **SUPERTOOTH 3** will then ask you to pair your phone.



On your phone bluetooth menu, search for devices and select **BlueAnt ST3** then enter **0000** as pincode.

4A







Phonebook transfer will be initiated. Accept any connection request on your phone if prompted. Then wait until **SUPERTOOTH 3** says: "BlueAnt ST3 ready, connected to phone."

4B

In case your phone doesn't support automatic transfer (dont press the red key of your

SUPERTOOTH 3), go to your phones "Contact Menu", then select:

1) OPTION

3) Option

- 2) Mark all \ if avai
 - f available
- 4) Send or Send Business card
- 5) Via Bluetooth
- 6) Select BlueAnt ST3

Note: Blackberry and Smart phone owners please refer to section F of user guide.

Activation of Voice Answer:

"Voice Answer Enabled"

Press VOL + for 5 seconds until the SUPERTOOTH 3



Deactivation of Voice Answer:

Press **VOL** - for 5 seconds until the **SUPERTOOTH 3** confirms this mode.

NOTE: Voice activation or deactivation is possible only if you're not on call.


confirms this mode.

6

Manual Answer

(§)

Press the green button to answer incoming call.



End / Reject Call

Press the red button to end or reject a call.



Voice Answer (if option is activated)



After the BEEP, say clearly one of the words below:

"ACCEPT CALL"

"ACCEPT"

"ANSWER"

"OK"


IMPORTANT: Voice answer will not work if you don't wait for the BEEP.



BlueAnt®

Product Overview



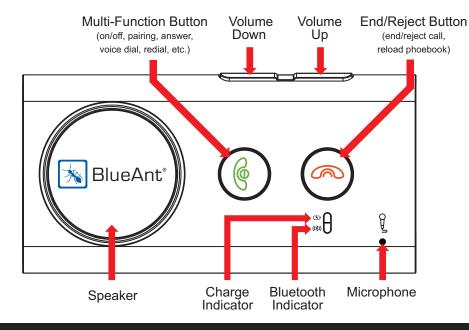



Installation



Fix the metal clip of the SUPERTOOTH 3 to the sun-visor



Attach the magnetic back of the SUPERTOOTH 3 to the fixed metal clip





The **SUPERTOOTH** 3 must be placed in such a way that its microphone is directed to the mouth of the user.


Other Functions

Turn ON




Press the green button for 1 second to turn ON.

Turn OFF




Press green button until **"SUPERTOOTH VOICE** Powering Down" is announced.

Increase Volume



Press repeatedly VOL + to increase volume.

Decrease Volume



Press repeatedly VOL - to decrease volume.



BlueAnt®

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com