SmartFIT plus 22/ SmartFIT supreme series Instruction Manual



Para instrucciones en Español, llamar al: 1-800-837-4044

www.centuryproducts.com

 Avoid injury or death

 oducts.com
 Read and understand this manual!

 7/01
 Download from Www.Somanuals.com. All Manuals Search And Strateging only!

PM-1439AB

TABLE OF CONTENTS

This instruction manual is for the 4-in1[™] Travel Solutions Series and Infant Car Seats:

- SmartFit® Plus 22
- SmartFit® Plus 22V
- SmartFit® Supreme
- SmartFit® Supreme

Instructions for all models *are the same* unless otherwise noted.

Sefore You Begin

Important Information1
Warnings2
Basic Information4

🕷 Use

Height & Weight Limits	5
Installation With Base	6
Installation Without Base	7
Placing Child in Car Seat	8
Operations and Adjustments 1	0

- Harness Tie
- Adjustable Handle
- Buckle System
- Removing Car Seat from Base
- Adjustable Base
- Changing Harness Strap Slots
- Changing Crotch Strap Positions

Special Information

Vehicle Seat Belts	
Shopping Cart Use	20
Additional Information	21

IMPORTANT INFORMATION

No car seat can guarantee protection from injury in every situation, but proper use helps reduce the risk of serious injury or death.

% Registration Information

Child restraints (car seats) could be recalled for safety reasons. You must register this restraint to be reached in a recall. Fill out the registration card attached to car seat and mail today or send your name, address, and the restraint's model number and manufacturing date to:

> Century Products P.O. Box 551 Elverson, PA 19520-9973 or call 1-888-224-6549

For recall information:

- Call the U.S Government's Auto Safety Hotline at 1-800-424-9393 (202-366-0123 in D.C. area)
- www.nhtsa.dot.gov
- Call Century Products 1-800-837-4044

Safety First Check List

- Read and understand instruction manual and car seat labels.
- ✓ Use car seat *rear-facing* only.
- Do not use in vehicle seat with air bag.
- Secure children in back seat whenever possible.
- ✓ Never leave child unattended.
- Install car seat securely.
- ✓ Only use a SmartFit[®] base when using car seat with a base.
- Do not use after date shown on back of car seat.
- Do not allow anyone (babysitter, relatives, etc.) to use car seat without first understanding all instructions.

WARNINGS - Prevent serious injury or death:

Failure to follow these instructions and car seat labels can result in child striking the vehicle's interior during a sudden stop or crash. Secure child restraint with a vehicle seat belt as shown in this manual.

Use this car seat rear-facing only. Serious crippling injury or death can result if infant faces front of vehicle.

Vehicle seat belt system MUST hold car seat securely. Not all vehicle seat belts can be used with a car seat. If vehicle seat belt does not hold car seat securely, read "Vehicle Seat Belts" section. DO NOT use rear-facing child restraint in a vehicle seating position equipped with an air bag. Child's head and neck may be seriously injured when an inflating air bag hits back of child restraint.

Never put a car seat in a front vehicle seat unless recommended by vehicle owner's manual. National Highway Traffic Safety Administration (NHTSA) alerts vehicle owners that according to accident statistics children up to age 12 are safer in the back seat. For vehicle's with air bags, refer to vehicle owner's manual for child restraint installation information.

If car seat is in an accident, it must be replaced. *DO NOT use it again!* An accident can cause unseen damage and using it again could cause serious injury or death.

WARNINGS - Prevent serious injury or death (continued):

DO NOT use car seat if it is damaged or missing parts.

DO NOT use accessories or parts other than those provided by Century/Graco. Their use could alter the performance of the car seat and cause serious injury or death.

Car seat must be properly leveled:

- Too reclined can result in injury or ejection.
- Too upright can result in breathing difficulties.

Never leave infant unattended, even when sleeping.

Strangulation Hazard: Child can strangle in loose harness straps. Never leave child in carrier when straps are loose or undone.

Fall Hazard: Child's movement can slide carrier. Never place carrier near edges of countertops, tables or other elevated surfaces.

Suffocation Hazard: Infant carrier can roll over on soft surfaces and suffocate child. Never place carrier on beds, sofas or other soft surfaces.

Avoid serious injury due to falls. Always use harness to restrain child and be sure handle *"locks"* into carrying position before carrying infant. If handle is not securely locked, car seat can flip forward causing unrestrained infant to fall and be seriously injured.

BASIC INFORMATION

% Certification

This car seat meets or exceeds all applicable requirements of Federal Motor Vehicle Safety Standard 213 for use in motor vehicles and aircraft.

Seat Useful Life

DO NOT use after date shown on back of car seat due to changing requirements and normal wear and tear.



Solution Seat Seat

Always secure car seat with a vehicle seat belt, even when unoccupied.

An unsecured car seat can injure passengers.

% Vehicle Seat Protection

Protect vehicle seat cover. Use a car seat mat, towel or thin blanket under car seat.

Solution Seats Seats

Do not use on rear-facing or side-facing vehicle seats.

😽 Warm Weather

Car seat parts can get very hot in the sun or warm weather.

To avoid burns, always check before putting child in car seat.

HEIGHT & WEIGHT LIMITS

This car seat is designed for *rear-facing* use only by an infant whose:

- Weight is less than 22 lbs. (10 kg) and;
- Height is 29 inches (73.6 cm) or less

Preterm or Low Birth Weight Infants

A preterm or low birth weight infant may be at special risk in a vehicle or aircraft.

According to the American Academy of Pediatrics, these infants may suffer breathing difficulties if improperly reclined in a car seat.

Century advises that you have your physician or hospital staff evaluate your infant and recommend the proper car seat or car bed **before** you and your infant leave the hospital.

INSTALLATION WITH BASE



Place base *rear-facing* on vehicle seat.

Thread vehicle lap belt through base belt *Tabs* and buckle belt.

NOTE: Vehicle shoulder belt must *NOT* be placed under belt *Tabs*.

Press down firmly on base to compress vehicle seat cushion while tightening vehicle lap belt (*fig. a*).

Pull front to back and left to right to check for secure installation (*fig. b*).

If not secure, see "Vehicle Seat Belts" section.

5 Put car seat in base and pull up on car seat to be sure it is locked in base.

Ball *MUST* be in green zone (*fig. c*). If necessary adjust *Foot* (if available) or place rolled towels under base at vehicle seat crease.

NOTE: Vehicle *must* be on level ground and child in car seat when leveling.

Adjust handle to a position behind car seat.

(fig. a) (fig. b) Download from Www.Somanuals.com. All Manuals Search And Download.

Tabs

Foot


Level indicator for REAR FACING ONLY! Ball must be ontime in green!



INSTALLATION WITHOUT BASE



Place car seat *rear-facing* on vehicle seat.



NOTE: Vehicle shoulder belt must **NOT** be placed through car seat Slots.


Press down firmly on car seat to compress vehicle seat cushion while tightening vehicle lap belt (fig. a).

Pull front to back and left to right to check for secure installation (fig. b).

If not secure, see "Vehicle Seat Belts" section.

Ball MUST be in green zone (fig. c). If necessary place rolled Towels under car seat at vehicle seat crease.

NOTE: Vehicle must be on level ground and child in car seat when leveling.



Slots Towels Level indicator for Ball must be entirely in (fig. a) (fig. b) Download from Www.Somanuals.com. All Manuals Search And Download. (fiq. c)

PLACING CHILD IN CAR SEAT

To prevent serious injury or death:

- Keep harness straps snug and positioned on shoulders. Periodically check adjustments.
- Do not use strap covers, blankets cushions, or padding under harness straps or child unless provided by Century/Graco.
- Baby must be dressed in clothing with arms and legs that will not interfere with buckling harness.

Adjust harness system:

• Harness straps must be through slots *at* or *just below* shoulders.

5-Point Models Only:

• Crotch strap *must* be through opening closest to but not under child.

3-Point Models Only:

• Buckle tongue *must* be in slot closest to but not under child.

- Place child in car seat with child's back flat against back of car seat.
- 2 Place harness straps over child's shoulders and lock buckle.

Pull up on buckle to be sure it is locked.

3 Close harness tie:

- Position harness tie at arm pit level.
- Check that harness straps are snug with just enough room to insert one finger between child's chest and harness straps (*fig. a*).

For 5-Point models, check that harness straps on chest and *thigh* are snug.

A rolled towel can be used on each side to support small children *(fig. b)*. Be sure towels do not interfere with harness system.

PLACING CHILD IN CAR SEAT (continued)



(fig. a) (fig. b) Download from Www.Somanuals.com. All Manuals Search And Download.

OPERATIONS and ADJUSTMENTS

1

2-Piece Harness Tie:

- To open: Squeeze tabs and pull apart.
- To close: Snap halves together. Make sure harness tie is locked by pulling out on each half.

2 Adjustable Handle:

- Handle has four adjustment positions.
- Push in red buttons on each side of handle, rotate and release red buttons. Continue rotating handle to desired position until you hear a *"click"* sound.
- *IMPORTANT:* Before lifting car seat, place handle in *"locked"* upright carrying position.

Buckle:

3-Point Models

- To buckle: Push tongue down into slot. Pull up on tongue to be sure it is locked.
- To unbuckle: Press red button and pull tongue out.

5-Point Models

- To buckle: Insert both tongues into buckle. Pull up on tongues to be sure they are locked.
- To unbuckle: Press red button and pull tongues out.


Removing Car Seat from Base:

- Place handle in *"locked"* upright carrying position.
- Squeeze red release lever in base (fig. a).
- Lift car seat out of base.

5 Adjustable Base:

- Pull blue adjustment Handle out (fig. b).
- Adjust *Foot* to desired position.
- Release adjustment handle. Be sure it retracts into slot.

OPERATIONS and ADJUSTMENTS (continued)

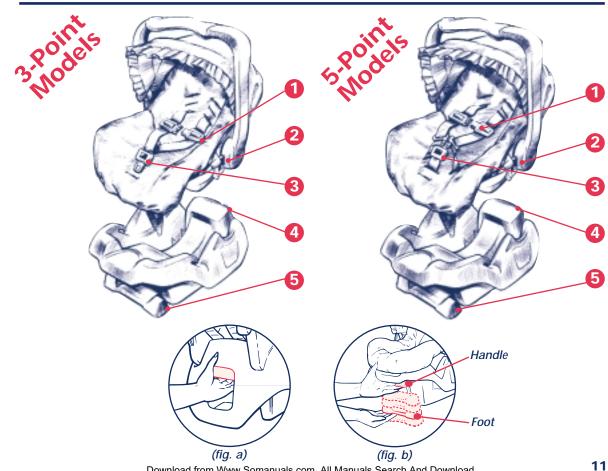

OPERATIONS and ADJUSTMENTS continued

Changing Harness Strap Slots (fig. c):

Harness straps must be through slots *at* or *just below* shoulders.

- Press *Tab* to release metal *Rod* and lift *Rod* out of side *Pockets*.
- Slide metal *Rod* out of *Loops* of harness straps.
- Pull harness strap out of current *Slots* and thread through desired *Slots*.

IMPORTANT: Straps *MUST* be through *matching Slots* of seat pad and car seat.

- Adjust strap length by inserting metal *Rod* into any *Loop* that will provide proper snugness.
- Replace metal *Rod* into side *Pockets* and slide *Rod* down below *Tab*.

Make sure Tab holds metal Rod securely.



Changing Crotch Strap Positions (fig. d):


Buckle tongue *must* be in slot closest to but not under child.

5-Point Models Only

- From bottom of car seat, remove crotch strap *Clip*.
- From top of car seat, rethread crotch strap through desired *Opening*.
- Re-attach crotch strap *Clip exactly* as shown.

Pull on buckle to make sure it is held securely.

OPERATIONS and ADJUSTMENTS (continued)

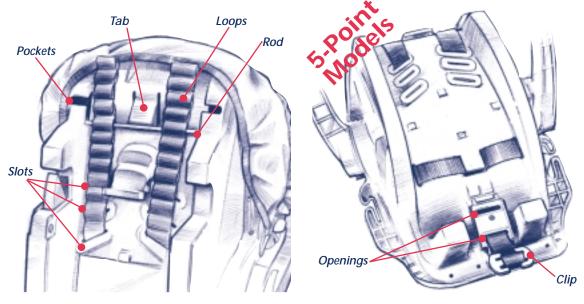

(fig. c)

(fig. d)

VEHICLE SEAT BELTS

A WARNING

Not all vehicle seat belts can be used with a car seat. The car seat must be held securely at all times by a lap belt (or lap belt portion of a lap/shoulder belt) that will not change length while driving.

To provide the most secure installation of the car seat:

- Read the vehicle owner's manual regarding car seat installation and seat belt use with car seat.
- Follow all instruction labels on vehicle seat belt and car seat.


If car seat is not held securely after following instructions in this manual, vehicle seat belt labels, and vehicle owner's manual:

- Move car seat to another seating location and try again, or
- Contact vehicle dealer for possible seat belt modification parts.

Selts Forward of Seat Crease

Vehicle seat belts located forward of seat crease may not securely hold car seat. Check vehicle owner's manual or see vehicle dealer for car seat installation requirements.

• If approved for use with car seat, install car seat and check for secure installation by pulling car seat front to back. If car seat slides forward, DO NOT use these seat belts.

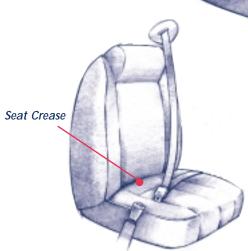

Download from Www.Somanuals.com. All Manuals Search And Download.

Seat Crease

Scheric Lap Belts - Manually Adjustable

The locking latch plate on some seat belts may slip and loosen after being buckled on car seat if positioned at a certain angle. If this happens, flip latch plate over (fig. a) and re-buckle. Test installation again to see if this works. If not, move car seat to another seating position.

Section 2018 Secti


Lap belts with retractors may or may not hold a car seat securely.

Follow these steps to determine if you have a retractor system that will hold car seat securely:

- a. Pull belt all the way out.
- b. Allow belt to retract about 6 inches (15 cm).
- c. Pull out on belt again.

If belt is locked and you *cannot* pull the belt out any further, you have an Automatic Locking Retractor which may be used with a car seat. Remember, when installing a car seat, pull belt all the way out, buckle belt, and then tighten.


If you *can* pull the belt out again (step c), you have an Emergency Locking Retractor which must not be used with a car seat.

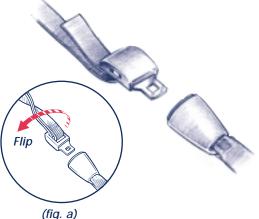




Passive Restraint - Lap Belt with Motorized Shoulder Belt

DO NOT use with any car seat.

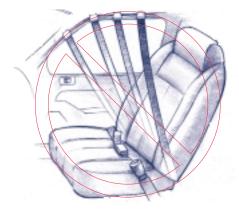

Passive Restraint - Lap or Shoulder Belt Mounted on Door


DO NOT use with any car seat. Belts will not stay tight while driving.

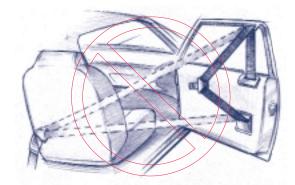

Scombination Lap/Shoulder Belt with Sliding Latch Plate


Pull on latch plate (*fig. a*). If belt slides freely through latch plate, a locking clip MUST be used (see Locking Clip section).

Some combination lap/shoulder belts with sliding latch plates may be converted into an *"automatic locking mode"* that will allow use without a locking clip. See vehicle owner's manual and label on vehicle belts for instructions.

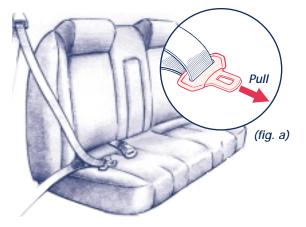

Sombination Lap/Shoulder Belt with Locking Latch Plate

The locking latch plate on some seat belts may slip and loosen after being buckled on car seat if positioned at a certain angle. If this happens, flip the latch plate over *(fig. b)* and re-buckle. Test installation again to see if this works. If not, move car seat to another seating position.

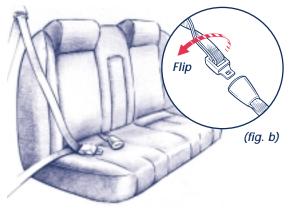

😽 Locking Clip

Avoid serious injury or death:

- Failure to use locking clip where required will result in car seat not being securely held in place.
- Remove locking clip from seat belts when not being used with car seat.
- DO NOT use locking clip as a vehicle seat belt shortener.

You *MUST* use locking clip provided with car seat with a vehicle seat belt that slides freely through the latch plate or the lap belt cannot be tightly secured.

6

Install car seat and tighten vehicle seat belt.

- Hold seat belts together at latch plate (fig. a) then unbuckle.
- Slide locking clip on seat belts approximately 1/2 inch (1 cm) away from latch plate.
- Re-buckle seat belt.


Test installation to see if car seat is secure.

If not secure, additional belt tightening may be required:

- Unbuckle vehicle seat belt.
- Hold belts together and remove locking clip.
- Shorten length of lap belt portion slightly by pulling belt through latch plate.
- Re-attach locking clip.
- Buckle vehicle seat belt.

HINT: Press car seat further down into vehicle seat cushion to help buckle vehicle seat belt.

Test installation to see if car seat is secure. If not secure, repeat above step until secure.

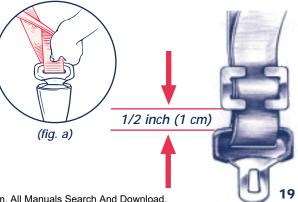

SHOPPING CART USE

Prevent injuries from falls:

- Make sure car seat locks onto cart.
- Avoid tip over of cart. Use caution on turns and irregular and ramped surface.
- Never leave child unattended.

Car seat may not fit all shopping carts. *DO NOT* use if it will not lock onto cart.

Deep Basket Shopping Cart:

Lower car seat into child seat area of shopping cart and position hook to lock over cart wire *(fig. a)*.


Press down firmly on car seat back to lock.

Shallow Basket Shopping Cart:

Lower car seat into large basket area of shopping cart and position hook to lock over front cross wire *(fig. b)*.

Press down firmly on car seat back to lock.

To remove car seat, press in hook on back of car seat and remove from shopping cart (*fig. c*).

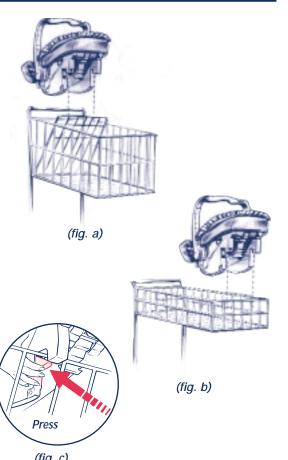

ADDITIONAL INFORMATION

Care & Cleaning

Seat Pad:

Machine-wash separately on gentle cycle and drip dry.

Harness Straps:

Surface wash only with mild soap and damp cloth.

If harness straps are frayed or heavily soiled, they *MUST* be replaced.

Shell:

Wipe with mild solution of soap and water. Avoid wetting labels.

Never use "household detergents": they can weaken plastic.

Prevent serious injury or death:

- Buckle must be properly latched.
- Periodically inspect and clean buckle to remove objects or debris that could prevent latching.

Se Aircraft Use

This car seat is certified for use on aircraft (see label on car seat). Contact airline about their policy.

Use this car seat only on forward-facing aircraft seats.

Install car seat on an aircraft the same way it is installed in a vehicle.



Century advises against loaning or passing along car seat.

Buckle:

Rinse buckle with warm water. *DO NOT* use household detergents. Never lubricate buckle.

Store instruction manual behind these tabs.



Century Products Graco Children's Products Inc. A Division of Newell Rubbermaid Download from Www.Sourceals.com: All Manuals Search And Download. Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com