
MODEL NUMBER: REV 300



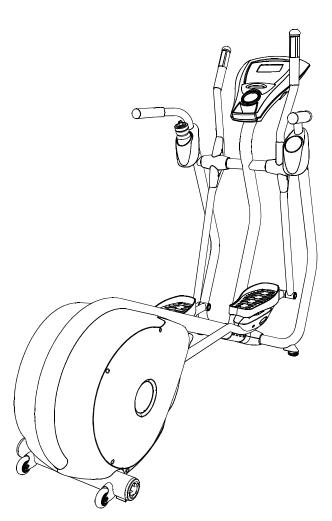

USER WEIGHT LIMITATION: 300 lbs.

TOLL FREE CUSTOMER SERVICE NUMBER: 1.888.800.1167

SERIAL NUMBER (found on frame):

V-02-20060119

<u>PREASSEMBLY</u>

For future service or related questi	ons:		
Please staple your receipt and/or write Fitness Elliptical Trainer.	e in the name and phone number of	the retail store where you purchased you	ur EVO
Name:	Phone Number:	Receipt:	
Open the boxes:			
boxes. Check the Parts List for a full	count of the number of parts include	e to inventory all of the parts that are included for this product to be assembled properly dealer or contact us directly at 888-800	erly. If you
Gather your tools:			
		red all the necessary tools you may requind will save time and make the assembly	
Clear your work area:			
	uring assembly. After the unit is full	assemble the unit. Make sure the space ly assembled, make sure there is a comfo	
Invite a friend:			
Some of the assembly steps may require when assembling this product.	uire heavy lifting. It is recommende	d that you obtain the assistance of anoth	er person
User Weight Limitation:			
	ry may occur if the user's weight	n more than 300lbs. it is not recommer exceeds the limit shown here. This pro	

Visit us at: www.evofitness.com

HARDWARE COMPARISON CHART

Hardware chart:

For your convenience, we have identified the hardware used in the assembly of this product. This chart is provided to help you identify those items that may be unfamiliar to you.

you i	dentify those items that may	be unfamilia	ar to you.										
NO.	DESCRIPTION	QTY.											
30	20 x 91 x M14mm Bolt	2		30	80	98	105						
77	M8 x 60mm Bolt	2	*************			\bigcap							
78	M10 x 90mm Bolt	2			***************************************		U						
79	M8 x 80mm Bolt	2											
80	M8 x 15mm Bolt	2		77	88)	100	(A)						
88	M14 Nut	2				∢!!!!!!!!!!!!!!!! ()							
91	ID 8mm Curve Washer	4											
97	M4 x 12mm Screw	8		78)	91)	101							
98	M10 Nut	2											
100	M4 x 50mm Screw	1	**************************************	-41/									
101	ID 10mm Curve Washer	2		(79)	97)	102							
102	M4 x 15mm Screw	8	400400000000000000000000000000000000000										
105	M6 x 20mm Bolt	4		U	∢### ()	4111111)							
Α	M14 Bushing Tool	1		(B)									
В	5mm Allen Key	1			=	<u>(c)</u>							
С	8mm Wrench	1											
D	Wrench for M10 Nut	1											
E	Wrench	1		D		(E)							
	0 10 20 30 40 50 60 70 80 90 100 MILLIMETERS												

Visit us at: www.evofitness.com

HARDWARE COMPARISON CHART

Hardware chart:

For your convenience, we have identified the hardware used in the assembly of this product. This chart is provided to help you identify those items that may be unfamiliar to you.

NO.	DESCRIPTION	QTY.	
1	Computer	1	
2	Front Upright Frame	1	<u>(1)</u> <u>(2)</u> <u>(5)</u> <u>(6)</u>
5	Left Upright	1	
6	Right Upright	1	
7	Hand Rail Frame – Left	1	
8	Hand Rail Frame – Right	1	
9	Water Bottle Holder	2	
13	Handlebar Cover	2	
14	Handlebar Inside Cover	4	
16	Handlebar – Left	1	(a) (b) (13)
17	Handlebar – Right	1	
59	Front Frame Cover – Upper	1	
60	Front Frame Cover – Lower	1	
99	Frame	1	
107	Water Bottle	1	
		,	
			(14) (16) (17) (59)
		_	
			// · \
			4 1
			60 99

PARTS LIST

No.	Description	Qty.	Order No.
1	Computer	1	REV300-01
2	Front Upright Frame	1	REV300-02
3	Console Small Cover - Left	1	REV300-03
4	Console Small Cover - Right	1	REV300-04
5	Left Upright	1	REV300-05
6	Right Upright	1	REV300-06
7	Hand Rail Frame - Left	1	REV300-07
8	Hand Rail Frame - Right	1	REV300-08
9	Water Bottle Holder	2	REV300-09
10	Hand Rail Cap	4	REV300-10
11	Handlebar Pivot Outside Bushing	2	REV300-11
12	Handlebar Pivot Inside Bushing	2	REV300-12
13	Handlebar Cover	2	REV300-13
14	Handlebar Inside Cover	4	REV300-14
15	Bearing 6004zz	4	REV300-15
16	Handlebar – Left	1	REV300-16
17	Handlebar – Right	1	REV300-17
18	Pedal Arm Front Pivot Cover – Left	4	REV300-18
19	Hand Rail Frame Foam Grips	2	REV300-19
20	Handlebar Foam Grips	2	REV300-20
21	Hand Pulse Sensor	2	REV300-21
22	Pedal Soft Cushion	2	REV300-22
23	Pedal	2	REV300-23
24	Pedal Support Base	2	REV300-24
25	Pedal Buffer Sets	2	REV300-25
26	Bearing 608zz	8	REV300-26
27	Bushing 8 x 12mm	4	REV300-27
28	Pedal Fixing Base	2	REV300-28
29	Pedal Cover	2	REV300-29

No.	Description	Qty.	Order No.
30	20 x 91 x M14mm Bolt	2	REV300-30
31	Bearing 6804zz	4	REV300-31
32	Level Adjusters	2	REV300-32
33	Pedal Arm - Left	1	REV300-33
34	Pedal Arm - Right	1	REV300-34
35	C Clips	2	REV300-35
36	Bearing 2202zz	2	REV300-36
37	Pedal Arm Adjusters Bushing	2	REV300-37
38	Bearing	2	REV300-38
39	Pedal Arm Rear Shaft	2	REV300-39
40	Pedal Arm Rear Shaft Bushing	2	REV300-40
41	Adjuster Motor	1	REV300-41
42	Spiral Shaft	1	REV300-42
43	Motor Bracket	1	REV300-43
44	Volute Shaft	1	REV300-44
45	Motor Control Board	1	REV300-45
46	Magnet Bracket Shaft	1	REV300-46
47	Spring	1	REV300-47
48	Magnet Bracket Shaft	1	REV300-48
49	Crank Disk Support Cover	2	REV300-49
50	Crank	2	REV300-50
51	Crank Disk	2	REV300-51
52	Belt	1	REV300-52
53	M8 x 20mm CAP Bolt	1	REV300-53
54	Flywheel Assembly	1	REV300-54
55	Bearing 6000zz	3	REV300-55
56	Flywheel Axle	1	REV300-56
57	Flywheel Shaft Fixing	1	REV300-57
58	Volute Bracket	1	REV300-58


PARTS LIST

No.	Description	Qty.	Order No.
59	Front Frame Cover - Upper	1	REV300-59
60	Front Frame Cover - Lower	1	REV300-60
61	Crank Disk Axle	1	REV300-61
62	Crank Disk Support Bushing	2	REV300-62
63	Bearing 6005zz	2	REV300-63
64	Bearing 6300zz	4	REV300-64
65	Strengthen Wheel Adjusters Set	1	REV300-65
66	Rear Stabilizer Cap	2	REV300-66
67	Rear Stabilizer Cushion	2	REV300-67
68	Caster	2	REV300-68
69	Front Cover	1	REV300-69
70	Frame Outside Cover - Left	1	REV300-70
71	Frame Inside Cover - Left	1	REV300-71
72	Frame Inside Cover - Right	1	REV300-72
73	Frame Outside Cover - Right	1	REV300-73
74	M8 x 15mm Allen Head Bolt	26	REV300-74
75	M8 x 20mm CAP Screws	2	REV300-75
76	M8 x 90mm Allen Head Bolt	4	REV300-76
77	M8 x 60mm Allen Head Bolt	2	REV300-77
78	M10 x 90mm Bolt	2	REV300-78
79	M8 x 80mm Allen Head Bolt	2	REV300-79
80	M8 x 15mm Bolt	6	REV300-80
81	M10 x 45mm Allen Head Bolt	2	REV300-81
82	M10 x 45mm Screw	2	REV300-82
83	M6 x 20mm Allen Head Bolt	8	REV300-83
84	M6 x 15mm Screw	4	REV300-84
85	Fixing Inserts	12	REV300-85
86	M6 Nylon Nut	8	REV300-86
87	M8 Nylon Nut	5	REV300-87
88	M14 Nut	2	REV300-88


No.	Description	Qty.	Order No.
89	M10 Nylon Nut	2	REV300-89
90	M12 Nut	1	REV300-90
91	ID 8mm Curve Washer	4	REV300-91
92	10 x 22 x 2mm Washer	2	REV300-92
93	10 x 15 x 1.5mm	2	REV300-93
94	M4 x 40mm CAP Screw	1	REV300-94
95	M4 x 19mm Hard Screw	32	REV300-95
96	M4 x 19mm Screw	5	REV300-96
97	M4 x 12mm Screw	8	REV300-97
98	M10 Head Nut	2	REV300-98
99	Frame	1	REV300-99
100	M4 x 50mm Bolt	1	REV300-100
101	ID 10mm Curve Washer	2	REV300-101
102	M4 x 15mm Hard Screw	8	REV300-102
103	Upper Computer Wire	1	REV300-103
104	Lower Computer Wire	1	REV300-104
105	M6 x 20mm Bolt	4	REV300-105
106	Lower Hand Pulse Wire	1	REV300-106
107	Water Bottle	1	REV300-107

7

PARTS DIAGRAM

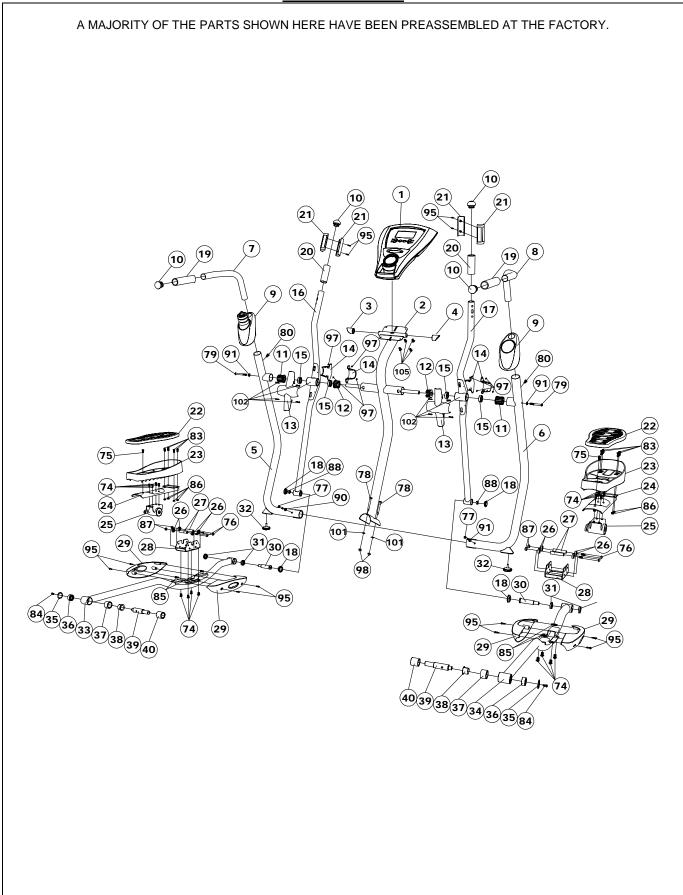


PARTS DIAGRAM

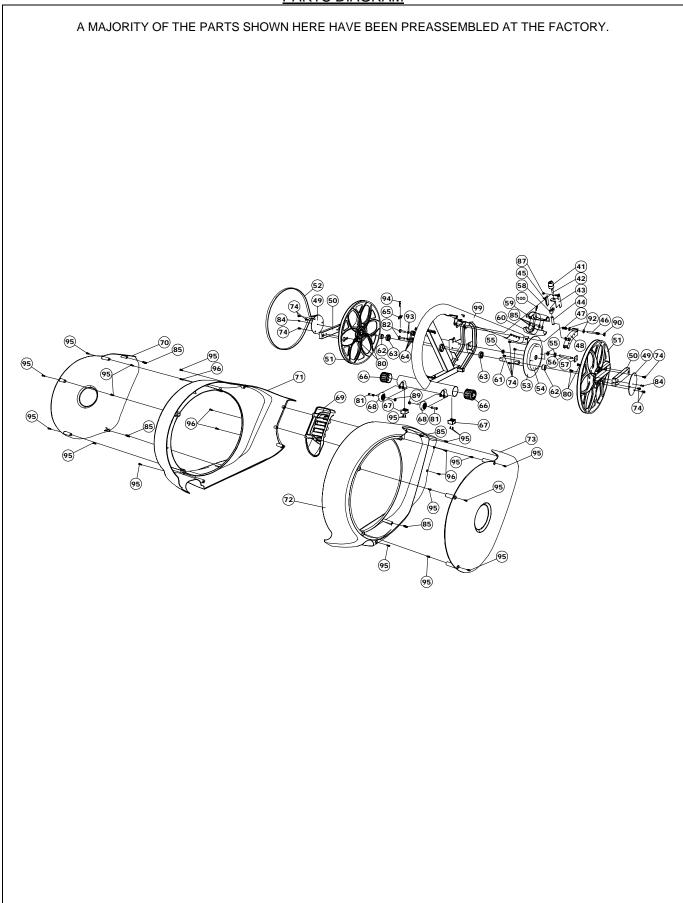

ASSEMBLY

STEP 1:


NOTE: First make sure to connect the Upper Computer Wire (103) and Lower Computer Wire (104) as shown below. Attach the Front Upright Frame (2) to the Frame (99) and secure using the M10 x 90mm Bolts (78), ID 10mm Curve Washers (101) and M10 Head Nuts (98).

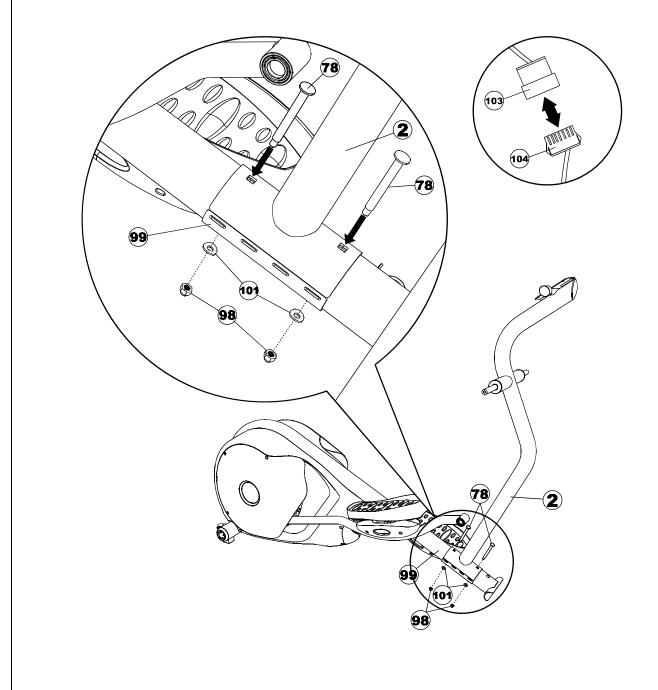

ASSEMBLY

STEP 2:


NOTE: First make sure to connect the Upper Computer Wires (103) and Lower Hand Pulse Wires (106). Attach the Computer (1) to the Front Upright Frame (2) using four M6 x 20mm Bolts (105).

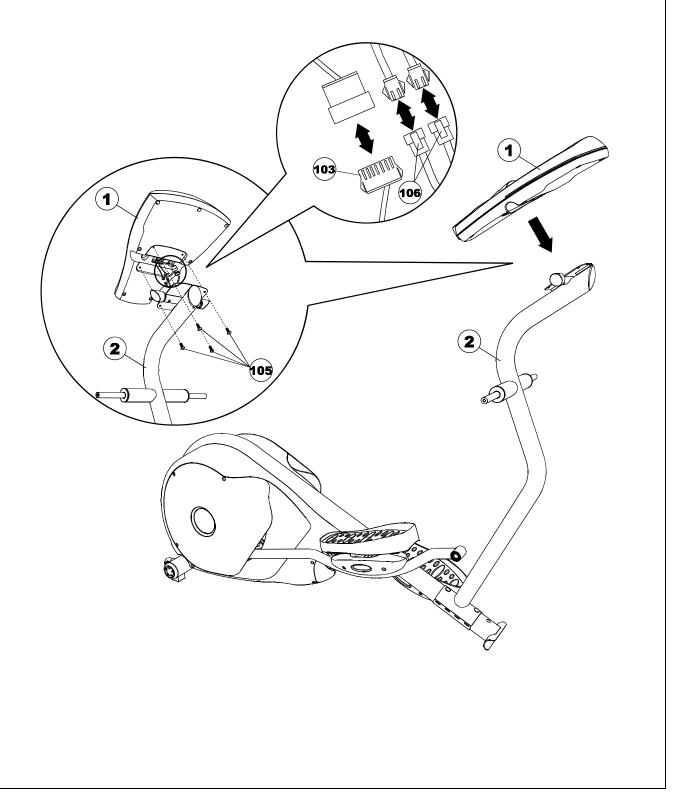

<u>ASSEMBLY</u>

STEP 3:


NOTE: First make sure to connect the Hand Pulse Sensor Wires (21). Slide the Handlebar – Left (16) and Handlebar – Right (17) onto the Front Upright Frame (2).

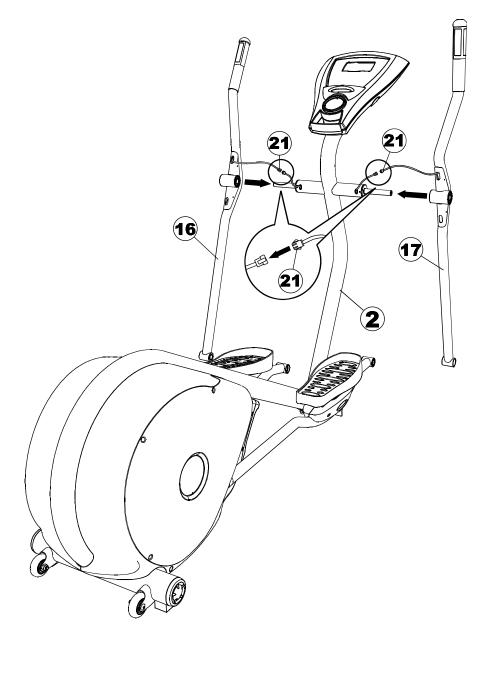

ASSEMBLY

STEP 4:


Slide the Left Upright (5) on the Front Upright Frame (2) and secure it with an ID 8mm Curved Washer (91) and M8 x 80mm Allen Head Bolt (79). Repeat the procedure on the Right Upright (6).

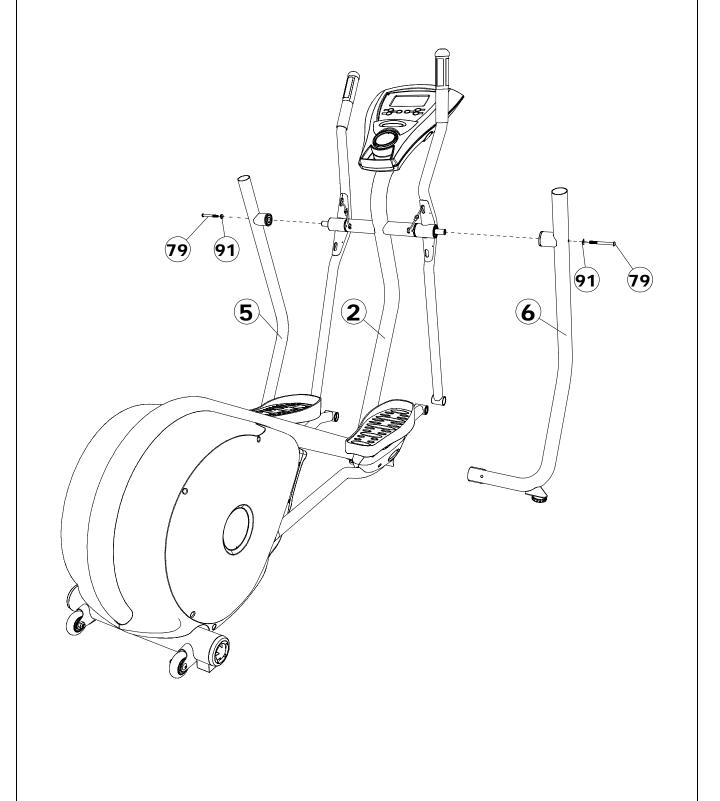

ASSEMBLY

STEP 5:


Attach the Left Upright (5) and Right Upright (6) to the Frame (99) and secure using M8 x 60mm Allen Head Bolts (77) and ID 8mm Curve Washers (91).

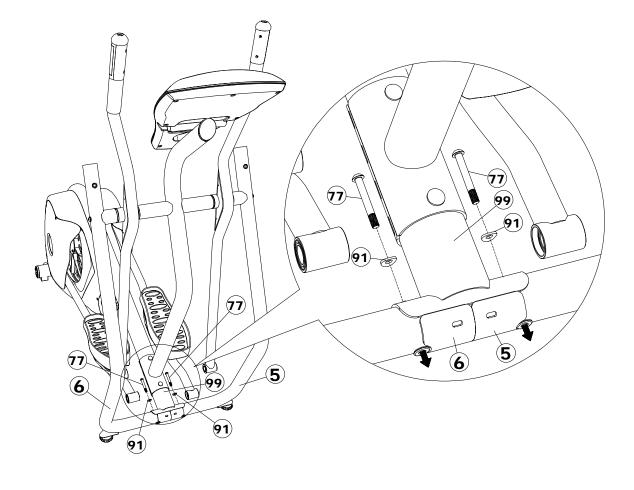

ASSEMBLY

STEP 6:


Slide the 20 x 91 x M14mm Bolt (30) through the Pedal Arm - Left (33) and Handlebar - Left (16) and secure with M14 Nut (88) using the 8mm Wrench (C), M14 Bushing Tool (A) and 5mm Allen Key (B) as shown.

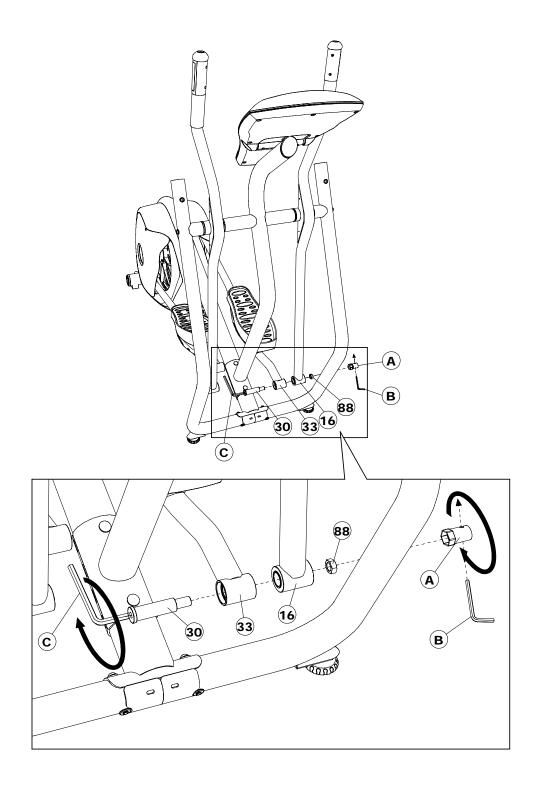

ASSEMBLY

STEP 7:

Slide the 20 x 91 x M14mm Bolt (30) through the Pedal Arm - Right (34) and Handlebar - Right (17) and secure with M14 Nut (88) using the 8mm Allen Key (C), M14 Nut Bushing Tool (A) and 5mm Allen Key (B) as shown.

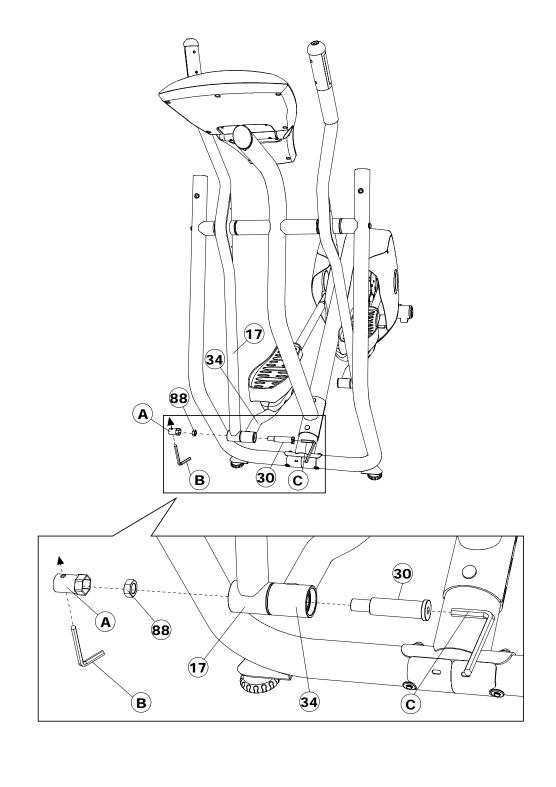


Visit us at: www.evofitness.com

ASSEMBLY

STEP 8:


Attach the Pedal Arm Front Pivot Cover (18) to the ends of the Handlebar – Right (17) and Pedal Arm – Right (34). Repeat the procedure on the Pedal Arm – Left (33) and Handlebar – Left (16).

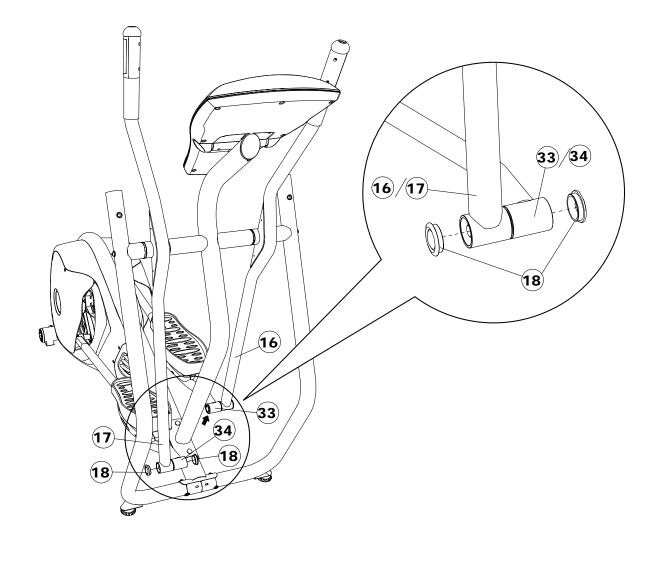

ASSEMBLY

STEP 9:


Attach the Front Frame Cover – Upper (59) and Front Frame Cover – Lower (60) to the Left Upright (5), Right Upright (6) and Frame (99). Secure with Fixing Inserts (85) and M4 x 50mm Screw (100).

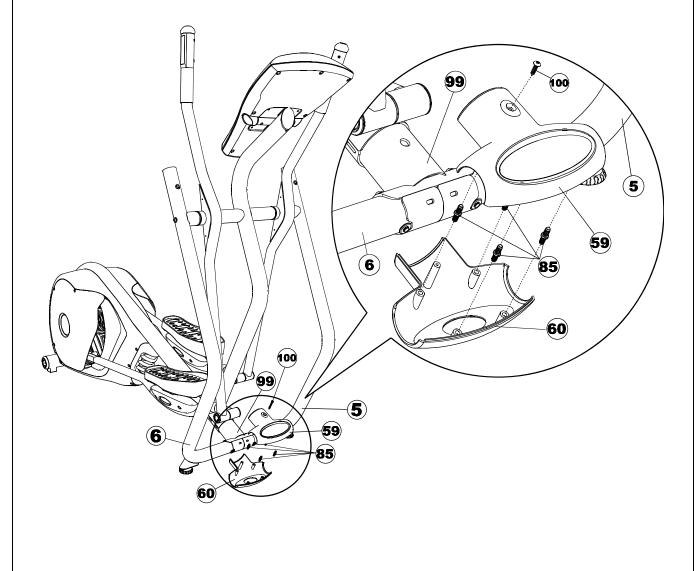


ASSEMBLY

STEP 10:

Attach the Handlebar Cover (13) to the front side of the front side of the Handlebar – Right (17) and secure with M4 x 15mm Hard Screws (102). Then attach the Handlebar Inside Cover (14) to the backside of the Handlebar – Right (17) and secure it to the Handlebar Cover (13) using M4 x 12mm Screws (97). Repeat the procedure on the Handlebar – Left (16).

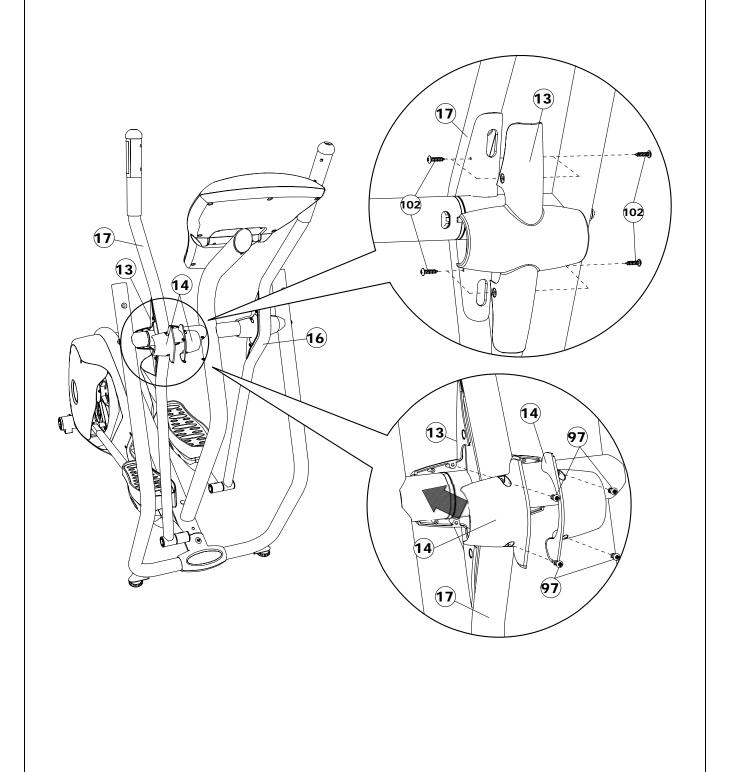

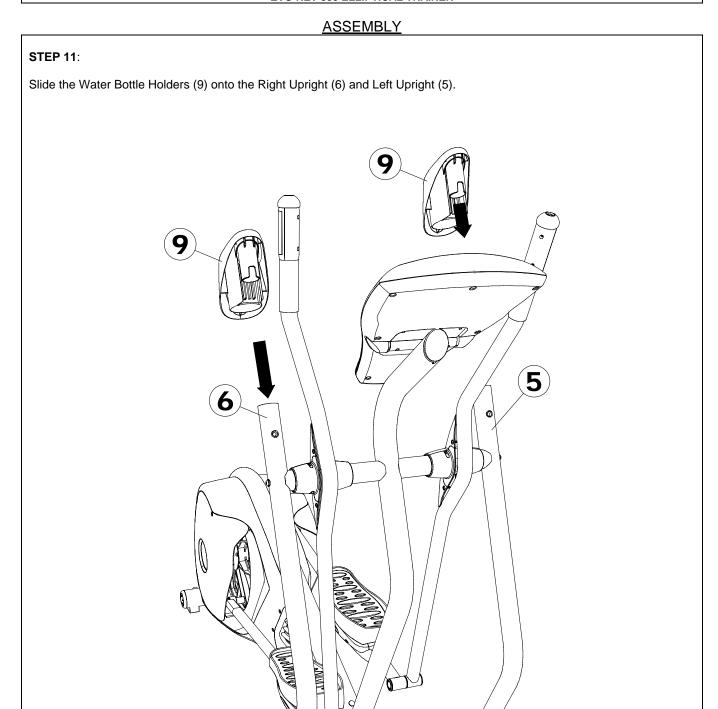


Visit us at: www.evofitness.com

ASSEMBLY

STEP 12:


Slide the Hand Rail Frame – Left (7) through the Water Bottle Holder (9) on the Left Upright (5) and secure with M8 x 15mm Bolt (80) as shown in FIG1. Repeat the procedure on the Right Upright (6).

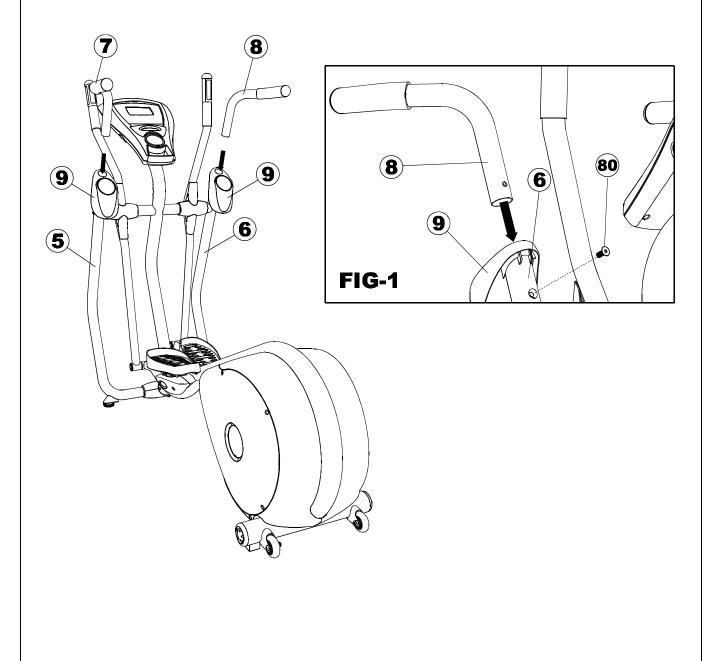

LEVEL AND PEDAL ADJUSTMENT

LEVEL ADJUSTMENT:


To adjust the level of the Elliptical Trainer simply rotate the Level Adjusters right or left to move them in or out of the Uprights.

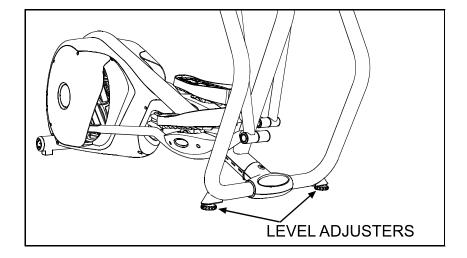


TRANSPORT INSTRUCTIONS


TRANSPORT INSTRUCTIONS:

The casters located on the rear of the unit allow for easy transport. Simply lift the front of the unit until the wheels touch the floor. Then roll the unit to a desired location.

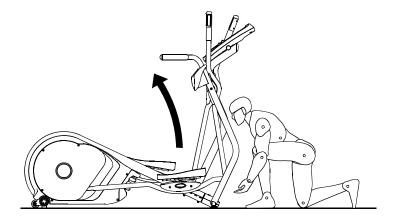

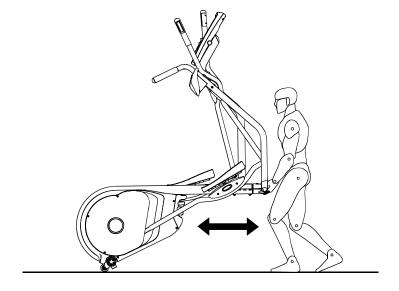

COMPUTER INSTRUCTIONS

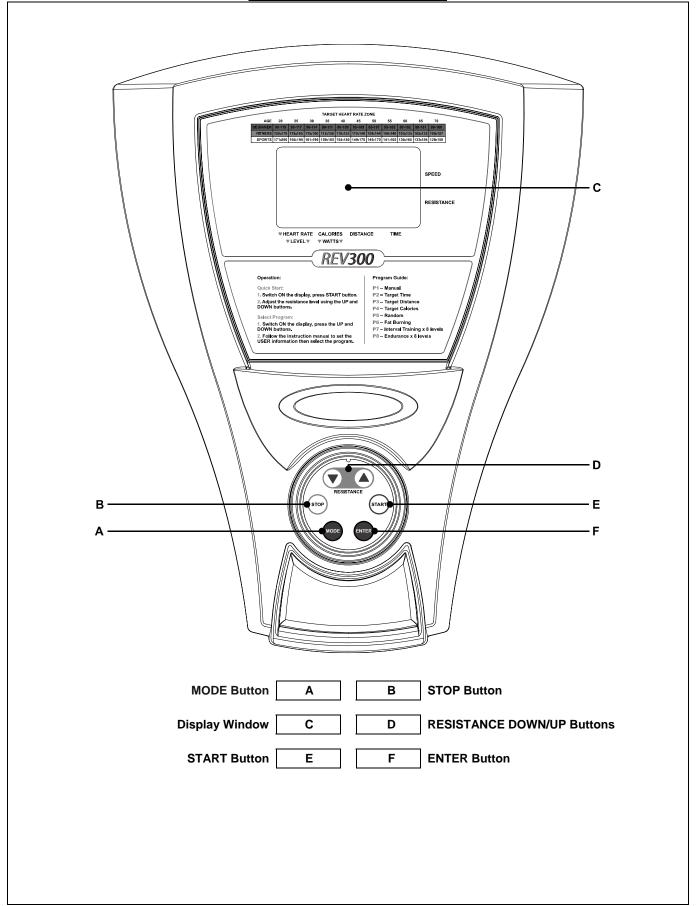

COMPUTER INSTRUCTIONS

FUNCTIONS AND BUTTONS

STOP:

Press STOP to pause the functions during your exercise program. All the data on the display will freeze. Press START to resume the program and all the data displayed will continue until the program has finished.

START:

Press START to begin your exercise.

ENTER:

Press ENTER to confirm the setting of program.

MODE:

Press MODE to switch the display to show the information as RPM/TIME/PULSE or SPEED/DISTANCE/CALORIES or WATTS/LEVEL/TENSION (RESISTANCE).

RESISTANCE UP/DOWN:

Press UP/DOWN buttons to adjust the resistance.

SPEED:

Displays current exercise speed by Km/h or MPH

I FVFI

Displays the current level of intensity of your exercise program.

CALORIES:

Count up: this measures total calories burned during exercise.

Count down: if you have set the number of calories, the computer will count down from that preset number down to zero. This data is a guide and should not be used for medical assessment. Please note when setting a target this is in blocks of 10 from 0 to 990.

RESISTANCE:

Displays the current resistance level from 1 to 16.

DISTANCE:

Count up: this measures the total distance from 0 to 99.9 Km / Mile.

Count down: if you have set the target distance, the computer will count down from that preset distance down to zero as soon as you start exercising.

WATT:

This displays your current wattage output. Watts are displayed from 110W to 350W Please note do not set below 110Watts.

TIME:

Count up: the computer measures total exercise time from 00:00 up to 99:00.

Count down: if you have set the target time, the computer will count down from that preset time down to 0:00.

HEART RATE:

This displays your current Heart Rate; you will need to be wearing the chest strap in order for this to be displayed.

QUICK START:

When the bike is in the POWER ON status, press the START button to activate the QUICK START program. The TIME, DISTANCE and CALORIES will count up when you start exercising.

PROGRAM:

To select one of the User programs, you will need to select the USER CODE first. Press the UP/DOWN button to select the USER CODE from U1 to U9. This is shown in the PROFILE display. Press the ENTER button to confirm the user code. If the user information has been previously input, press ENTER and hold for 3 seconds, the computer will then skip the user information set up procedure and enter the program select procedure. To input new information, please follow the procedure below:

Visit us at: www.evofitness.com

COMPUTER INSTRUCTIONS

HEIGHT set up – After the User Code has been confirmed the LCD display will show 170cm/67 inches or the previous setting and begin flashing. Press the UP/DOWN button to adjust the user height information, then press ENTER to confirm.

WEIGHT set up – After the HEIGHT has been confirmed the LCD display will show 68kg/150lbs or the previous setting and begin flashing. Press the UP/DOWN button to adjust the user weight information, then press ENTER to confirm.

AGE set up – After the WEIGHT has been confirmed the LCD display will show 35 or the previous setting and begin flashing. Press the UP/DOWN button to adjust the user age information then, press ENTER to confirm.

P1 TO P9 PROGRAMS SELECTING PROCEDURE

After setting the USER AGE press ENTER to confirm. Alternatively just press ENTER and hold for 3 seconds after power on. The LCD display will show P1 flashing. Press the UP/DOWN button, to scroll through P1 to P9, press ENTER to confirm the program.

P1: TARGET TIME

After you have selected P1 TARGET TIME, the TIME display will show the default time setting of 32:00 minutes. Press the UP/DOWN button to adjust target time then press ENTER to confirm. Press START to begin the exercise program.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

P2: TARGET DISTANCE

After you have selected P2 TARGET DISTANCE, the DISTANCE display will show the default distance setting of 0.0 km/miles. Press the UP/DOWN button to adjust target distance then press ENTER to confirm. Press START to begin the exercise program.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program while exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

P3: TARGET CALORIES

After you have selected P3 TARGET CALORIES, the CALORIES display will show the default calories setting 0. Press the UP/DOWN button to adjust target calories then press ENTER to confirm. Press START to begin the exercise program.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

P4: RANDOM

After you have selected P4 RANDOM, the TIME display will show the workout time setting of 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise program. The RANDOM program has 50 different RESISTANCE based programs. If whilst exercising, you find the level of RESISTANCE too intense you can press the UP/DOWN button to decrease the resistance.

COMPUTER INSTRUCTIONS

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

P5: FAT BURNING

After you have selected P5 FAT BURNING, the TIME display will show the default workout time setting of 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise program.

The aim of a FAT BURNING program is to exercise for a longer period of time at a reduced level of intensity. This will allow you to burn more calories than if you were using a program that has higher levels of resistance over a shorter period of time.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

Fat Burning Profile: (If user sets workout time above 16 minutes, the computer will average the workout time in 16 sections as following "Resistance Profile", i.e. input 32 minutes, the computer will do 2 minutes each section.

If user set the workout time less than 16 minutes, the computer will run one minute for one section till time out, i.e. input 12 minutes, the computer will just do 12 sections.).

							Resis	tance)						
1	3	7	9	9	9	9	9	9	9	9	9	9	7	3	1

P6: INTERVAL

After you have selected P6 INTERVAL, the TIME display will show the default workout time setting of 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise program. The aim of an INTERVAL program is to exercise at levels of LOW and HIGH intensity for short periods of time. There is one profile with 8 different levels of Intensity. The resistance will be changed automatically whilst exercising, according to the following profile.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

COMPUTER INSTRUCTIONS

Interval Profile: (If user sets workout time above 16 minutes, the computer will average the workout time in 16 sections as following "Resistance Profile", i.e. input 32 minutes, the computer will do 2 minutes each section.

If user set the workout time less than 16 minutes, the computer will run one minute for one section till time out, i.e. input 12 minutes, the computer will just do 12 sections.).

Levels		Resistance														
1	1	9	9	1	1	9	9	1	1	9	9	1	1	9	9	1
2	2	10	10	2	2	10	10	2	2	10	10	2	2	10	10	2
3	3	11	11	3	3	11	11	3	3	11	11	3	3	11	11	3
4	4	12	12	4	4	12	12	4	4	12	12	4	4	12	12	4
5	5	13	13	5	5	13	13	5	5	13	13	5	5	13	13	5
6	6	14	14	6	6	14	14	6	6	14	14	6	6	14	14	6
7	7	15	15	7	7	15	15	7	7	15	15	7	7	15	15	7
8	8	16	16	8	8	16	16	8	8	16	16	8	8	16	16	8

COMPUTER INSTRUCTIONS

P7: ENDURANCE

After you have selected P7 ENDURANCE, the TIME display will show the default workout time of setting 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise.

The aim of an ENDURANCE program is to start at a low level of resistance and then at ever increasing higher levels of resistance in order that the body exercises at higher levels of intensity. The profile ends with a lower level of intensity to reduce the Heart rate. There is one profile with 8 levels of Intensity. The resistance will be changed automatically whilst exercising, according to the following profile.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

Endurance Profile: (If user sets workout time above 16 minutes, the computer will average the workout time in 16 sections as following "Resistance Profile", i.e. input 32 minutes, the computer will do 2 minutes each section.

If user set the workout time less than 16 minutes, the computer will run one minute for one section till time out, i.e. input 12 minutes, the computer will just do 12 sections.).

Levels	Resistance															
1	1	1	3	3	4	4	5	5	6	6	7	7	9	9	1	1
2	2	2	4	4	5	5	6	6	7	7	8	8	10	10	2	2
3	3	3	5	5	6	6	7	7	8	8	9	9	11	11	3	3
4	4	4	6	6	7	7	8	8	9	9	10	10	12	12	4	4
5	5	5	7	7	8	8	9	9	10	10	11	11	13	13	5	5
6	6	6	8	8	9	9	10	10	11	11	12	12	14	14	6	6
7	7	7	9	9	10	10	11	11	12	12	13	13	15	15	7	7
8	8	8	10	10	11	11	12	12	13	13	14	14	16	16	8	8

P8: WATT CONTROL

After you have selected the P8 WATT CONTROL program, the WATT display will show the default workout watt setting 110W. Press the UP/DOWN button to adjust workout watts then press ENTER to confirm. Then the TIME display will show the default workout time setting 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise program.

The resistance will be changed automatically whilst exercising. The program will change the resistance automatically to match the user watts setting.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

COMPUTER INSTRUCTIONS

P9: TARGET HEART RATE

After you have selected P9 TARGET HEARTRATE, The HEART RATE display will show the Target Heart Rate base on your age. Your Target Heart Rate has been set whilst you were setting USER AGE up with a user number e.g. U1 to U9. Please note the user TARGET HEART RATE will be adjusted with the user AGE according to the factory setting. The factory TARGET HEART RATE setting is based on 85% of the maximum heart rate. The maximum heart rate is calculated as 220 minus the user age. For a 35-year old, the maximum user heart rate should be 185 and 85% of user heart rate. If you wish to alter your Target Heart Rate, press the UP/DOWN button to adjust the TARGET HEART RATE. Then the TIME display will show the default workout time of setting 32:00 minutes. Press the UP/DOWN button to adjust workout time then press ENTER to confirm. Press START to begin the exercise program.

NOTE: Please always consult your doctor to your proper workout target heart rate.

To increase or decrease the resistance whilst exercising, press the UP/DOWN button.

To pause the program whilst exercising, press the STOP button. To resume exercising, press the START button.

If the STOP button is pressed after pausing the program, the computer returns to Power on Status.

WARM UP - TARGET HEART RATE

After completing the TIME set up and starting the program, there is a 3 minute WARM UP program to help you reach the minimum target workout heart rate. The resistance will start from 2. If the actual user's pulse does not reach 65% of the maximum heart rate ((220-age) x 65%), the resistance will increase one level every 15 seconds. The computer will detect user heart rate per 15 seconds. When the computer detects 2 times that actual pulse rate reaches the minimum target workout heart rate, the resistance will stop increasing and continue at the same resistance until the 3 minute warm up is complete and then go into the HEART RATE CONTROL main program.

If you cannot reach the minimum target workout heart rate in 3 minutes, the program will continue the second 3 minute WARM UP program. If during the second WARM UP the user still cannot reach the minimum target workout heart rate, the computer will continue on to the third WARM UP procedure for 3 minutes. If the third WARM UP program still cannot bring up the actual pulse rate to the minimum target workout heart rate, the program will stop and TIME display will show FAIL.

HEART RATE CONTROL MAIN PROGRAM

After the actual pulse rate reaches the minimum target workout heart rate and completes the warm up program, the computer will go into the main program and the time will count down from the pre-set time. During the main program, the computer will detect the user heart rate per 15 seconds. If the actual pulse rate cannot reach the Target Heart Rate, the resistance level will be increased by 1 level every 15 seconds until the pulse rate reaches the Target Heart Rate or the resistance level will increase by 16 levels. If the actual pulse is higher than the Target Heart Rate, then the resistance will be reduced 1 level every 15 seconds until the actual heart rate meets the Target Heart Rate. If the actual pulse is higher than the Target Heart Rate over 3 minutes, the computer would stop HEART RATE CONTROL program then begin the COOL DOWN function.

COOL DOWN - TARGET HEART RATE

After completing the HEART RATE CONTROL program and the time counts down to zero start the one-minute Cool Down program. The TIME display will show 'COOL' and start blinking. The resistance will return to level 1 as the time counts down from 1:00.

ENGLISH to METRIC conversion:

The computer display can show both ENGLISH and METRIC information. If you want to change from ENGLISH to METRIC or METRIC to ENGLISH, please follow the procedure below:

- 1. When the computer is in the power on status, press and holds the STOP button as 5 seconds. The LCD display will shows KM/H or ML/H.
- Press the UP or DOWN buttons to switch between METRIC (KM/H) or ENGLISH (ML/H) then press the STOP button
 - to confirm the selection and return to POWER ON status.

WARRANTY

Warranty Coverage: Smooth Fitness, Inc. ("Smooth Fitness") warrants to the original purchaser that each new product to be free from defects in workmanship and material, under normal use and conditions.

Period of Coverage: The Warranty on this product runs from the date of your purchase for a period of LIFETIME on the frame and magnetic brake, THREE (3) years on all parts and electronics and ONE (1) year on labor. Smooth Fitness reserves the right to inspect damaged parts for misuse.

It is recommended that the Original Receipt be kept with the product manual.

Remedy Provided by Smooth Fitness: Smooth Fitness will provide a replacement part free of charge if a defect is found during the Warranty period. You must pay any charges for shipping and handling outside of the Continental United States and for labor. To obtain service call your local Smooth Retailer.

Any redemption may be by repair or replacement of the affected parts and/or product at the sole discretion of Smooth Fitness, by personnel approved by Smooth Fitness. If repairs are required, the unit will be repaired at the location of use or by return to the factory as deemed appropriate by Smooth Fitness.

Parts repaired or replaced pursuant to this Warranty shall be warranted for the unexpired portion of the Warranty applying to the original product. Any technical advice furnished before or after delivery in regard to the use or application of Smooth Fitness products is furnished without charge and on the basis that it represents Smooth Fitness' best judgment under the circumstances but that the advice is used at your sole risk.

Procedure for Obtaining Your Remedy Under This Warranty: To obtain service call your local Smooth Retailer. To help them assist you, please have the following information ready:

- Model name or number from the cover of the manual;
- Serial number located on the frame of the unit; and
- The part description and the order number.

Limitations on Warranty: This Warranty will only apply to the original end user. This Warranty does not cover any problems, damages or failures that are caused by accident, improper assembly, failure to observe cautionary labels on the product, failure to operate the product correctly, abuse or freight damage. Smooth Fitness does not warrant against any damage or defects that may result from repair or alterations made to the product by an unauthorized repair facility.

This Warranty shall terminate if you sell or otherwise transfer this product. This Warranty does not apply to any product shipped or handled outside of the United States or Canada. This Warranty does not apply if the product is used for rental or commercial use. Consequential and incidental damages are not recoverable under this Warranty. (Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.)

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER EXPRESS WARRANTIES. ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE (1) YEAR FROM THE EFFECTIVE DATE OF THIS WARRANTY. SMOOTH FITNESS IS NOT LIABLE FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES RESULTING FROM ANY DEFECT IN PARTS NOR FOR ANY BREACH OF EXPRESS OR IMPLIED WARRANTIES. SMOOTH FITNESS' SOLE LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE TERMS DESCRIBED IN THIS FORM. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

For assistance with assembly or to order replacement parts, simply call your local Smooth Retailer. To help them assist you, please have the following information ready:

- Model name or number from the cover of the manual;
- Serial number located on the frame of the unit; and
- The part description and order number.

IMPORTANT STEPS

Warning:

Before using this product, please consult your personal physician for a complete physical examination. Frequent and strenuous exercise should be approved by your doctor first. If any discomfort should result from your use of this product, stop exercising and consult your doctor. Proper usage of this product is essential. Please read your manual carefully before exercising.

Please keep all children away from the equipment during use and when equipment is unattended.

Always wear appropriate clothing, including athletic shoes, when exercising. Do not wear loose clothing that could become caught during exercising.


Make sure that all bolts and nuts are tightened when equipment is in use. Periodic maintenance is required on all exercise equipment to keep it in good condition.

Before beginning:

How you begin your exercise program depends on your physical condition. If you have been inactive for several years, or are severely overweight, you must start slowly and increase your time gradually, a few minutes per week.

Initially you may be able to exercise only for a few minutes in your target zone. However, your aerobic fitness will improve over the next six to eight weeks. Don't be discouraged if it takes longer. It's important to work at your own pace. Ultimately, you'll be able to exercise continuously for 30 minutes. And the better your aerobic fitness, the harder you will have to work to stay in your target zone. But remember these essentials:

- Contact your physician before starting a workout or training program. Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- Begin your training program slowly with realistic goals that have been set by you and your doctor.
- Supplement your program with some type of aerobic exercise such as walking, jogging, swimming, dancing and/or
 bicycling. Monitor your pulse frequently. If you do not have an electronic heart rate monitor, have your physician
 show you the proper way to manually check your pulse by using your wrist or neck. Establish your target heart rate
 based on your age and condition.
- Drink plenty of fluids during the course of your routine. You must replace the water content lost from excessive exercising to avoid dehydration. Avoid drinking large amounts of cold liquids. Fluids should be at room temperature when consumed.




TARGET HEART RATE

Finding your pulse:

To make sure your heart is beating in its target zone, you'll need to know how to monitor your heart rate. The easiest way is to feel the pulse in the carotid artery on either side of your neck, between the windpipe and the large neck muscles. Count the number of beats in ten seconds, and then multiply that number by six. This gives you the number of beats per minute.

How fast should your heart beat during aerobic exercise? Fast enough to reach and stay in its "target zone," a range of beats per minute that is largely determined by your age and physical condition. To determine your target zone, consult the chart we have provided.

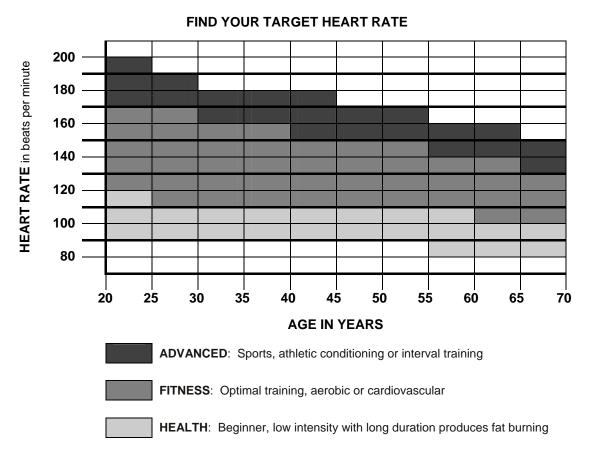


Aerobic exercise:

Is any sustained activity that sends oxygen to your muscles via your heart and lungs. It will improve the fitness of your lungs and heart: your body's most important muscle. Aerobic fitness is promoted by any activity that uses your large muscle groups - arms, legs or buttocks, for example. Your heart beats quickly and you breathe deeply. An aerobic exercise should be part of your entire exercise routine.

MUSCLE CHART

Targeted muscle groups:

The exercise routine that is performed on this product will develop the upper and lower body muscle groups. These muscle groups are shown in gray color on the chart below.

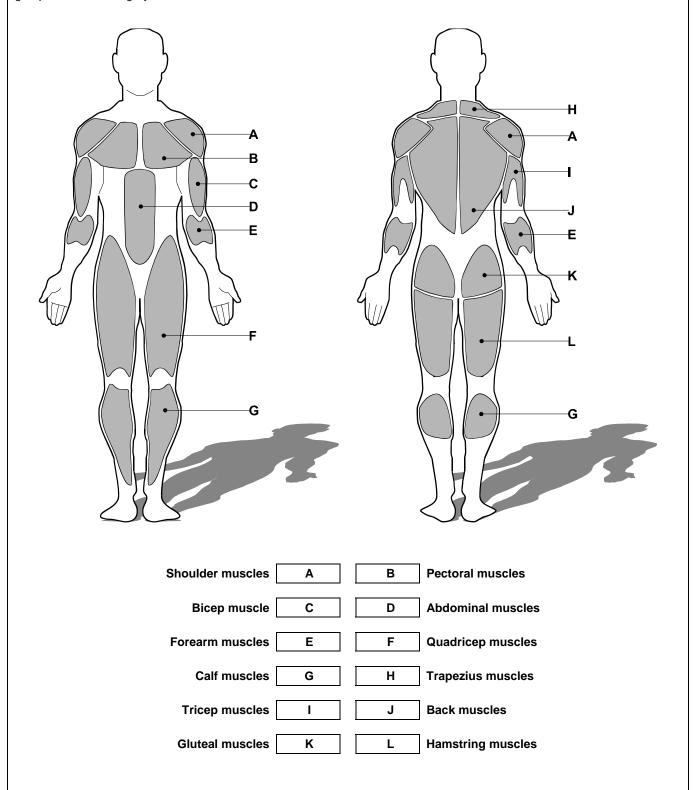

STRETCHING ROUTINE


Warm up and cool down:

A successful exercise program consists of a warm-up, aerobic exercise, and a cool-down. Do the entire program at least two and preferably three times a week, resting for a day between workouts. After several months, you can increase your workouts to four or five times per week.

Warming up is an important part of your workout, and should begin every session. It prepares your body for more strenuous exercise by heating up and stretching out your muscles, increasing your circulation and pulse rate, and delivering more oxygen to your muscles. At the end of your workout, repeat these exercises to reduce sore muscle problems. We suggest the warm-up and cool-down exercises on the following pages:

Toe Touch:

Slowly bend forward from your waist, letting your back and shoulders relax as you stretch toward your toes. Reach down as far as you can and hold for 15 counts.

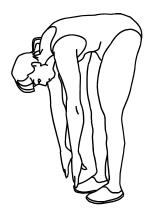

Shoulder Lift:

Lift your right shoulder up toward your ear for one count. Then lift your left shoulder up for one count as you lower your right shoulder.



Head Roll:


Rotate your head to the right for one count, feeling the stretch up the left side of your neck. Next, rotate your head back for one count, stretching your chin to the ceiling and letting your mouth open. Rotate your head to the left for one count, and finally, drop your head to your chest for one count.



STRETCHING ROUTINE

Hamstring Stretch:

Sit with your right leg extended. Rest the sole of your left foot against your right inner thigh. Stretch toward your toe as far as possible. Hold for 15 counts. Relax and then repeat with left leg extended.

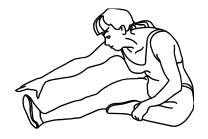

Inner Thigh Stretch:

Sit with the soles of your feet together with your knees pointing outward. Pull your feet as close into your groin as possible. Gently push your knees towards the floor. Hold for 15 counts.



Side Stretch:

Open your arms to the side and continue lifting them until they are over your head. Reach your right arm as far upward toward the ceiling as you can for one count. Feel the stretch up your right side. Repeat this action with your left arm.



Calf-Achilles Stretch:

Lean against a wall with your left leg in front of the right and your arms forward. Keep your right leg straight and the left foot on the floor; then bend the left leg and lean forward by moving your hips toward the wall. Hold, and then repeat on the other side for 15 counts.





Smooth Fitness 112 Gaither Drive Mt. Laurel, NJ 08054

Toll Free Customer Service: 1.888.800.1167

Website:

www.evofitness.com

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com