

Halogen Bulb replacement instructions:

If your halogen bulbs need replacement, please follow these instructions below. You will need a 1" wide suction cup, available thru Faber or local hardware store.

Step 1: Purchase a new MR-11 or MR-16 (Pellicano), 12 volt, 20 watt halogen bulb with a glass lens cover.

Step 2: Using the suction cup gently push against the bulb in the hood making a seal around the bulb.

Step 3: Pull down on the bulb with the suction cup, to remove the bulb from the hood

Step 4: Place the new bulb into the hood, lining up the bulb prongs with the holes inside the hood.

For more information please call Faber at 508-358-5353 or email info@faberonline.com




Step 1



Step 2



Step 3

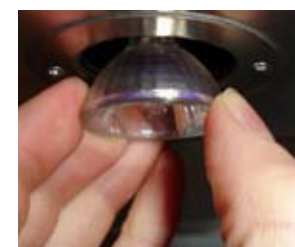

Step 4

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>