

OWNER'S MANUAL

MINI
MINI CONVERTIBLE





CONGRATULATIONS ON YOUR NEW MINI

This Owner's Manual should be considered a permanent part of this vehicle. It should stay with the vehicle when sold to provide the next owner with important operating, safety and maintenance information.

We wish you an enjoyable driving experience.

CONTENTS

NOTES

- About this Owner's Manual [6](#)
- Additional sources of information [6](#)
- Symbols used [6](#)
- Your individual vehicle [6](#)
- Editorial notice [7](#)
- For your own safety [7](#)
- Symbol on vehicle parts [8](#)
- Service and warranty [8](#)
- Reporting safety defects [9](#)

OVERVIEW

- Cockpit [12](#)
- Display elements [13](#)
- Display elements with navigation system
or Cockpit Chrono Pack [14](#)
- Indicator and warning lamps [16](#)
- Multifunction steering wheels [20](#)

CONTROLS

Opening and closing:

- Keys [24](#)
- Central locking system [24](#)
- Opening and closing: from outside [25](#)
- Opening and closing: from inside [28](#)
- Tailgate [29](#)
- Electric power windows [31](#)
- Glass sunroof, electric [33](#)
- Roller sun blind [34](#)
- Folding roof [35](#)
- Convertible top [35](#)
- Wind deflector [39](#)

Adjustments:

- Safe seating position [41](#)
- Seat adjustment [42](#)
- Head restraints [43](#)
- Entry to the rear [44](#)
- Safety belts [45](#)
- Seat heating [46](#)
- Steering wheel [46](#)
- Mirrors [46](#)
- Vehicle Memory [47](#)
- Transporting children safely [48](#)

© 2004 Bayerische Motoren Werke
Aktiengesellschaft
Munich, Germany
Reprinting, including excerpts, only with the
written consent of BMW AG, Munich.
Order No. 01 41 0 158 427
US English VI/04
Printed in Germany
Printed on environmentally friendly paper,
bleached without chlorine, suitable for recycling.

Driving:

- Ignition lock [51](#)
- Starting the engine [51](#)
- Switching off the engine [52](#)
- Parking brake [53](#)
- Manual transmission [53](#)
- Continuously Variable automatic Transmission (CVT) [54](#)
- Parking lamps/Low beams [57](#)
- signal/Headlamp flasher [58](#)
- Instrument lighting [58](#)
- Fog lamps [58](#)
- Interior lamps [59](#)
- Washer/wiper system [59](#)
- Cruise control [61](#)

Everything under control:

- Odometer [63](#)
- Clock [63](#)
- Fuel gauge [63](#)
- Coolant temperature gauge [64](#)
- Tachometer [65](#)
- Service interval display [65](#)
- Onboard computer [66](#)

Technology for safety and driving convenience:

- All Season traction Control (ASC) [68](#)
- Dynamic Stability Control (DSC) [69](#)
- Antilock Brake System (ABS) [70](#)
- Flat Tire Monitor [71](#)
- Airbags [72](#)
- Park Distance Control (PDC) [74](#)

Controlling the climate for pleasant driving:

- Air conditioning system [75](#)
- Automatic climate control [78](#)

Interior conveniences:

- Glove compartment [81](#)
- Ashtray, drinks holders [81](#)
- Cigarette lighter, 12 V power supply [82](#)
- Integrated universal remote control [83](#)

Loading and transporting cargo:

- Luggage compartment in the MINI [85](#)
- Luggage compartment in the MINI Convertible [86](#)
- Loading cargo [86](#)
- Roof-mounted luggage rack [89](#)

OPERATION, CARE, MAINTENANCE

Special operating instructions:

- Break-in procedures [92](#)
- General driving notes [93](#)
- Refueling [94](#)
- Brake system [96](#)

Wheels and tires:

- Tire inflation pressure [97](#)
- Tire coding [99](#)
- Tire condition [100](#)
- Run Flat tires [101](#)
- New wheels and tires [102](#)
- Snow chains [104](#)

CONTENTS

In the engine compartment:

Bonnet [105](#)

Engine compartment:

MINI COOPER and
MINI COOPER CONVERTIBLE [106](#)

MINI COOPER S and
MINI COOPER S CONVERTIBLE [107](#)

Washer fluid [108](#)

Engine oil [108](#)

Coolant [110](#)

Brake fluid [111](#)

Maintenance and care:

MINI Maintenance System [112](#)

OBD socket [113](#)

Caring for your vehicle [113](#)

Vehicle storage [116](#)

OWNER SERVICE PROCEDURES

Replacement procedures:

Onboard tool kit [120](#)

Wiper blades [120](#)

Lamps and bulbs [121](#)

Repairing a flat tire [125](#)

Space-saver spare tire [125](#)

Changing tires [127](#)

MINI Mobility System [129](#)

Battery [132](#)

Fuses [133](#)

Giving and receiving assistance:

Jump-starting [134](#)

Towing and tow-starting [136](#)

TECHNICAL DATA

Engine data [140](#)

Dimensions:

MINI [141](#)

MINI Convertible [142](#)

Weights:

MINI [143](#)

MINI Convertible [144](#)

Capacities [145](#)

INDEX

Everything from A to Z [148](#)

NOTES

About this Owner's Manual

In compiling this Owner's Manual we have made every effort to furnish you with a convenient reference source affording quick access to all the essentials. The fastest way to find detailed information on any specific subject is to turn to the comprehensive index at the back of the manual. If you wish to gain an initial overview of your vehicle, you will find this in the first chapter.

Should you wish to sell your MINI at some time in the future, please remember to hand over this Owner's Manual to the new owner; it is an important part of the vehicle.

Additional sources of information

You can find more information about the MINI, for example on its technology, on the Internet at www.MINI.com

If you have any additional questions, your MINI Dealer will be glad to advise you.

Symbols used



Indicates precautions that must be followed precisely in order to avoid the possibility of personal injury and serious damage to the vehicle.



Indicates information that will assist you in gaining the optimum benefit from your vehicle and enable you to care more effectively for your vehicle.



Refers to measures that can be taken to help protect the environment.

◀ Marks the end of a specific item of information.

* Indicates special equipment, country-specific equipment and optional extras, as well as equipment and functions not yet available at the time of printing.



Vehicle Memory, refer to page 47. Identifies functions that can be specifically adapted for a particular vehicle. These adjustments can be performed by your MINI Dealer.

Your individual vehicle

The manufacturer of your MINI is the Bayerische Motoren Werke Aktiengesellschaft, BMW AG.

On purchasing your MINI, you have decided in favor of a model with individualized equipment and features. This Owner's Manual describes the entire array of options and equipment that the manufacturer of your MINI makes available with a specific model range.

We hope you will understand that equipment and features are included that you might not have chosen for your vehicle. To assist you in identifying possible variations between your own vehicle and the manual's contents, the passages describing optional accessories and special equipment are marked with an asterisk *.

If your MINI features equipment that is not described in this Owner's Manual – a car radio, for instance – we have enclosed additional operating instructions. We ask you to read these manuals as well.

NOTES

Editorial notice

The manufacturer pursues a policy of continuous, ongoing development that is conceived to ensure that MINI vehicles continue to embody the highest quality and safety standards combined with advanced, state-of-the-art technology. For this reason, the features described in this Owner's Manual could, in rare cases, differ from those in your vehicle.

For your own safety

Fuels:



Use unleaded gasoline only. Fuels containing up to and including 10% ethanol or other oxygenates with up to 2.8% oxygen by weight, i.e. 15% MTBE or 3% methanol plus an equivalent amount of co-solvent, will not void the applicable warranties with respect to defects in materials or workmanship. Field experience has indicated significant differences in fuel quality, i.e. volatility, composition, additives, etc., among gasolines offered for sale in the United States and Canada. The use of poor-quality fuels may result in driveability, starting and stalling problems especially under certain environmental conditions, such as high ambient temperature and high altitude.

Should you encounter driveability problems which you suspect could be related to the fuel you are using, we recommend that you respond by switching to a recognized high-quality brand.

Failure to comply with these recommendations may result in unscheduled maintenance.

Obey pertinent safety rules when you are handling gasoline. ◀

Maintenance and repair:



Advanced technology, e.g. the use of modern materials and high-performance electronics, requires specially adapted maintenance and repair methods. Therefore, only have corresponding work on your MINI carried out by a MINI Dealer or a workshop that works according to MINI repair procedures with correspondingly trained personnel. If work is carried out improperly there is a danger of consequential damage and the related safety risks. ◀

California Proposition 65 warning:

California laws require us to state the following warning.




Engine exhaust and a wide variety of automobile components and parts, including components found in the interior furnishings in a vehicle, contain or emit chemicals known to the State of California to cause cancer and birth defects and reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Battery posts, terminals and related accessories contain lead and lead compounds. Batteries also contain other chemicals known to the State of California to cause cancer. Wash your hands after handling. Used engine oil contains chemicals that have caused cancer in laboratory animals. Always protect your skin by washing thoroughly with soap and water. ◀

NOTES

Parts and accessories:

 For your own safety, use genuine parts and accessories approved by the manufacturer of the MINI.

When you purchase accessories tested and approved by the manufacturer of the MINI and Original MINI Parts, you simultaneously acquire the assurance that they have been thoroughly tested by the manufacturer of the MINI to ensure optimum performance when installed on your vehicle.

The manufacturer of the MINI warrants these parts to be free from defects in material and workmanship.


The manufacturer of the MINI will not accept any liability for damages resulting from installation of parts and accessories not approved by the manufacturer of the MINI.

The manufacturer of the MINI cannot test every product from other manufacturers to verify if it can be used on a MINI safely and without risk to either the vehicle, its operation, or its occupants.


Original MINI Parts, MINI Accessories and other products approved by the manufacturer of the MINI, together with professional advice on using these items, are available from all MINI Dealers.

Installation and operation of non-MINI

approved accessories such as alarms, radios, amplifiers, radar detectors, wheels, suspension components, brake dust shields, telephones, including operation of any portable cellular phone from within the vehicle without using an externally mounted antenna, or transceiver equipment, e.g. CB, walkie-talkie, ham radio or similar, may cause extensive damage to the vehicle, compromise its safety, interfere with the vehicle's electrical system or affect the validity of the MINI Limited Warranty. See your MINI Dealer for additional information. ◀

 Maintenance, replacement, or repair of the emission control devices and systems must be performed by an authorized MINI Dealership or individual using certified MINI parts. ◀

Symbol on vehicle parts

 Indicates that you should consult the relevant section of this Owner's Manual for information on a particular part or assembly.

Service and warranty

This manual is supplemented by a Service and Warranty Information Booklet for US models or a Warranty and Service Guide Booklet for Canadian models.

We recommend that you read this publication thoroughly.

Your MINI is covered by the following warranties:

- ▷ New Vehicle Limited Warranty
- ▷ Rust Perforation Limited Warranty
- ▷ Federal Emissions System Defect Warranty
- ▷ Federal Emissions Performance Warranty
- ▷ California Emission Control System Limited Warranty.

Detailed information about these warranties is listed in the Service and Warranty Information Booklet for US models or in the Warranty and Service Guide Booklet for Canadian models.

NOTES

Reporting safety defects

The following only applies to vehicles owned and operated in the US.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration NHTSA in addition to notifying the MINI Division of BMW of North America, LLC, P.O. Box 1227, Westwood, New Jersey 07675-1227, telephone toll-free 1-866-275-6464.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or BMW of North America, LLC.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 or 366-0123 in Washington, D.C. area, or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.



OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS


TECHNICAL DATA

DATA

INDEX

INDEX

COCKPIT

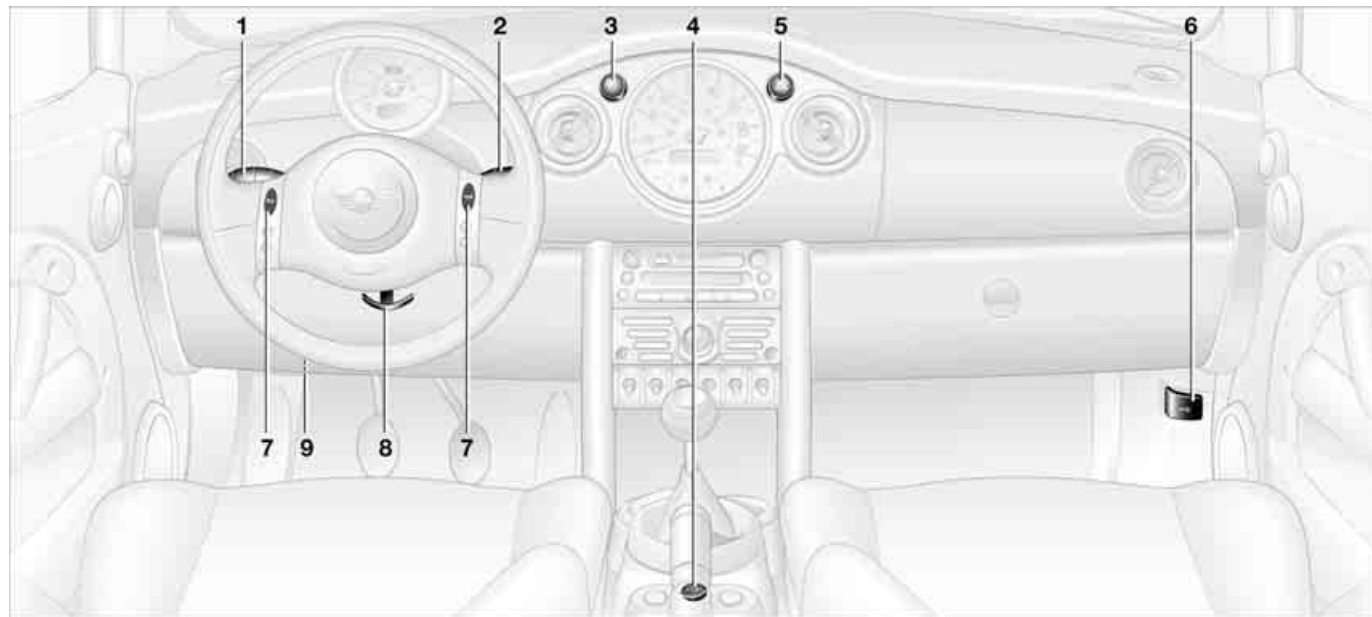


- 1 ▷ Parking lamps/Low beams [57](#)
- ▷ Turn signal indicators [58](#)
- ▷ Standing lamps [57](#)
- ▷ High beams [58](#)
- ▷ Headlamp flasher [58](#)
- ▷ Onboard computer [66](#)

- 2 Washer/wiper system [59](#)
- 3 Instrument lighting [58](#)
- 4 Outside mirror adjustment [46](#)
- 5 Hazard warning flashers


- 6 Bonnet release [105](#)
- 7 Horn [20](#)
- 8 Adjusting steering wheel [46](#)
- 9 OBD interface socket [113](#)

DISPLAY ELEMENTS

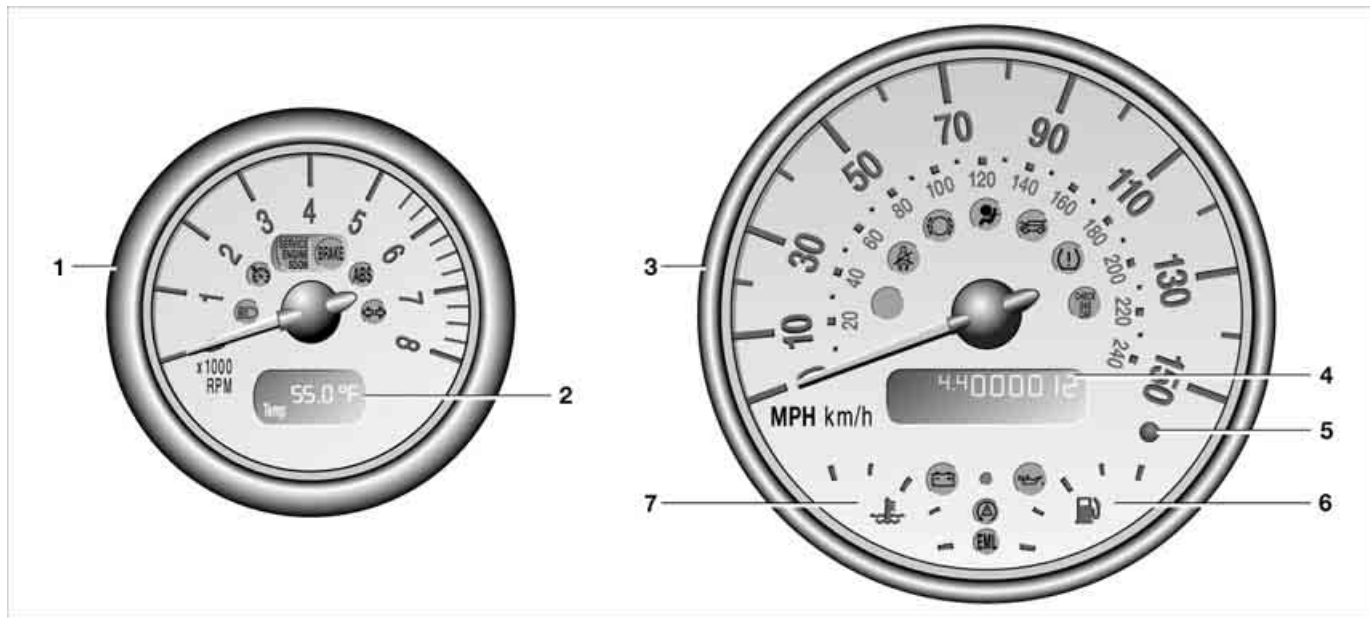

- 1 Tachometer [65](#)
with indicator and warning lamps,
page [16 ff](#)
- 2 Display for onboard computer [66](#)
If there is no onboard computer:
Display of outside temperature and cur-
rent vehicle speed
- 3 Speedometer with indicator and warn-
ing lamps, page [16 ff](#)
- 4 Indicator for
 - ▷ Odometer [63](#)
 - ▷ Trip odometer [63](#)
 - ▷ Service interval [65](#)
 - ▷ Program display for Continuously
Variable automatic Transmission
(CVT) [56](#)
 - ▷ Clock
- 5 Trip odometer, reset to zero [63](#)
Setting the clock [63](#)
- 6 Fuel gauge [63](#)
- 7 Engine coolant temperature gauge [64](#)

DISPLAY ELEMENTS WITH NAVIGATION SYSTEM* OR COCKPIT CHRONO PACK*

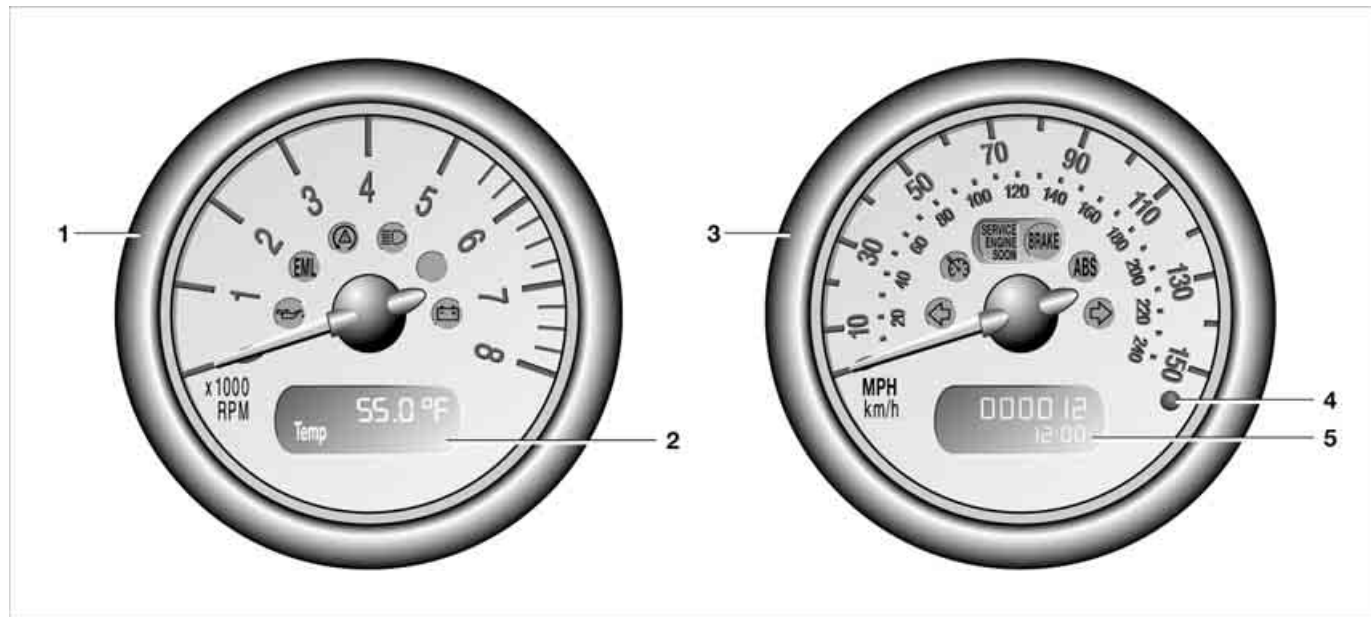


- 1 Tachometer [65](#)
with indicator and warning lamps,
page [16 ff](#)
- 2 Display for onboard computer

- 3 Speedometer with indicator and
warning lamps, page [16 ff](#)
- 4 Trip odometer, reset to zero [63](#)
Setting the clock [63](#)

- 5 Indicator for
- ▷ Odometer [63](#)
 - ▷ Trip odometer [63](#)
 - ▷ Service interval [65](#)
 - ▷ Program display for Continuously
Variable automatic Transmission
(CVT) [56](#)
 - ▷ Clock

DISPLAY ELEMENTS WITH NAVIGATION SYSTEM* OR COCKPIT CHRONO PACK*

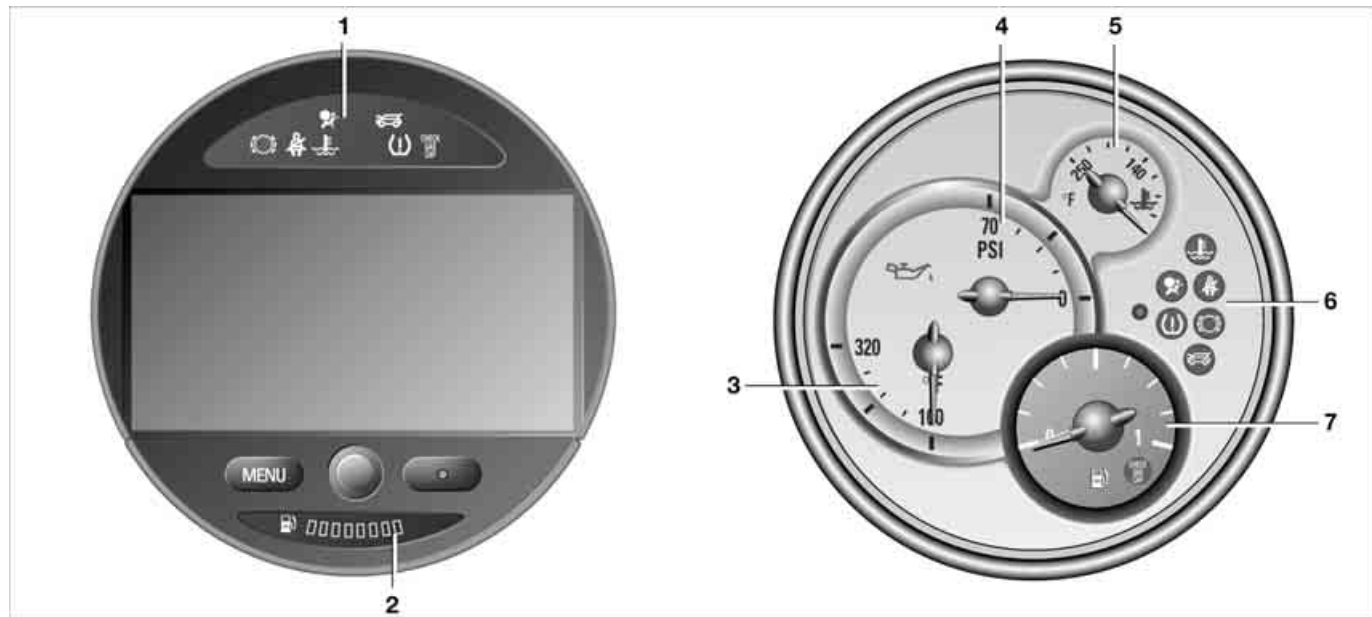

1 Indicator and warning lamps, on page 16 ff

2 Fuel gauge 63

3 Engine oil temperature

4 Engine oil pressure

5 Coolant temperature

6 Indicator and warning lamps, on page 16 ff

7 Fuel gauge 63

For more information about the navigation system, refer to the Owner's Manual for Navigation System.

INDICATOR AND WARNING LAMPS

Technology that monitors itself

The system runs a check on the indicator and warning lamps marked by ● each time you switch on the ignition. They each light up once for different periods of time.

If a malfunction should occur in one of these systems, the corresponding lamp does not go out after the engine is started or it lights up while the vehicle is moving. You will see below the correct way to react to this.

Red: stop immediately



Battery charge current ●
The battery is no longer being charged. Indicates a defective alternator drive belt or a problem with the charge circuit. Please contact your MINI Dealer.



If the drive belt is defective, do not continue driving. The engine could be damaged due to overheating. When the power-assist is deactivated, increased steering effort is required. ◀



Engine oil pressure ●
The engine oil pressure is too low. Pull over immediately and switch off the engine. Please contact your MINI Dealer.



Do not continue driving; otherwise, the engine could be damaged because of inadequate lubrication. ◀



Brake warning lamp ●
Lights up although the parking brake is released. The brake fluid level is too low. Before driving further, be sure to comply with the information on pages 96 and 111. Have the system checked immediately.



Display of the malfunction described above in Canadian models.

If equipped with a navigation system or Cockpit Chrono Pack:



Coolant temperature warning lamp in the navigation system or Cockpit Chrono Pack ●

Lights up while driving:
Engine is too hot. Pull over to the side of the road immediately, switch off the engine and allow it to cool down, refer also to page 64. Have the system checked immediately.

INDICATOR AND WARNING LAMPS

Yellow: stop immediately



Flat Tire Monitor ●

The warning lamp indicates a flat tire or a system malfunction. In the event of a flat tire, an acoustic signal also sounds.

Reduce speed immediately and stop the vehicle.

It is possible that the acoustic signal was not heard. In this case, in order to determine if there is a flat tire or a system malfunction:

1. Switch off the ignition, ignition key position 0
2. Switch the ignition back on, ignition key position 2, or start the engine.

If an acoustic signal sounds, you have a flat tire. Otherwise, the system has a malfunction or has failed.

For instructions on how to proceed further, refer to Flat Tire Monitor starting on page 71.



Depending on the equipment version, the indicator lamp is in the area of the navigation system or the Cockpit Chrono Pack. ◀

Red and yellow: continue driving cautiously



Brake warning light together with yellow indicator lamp for ABS, CBC, EBD and ASC/DSC:



The driving stability control has failed. Drive cautiously and defensively. Avoid full brake applications. Have the system checked as soon as possible.



More information on pages 68, 69.



Display of the malfunction described above in Canadian models.



Red: an important reminder



Brake warning lamp with parking brake applied. More information on the parking brake on page 53.



Warning lamp in Canadian models.



Fasten safety belts ●
Lights up for several seconds or until the driver has fastened his or her safety belt.

A signal* also sounds depending on the version.

More information on page 45.



Depending on the equipment version, the indicator lamp is in the area of the navigation system or the Cockpit Chrono Pack. ◀



Bonnet/Tailgate
Lights up when the bonnet and/or tailgate are open.

More information on pages 29, 105.

INDICATOR AND WARNING LAMPS

Red: check as soon as possible



Airbags ●

There is a malfunction in the airbag system. Have the system checked as soon as possible.

More information on page [73](#).



Depending on the equipment version, the indicator lamp is in the area of the navigation system or the Cockpit Chrono Pack. ◀



Brake pads

The brake pads have reached the minimum safe limit for lining wear.

Have the brake pads replaced immediately. More information on page [96](#).



Depending on the equipment version, the indicator lamp is in the area of the navigation system or the Cockpit Chrono Pack. ◀

Yellow: check as soon as possible



Antilock Brake System (ABS) ●

The ABS has failed. Conventional braking efficiency is available. Have the system checked as soon as possible.

More information on page [70](#).



Display of the malfunction described above in Canadian models.



All Season traction Control (ASC)/ Dynamic Stability Control (DSC) ●
Indicator lamp flashes:

System active: drive and braking forces are regulated.

The indicator lamp stays lit: ASC/DSC deactivated with button or defective.

In the event of a defect: Have the system checked as soon as possible.

More information on pages [68](#), [69](#).



Engine ●

The exhaust emissions have deteriorated.

Have the vehicle checked as soon as possible.



Display of the malfunction described above in Canadian models.



Engine electronics* ●

The engine electronics are malfunctioning. You can continue to drive with reduced engine output or engine speed. Have the vehicle checked as soon as possible.

INDICATOR AND WARNING LAMPS

Yellow: for your information



The warning lamp* comes on.
The gas cap is not correctly closed or missing. Check if the gas cap is correctly closed.



Depending on the equipment version, the indicator lamp is in the area of the navigation system or the Cockpit Chrono Pack. ◀

Green: for your information



Turn signal indicator
Flashes when turn signal indicator is on.

Rapid flashing: at least one of the turn signal indicators has failed.

More information on page [58](#).



Cruise control
Lights up when the cruise control is activated: operation via the multifunction steering wheel or multifunction sports steering wheel.

More information on page [61](#).

Blue: for your information



High beams
Comes on when the high beams are on or the headlamp flasher is actuated.



More information on page [58](#).

MULTIFUNCTION STEERING WHEELS*

Steering wheels with multifunctions

The control buttons integrated within the multifunction steering wheel and the multifunction sports steering wheel have been designed to allow you to operate a number of accessories both quickly and safely, without taking your eyes from the road:

- ▷ Some audio source functions
- ▷ Cruise control.

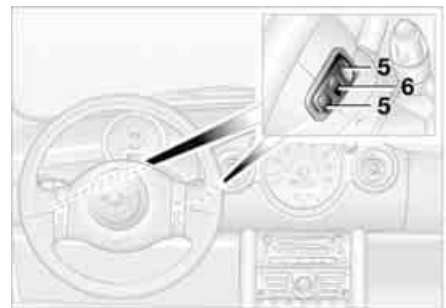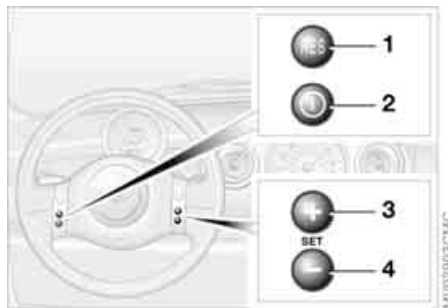

Steering wheel

- 1 Call up and continue cruise control
- 2 Activate/interrupt/deactivate cruise control
- 3 Store and accelerate cruise control
- 4 Store and decelerate cruise control

Right:

- 5 Volume
- 6 Changing between radio, CD or cassette

Left:


5 Operation of:

- ▷ Radio
 - Press briefly: next/previous station stored in memory
 - Extended pressure: station scan
- ▷ CD/MD
 - Press briefly: jump to next track
 - Extended pressure: search within current title
- ▷ Cassette
 - Press briefly: jump to next track or stop fast forward
 - Extended pressure: fast forward/rewind



If the Wave radio is installed, the above options for cassette player operation are not available. ◀

MULTIFUNCTION STEERING WHEELS*

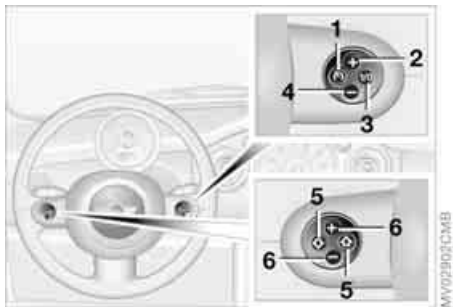

Sports steering wheel

- 1 Call up and continue cruise control
- 2 Store and accelerate cruise control
- 3 Activate/interrupt/deactivate cruise control
- 4 Store and decelerate cruise control

5 Fast forward/rewind

▷ Radio

Press briefly: next/previous station stored in memory

Extended pressure: station scan

▷ CD/MD

Press briefly: jump to next track

Extended pressure: search within current title

▷ Cassette

Press briefly: jump to next track or stop fast forward

Extended pressure: fast forward



If the Wave radio is installed, the above options for cassette player operation are not available. ◀

6 Volume



OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS


TECHNICAL DATA

DATA

INDEX

INDEX

KEYS

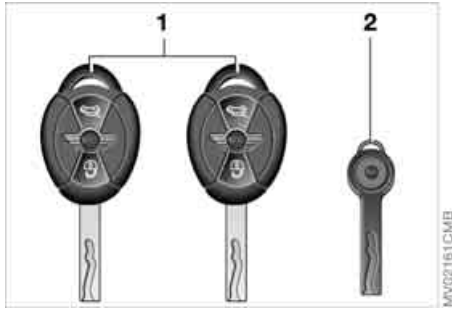


- 2 Spare key
For keeping in a safe place, e.g. in your wallet. This key is not intended for constant use

The key set

It includes three keys. Depending on the equipment version, it contains the following types of keys:

- 1 Master keys with remote control.
They determine the functions of the Key Memory. Certain functions in your vehicle may operate differently depending on the key

 In every master key there is an extended-life battery that is charged automatically in the ignition lock as you drive.

Therefore, use any otherwise unused master key for a longer journey every six months so that its battery can be charged. ◀

CENTRAL LOCKING SYSTEM

The concept

The central locking system is ready for operation whenever the driver's door is closed. The doors, the tailgate and the fuel filler door are unlocked or locked.

The central locking system locks or unlocks your vehicle:

- ▷ When operated from the outside via the remote control as well as via the door lock
- ▷ When operated from the inside via a switch.

If operated from outside, the anti-theft system is activated at the same time. This prevents the doors from being unlocked via safety lock buttons or door handles.

In the event of a sufficiently severe accident, the central locking system unlocks automatically. The hazard warning system and interior lamps are also switched on.

OPENING AND CLOSING: FROM OUTSIDE

Via remote control

When the vehicle is unlocked or locked, the anti-theft system is also deactivated/activated and the interior lamp is switched on/off.



Children might be able to lock the doors from the inside. Always take the vehicle keys with you so that the vehicle can be opened again from the outside at any time. ◀

For US owners only

The transmitter and receiver units comply with part 15 of the FCC, Federal Communications Commission, regulations. Operation is governed by the following:

FCC ID: LX8765S

LX8765E

LX8CAS

Compliance statement:


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- ▷ This device may not cause harmful interference, and
- ▷ this device must accept any interference received, including interference that may cause undesired operation.



Any unauthorized modifications or changes to these devices could void the user's authority to operate this equipment. ◀

OPENING AND CLOSING: FROM OUTSIDE

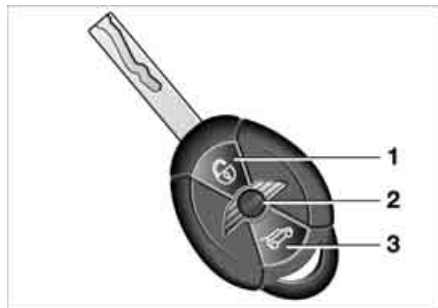

- 1 Unlocking and convenience opening
- 2 Locking and securing
- 3 Unlocking the tailgate

To unlock

1. Press the button once.
The driver's door is unlocked.
The interior lamps are switched on and the hazard warning flashers flash twice*.
2. Press the button twice.
First the driver's door will unlock, then the entire vehicle.

You can have this function activated/deactivated. ◀

If none of the vehicle doors are opened within 2 minutes, the central locking system locks the vehicle automati-

cally. The anti-theft system is not activated. To deadlock the vehicle, refer to the next column. ◀

You can have the vehicle's automatic locking feature activated/deactivated. ◀

Convenience opening mode

Press and hold the button for a longer period.

In the MINI, the windows and the glass sunroof are opened.

In the MINI Convertible, the windows and the folding roof are opened.

To open the convertible top on the MINI Convertible: release the button and press it again until the convertible top is completely open.

Convenience closing is not possible by means of the remote control. ◀

You can have remote control opening of the windows, glass sunroof or convertible top activated/deactivated. ◀

Locking and securing

Press button .

The hazard warning system flashes once.

Unlocking the tailgate

Press the button briefly.

The rear and side turn signal indicators flash twice.

The tailgate can be unlocked separately if the vehicle has been locked via central locking.

Open the tailgate within 20 seconds, refer to page 29, or it will otherwise be locked again automatically. The rear and side turn signal indicators flash once. If the tailgate was previously locked, then it is locked again after it is closed. Before and after each journey, make sure that the tailgate was not opened accidentally. ◀

OPENING AND CLOSING: FROM OUTSIDE

Malfunction


Local radio waves can interfere with functions of the remote control.

If this occurs, lock and unlock the vehicle via a door lock.

In the event of a system malfunction, please contact your MINI Dealer. You can also obtain replacement keys there.



If it is no longer possible to lock the vehicle with the remote control, then the battery is discharged. Use the corresponding key for a longer journey so that its battery can be recharged, refer to page 24. ◀

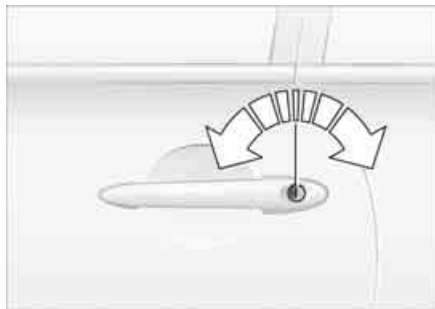

MV000455CMA

Via the door lock

1. One turn of the key in the driver's door lock unlocks the driver's door only.
2. Turning the key a second time unlocks the other door, the tailgate and the fuel filler door.



You can have this function activated/deactivated. ◀

If the vehicle has been properly locked, the hazard warning system flashes once. When the vehicle is unlocked, the hazard warning system flashes twice*.

Manual operation

In the event of an electrical malfunction, the driver's door can be unlocked or locked by turning the key in the door lock to the end positions.

Convenience closing via the door lock

You can also close the power windows, glass sunroof or the convertible top via the door lock.


With the door closed, hold the key in the locking position.

In the MINI Convertible, the convertible top is closed first and then the side windows.




You can have the closing of the windows and glass sunroof via the door lock activated/deactivated. ◀

OPENING AND CLOSING: FROM INSIDE

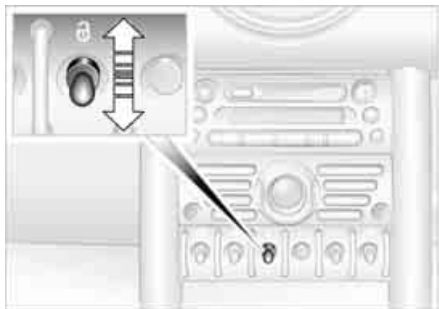


With this switch, you operate the central locking system when the doors are closed. The doors and tailgate are unlocked or locked only. The anti-theft system is not activated.


 If the remote control has been used to unlock only the driver's door, refer to page 26, and you touch the switch when the driver's door is open, the other door, the tailgate, and the fuel filler door are unlocked.


If the driver's door is closed, touching the switch locks it. ◀

To lock

- ▷ Briefly press the switch downward or
- ▷ push down the safety lock buttons on the doors.

 After you have driven off, the central locking system automatically locks your vehicle once a certain speed has been reached. ◀

 You can have this function activated/deactivated and the speed set. ◀

 Do not lock the safety lock buttons while driving, since these doors will not unlock automatically in the event of an accident. Children might be able to lock the doors from the inside. Always take the vehicle's keys with you so that you can open the vehicle again from the outside at any time. ◀

To unlock and open the doors

1. Briefly press the switch upward
 2. Pull the door handle above the armrest
- or
- pull the door handle for each door twice: to unlock and open.

Convenience opening mode

Press and hold the central locking switch upwards for a longer period. In the MINI, the windows and the glass sunroof are opened.

In the MINI Convertible, the windows and the folding roof are opened.

To open the convertible top on the MINI Convertible: release the switch, then press and hold it upwards for a longer period until the convertible top is completely open and the windows are again closed.

TAILGATE




To open from the outside

Push the button in the strip handle and open the tailgate.

For information on unlocking via the central locking system, refer to page [26](#).

To close

 To avoid injuries, as with all closing procedures be sure that the travel path of the tailgate is clear when it is closed.

Drive the vehicle only when the tailgate is completely closed. Otherwise, exhaust fumes could penetrate the interior of the vehicle. ◀

Should it be absolutely necessary to drive the vehicle with the tailgate open:


1. Close all windows, the glass sunroof as well as the folding roof on the MINI Convertible
2. Sharply increase the air supply for the heater, the air conditioning or the automatic climate control, refer to page [75](#) or [78](#).



Handle recesses on the MINI

The handle recesses in the interior trim panel of the tailgate make it easier to pull it down.

TAILGATE

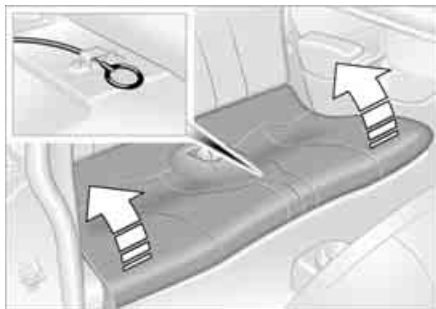

Manual release in the MINI


In the event of an electrical malfunction, you can also unlock the tailgate manually.


1. Fold the rear seat bench upwards
2. Pull the ring.

The tailgate is released.



Tailgate on the MINI Convertible

 The maximum load that may be placed on the open tailgate is 175 lb / 80 kg. ◀

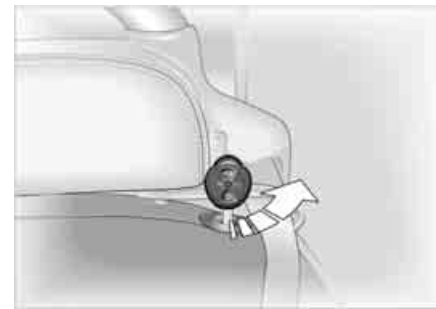


Manual release in the MINI Convertible


In the event of an electrical malfunction, you can also unlock the tailgate manually.

1. Unlock the catch for the rear backrests with a master key or ignition key

TAILGATE

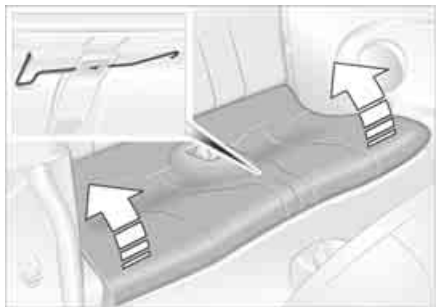


2. Fold the rear bench seat upward and remove the hook attached to it
3. Using the hook, reach backward between the convertible top and the rear backrest to pull one of the levers for releasing the folding rear backrest, refer to page [86](#)
4. Fold rear backrests forward

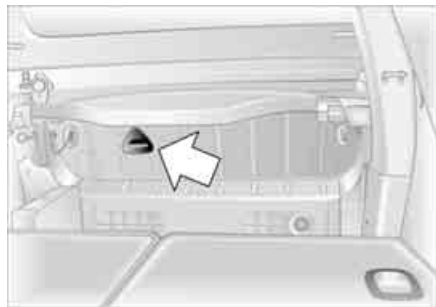

5. Pull the handle, arrow.
The tailgate is released.

ELECTRIC POWER WINDOWS

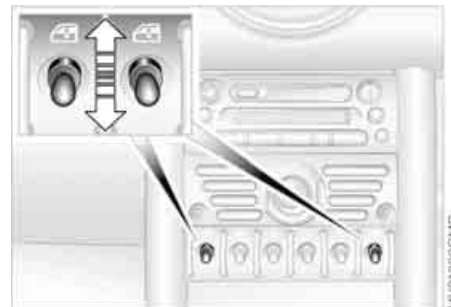


To open the windows

From ignition key position 1:

- ▷ Press the switch downwards.
The window opens until you release the switch or
- ▷ briefly press the switch downwards.
The window opens automatically.
Pressing the switch again stops the operation.

To close the windows


 Make sure that the closing range of the windows is unobstructed, otherwise personal injury could result when the windows close. ◀

ELECTRIC POWER WINDOWS

From ignition key position 1:

Press the switch upwards.


The window closes until you release the switch.

 Watch the closing process to ensure that no one is injured. ◀

After the ignition has been switched off:

You can continue using the electric power windows for a limited period as long as no one opens either of the doors.


If a door is opened during operation, the opening/closing process stops immediately.

 When leaving the vehicle, always remove the ignition key from the lock and remember to close the doors. Otherwise children could operate the power windows and injure themselves. ◀


Convenience operation

For convenience operation using the remote control refer to page 26, for operation via the door lock refer to page 27.

To initialize power windows

 If the battery is disconnected, e.g. for changing batteries or vehicle storage, reinitialize the power windows. Otherwise the windows will not be lowered when the door is opened. ◀

1. Close the doors
2. Close both windows
3. Hold both switches of the power windows up for approx. one second.

 In the event of a system malfunction, please contact your MINI Dealer. ◀



Power windows in the MINI Convertible


To open:

- ▷ Press button briefly:
The rear windows open automatically. Pressing the switch again stops the operation
- ▷ Press the button:
The rear windows open until the switch is released
- ▷ Hold the button pressed:
The rear windows open completely; then the front windows open.

To close:

Press the button.
The windows close until the switch is released.

GLASS SUNROOF, ELECTRIC*

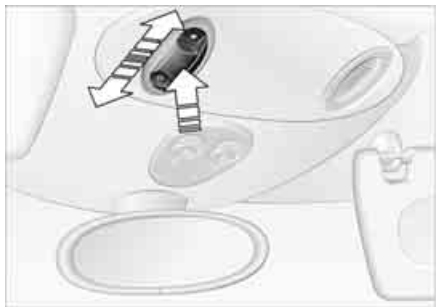


To raise

From ignition key position 1:


- ▷ Press the switch or
- ▷ push the switch backwards to the resistance point.

To open and close

 Be sure that adequate clearance is maintained for the opening path of the glass sunroof; otherwise damage can occur. When leaving the vehicle, always remove the ignition key from the lock and remember to close the doors. Otherwise children could operate the convertible top and injure themselves. ◀

From ignition key position 1:

1. Push the switch in the desired direction until you feel resistance, and hold in this position
2. Release the switch when the desired sunroof position has been reached.

 Do not use force to close the glass sunroof in its raised position, as damage to the mechanism could result. ◀

After the ignition has been switched off:

You can continue using the glass sunroof for a limited period as long as no one opens either of the doors.

If a door is opened during operation, the opening/closing process stops immediately.

Automatic opening and closing

From ignition key position 2:

To open:

Push the switch back past the point of resistance:
The sunroof opens completely.

To close:


1. Press the switch past the pressure point:
The sunroof closes to the raised position
2. Press the switch again and keep it depressed:
The sunroof closes completely.

Touching the switch briefly during opening and closing stops the movement immediately.

GLASS SUNROOF, ELECTRIC*

Trap protection


If, while closing, the glass sunroof encounters resistance within roughly the last 8 in / 20 cm, the closing procedure is interrupted and the roof reopens.

 Despite the trap protection, be extremely careful that the travel path of the sunroof is not obstructed whenever it is closed. Otherwise, it is not guaranteed that the closing procedure will be interrupted, for instance if the obstructions offer very little resistance.

You can disable the trap protection by pressing the switch past the pressure point and holding it. When closing the sunroof from the raised position, ensure that the travel path of the sunroof is not obstructed since the trap protection is not active in this position. ◀

Convenience operation

For convenience operation using the remote control refer to page 26, for operation via the door lock refer to page 27.

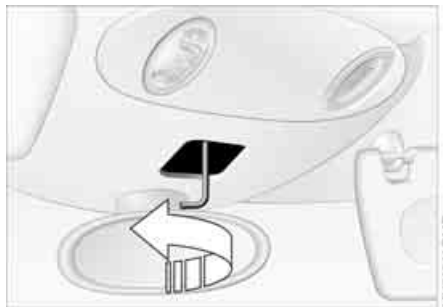

Manual opening and closing

In the event of an electrical malfunction, you can also open and close the glass sunroof manually:

1. Slide the cover panel towards the interior and remove it
2. Use an Allen key to turn the glass sunroof in the direction required.

ROLLER SUN BLIND*



1 Opening

1. Press the button in the handle, arrow 1
The cap is unlocked
2. Guide the roller sun blind towards the back.

2 Closing

1. Use the handle to pull the roller sun blind forwards
2. Engage the handle in the device, arrow 2.


FOLDING ROOF



Opening and closing

From ignition key position 1:

- 1 To close:
Press button 1
- 2 To open:
Press button 2 until the desired position or the end position has been reached.


 The folding roof can be operated up to a road speed of 75 mph / 120 km/h. ◀


CONVERTIBLE TOP


Power convertible top

So that you can get the most enjoyment out of your MINI Convertible, please observe the following tips:

- ▷ It is recommended that you close the convertible top whenever the vehicle is parked.
The closed convertible top not only protects the vehicle interior from damage due to unforeseen bad weather, but also provides a certain degree of protection against theft
- ▷ Even when the convertible top is closed, keep valuable items in the locked luggage compartment or in the lockable glove compartment
- ▷ Do not mount any roof rack systems on the convertible top
- ▷ To avoid damage, do not operate the convertible top at temperatures below 14 °F / -10 °C.

 Do not leave the convertible top folded for more than one day if it is wet, to prevent permanent damage from moisture. Do not place any objects on the convertible top, as they could otherwise fall off while the convertible top is being operated and result in damage or personal injury. ◀

 Only operate the convertible top when the vehicle is at a standstill. Otherwise, the procedure cannot be carried out or it will be interrupted. ◀


 Driving off before an opening or closing procedure is completely finished can lead to damage or personal injury. Do not reach into the convertible top mechanism during the opening or closing procedure. Keep children away from the swiveling area of the convertible top while it is in operation.
To close the power side windows while the vehicle is in motion, always close the rear windows first or all four windows at the same time. Otherwise the windows will not close tightly if the vehicle is being driven at higher speeds. ◀

CONVERTIBLE TOP




Opening and closing

- 1 To close
- 2 To open


 To conserve battery power, if possible operate the convertible top only while the engine is running. Before closing the convertible top, remove any foreign objects from the windshield frame. They could prevent the convertible top from closing. The loading aid must be locked and the luggage compartment cover must be in its lower position, refer to page [86](#). ◀

In ignition key position 1 or higher, with the vehicle at a standstill:

1. Observe the safety precautions described above
2. Press the corresponding button for convertible top operation in order to open the folding roof. Pressing the button again opens the convertible top.

 The side windows open when the button for convertible top operation is pressed. ◀

Once the opening procedure is finished and the indicator lamp has gone out, press and hold the button for more than two seconds to close the windows again. During the closing procedure, the folding roof is also closed.

 If the convertible top is left open for a longer period of time, it may be necessary to support the first automatic closing procedure manually. If the convertible top stops just before the closing procedure is finished, press against the front convertible top frame from outside in order to support the closing procedure while the button is pressed until the procedure continues automatically. ◀

Indicator lamps

- ▷ The indicator lamp lights up during convertible top operation until the opening or closing procedure is completely finished
- ▷ The indicator lamp flashes after the button has been released:
The opening or closing procedure is not yet completely finished. The procedure can be continued in the desired direction by pressing the appropriate button
- ▷ The indicator lamp flashes rapidly. The convertible top cannot be operated:
The luggage compartment cover is not in its lower position, refer to page [86](#), or the loading aid is not correctly locked, refer to page [86](#).

CONVERTIBLE TOP

Interruption

The automatic movement is immediately interrupted when the buttons for convertible top operation are released. The procedure can be continued in the desired direction by pressing the appropriate buttons.

Movement is also interrupted when there is a mechanical blockage. In this case, in order to operate the convertible top again:

1. Turn off the ignition and then switch it on again
2. Press the button to continue the procedure in the desired direction.



If the convertible top can only be moved in one direction after several consecutive attempts to operate it, the convertible top system has overheated. Allow the system to cool down for approx. 20 minutes while the ignition is switched on. ◀



Before the closing procedure is finished, do not close the side windows with the power window buttons. Otherwise it is not ensured that the side windows will close properly against the rubber seals of the convertible top. ◀

If the opening or closing procedure is interrupted by releasing the buttons, the convertible top stays in its current position for several seconds before it slowly moves into a more stable position. The procedure can be continued by pressing the buttons.



Do not interrupt and restart the closing procedure several times one after another, or the fully automatic convertible top mechanism could be damaged. ◀

Convenience operation

For convenience operation using the remote control refer to page 26, for operation via the door lock refer to page 27.


Manual closing in the event of an electrical malfunction



Only close the convertible top manually if it is absolutely necessary. Never open it manually. Improper handling of the convertible top can result in damage. ◀





If possible, close the convertible top with the help of a second person. ◀

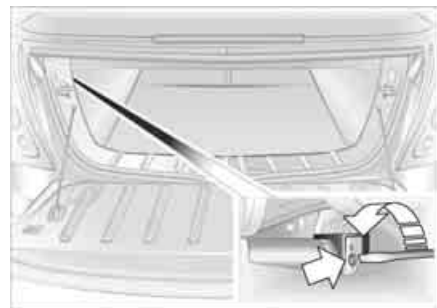



Before closing

1. Open the tailgate
2. Release the loading aid, refer to page 86
3. Remove the cover from the side panel on the left-hand side
4. Using the screwdriver from the onboard tool kit, refer to page 120, unscrew the corresponding screw, arrow, in the direction of the arrow by rotating it one and a half turns.

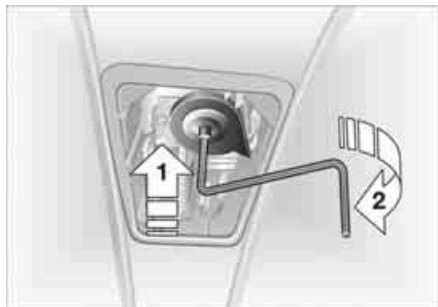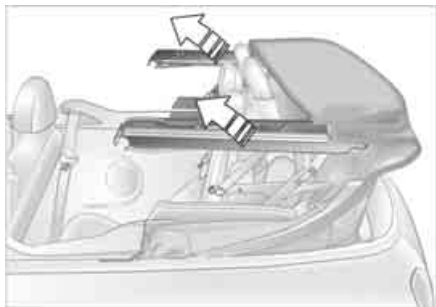CONVERTIBLE TOP



 The closing procedure must be completely finished. Otherwise, damage or injury could result. ◀

 Please contact your MINI Dealer to have the electrical malfunction repaired. ◀

To close

1. Place both hands on the convertible top on the respective side frame
2. Lift out both sides at the same time, and swing the convertible top forward onto the cowl
3. Pry out the cover from the center of the roof by using a screwdriver at the marked locations
4. Insert the special Allen key from the onboard tool kit into the designated recess

To close the folding roof:

5. Press the Allen key in the direction of arrow 1
6. Turn the Allen key in the direction of arrow 2

To close the convertible top completely:


7. Continue to turn the Allen key until the convertible top is locked in place.

WIND DEFLECTOR*

With the convertible top open, the wind deflector keeps air movement in the passenger compartment to a minimum, thus providing you with a pleasant drive, even at higher speeds. The wind deflector comes folded in a protective pouch and can be stored in the luggage compartment.



Do not allow the wind deflector to come into contact with sharp objects, as the net could otherwise be damaged. Do not place any objects on the installed wind deflector. When storing the wind deflector in the luggage compartment, make sure that it cannot be damaged by other objects. ◀

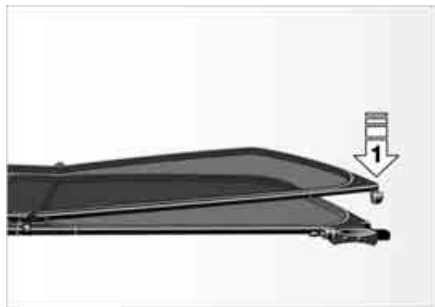

Before installing



1. Take the wind deflector out of the pouch
2. Fold out the wind deflector
3. Press the locking device together until it engages.



Setting in place


1. Slide out securing pins 1 and 2 on one side until they engage
2. Insert the wind deflector with the securing pins into the designated openings on the corresponding side of the vehicle

WIND DEFLECTOR*

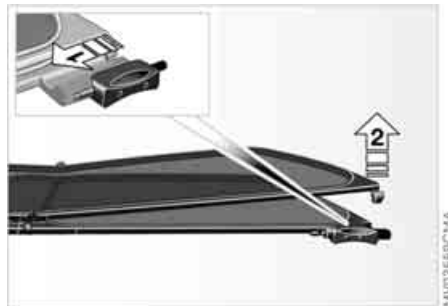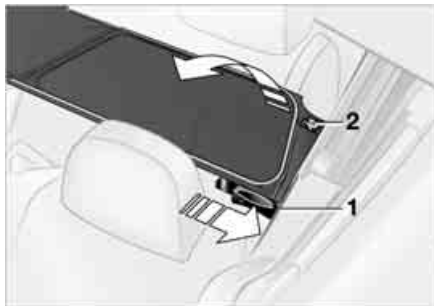

Folding up

3. Slide the securing pins on the other side into the designated openings and engage them
4. Fold up the upper half of the wind deflector.

 When the wind deflector is installed, do not incline the seat backrests too far toward the rear if the seats are to be moved back into their end positions, or the wind deflector could be damaged. ◀

Removal

Release the catch on the attachment handle. To do so, turn the handle slightly forward and push it back. Then follow the steps for installing the wind deflector in reverse order.

Folding together

To unlock, push the handle of securing pin 1 on the side into its rear-most position.

SAFE SEATING POSITION

The ideal seating position can make a vital contribution to relaxed, relatively fatigue-free driving. Together with the safety belts and airbags, the seating position also plays an important role in providing occupants with maximum levels of passive safety in an accident. To ensure that the safety systems operate with optimal efficiency, we strongly urge you to observe the instructions contained in the following section.

For additional information about transporting children safely, refer to page 48.

Sitting safely with airbags



Always maintain an adequate distance between yourself and all of the airbags. Always hold the steering wheel by the rim with the hands at the 9 and 3 o'clock positions to keep any chance of injury to hands or arms to an absolute minimum, should the airbag be deployed. No one and nothing is to come between the airbags and the seat occupant. Do not use the front passenger airbag cover as a storage surface for objects of any kind. Ensure that the front passenger is correctly seated, i.e. that no feet or legs are propped against the dashboard. Otherwise, leg injury could result if the front passenger airbag suddenly deployed. Never let an occupant's

head rest near or on a side airbag because the inflating airbag could cause a serious or fatal injury. ◀

Even if all these instructions are followed, it cannot entirely be ruled out that in some circumstances injury may result from contact with the airbags. In sensitive individuals, the ignition and inflation noise may induce a mild hearing loss that is usually temporary.

For airbag locations and additional information on airbags, refer to page 72.

Safe seating position with safety belt

Fasten your safety belt before each drive. Airbags are an additional safety device and work in conjunction with the safety belts, but do not replace them.

Your vehicle is equipped with four seats, each of which is provided with a safety belt.



At all times, occupants should sit upright and be properly restrained – infants and small children in appropriate child-restraint systems; larger children and adults using the safety belts. Expectant mothers should always wear their safety belts, taking care to position the lap belt against the lower hips, where it


will not exert pressure against the abdominal area.

Never allow more than one person to wear a single safety belt. Never allow infants or small children to ride in a passenger's lap. Do not route the belt across your neck, or run it across sharp edges. Be sure that the belt does not become caught or jammed. Avoid twisting the belt while routing it firmly across the hips and shoulder; wear it as snugly against your body as possible and do not allow it to rest against sharp or fragile objects. Otherwise, the belt could slide over your hips in the event of a frontal impact and cause abdominal injury. Avoid wearing bulky clothing and pull on the lap belt periodically to retension it over your shoulder. Otherwise, the safety belt's restraint effectiveness could be reduced. ◀


For information on using the safety belts, refer to page 45.

SEAT ADJUSTMENT

Important adjustment information


 Never try to adjust your seat while operating the vehicle. The seat could respond with an unexpected movement, and the ensuing loss of vehicle control could lead to an accident.

While driving, do not recline the backrest too far toward the rear. This especially applies to the front passenger side. If you do so, there is a risk that you will slide under the safety belt in an accident, thus reducing the protection provided by the safety belt. ◀

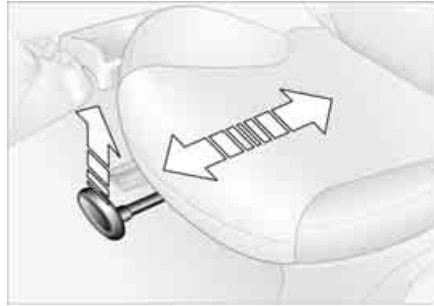

Longitudinal adjustment


1. Lift the handle
2. Push the seat into the desired position
3. After releasing the handle, apply pressure to the seat to ensure that the latch engages securely.

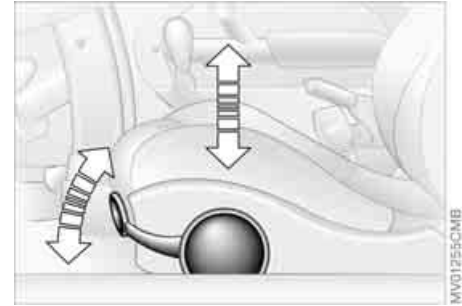

Height adjustment

1. To raise:
Pull the handle up repeatedly, continuing until the seat reaches the desired height
2. To lower:
Push the handle repeatedly, continuing until the seat reaches the desired height.

SEAT ADJUSTMENT

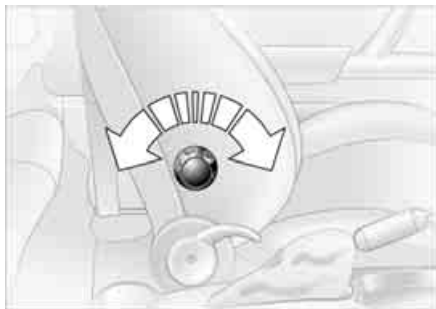


Lumbar support*

You can adjust the contour of the backrest for additional support in the curvature of your spine's lumbar region. The upper hips and spinal column receive supplementary support to help you maintain a relaxed, upright posture.

Turn the wheel.


The curvature is increased or decreased.

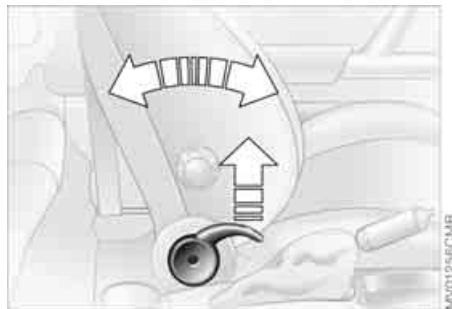

Backrest tilt

1. Pull up the lever at the inside of the seat
2. Apply weight to or remove weight from the backrest as required
3. Release the lever so that the backrest locks into place.


HEAD RESTRAINTS

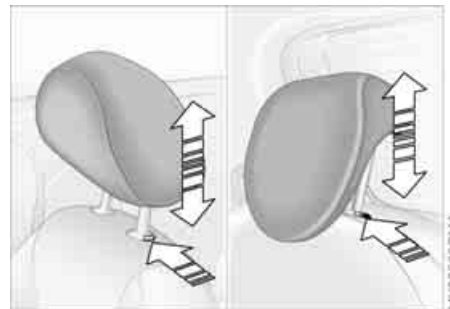

Adjusting

To raise: pull the head restraint upward.

To lower: press the button and push the head restraint downward.

 You can reduce the risk of spinal injury and whiplash by adjusting the head restraint to a height at which it is centered roughly at ear level.

To avoid possible violation of traffic laws, never retract the head restraints unless the rear seats are empty. Always ensure that the head restraints are raised before transporting passengers in the rear seat. ◀

HEAD RESTRAINTS


Removal

1. Pull up the head restraint, continuing until it is at maximum extension
2. Press the button and remove the head restraint at the same time.

Installation

1. Press the button and at the same time insert the head restraint in the reception points
2. Adjust the head restraint.

ENTRY TO THE REAR

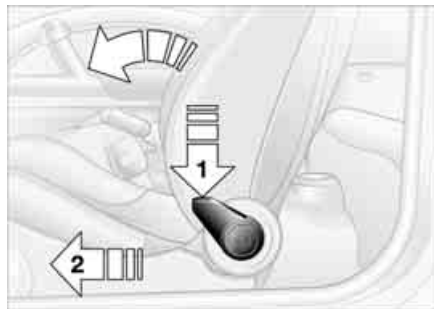


Easy entry


The Easy entry function includes a memory for the longitudinal seat and the backrest positions.

1. Push down the lever at the outside of the seat, arrow 1.
The backrest folds forward automatically
2. Push the seat forward, arrow 2.


Original position

 Slide the seat back to its home position before folding back the backrest, otherwise the seat is latched in at its current position. In this case, adjust the longitudinal position manually, refer to page 42. ◀

1. Push the seat back into its home position
2. Fold the backrest back to the home position to lock the seat.

 When returning the seat to the rear position, ensure that no one is injured and that no objects are damaged. Engage and lock both seats and backrests into position prior to driving; otherwise unexpected movement could increase the risk of accident. ◀

SAFETY BELTS

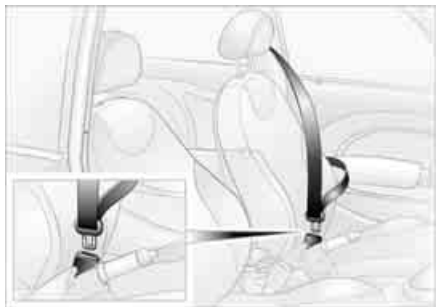

To close

Make sure you hear the lock engage in the belt buckle.

Indicator lamp




Lights up for several seconds or until the driver has fastened his or her safety belt.

A signal* also sounds depending on the version.

To release

1. Press the red button in the belt buckle
2. Hold the belt
3. Guide the belt back into its reel.

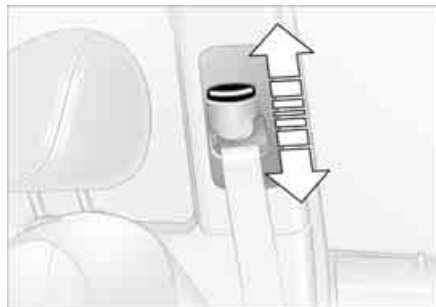

Safety belt height adjustment in the MINI

Use the height adjustment mechanism to adapt the safety belt to the ideal position for your own body:

Press the button and at the same time push the entire unit upwards or downwards.

Also observe the instructions on adjusting the seats on page [41](#).

Safety belt height in the MINI Convertible

The seat belt height is adapted to your body size if you are sitting correctly.

Damaged safety belts



If the safety belts are damaged or stretched in an accident: have the safety belts including the seat-belt tensioners and any child-restraint systems replaced, and have the belt anchorages checked. Have the necessary work carried out only by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer. ◀

SEAT HEATING*




The temperatures of the seat cushions and backrests are controlled.


Press once for each temperature level.

To switch off:

Press the button for a longer period.

STEERING WHEEL

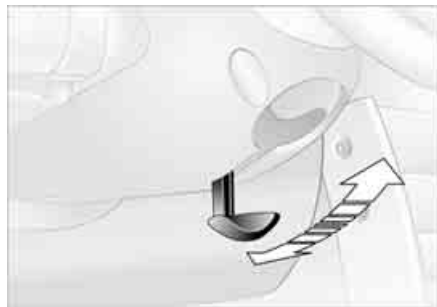

 Do not adjust the steering wheel while the vehicle is moving; otherwise unexpected movement could increase the risk of accident. ◀

Settings

1. Push the locking lever downward
2. Adjust the desired steering wheel position
3. Pull the lever back in.

MIRRORS



Outside mirror adjustment


- 1 Switch for 4-way adjustment
- 2 Switch for choosing between the left and right mirror
- 3 To fold the mirrors in and out*

Manual adjustment


The mirrors can also be adjusted manually:
Press the edge of the lens.

Electric heating*

Both mirrors are heated automatically when the ignition key is in position 2.

 The mirrors can be folded in up to a speed of 20 mph / 30 km/h. ◀

MIRRORS

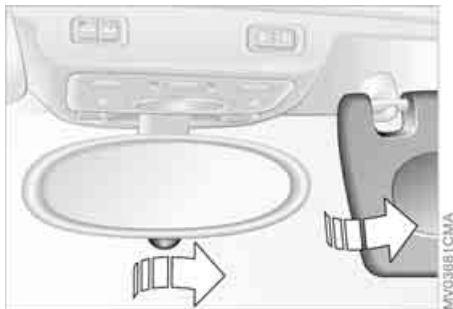

Interior rearview mirror

To reduce glare from vehicles behind you when you are driving at night:

Turn the knob.

Illuminated vanity mirror


From ignition key position 1:

1. Fold down the sun visor
2. Fold the cover panel upwards.

Sun visors

Can be swung sideways.

An additional sun visor is provided on the driver's side to better protect the driver from being blinded.

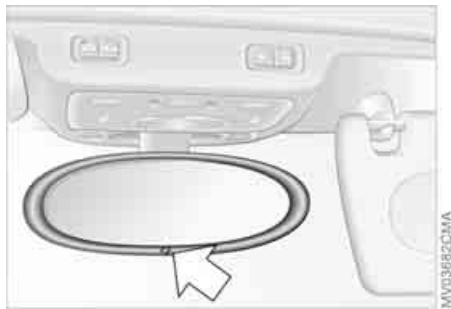

Interior mirror, automatic dimming*

While the vehicle is being driven forward, these mirrors dim light through an infinitely variable range depending on the light's incidence. Two photocells in the interior rearview mirror serve this purpose. One is positioned on the underside of the mirror frame, while the other is slightly offset on the back of the mirror.

In order for the photocells to work optimally, keep them clean and do not cover the area between the interior rearview mirror and the windshield. Do not place stickers or toll tags on the windshield in front of the mirror.

VEHICLE MEMORY

How the system functions

No doubt you have often reflected on how great it would be if you could configure your vehicle's various adjustment settings to meet your own personal requirements. In developing this vehicle, the manufacturer of the MINI has incorporated a number of options which can be programmed specifically for your vehicle.

What the system can do

Your MINI Dealer can provide you with details on the capabilities of the Vehicle Memory system.

Examples for Vehicle Memory:

- ▷ Automatic locking if none of the vehicle doors are opened, refer to page [26](#)
- ▷ Automatic locking after starting to drive, refer to page [28](#)
- ▷ Selective central locking system, refer to pages [26](#), [27](#)
- ▷ Convenience operation, refer to pages [26](#), [27](#)
- ▷ 'Follow-me-home' lamps, refer to page [57](#)
- ▷ Daytime driving lamps, refer to page [58](#)
- ▷ Speed-dependent windshield wipers, refer to page [60](#)

VEHICLE MEMORY

- ▷ Setting units for outside temperature and fuel consumption display, refer to page 66
- ▷ Setting units for display of temperatures specified for automatic climate control system, refer to page 80
- ▷ Volume control PDC, refer to page 74
- ▷ Acoustic alarm for starting PDC activation, refer to page 74.



This symbol alerts you to Vehicle Memory functions in the Owner's Manual. ◀



After memory functions have been reconfigured, your vehicle may operate slightly differently from the descriptions used in this Owner's Manual. If you decide to sell your vehicle one day, please remember to have the memory functions reset to their default configuration. ◀

TRANSPORTING CHILDREN SAFELY

The proper place for children

Children should always sit in the rear:

Accident research shows that the safest place for children in a vehicle is in the rear seat.

Older children should be tightly secured with a safety belt, after they have outgrown a booster seat that is appropriate for their age, height and weight.



A child sitting in the rear seat and not properly restrained may place his or her head on or near the airbag, if so equipped. For example, a child – even though belted in – may fall asleep with his or her head against the side airbag. It may be difficult for a driver to ensure that children in the rear seat will remain properly positioned at all times and do not place their heads on or near the side airbag. Therefore, we recommend that the rear side airbags, if provided, be deactivated if you plan to transport children in the rear seat. ◀

Child-restraint system in the rear



Children under 13 years of age and children less than 5 ft / 150 cm tall should always ride in the rear and the

restraint systems should be secured with the vehicle's safety belts. ◀

Younger children should be secured in an appropriate forward-facing child-restraint system that has first been properly restrained. We strongly urge you to carefully read and comply with the instructions for installation and use provided by the child-restraint's manufacturer whenever you use such a device.

All rear seating positions in your vehicle meet the recommendations of SAE J1819, an industry-recommended practice for securing child-restraint systems in motor vehicles.

Exception for the front passenger seat



Should it one day be necessary to use a child-restraint system on the front passenger seat, the airbags on the front passenger side must be deactivated. Otherwise, there is a significant risk of injury to children if the airbags deploy, even if they are seated in a child-restraint system. Have the front passenger airbags permanently deactivated only by your MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer. ◀

TRANSPORTING CHILDREN SAFELY


Installing child-restraint systems

Before installing any child-restraint system or child seat, read the following:



Always follow the manufacturer's instructions concerning installation and use; otherwise the system's protective function could be impaired. After an accident, have all parts of the child-restraint system and the affected safety belt system inspected and/or replaced. Have the necessary work on your MINI carried out only by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer. ◀

Commercially available child-restraint systems are designed to be secured with a lap belt or with the lap belt portion of a combination lap/shoulder belt. Improperly or inadequately installed restraint systems can increase the risk of injury to children. Always read and follow the instructions that come with the system.

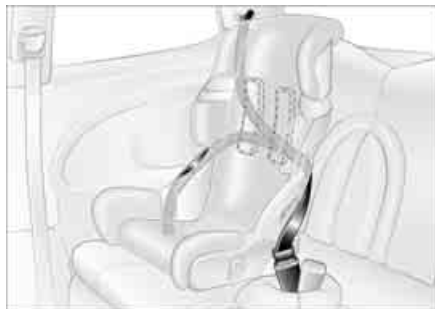

MV01298CMA

Child seat security

All of the rear belt retractors and the front passenger's safety belt can be locked for mounting and securing child-restraint systems.

Information regarding this is located near the buckle latch of each safety belt.

To lock the belt



Pull the entire length of the belt from the belt retractor. Allow the reel to retract the belt somewhat and engage the buckle, then tighten the belt against the child-restraint system.

The retraction mechanism is now locked.

To unlock the belt

Release the buckle, remove the child-restraint system and allow the belt retractor to reel the belt completely in.

TRANSPORTING CHILDREN SAFELY

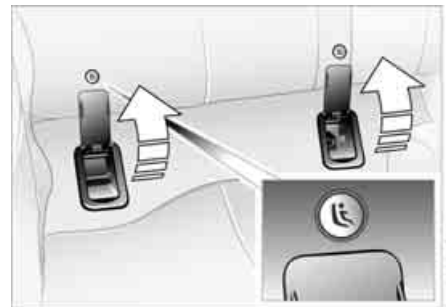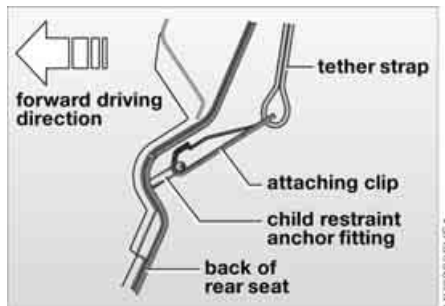

Child-restraint system with tether strap

As an example, the illustration shows the MINI COOPER and the MINI COOPER S.

If you use a child-restraint system with a tether strap:

Depending on the location selected for seating in the rear passenger area, attach the tether strap to the corresponding anchorage point to secure the child-restraint system.

Both seating positions are fitted with a head restraint.

Lift the head restraint and pass the tether strap between the head restraint and the seat back. It is recommended to readjust the head restraint into the lowest possible position.

Adjust the tether strap according to the child-restraint manufacturer's instructions.

LATCH child-restraint mounting system

Open the cover.

The illustration is an example showing the mounts for the LATCH, Lower Anchors and Tethers for CHildren, child-restraint mounting system at the right rear.


The system is also available at the left rear position.

The LATCH anchorage points are identified by buttons, see illustration.



Always follow all manufacturer's instructions and observe all safety precautions when installing the LATCH child-restraint system. ◀

IGNITION LOCK

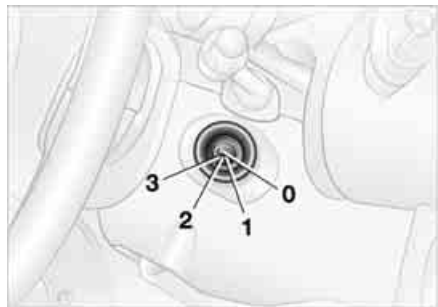

0 Steering locked

The key can be inserted or removed in this position only.

To lock the steering:

1. Remove the key
2. Turn the steering wheel slightly to the left or right until the lock engages.

A sound alarm goes off if the key remains in the ignition after opening the driver's door.

Interlock

Vehicles with Continuously Variable automatic Transmission (CVT):

The ignition key cannot be turned to position 0 and removed until the selector lever is in position P.

1 Steering unlocked


Individual electrical accessories are ready for operation.

You will find that it is often easier to turn the ignition key from position 0 to position 1 when you move the steering wheel slightly to help disengage the lock.


2 Ignition switched on

All electrical accessories are ready for operation.

3 Starting the engine

 Vehicles with manual transmission: Step on the clutch when starting the vehicle. A lockout prevents the engine from starting if the clutch is not depressed. ◀

STARTING THE ENGINE

 Do not allow the engine to run in enclosed spaces. Breathing the noxious exhaust gases can lead to unconsciousness and death. The exhaust gases contain carbon monoxide, an odorless and colorless, but highly toxic gas. Do not leave the vehicle unattended with the engine running. This is a safety hazard. When driving, standing at idle, and parking the vehicle, take care to avoid contact between the hot exhaust system and flammable materials, e.g. hay, grass, leaves, etc. Such contact could lead to a fire resulting in serious personal injury and property damage. ◀


When starting the engine, do not press the accelerator pedal.

Do not let the engine warm up with the vehicle at a standstill. Move off immediately at a moderate engine speed.

STARTING THE ENGINE

Starting

When starting the engine, do not press the accelerator pedal.

 Do not stop the starting procedure too early, and do not continue it for more than approx. 20 seconds. Release the ignition key immediately when the engine starts.

Extended starting attempts, characterized by excessively frequent or long periods with the starter engaged, can lead to damage in the catalytic converter. ◀

If the engine does not start on the first attempt, for instance if the engine is very hot or cold:

When starting the engine, press the gas pedal down halfway.

Cold start at very low temperatures, above approx. +5 °F / -15 °C, at high altitudes above 3,300 ft / 1,000 m:

- ▷ For the initial start attempt, allow the starter to remain engaged somewhat longer, approx. 10 seconds.
- ▷ When starting the engine, press the gas pedal down halfway.

Manual transmission

1. Engage the parking brake
2. Put the manual gearshift lever in neutral
3. Depress the clutch pedal, especially at low temperatures
4. Start the engine.



Move the gearshift lever to neutral position and engage the parking brake before leaving your vehicle with the engine running.

Do not leave the vehicle unattended with the engine running. This is a safety hazard. ◀

Continuously Variable automatic Transmission (CVT)

1. Press the footbrake
2. Put the selector lever in position P or N
3. Start the engine.



Move the selector lever to position P and engage the parking brake before leaving your vehicle with the engine running.

Do not leave the vehicle unattended with the engine running. This is a safety hazard. ◀

SWITCHING OFF THE ENGINE



You should never remove the ignition key when the vehicle is in motion, as the steering lock could engage.

When you leave the vehicle, always remove the ignition key and engage the steering lock.

When parking on inclines, engage the parking brake, or the vehicle could roll. ◀


Manual transmission

Turn the ignition key to position 1 or 0.

Continuously Variable automatic Transmission (CVT)

Engage selector lever position P, turn the ignition key to position 1 or 0.

PARKING BRAKE

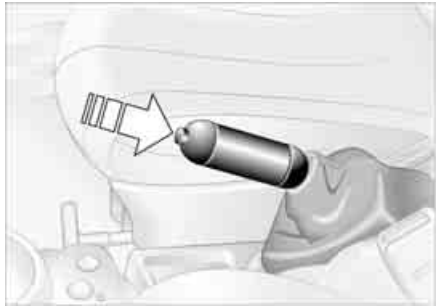


The parking brake is designed primarily to prevent the vehicle from rolling when it is parked. It operates against the rear wheels.

To engage


Lever automatically locks in position.
The indicator lamp in the instrument cluster lights up from ignition key position 2, refer to page 17.

To release


1. Pull up slightly
2. Press the button
3. Push the lever downwards.

 If, in exceptional circumstances, it should be necessary to engage the parking brake while the vehicle is in motion, do not pull the lever with excessive


pressure. Keep your thumb pressed against the release button while carefully pulling the lever up to apply moderate pressure. Excessive pressure can lead to overbraking and loss of traction, i.e. fishtailing, at the rear axle. The brake lamps do not come on when the parking brake is engaged. ◀

 To avoid corrosion and one-sided braking, apply the parking brake lightly from time to time when coasting to a standstill, for instance at a traffic light, provided that it is safe to do so. ◀

MANUAL TRANSMISSION

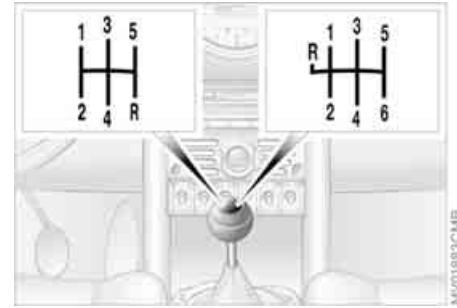

6-speed transmission*

 When changing gear in the 5th/6th gear plane, press the gearshift lever to the right to prevent inadvertently shifting to a gear of the 3rd/4th gear plane. ◀

MANUAL TRANSMISSION

Reverse gear

Before selecting reverse gear, ensure the vehicle is stationary; then, fully depress the clutch pedal and pause briefly before moving the gearshift lever into position.


5-speed transmission:

Press the gearshift lever to the right and to the back.

6-speed transmission:

Press the gearshift lever towards the left. Thereby overcome the slight resistance and press forward.

As you do this, the backup lamps will come on automatically when the ignition key is in position 2.

 Do not hold the vehicle in place on slopes by slipping or 'riding' the clutch. Use the parking brake instead. Otherwise, a high degree of clutch wear could result. ◀

CONTINUOUSLY VARIABLE AUTOMATIC TRANSMISSION (CVT)*

In addition to the fully automatic mode, you can shift gears manually using Steptronic, refer to page 55.

Selector lever positions


P R N D M/S + -




Range selection

Inadvertent engaging of certain selector lever positions is prevented by a lock.

Press the button on the front side of the selector lever knob. The lock is released.

 While the vehicle is stationary, and before shifting out of P or N, press the brake pedal in order to disengage the selector lever lock mechanism, shiftlock.

If the engine speed is too high when the vehicle is at a standstill, the selector lever is also blocked to protect the transmission. Hold the brake pedal down until starting off. Otherwise the vehicle will 'creep' when a drive position is engaged. ◀

 To prevent the vehicle from starting off on its own, always move the

CONTINUOUSLY VARIABLE AUTOMATIC TRANSMISSION (CVT)*

selector lever to position P and engage the parking brake before getting out of your vehicle with the engine running. Do not leave the vehicle unattended with the engine running. This is a safety hazard. ◀

▶ If the selector lever is not placed in position P when the vehicle is parked, the position display of the selector lever stays on. This can lead to battery discharge. ◀

P Park

Select only when the vehicle is completely stopped. The transmission locks to prevent the rear wheels from turning.

R Reverse

Select only when the vehicle is completely stopped.

N Neutral Idle

Engage this gear, for example, when you are in a car wash. The vehicle can roll.

D Drive: CVT driving position

This position is designed for driving under all normal operating conditions.

Kickdown

Kickdown can be used to achieve maximum vehicle performance. Press the accelerator pedal past the increased resistance point at the full-throttle position.



M/S + – Manual mode and Sport program


Switch from D into M/S + –:
Activates the Sport program and displays SD in the gear indicator in the speedometer.

Press selector lever once:
Shifts from the Sport program to the manual mode.

Shifting with the selector lever

- ▷ Press selector lever briefly towards +:
Transmission shifts upwards
 - ▷ Press selector lever briefly towards –:
Transmission shifts downwards.
- 1 to 6 appear in the gear indicator.

CONTINUOUSLY VARIABLE AUTOMATIC TRANSMISSION (CVT)*

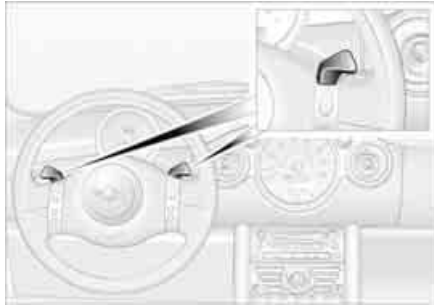

▶ In order to accelerate rapidly in the M/S + – Manual mode and in the Sport program, e.g. when passing, shift downwards manually or by kickdown. ◀

Whenever you want to return to automatic shifting, just move the selector lever toward the left to position D.

Switching from M/S + – Manual mode into the selector lever positions P, R and N is only possible via D.



Shifting on the steering wheel*

The shift paddles allow the gears to be changed rapidly and, above all, safely, since both hands can remain on the steering wheel.

Use one of the two shift paddles to shift upwards or downwards:

- ▷ Pull shift paddle toward body:
Transmission shifts upwards
- ▷ Push shift paddle away from body:
Transmission shifts downwards.

1 to 6 appear in the gear indicator.

The transmission will only execute upshifts or downshifts that will result in a plausible combination of vehicle speed and engine rpm, e.g. downshifts that would result in excessive engine speed are not executed.

Available displays

P R N D SD 1 2 3 4 5 6 EP


Malfunction

EP appears on the display. The transmission system is malfunctioning. Avoid high loads. All selector lever positions can still be engaged; in the forward driving positions, however, the vehicle can only be driven with a limited gear selection.

Have the system checked immediately.

Jump-starting and towing, refer to pages [134](#), [136](#).

PARKING LAMPS/LOW BEAMS

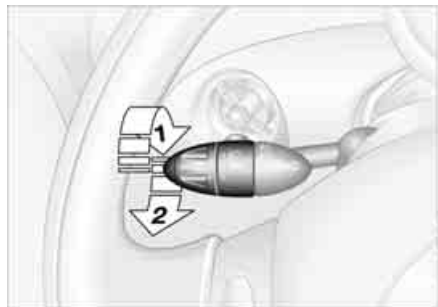

Switching on the parking lamps

Turn to the first position.

The front, rear and side vehicle lighting is switched on.

Standing lamps on one side, refer to next column.

Switching on the low beams

Turn to the second position.

With the low beams on and with the ignition switched off, only the parking lamps will remain on.

'Follow me home' lamps

If you activate the headlamp flasher after having switched off the engine and the lights, the low beams will stay lit for a pre-set period of time.



You can have this function programmed. ◀

Switching on the standing lamps

For parking, you can activate lights on one side of the vehicle. Observe local laws.

In ignition key position 0:

Move the lever to the adequate turn signal indicator position.



The standing lamps discharge the battery. Avoid using them for longer periods of time; otherwise, you may not be able to start the engine. ◀

'Lights on' warning

If the lights have not been switched off and the ignition key is in position 0, an acoustic signal sounds for a few seconds when you open the driver's door to remind you that the lights have not been switched off.

Daytime driving lamps*

If convenient, the light switch can be left in position 0 or 1.

The low beams switch on automatically in ignition key position 2 or higher.

The exterior lamps go out when the ignition is switched off and the light switch is set to position 0. In position 1, the parking lamps are automatically switched on.




The dynamic headlamp range control for xenon lamps only operates with the light switch in position 1 or 2. ◀



You can have the daytime driving lamp function activated/deactivated. ◀

SIGNAL/HEADLAMP FLASHER

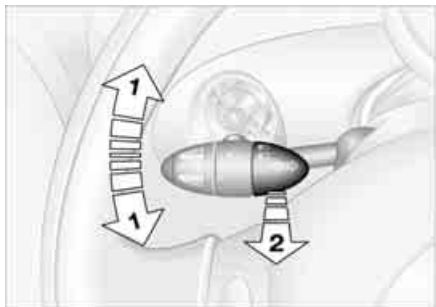

- 1 Turn signal indicators
- 2 High beams/Headlamp flasher

To signal briefly

Gently push the lever up to the point of resistance and hold it there, if necessary. The lever returns to its center position once it is released.



The indicator lamp flashes and the relay clicks faster than normal: a turn signal indicator has failed. ◀

INSTRUMENT LIGHTING



To control the instrument lighting, press the button.


To increase the illumination intensity

Keep the button pressed until the desired brightness is reached.

To decrease the illumination intensity

Press the button briefly. With each brief pressing of the button, the illumination intensity is reduced in steps.

FOG LAMPS

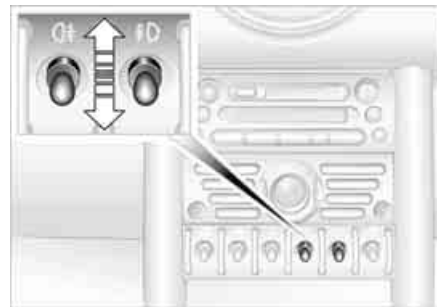

When the parking lamps/low beams are switched on: Briefly press the switch upwards or downwards. Briefly press once again to switch off.

Fog lamps*




The parking lamps or low beams must be switched on. The green indicator lamp lights up. The fog lamps are switched on.

Rear fog lamp*



The low beams must be switched on. The yellow indicator lamp lights up. The rear fog lamp is switched on. Observe all legal regulations concerning the use of fog lamps.

INTERIOR LAMPS

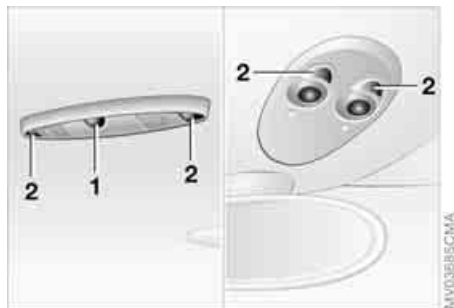

Switching the interior light in the MINI on and off manually

Press button 1 briefly.

Permanently turn off interior light:

Keep button 1 pressed until the light goes out.

To switch the light back on, press the button once more.



Switching the interior light in the MINI Convertible on and off manually

Press button 1 briefly.

Permanently turn off interior light:


Keep button 1 pressed until the light goes out.

To switch the light back on, press the button once more.

Switching the reading lamps on and off

Press button 2.

WASHER/WIPER SYSTEM

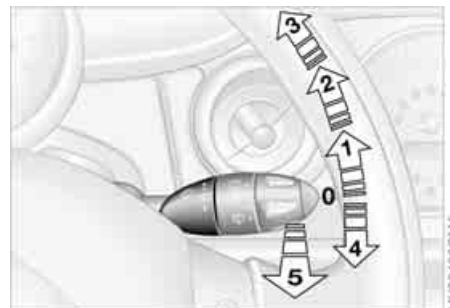

- 0 Wipers parked
- 1 Intermittent operation or rain sensor
- 2 Normal wiper speed
- 3 Fast wiper speed
- 4 Brief wipe
- 5 Clean windshield and headlamps

Intermittent operation

Not on vehicles with rain sensor.

The interval time for the wipers is dependent on the vehicle speed.

Rain sensor*

The rain sensor is located on the windshield, directly in front of the interior rear-view mirror.

When the rain sensor is activated, the

WASHER/WIPER SYSTEM

windshield wipers are automatically controlled depending on the amount of moisture, including snow, on the windshield.

To activate the rain sensor:


From ignition key position 1:

Lever in position 1.

The wipers move over the windshield once.


To deactivate the rain sensor:

Put lever in position 0.

 Switch the rain sensor off when passing through an automatic car wash. Failure to do so could result in damage caused by undesired wiper activation. ◀


Normal wiper speed

When the vehicle is stationary, the wipers switch automatically to intermittent wiping.

 You can have this function activated/deactivated. ◀

Fast wiper speed


When the vehicle is stationary, the wipers switch automatically to normal wiper speed.

 You can have this function activated/deactivated. ◀

Cleaning windshield and headlamps*


The system sprays washer fluid against the windshield. The wipers are automatically activated for a brief period.

When the vehicle lighting is on, the headlamps are also cleaned at appropriate intervals.

 Do not use the washers if there is any danger that the fluid will freeze on the windshield. For this reason, use an anti-freeze agent, refer to page 108. Do not use the washers when the reservoir is empty, since this could cause damage to the washing pump. ◀

Heated windshield washer jets*

The windshield washer jets are heated automatically when the ignition key is in position 2.

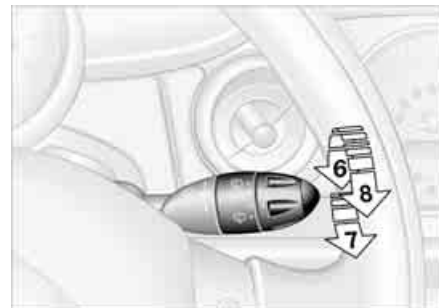

Rear window wiper*

6 Intermittent operation:

Turn the cap to position 6.

The rear window wiper moves across the window a number of times before switching to intermittent operation

Cleaning the rear window*

7 Intermittent operation:

Turn the cap to position 7 and hold in place


8 In lever position 0:



Turn the cap to position 8 and hold in place

CRUISE CONTROL*

On the multifunction steering wheel and sports steering wheel

Above approx. 20 mph / 30 km/h the cruise control maintains and stores any desired speed.

 Do not use cruise control on twisting roads, when high traffic density prevents driving at a constant speed, or when the road surface does not permit driving at a constant speed, e.g. due to snow, rain, ice, or loose surfaces. ◀

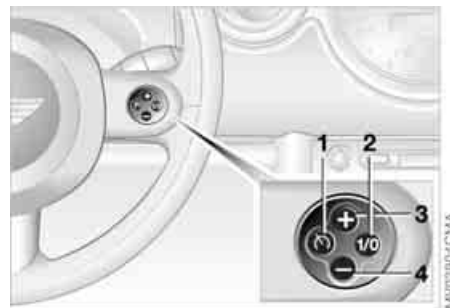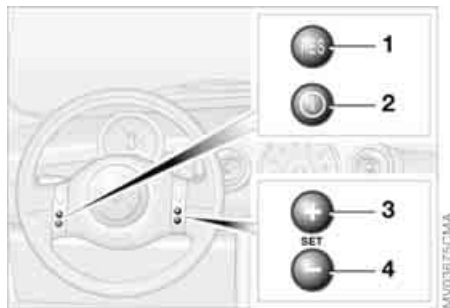

To activate via the multifunction steering wheel

From ignition key position 1:

Press button 2.

The indicator lamp in the instrument cluster lights up.

Cruise control is active.

To activate via the sports steering wheel

1. Start the engine

2. Press button 2.

The indicator lamp in the instrument cluster lights up.

Cruise control is active.

To deactivate

Press button 2 repeatedly until the indicator lamp goes out.

The cruise control is deactivated when the ignition key is turned to position 0.

The stored speed is cleared.

To maintain and store speed or to accelerate

Press button 3.

The system maintains and stores the current vehicle speed. Every time you tap the button, the speed increases by approx. 1 mph / 2 km/h.

CRUISE CONTROL*

Press and hold button 3.

The vehicle accelerates without pressure on the accelerator pedal. When you release the button, the system maintains and stores the current speed.



If, on a downhill gradient, the engine braking effect is not sufficient, the controlled speed may be exceeded. Speed can drop on uphill grades if the engine output is insufficient. ◀

To decelerate

Press button 4.

If you are already driving with active cruise control, the speed is decreased by approx. 1 mph / 2 km/h every time you briefly tap the button.

Press and hold button 4.

With the cruise control active, the system automatically reduces the throttle opening to slow the vehicle. When you release the button, the system maintains and stores the current speed.

To cancel the cruise control

The cruise control is automatically canceled:

- ▷ When the brakes are applied
- ▷ When the clutch pedal is depressed
- ▷ If the cruising speed is either exceeded or not met for an extended length of time, for example if you press the accelerator pedal and exceed the stored speed.

The indicator lamp stays lit.

You can use the cruise control again as required.

On the multifunction steering wheel, the cruise control can be interrupted manually:

When the system is activated, press button 2.

To continue cruise control

Press button 1.

The vehicle accelerates to and maintains the last speed stored.

ODOMETER



1 Trip odometer/clock

Resetting to zero when the trip odometer is in the display:

With ignition key in position 1, press the button until the trip odometer is at zero.

To show the clock:

Press the button briefly.

2 Odometer

When the ignition key is not in the ignition lock, you can activate the displays shown in the illustration by pressing the button in the display elements.

CLOCK




Setting

1. Press button 1 to display the clock
2. Press button 1 for approx. 5 seconds to activate the clock-setting mode
3. Press button 1 to select 12-hour or 24-hour mode
4. Wait approx. 5 seconds until the hours display flashes
5. Press button 1 to set the hour
6. Wait approx. 5 seconds until the minutes display flashes
7. Press button 1 to set the minute.

The set time is saved automatically after approx. 1 minute.

FUEL GAUGE

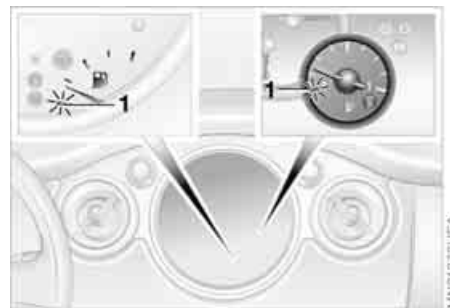

In the speedometer or Cockpit Chrono Pack*

If the indicator light 1 begins to be lit continuously, there are approx. 2.1 gallons / 8 liters of fuel in the tank.

Fuel tank capacity:

Approx. 13.2 gallons / 50 liters.


When you switch on the ignition, the indicator lamp lights up briefly to confirm that the system is operational.

If the angle of the vehicle varies, for example when you are driving in mountainous areas, the needle may fluctuate slightly.



Refill the gas tank early. If you drive to the last drop of fuel, engine functions are not guaranteed and damage can occur. ◀

FUEL GAUGE

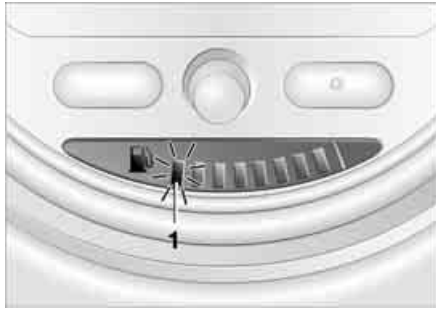


In the navigation system



Please also comply with the instructions in the previous section. ◀

If the indicator light 1 changes from orange to red, there are approx. 2.1 gallons / 8 liters of fuel in the tank.

COOLANT TEMPERATURE GAUGE

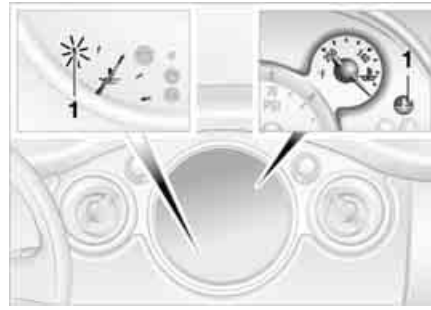

Checking coolant level, refer to page [110](#).

Temperature warning

1 Red warning lamp

When you switch on the ignition, warning lamp 1 comes on briefly to confirm that the system is operational.

Lights up while driving:

Engine is too hot. Switch off the engine immediately and allow it to cool down.

Coolant temperature gauge

Depending on the equipment version, a coolant temperature gauge is located in the speedometer or the Cockpit Chrono Pack.

Low temperature:

The engine is still cold. Drive at moderate engine and vehicle speeds.

Center position:

Normal operating temperature of the engine.

High temperature:

As soon as there is a deviation from the center position upwards or to the left:

Drive with moderation and at low engine speeds. If necessary, switch off the engine and allow it to cool down.

Equipment with navigation system* or Cockpit Chrono Pack*



Coolant-temperature warning lamp in the navigation system or Cockpit Chrono Pack, refer to Display elements on page [15](#).

Lights up while driving:

Engine is too hot. Switch off the engine immediately and allow it to cool down.

TACHOMETER



Do not operate the engine with the needle in the red overspeed zone of the gauge.

To protect the engine, the power is reduced when you approach a certain engine speed in this sector.

SERVICE INTERVAL DISPLAY



Remaining distance for service


The distance remaining before the next scheduled service is displayed in miles / kilometers for a short period with the ignition key in position 1 or higher. The display also indicates whether an engine oil service and/or an inspection is due.

The onboard computer bases its calculations of the remaining distance on your driving style in the period immediately preceding your data request. The remaining distance display counts backwards in steps of 35 miles / 50 km to the next service. A flashing message and a minus sign in front of the display that again begins counting forwards mean that the service interval has been exceeded.

Please schedule an appointment with your MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of your MINI manufacturer.

For more information on the service interval display, refer to page [112](#).

ONBOARD COMPUTER*

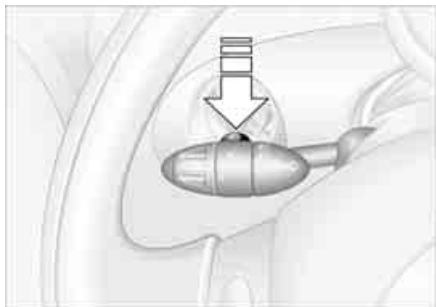


Mode selection

From ignition key position 1, you can use the button in the turn signal indicator lever to retrieve information from the onboard computer for display in the tachometer. By pressing the button briefly, you can call up a new function for display.

The displays appear in the following order:

Outside temperature, range, average consumption and current consumption, average speed and current speed.

From ignition key position 1, the most recently selected setting is displayed.

 If the vehicle is equipped with a navigation system, you will find more information on the onboard computer in the Owner's Manual for Navigation System. ◀

Outside temperature

If the vehicle is not equipped with an onboard computer, only the outside temperature is displayed.



You can have the unit of measure set to °F or °C. ◀

Ice warning

If the outside temperature falls below approx. 37 °F / 3 °C, the onboard computer automatically switches to the outside temperature display.

In addition, an acoustic signal can be heard and the display flashes for a short time.



The ice warning does not exclude the possibility that surface ice can form

at temperatures above 37 °F / 3 °C, e.g. on bridges and shaded roads. ◀

With navigation system option:

The temperature is displayed in the status line of the navigation system, refer to the Owner's Manual for Navigation System.

Current vehicle speed

If the vehicle is not equipped with an onboard computer, only the current speed is displayed.

With the ignition key in position 1 or higher, you can use the button in the turn signal indicator lever to switch the display from outside temperature to current speed and vice versa.

Range

The display shows a range estimate based on the available fuel. The amount of fuel remaining in the tank is measured, and the range is estimated from your driving style over the last 20 miles / 30 km.



If the range displayed is less than 35 miles / 50 km, be sure to refuel; otherwise engine functions are not guaranteed and damage could occur. ◀

ONBOARD COMPUTER*

Average speed, average fuel consumption

Press the button in the turn signal indicator lever for a longer period.

The displayed average values for speed and consumption are recalculated.

Any time spent with the vehicle stationary and the engine shut off is ignored for the calculation.



If the vehicle is equipped with a navigation system, the displays are shown in the area of the navigation system. ◀



You can have a different unit of measure set. ◀

Current fuel consumption

The current consumption value is calculated and displayed on the basis of your driving style.



You can have a different unit of measure set. ◀

ALL SEASON TRACTION CONTROL (ASC)*


The concept

This system optimizes driving stability and traction, especially when just starting off, when accelerating or when cornering.

ASC recognizes the danger present in traction loss and will increase driving stability and traction by reducing the engine's output and, if necessary, by applying the brakes to the front wheels.

ASC is operational each time you start the engine. It contains the following functions:

- ▷ Antilock Brake System (ABS)
- ▷ Cornering Brake Control (CBC)
- ▷ Electronic Brake Force Distribution (EBD).

 The laws of physics cannot be repealed, even with ASC. An appropriate driving style always remains the responsibility of the driver. Avoid using the additional safety margin provided by the system as an excuse for taking unnecessary risks.

Do not make any modifications to the ASC system. Allow only authorized technicians to perform service procedures on the ASC. ◀


Indicator lamp



The indicator lamp will go out shortly after the ignition has been switched on, refer to pages 17, 18.

If the indicator lamp flashes:
ASC controls the drive and braking forces.

The indicator lamp stays lit:
The system is defective or was turned off using the button. Have the system checked as soon as possible.

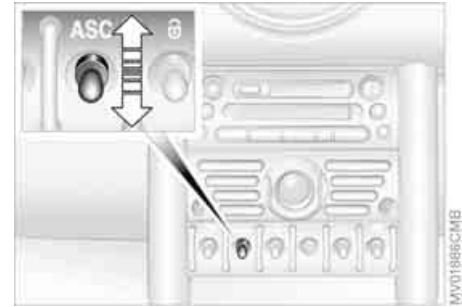

To switch off the ASC

Briefly press the switch.
The indicator lamp stays lit.

When driving with snow chains or to 'rock free' in snow, it can be helpful to switch off the ASC for a brief period.



To maintain vehicle stability, always drive with the ASC switched on whenever possible. ◀

To switch the ASC back on

Briefly press the switch once again.
Indicator lamp goes out.

DYNAMIC STABILITY CONTROL (DSC)*

The concept

This system optimizes driving stability and traction, especially when just starting off, when accelerating or when cornering. It also maintains driving stability even in critical driving situations.

DSC recognizes unstable vehicle conditions, such as understeering or oversteering, and, as far as is possible within the laws of physics, helps keep the vehicle on a steady course by reducing the rpms and by brake applications to the individual wheels.

The DSC is operational every time you start the engine. It contains the following functions:

- ▷ All Season traction Control (ASC)
- ▷ Antilock Brake System (ABS)
- ▷ Cornering Brake Control (CBC)
- ▷ Electronic Brake Force Distribution (EBD).



The laws of physics cannot be repealed, even with DSC. An appropriate driving style always remains the responsibility of the driver. Avoid using the additional safety margin provided by the system as an excuse for taking unnecessary risks.

Do not make any modifications to the DSC system. Allow only authorized technicians to perform service procedures on the DSC. ◀


Indicator lamp



The indicator lamp will go out shortly after the ignition has been switched on, refer to pages 17, 18.

If the indicator lamp flashes: DSC controls the drive and braking forces.

The indicator lamp stays lit: The system is defective or was turned off using the button. Have the system checked as soon as possible.

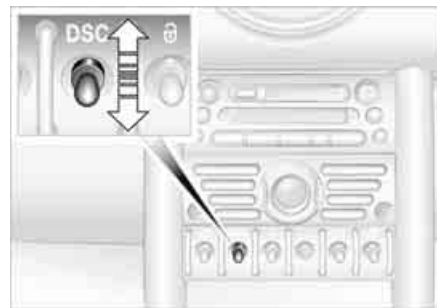

To switch off the DSC

Briefly press the switch. The indicator lamp stays lit.

When driving with snow chains, it may be effective to switch off the DSC for a brief period.



To maintain stability, always drive with the DSC switched on whenever possible. ◀

To switch the DSC back on

Briefly press the switch once again. Indicator lamp goes out.

ANTILOCK BRAKE SYSTEM (ABS)

The concept

The ABS keeps the wheels from locking while braking, thereby enhancing active driving safety.

ABS also includes Electronic Brake Force Distribution (EBD).

Safe braking

Your vehicle is equipped with ABS as a standard feature. The best way to brake the vehicle in critical situations requiring braking is to apply maximum pressure to the brake pedal: panic stop.

Since the vehicle remains maneuverable, you can still go around any obstacles with the smallest possible steering movements.

The pulsation of the brake pedal, together with the sound of hydraulic regulation, indicates to you that ABS is actively taking effect.

Cornering Brake Control (CBC)

Cornering Brake Control (CBC) is an enhancement of ABS that improves vehicle stability especially when braking during cornering.

When the vehicle is being braked, the rear wheels are relieved from load, and this can cause the vehicle to oversteer in curves. CBC counteracts this by making use of unilateral braking pressure to generate a stabilizing counter torque while braking outside of the ABS control range.

Electronic Brake Force Distribution (EBD)

In order to achieve a short braking distance when the vehicle is fully loaded, your vehicle is equipped with relatively large brakes on the rear axle. EBV continuously monitors the speeds of the rear wheels in relation to the front wheels in order to prevent overbraking of the rear wheels even when the vehicle has a light load. If the rear wheels tend to lock, the EBV controls their slip, ensuring operating stability.

FLAT TIRE MONITOR

The concept

As you drive, the Flat Tire Monitor keeps track of the tire inflation pressure in all four tires. The system alerts you when there is a substantial pressure loss in one of the tires relative to another.


The tire inflation pressures are monitored based on the speeds of the four wheels in relation to one another. A flat tire is detected as the result of differences in certain speed ratios, and a warning is generated.

System requirements

So that the system can 'familiarize' itself with the correct inflation pressure, please do the following:

1. Check the tire inflation pressure in all tires
2. Compare them with the inflation pressure table, refer to page 98, and adjust the pressures if necessary
3. Initialize the system.

System limitations


 The Flat Tire Monitor cannot alert you to severe and sudden tire damage caused by external factors, nor does it detect the gradual and minor loss of pressure in all four tires. ◀

On the other hand, the following situations could lead to a delayed detection of pressure loss or to the system not functioning:

- ▷ Driving on snow-covered or slippery roads
- ▷ Performance-oriented driving: slip at the drive wheels, high rates of lateral acceleration
- ▷ When driving with snow chains, false warnings and undetected pressure loss may occur
- ▷ When driving with a space-saver spare tire, the Flat Tire Monitor cannot function.




Initializing the system

 The system must be reinitialized immediately after changing a tire and wheel, or after correcting the pressure in any tire. This requires a bit of driving. ◀

1. Before a journey, start the engine, but do not start driving
2. Press the button long enough for the indicator lamp in the display elements to light up for a few seconds
3. Drive off.

It takes a few minutes before the Flat Tire Monitor can detect a flat tire and issue an alert.

FLAT TIRE MONITOR

 Do not initialize the system if you are driving with snow chains or a space-saver spare tire. ◀

Flat tire



The warning lamp lights up in yellow. An acoustic signal also sounds. There is a flat tire or a significant loss of pressure in a tire.

1. Reduce speed and stop the vehicle with caution. Avoid hard brake applications and steering maneuvers
2. Determine which tire is damaged



If this cannot be determined, contact your MINI Dealer. ◀

3. Repair the flat tire, refer to page [125](#).

With Run Flat tires:

1. Reduce vehicle speed carefully to under 50 mph / 80 km/h. Avoid hard brake applications and steering maneuvers. Do not exceed a speed of 50 mph / 80 km/h
2. Check the tire inflation pressure in all four tires at the earliest opportunity.



If the tire inflation pressure is correct in all four tires, it is possible that the Flat Tire Monitor was not initialized. In this case, initialize the system. ◀


3. To continue driving, follow the instructions on driving with damaged tires on page [101](#).

Malfunction



The warning lamp lights up in yellow. There is a malfunction in the Flat Tire Monitor or the system has failed. Have the system checked as soon as possible.

AIRBAGS

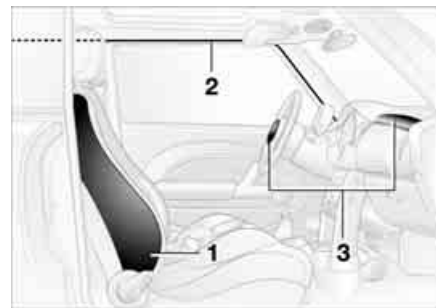

The following airbags are located under the marked covers.

MINI

- 1 Side airbags in seat backrest on the driver and front passenger side: front
- 2 Head airbags on the driver and passenger sides for both rows of seats: front/rear
- 3 Front airbags on the driver and passenger sides

MINI Convertible

- 1 Side/head airbags in the seat backrest on the driver and front passenger sides: front
- 2 Front airbags on the driver and passenger sides

AIRBAGS

Protective effect

The front airbags supplement the safety belts by providing additional protection for the driver and front passenger in the event of a frontal collision in which the protection afforded by the belts alone may no longer be sufficient. When needed, the head and side airbags help to furnish protection in the event of side impact. Each of the side airbags is designed to help support the seat occupant's upper body. The corresponding side/head airbag in the MINI Convertible or the head airbag in the MINI supports the head.

The airbags are designed to not be triggered in certain types of collisions, e.g. in minor accidents, certain kinds of vehicle rollover and rear impact.

For information on the ideal seating position, refer to page 41.



Do not apply adhesive materials to the cover panels of the airbags, cover them or modify them in any other way. Do not fit covers, cushions or other items to the front seats that have not been specially approved for seats with side airbags. Do not hang clothing, e.g. jackets, over the backrests.

Do not attempt to remove the airbag

restraint system from the vehicle. Do not touch the individual components directly after the system has been triggered, as otherwise there is a danger of burns. In the event of malfunctions, deactivation or deployment of the airbag restraint system, have the system checked, repaired or disassembled only by a MINI Dealer or a workshop with specially trained personnel working in accordance with the specifications of the MINI manufacturer and having the necessary permits for handling explosive devices. Unprofessional attempts to service the system could lead to failure in an emergency or undesired airbag activation, either of which could result in personal injury. ◀

Airbag warning information is also provided on the sun visors.

Airbag system operational



The warning lamp in the display elements shows the status of the entire airbag system and the seat belt tensioners starting from ignition key position 1. The warning lamp goes out after several seconds.

Airbag system malfunctioning

- ▷ The warning lamp does not come on starting from ignition key position 1
- ▷ The warning lamp stays lit
- ▷ The warning lamp lights up while driving.




In the event of a malfunction, have the airbag system checked immediately. Otherwise, there is a risk that the system will not function as intended in response to a severe impact occurring within the system's normal triggering range. ◀

PARK DISTANCE CONTROL (PDC)*

The concept


The PDC assists you when you back into a parking space. A signal tone tells you the current distance to an object behind your vehicle. To do this, four ultrasonic sensors in the rear bumper measure the distance to the nearest object.

The sensors on each side have a range of approx. 2 ft / 60 cm, the middle sensors one of approx. 5 ft / 1.5 m.

 PDC is a parking aid that can identify objects if they are approached slowly, as is generally the case when parking. Avoid driving towards objects rapidly; due to underlying physical principles, the system may otherwise alert you too late for you to take evasive steps. ◀

Automatic function

With the ignition key in position 2, the system starts to operate automatically about one second after you select reverse gear or place the selector lever in position R.

 Wait for this one second before you drive backwards. ◀

The system is deactivated when you shift away from Reverse.



You can have a signal tone set as a confirmation that PDC has been activated. ◀

Acoustical signals

The distance to an object is indicated by a tone sounding at intervals. As the distance between vehicle and object decreases, the intervals between the tones become shorter. A continuous tone indicates the presence of an object less than 8 in / 20 cm away.

The warning signal is canceled after approx. three seconds if the distance to the object remains constant during this time, for instance if you are moving parallel to a wall.

Malfunction

A continuous high-pitched tone will sound during initial activation. The system is malfunctioning. Have the system checked.

Volume control

The volume of the Park Distance Control signal can be adjusted from level 1, soft, to level 6, loud.



You can have this function set. ◀

System limitations




Even with PDC, final responsibility for estimating the distance between the vehicle and any objects always remains with the driver.

Even when sensors are involved, there is a blind spot in which objects cannot be detected. Recognition of some objects can be beyond the limits of physical ultrasonic measurement, for example with towing bars or hitches or with thin or wedge-shaped objects. Moreover, low objects that have already been detected, such as a curb edge, can disappear out of the range of the sensors before a continuous tone sounds. Loud sources of sound outside and inside your vehicle can drown the PDC signal tone. ◀



Keep the sensors clean and free of ice or snow in order to ensure that they will continue to operate effectively. Do not apply high pressure spray to the sensors for a prolonged period of time. Always maintain a distance which is greater than 4 in / 10 cm. ◀

AIR CONDITIONING SYSTEM*

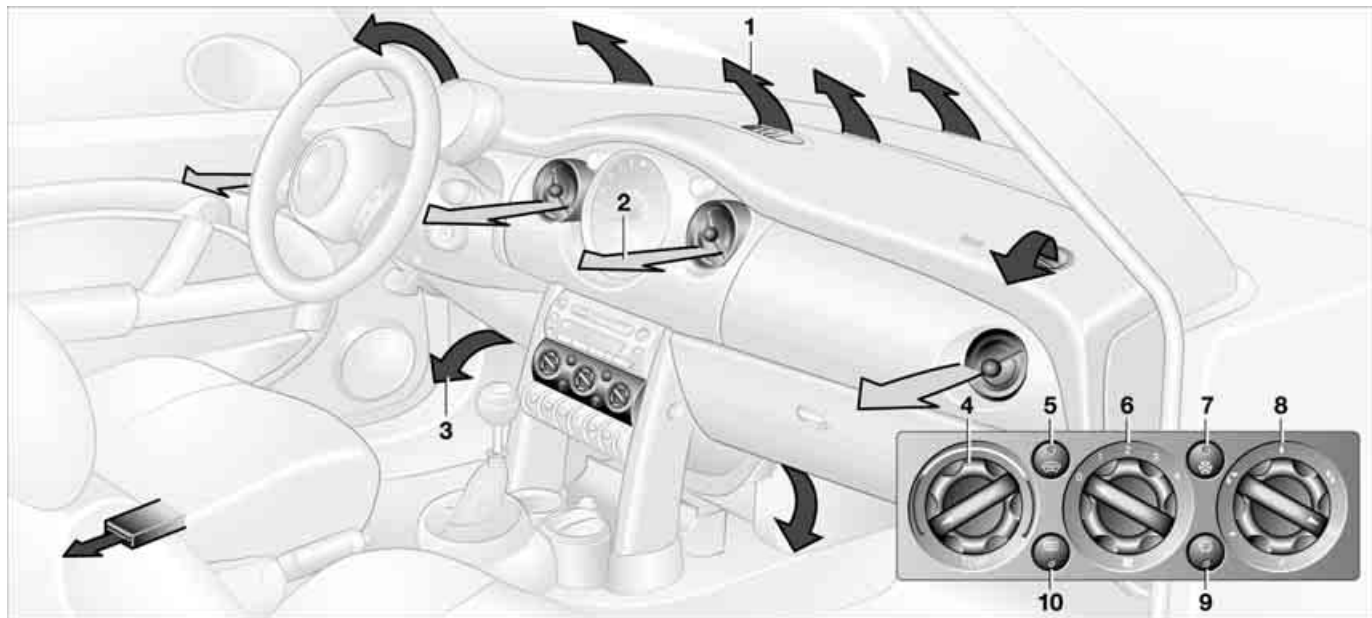

- 1 Air onto the windshield and onto the side windows
- 2 Air for the upper body area [77](#)
- 3 Air for the front and rear footwells

- 4 Temperature [76](#)
- 5 Windshield heating* [76](#)
- 6 Air volume/Blower [76](#)
- 7 Air conditioning [76](#)

- 8 Air distribution [76](#)
- 9 Recirculated air mode [76](#)
- 10 Rear window defroster [76](#)

AIR CONDITIONING SYSTEM*

Air volume/Blower



You can select blower speeds from 1 to 4. Position 0: fan is turned off. The button for recirculated air mode fully blocks the supply of air from outside.

The heating, ventilation and air conditioning operate in position 1 or higher.

Temperature



Turn to the right, red, to increase the temperature of the passenger compartment.

Rapid heating: turn to the extreme right. Then select a pleasant interior temperature.

Air distribution



Air distribution in upper body region →, upper body region and footwell ↗, footwell ↓, footwell and windows ↕, and windows ☹.

All intermediate positions are possible, refer to illustration and overview on page 75.

Rear window defroster



Rear window defroster switched on:
Indicator lamp lights up.

As long as the indicator lamp is lit, the window heater is operating.

The heater switches off automatically after a short time.

Windshield heating*



Windshield heating switched on:
Indicator lamp lights up.

As long as the indicator lamp is lit, the window heater is operating. The heater switches off automatically after a short time.

Air conditioning



Air conditioning switched on:
indicator lamp lights up.

The air is cooled and dehumidified and, depending on the temperature setting, rewarmed.

After the engine has started, the windshield can temporarily fog over. Condensation on the windows is reduced when the air conditioning is turned on.



When the air conditioning is on, condensation is formed which then exits under the vehicle. Traces of condensed water on the ground are therefore normal. ◀

Recirculated air mode




Supply of outside air into the vehicle is blocked:
Indicator lamp lights up.

The air within the vehicle is recirculated.



If the windows fog up in the recirculated air mode, turn the recirculated air mode off and if necessary increase the air supply. The recirculated air mode should not be constantly used over a longer period of time, as the air quality in the vehicle's interior will otherwise gradually deteriorate. ◀

AIR CONDITIONING SYSTEM*

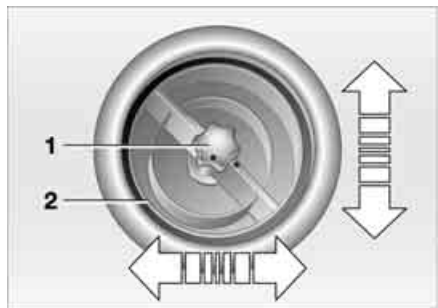

Microfilter*

The integrated microfilter removes dust and pollen from the incoming or recirculated air.

Your MINI Dealer will replace it during routine maintenance. A substantial reduction in the air supply indicates that the filter must be replaced before scheduled maintenance.



Draft-free ventilation


Air supply for the upper body area:

Button 1: air outlets can be opened and closed by turning.


The points indicate the position in each case.

Nozzle 2: change the direction of the airflow by swiveling.

Defrosting and demisting windows

1. Set the rotary blower speed control for the airflow rate to position 4
2. Turn the rotary temperature control completely to the right, red
3. Turn the rotary switch for air distribution to position .
Condensation is removed from the windows more quickly by activating the air conditioning
4. Turn on windshield heating if necessary
5. To defrost the rear window: turn on the rear window heater.

AUTOMATIC CLIMATE CONTROL*

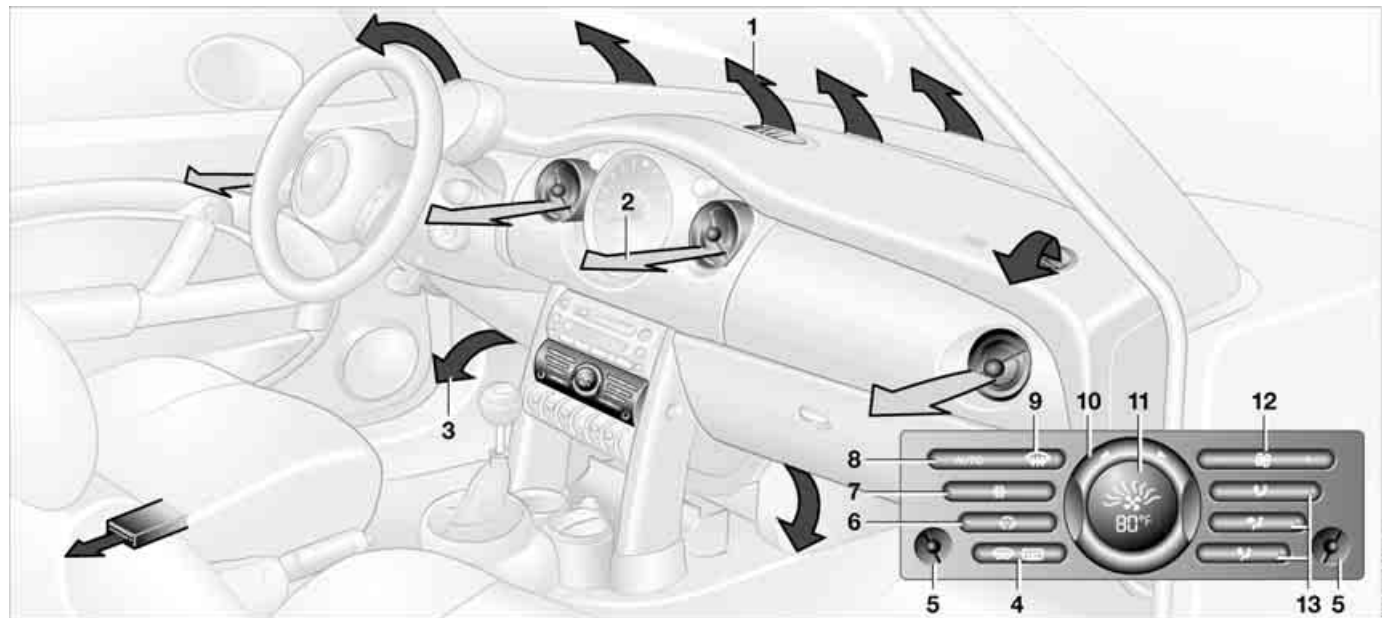


- 1 Air onto the windshield and onto the side windows
- 2 Air for the upper body area [80](#)
- 3 Air for the front and rear footwells
- 4 Rear window defroster and windshield heating* [79](#)
- 5 Interior temperature sensor, please keep clear and unobstructed
- 6 Recirculated air mode [79](#)
- 7 Air conditioning [76](#)
- 8 Automatic air distribution and volume [79](#)
- 9 Defrosting and demisting the windshield and side windows [80](#)
- 10 Temperature [79](#)
- 11 Display for air temperature and air volume [79](#)
- 12 Air volume/Blower, switching air conditioner on/off [79](#)
- 13 Individual air distribution [80](#)

MV01899SME

AUTOMATIC CLIMATE CONTROL*


Automatic air distribution and volume

 Automatic program (AUTO):
Indicator lamp lights up.

Automatic adjustment of the air distribution and volume, and adaptation of the specified temperatures to external influences, i.e. outside temperature and sunlight.

In the automatic program (AUTO), the air conditioning is activated automatically. To create a pleasant air climate, the air temperature coming from the vents in the upper body area is lower than the air temperature in the footwell.


Air volume/Blower Switching automatic climate control off/on

 Air volume/Blower.
Press the left or right half of the button. The air volume varies. Automatic adjustment of the air volume is deactivated.

Switching air conditioner on/off.
Press the left half of the button while the blower is at the lowest setting. The blower, heating and air conditioning are switched off. All displays go out.


Switch the automatic climate control back on by pressing any button.

Air conditioning


 Indicator lamp lights up.
The air is cooled and dehumidified and, depending on the temperature setting, rewarmed.

In the automatic program (AUTO), the air conditioning is activated automatically.


After the engine has started, the windshield can temporarily fog over. In the air conditioning mode, there is less condensation on the windows.

 When the air conditioning is on, condensation is formed which then exits under the vehicle. Traces of condensed water on the ground are therefore normal. ◀


Recirculated air mode

 Supply of outside air into the vehicle is blocked. indicator lamp lights up.
The air within the vehicle is recirculated.
In the automatic program (AUTO) in hot weather conditions, the recirculated air mode is activated temporarily to enable


faster cooling.
The indicator lamp for the recirculated air button is not lit.

 The recirculated air mode should not be constantly used over a longer period of time, as the air quality in the vehicle's interior will otherwise gradually deteriorate. If the windows fog up in the recirculated air mode, turn the recirculated air mode off and if necessary increase the air supply. ◀


Rear window defroster and windshield heating*

 Indicator lamp lights up.
As long as the indicator lamp is lit, the window heater is operating.
The heater switches off automatically after a short time.


Temperature

 Tap or turn the wheel in the appropriate direction to change the temperature step by step.
The figures in the display provide a general indication of interior temperature.
When you start the vehicle, the system ensures that the selected temperature is achieved as quickly as possible and then maintained.

AUTOMATIC CLIMATE CONTROL*

 Permanent heating with maximum power output at temperature selection HI. Permanent cooling at LO. With the setting at HI, the recirculated air mode cannot be switched on. ◀


Defrosting and demisting windows


 Press the button. Indicator lamp lights up. Ice and condensation are rapidly removed from the rear window, windshield and side windows.


Condensation is removed from the windows more quickly when the air conditioning is also activated.

The rear window defroster/windshield heating are switched on automatically. They can be switched off again via the respective button.

Individual air distribution

 Combine the air distribution yourself. Automatic adjustment of the air distribution is deactivated.


 It is not possible to distribute air simultaneously toward the windows and toward the upper body area.

 You can switch the unit from °F to °C by pressing the buttons for air conditioning and air distribution toward the footwell at the same time. ◀

Microfilter/Activated-charcoal filter

The microfilter removes dust and pollen from the incoming or recirculated air. The activated-charcoal filter provides additional protection by filtering gaseous pollutants from the outside air.

Your MINI Dealer replaces this combined filter as a standard part of your scheduled maintenance. A substantial reduction in the air supply indicates that the filter must be replaced before scheduled maintenance.

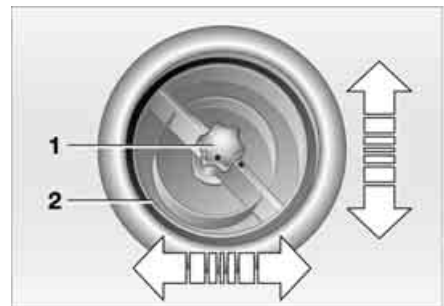


Draft-free ventilation

Air supply for the upper body area:

Button 1: air outlets can be opened and closed by turning. The points indicate the position in each case.


Vent 2: change the direction of the airflow by swiveling.

GLOVE COMPARTMENT

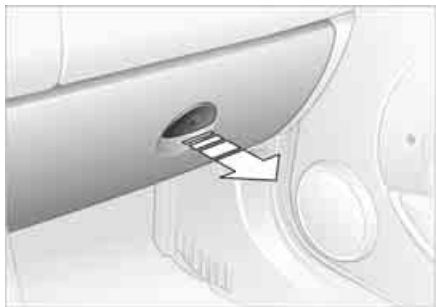

To open:
Pull the handle.
The light goes on.

To close:
Fold the door up.

 To prevent injury in the event of an accident, close the glove compartment immediately after use. ◀




Ventilation

Turn the rotary switch to a horizontal position:


The vents are open.

Turn the rotary switch to a vertical position, arrow:

The vents are closed.

 Depending on the temperature setting of the air conditioning or the automatic climate control, high temperatures may result in the glove compartment. ◀

ASHTRAY, DRINKS HOLDERS

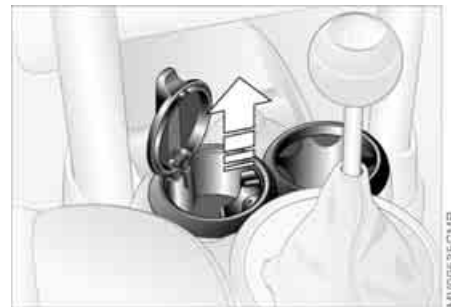


Ashtray

The ashtray is located in one of the beverage holders in the center console.


In the rear, an ashtray can also be fitted in the beverage holder at the end of the center console.

Beverage holders


There are two beverage holders at the front of the center console. Another is located at the end of the center console in the rear.

 Do not place any glass containers in the beverage holders, as this increases the risk of injury in the event of an accident. ◀

CIGARETTE LIGHTER, 12 V POWER SUPPLY

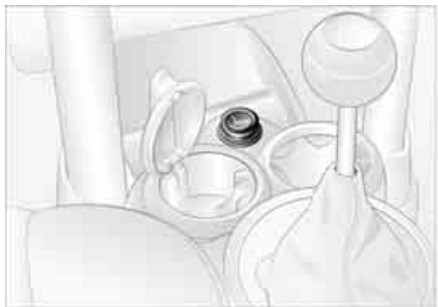


When the vehicle is equipped with a MINI Mobility System, the 12 V socket is also for supplying the compressor.

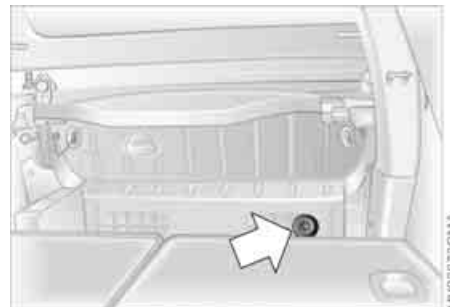

From ignition key position 1:

Press the cigarette lighter in.

Remove as soon as the lighter jumps back out.

 Hold or touch the hot cigarette lighter by the knob only. Holding or touching it in other areas could result in burns. ◀

Cigarette lighter socket, 12 V power supply

Suitable as a power socket for flashlights, car vacuum cleaners, etc., up to a rating of approx. 200 watts at 12 volts.

Avoid damaging the socket with plugs of different shapes or sizes.

12 V socket in the luggage compartment* of the MINI Convertible

The socket is located in the luggage compartment on the left-hand side of the rear panel, arrow.

If the vehicle is equipped with a MINI Mobility System, the 12 V socket is also for supplying the compressor.

INTEGRATED UNIVERSAL REMOTE CONTROL*

The concept

The integrated universal remote control takes the place of up to three different control devices for different radio-remote-controlled systems such as gate openers and household alarm systems. The integrated universal remote control detects and learns the signal transmitted by the original control device.

The signal of an original control device can be programmed onto one of the three memory buttons 1. The system in question can then be operated by means of the programmed memory button 1. Signal transmission is indicated by indicator lamp 2.

If you decide to sell your vehicle one day, in the interest of your own security, remember to delete the programs before the vehicle leaves your possession, refer to page 84.



While programming is in progress and before operating any programmed system by remote control using the integrated universal remote control, make sure that the movement area of the system in question is clear of people, animals and inanimate obstructions, in order to avoid possible injury or damage. Also comply with the safety precautions issued for the original control device. ◀

Checking compatibility



If this symbol is depicted on the packaging or in the operating instructions of the original control device, it is safe to assume that the remote-controlled system is compatible with the integrated universal remote control.




If you have additional questions, please consult your MINI center or call 1-800-355-3515.

You can also visit these websites:

www.miniusa.com or

www.homelink.com.

HomeLink is a registered trademark owned by Johnson Controls, Inc. ◀

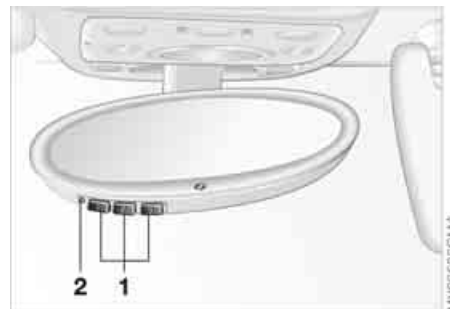

Programming

- 1 Memory buttons
- 2 Indicator lamp

Fixed-code control device

1. Switch on the ignition
2. During initial operation: press and hold both outer buttons 1 approx. 20 seconds until indicator lamp 2 flashes. This clears all three memory buttons 1
3. Hold the original control device approx. 2 to 8 in / 5 to 20 cm away from memory buttons 1.




The required distance between the control device and memory buttons 1 may vary, depending on the system of the original control device in question. ◀

INTEGRATED UNIVERSAL REMOTE CONTROL*

4. Simultaneously press the command button of the original control device and the desired memory button 1 on the integrated universal remote control. The indicator lamp 2 begins to flash slowly. Release both buttons when indicator lamp 2 starts flashing rapidly. If indicator lamp 2 does not start to flash rapidly after approx. 15 seconds, change the distance between the two devices
5. Repeat steps 3 and 4 to program other original control devices.

The corresponding memory button 1 is now programmed with the signal of the original control device.

The system can be operated as soon as the ignition is switched on.


 If the system cannot be operated after repeated attempts at programming, check whether the original control device is equipped with an alternating-code system. You can either check the operating instructions of the original control device for this information, or you can press and hold down the programmed memory button 1 of the integrated universal remote control. If indicator lamp 2 of the integrated universal remote control flashes rapidly for a brief period and then

remains on for approx. two seconds, the original control device is equipped with an alternating-code system. In this case, the memory buttons 1 are programmed as described for an alternating-code control device. ◀

Alternating-code control device

You will need to refer to the operating instructions of the system in question in order to program the integrated universal remote control. Read through the operating instructions for information on synchronization.

Observe the following additional instructions when you program an alternating-code control device:

 You will find programming easier if you have the assistance of a second person. ◀

1. Park your vehicle within range of the radio-remote-controlled device
2. Program the integrated universal remote control as described above in the section on fixed-code programming
3. Locate the button on the receiver of the target device, for example on the upper part of the drive

4. Press the button on the receiver of the target device. Once you have completed step 4, you have approx. 30 seconds to complete step 5
5. Press the programmed memory button 1 of the integrated universal remote control three times.

The corresponding memory button 1 is now programmed with the signal of the original control device.

 Consult your MINI Dealer if you have any questions. ◀

Deleting memory buttons


It is not possible to delete individual memory buttons 1. To delete all three memory buttons 1 at the same time, however, perform the following steps:


Press and hold both outer buttons 1 of the integrated universal remote control for approx. 20 seconds until indicator lamp 2 flashes.

LUGGAGE COMPARTMENT IN THE MINI

Luggage compartment cover

When the tailgate is opened, the luggage compartment cover is also raised.

 Never place any heavy or hard objects on the luggage compartment cover; otherwise occupants could be injured during braking maneuvers. ◀

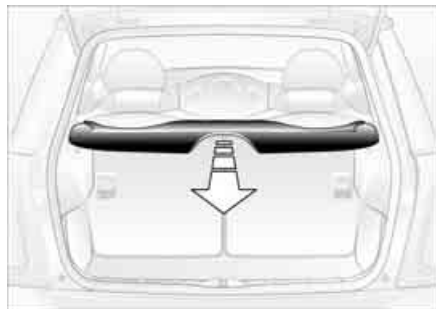

Removal


To load bulky luggage, the compartment cover can be removed.

1. Remove the retaining straps on the tailgate
2. Pull the luggage compartment cover out towards the rear.




Foldable rear backrest

1. Pull lever
2. Fold the rear backrest forwards.

 When folding the backrest back into its original position, always ensure that the catch engages securely. A loose backrest might fail to prevent cargo from entering the passenger compartment during sudden braking or evasive maneuvers, posing a potential hazard to occupants. ◀


LUGGAGE COMPARTMENT IN THE MINI CONVERTIBLE

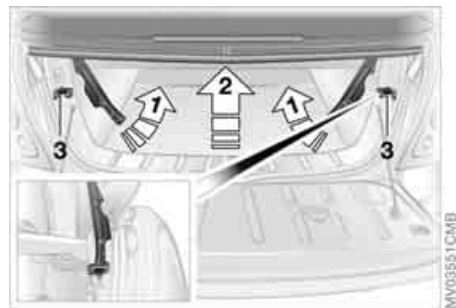

Loading aid

When the convertible top is closed, you can load the vehicle more easily by releasing the convertible top and folding it up.

1. Release the convertible top using the handles, arrows 1
2. Lift the convertible top, arrow 2
3. Fold back the handles and place them on brackets 3.


 Lock the handles in place again completely so that the convertible top can be operated. ◀




Expanding the luggage compartment volume

You can enlarge the luggage compartment volume when the convertible top is closed.

1. Fold the convertible top upwards, refer to Loading aid
2. Remove the luggage compartment cover from the brackets, arrow 1, and engage it on the upper support pins, arrow 2.

 Move the luggage compartment cover to its lower position again so that the convertible top can be operated. ◀


LOADING CARGO

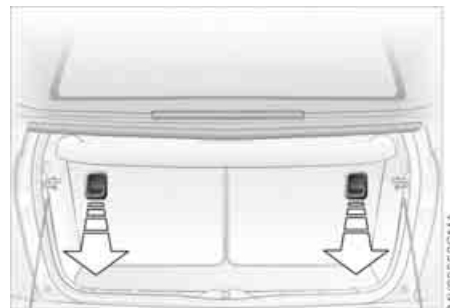


Through-loading system

To be able to transport larger objects, the rear backrest can be folded.

1. Unlock the catch for the rear backrest with an ignition key or master key, refer to Manual release in the MINI Convertible on page 30
2. Pull the lever to release the catch
3. Fold the backrest forward.

 When folding the backrest back into its original position, always ensure that the catch engages securely. A loose backrest might fail to prevent cargo from entering the passenger compartment during sudden braking or evasive maneuvers, posing a potential hazard to occupants. ◀


LOADING CARGO

 Avoid overloading the vehicle so that the permitted load on the tires is not exceeded. Overloading can lead to overheating and damage inside the tires. Depending on the circumstances, this can result in sudden air loss. ◀



Determining cargo limit

1. Locate the following statement on your vehicle's placard:

 The combined weight of occupants and cargo should never exceed XXX kg or YYY lbs, as this could otherwise result in damage to the vehicle and unstable driving conditions. ◀

2. Determine the combined weight of the driver and passengers that will be riding in your vehicle
3. Subtract the combined weight of the driver and passengers from XXX kilograms or YYY pounds



4. The resulting figure equals the available amount of cargo and luggage load capacity.

For example, if the XXX amount equals 1,400 lbs. and there will be four 150 lbs. passengers in your vehicle, the amount of available cargo and luggage load capacity is 800 lbs.:

1,400 lbs. minus 600 lbs. = 800 lbs.

5. Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4
6. If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult the manual for transporting a trailer to determine how this may reduce the available cargo and luggage load capacity of your vehicle.

LOADING CARGO

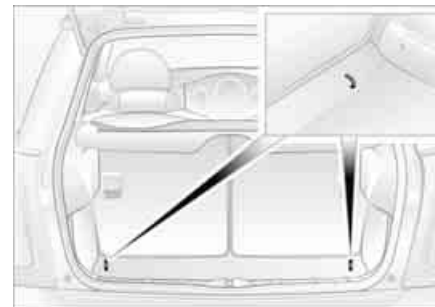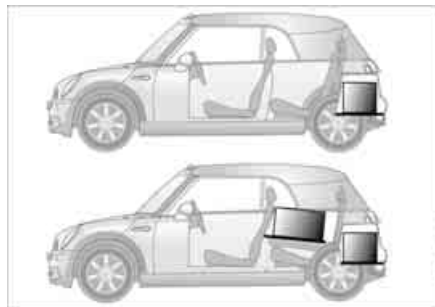

Stowing cargo

- ▷ Place heavy cargo as far forward as possible, directly behind the backrests, and as low as possible
- ▷ Cover sharp edges and corners
- ▷ Do not pile objects higher than the top edges of the backrests.


For very heavy cargo when the rear seat is unoccupied, fasten each safety belt in the opposite buckle. This provides additional stabilization for the rear backrests.

Securing the load

The illustration shows by way of example the luggage compartment of the MINI.


- ▷ Secure smaller and lighter items using the luggage compartment net* or elastic straps
- ▷ Secure larger and heavier items with load-securing devices*. Lashing eyelets are provided at the inner corners of the luggage compartment for attaching these load-securing devices. Comply with the information enclosed with the load-securing devices.


ROOF-MOUNTED LUGGAGE RACK*

 Always position and secure the load as described above. If you do not, it can pose a danger to the passengers during braking and evasive maneuvers, for example.

Do not exceed the permissible gross weight and axle load, refer to page 143 ff; otherwise the vehicle's operating safety is no longer assured and it will not be in compliance with the certification regulations.

Do not stow heavy or hard objects in the passenger compartment without first securing them. Otherwise they would be thrown around during braking and evasive maneuvers and endanger the occupants. ◀

 When loading a roof-mounted luggage rack on the MINI, make sure that there is sufficient space for the movement of the glass sunroof and that no objects protrude into the swiveling area of the tailgate, as otherwise damage can occur. Do not secure the roof-mounted luggage rack to the MINI's trim strips or to the MINI Convertible top. Otherwise, the lack of a secure hold could lead to damage or accidents. ◀

 Special roof-mounted luggage racks for your MINI are available as accessories from your MINI Dealer. ◀



OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS

TECHNICAL DATA

DATA

INDEX

INDEX

BREAK-IN PROCEDURES

To ensure that your vehicle provides maximum economy throughout a long service life, we request that you comply with the following information:

Engine

Up to 1,250 miles / 2,000 km:

Drive at varying engine and road speeds, but do not exceed the following engine or road speeds:

4,500 rpm or

95 mph / 150 km/h.

Comply with the local speed limits.

Absolutely avoid putting the accelerator in full-throttle or kickdown position.

After having driven 1,250 miles / 2,000 km, engine and road speeds can be gradually increased.

Tires

Due to technical factors associated with their manufacture, tires do not achieve their full traction potential until after an initial break-in period. Therefore drive carefully during the first 200 miles / 300 km.

Brake system

Approx. 300 miles / 500 km must be driven before the brake pads and rotors achieve the optimum pad-surface and wear patterns required for trouble-free operation and an extended service life.

Clutch

Roughly 300 miles / 500 km must be driven before the clutch starts to operate at optimum efficiency. Remember to engage the clutch carefully during this initial period.

After a part replacement

You should again comply with these break-in procedures if parts mentioned above have to be replaced later in the vehicle's life.

GENERAL DRIVING NOTES

Parking the vehicle


Condensation forms in the air conditioner system during operation, and then exits under the vehicle. Traces of condensed water on the ground are therefore normal.

Safe braking


Your vehicle is equipped with ABS as a standard feature. The best way to brake the vehicle in critical situations requiring braking is to apply maximum pressure to the brake pedal: panic stop. Since the vehicle remains maneuverable, you can still go around any obstacles with the smallest possible steering movements.

The pulsation of the brake pedal, together with the sound of hydraulic regulation, indicates to you that ABS is actively taking effect.


Hydroplaning

 When driving on wet or slushy roads, reduce road speed. If you do not, a wedge of water can form between tires and road surface. This phenomenon is characterized by a partial or complete loss of contact between the tires and the road surface. The ultimate results are loss of steering and braking control. ◀


Mobile communications in the vehicle

 The manufacturer of your MINI recommends that you do not use mobile devices, e.g. cellular phones, inside the vehicle without directly connecting them to an outside antenna. Otherwise, interference between the vehicle electronics and the mobile device cannot be ruled out. In addition, it is not ensured that the radiation emitted during mobile transmission will be directed outside of the vehicle. ◀


Driving through water

 Do not drive through water on the road if it is deeper than 1 ft / 30 cm, and then only at walking speed at the most. Otherwise, the vehicle's engine, the electrical systems and the transmission may be damaged. ◀


Clothes hooks


 When suspending clothing from the hooks, ensure that they will not obstruct the driver's vision. Do not hang heavy objects on the hooks. If you do, they could injure the occupants during braking or evasive maneuvers. ◀

Hot exhaust system


 High temperatures occur in any vehicle equipped with a catalytic converter. Do not remove the heat protection plates fitted in the area of the exhaust system and do not apply body-cavity protectant to this area. When driving, standing at idle, and parking the vehicle, take care to avoid contact between the hot exhaust system and flammable materials, e.g. hay, grass, leaves, etc. Such contact could lead to a fire resulting in serious personal injury and property damage. ◀

REFUELING

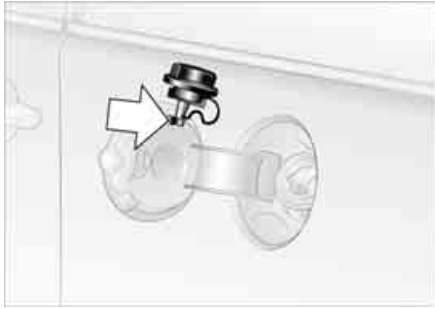


 Always switch off the engine before refueling. If you do not, fuel cannot be filled into the tank and the SERVICE ENGINE SOON lamp may come on. ◀

1. Open the fuel filler door
2. Turn the gas cap counterclockwise
3. Put the gas cap in the bracket attached to the fuel filler door.

 Always observe all applicable precautions and regulations when handling fuels. Never carry spare fuel containers in your vehicle. Whether empty or full, these containers can leak, cause an explosion, and lead to fire in the event of a collision. ◀

Observe the following when refueling

 Always observe all safety precautions posted at the service station when handling fuel. ◀


When refueling, insert the filler nozzle completely into the filler pipe. Pulling the nozzle out of the pipe during refueling:

- ▷ Results in premature pump shutoff
- ▷ Will reduce the effect of the fuel vapor recovery system on the pump.

As long as the filler nozzle is used properly, the fuel tank is full whenever the nozzle shuts off the first time.

Closing the gas cap

1. Put on gas cap
2. Turn gas cap clockwise until it clicks
3. Close fuel filler door.

 Close the gas cap carefully after refuelling until a click is heard. While closing, be sure not to squeeze the strap which is fastened to the cap. ◀


US models only:



The warning lamp* comes on. The gas cap is not correctly closed or missing. Check if the gas cap is correctly closed.

Fuel tank volume

Approx. 13.2 gallons / 50 liters, of which approx. 2.1 gallons / 8 liters are reserve capacity.

 Do not drive until the fuel tank is totally empty. Otherwise engine operations are not guaranteed and damage could occur. ◀

Fuel specification


The engine uses lead-free gasoline only.

Required fuel

Premium Unleaded Gasoline, Minimum Octane Rating: 91.


Minimum Octane Rating corresponds to the Anti Knock Index (AKI) and is determined according to the so-called (R+M)/2 method.

REFUELING

 Do not use leaded gasoline, as otherwise the lambda probe and catalytic converter will be permanently damaged. ◀

Use high-quality brands

Field experience has indicated significant differences in fuel quality: volatility, composition, additives, etc., among gasolines offered for sale in the United States and Canada. Fuels containing up to and including 10% ethanol or other oxygenates with up to 2.8% oxygen by weight, that is, 15% MTBE or 3% methanol plus an equivalent amount of co-solvent, will not void the applicable warranties with respect to defects in materials or workmanship.


 The use of poor-quality fuels may result in driveability, starting and stalling problems especially under certain environmental conditions such as high ambient temperature and high altitude. Should you encounter driveability problems which you suspect could be related to the fuel you are using, we recommend that you respond by switching to a recognized high-quality brand. Failure to comply with these recommendations may result in unscheduled maintenance. ◀



Manual release with the MINI

In the event of an electrical malfunction, the fuel filler door can be unlocked manually.

1. Remove the side trim panel on the left-hand side of the luggage compartment
2. Pull the white lever toward the rear.
The fuel filler door is released
3. Open the fuel filler door.

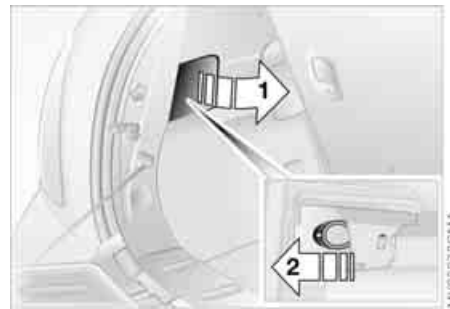

Manual release with the MINI Convertible


In the event of an electrical malfunction, the fuel filler door can be unlocked manually.

1. Remove the cover of the side trim panel on the left-hand side, arrow 1
2. Pull the green strap toward the rear, arrow 2.
The fuel filler door is released
3. Open the fuel filler door.

BRAKE SYSTEM

Brake fluid level

If the brake fluid level is too low and brake pedal travel has become longer, there may be a defect in one of the brake system's hydraulic circuits.

 Proceed to the nearest MINI Dealer. Higher brake application pressure may be necessary under these conditions, there may be a slight pull to one side, and brake pedal travel may be longer. Please remember to adapt your driving style accordingly. ◀

Disc brakes


When the vehicle is driven only occasionally, during extended periods when the vehicle is not used at all, and in operating conditions where brake applications are less frequent, there is an increased tendency for corrosion of the brake rotors and accumulation of contamination on the brake pads. This occurs because the minimal pressure that must be exerted by the pads to clean the rotors by brake applications is not reached.

Corrosion on brake rotors is signaled by a running or pulsation during braking; even extended subsequent braking will not cure this phenomenon.

It is a good idea to periodically dry the brakes with a gentle application when driving in rain and on wet roads.

Monitor traffic conditions to ensure that this maneuver does not endanger other road users. The resulting heat dries the brake rotors and pads. Then if the braking force is needed, it is immediately available.

Driving downhill

 To prevent overheating and the resulting reduced efficiency of the brake system, drive down extended or steep mountain gradients in the gear which requires the least brake applications. Otherwise, even light but consistent pedal pressure can lead to high temperatures, brake wear and possibly even brake failure. ◀

The braking effect of the engine can be further utilized by downshifting, to first gear if necessary, in the manual mode of the automatic transmission, refer to page 55. This protects the brakes from excessive loads.



Do not coast with the clutch pedal pressed or with the transmission or selector lever in Neutral. Do not coast with the engine switched off. The engine provides no braking effect when the transmission is in Neutral, and there is no power-assist for braking or steering when the engine is switched off.

Make sure that there are no floor mats, floor carpets or other objects in the vicinity of the brake or accelerator pedal, as the travel path of the pedals could otherwise be impeded. ◀

Brake pads

Brake pad sensors in the left brake pads of the front axle and in the right brake pads of the rear axle monitor the brake pad condition. When the brake pads reach the wear limit, the brake wear warning lights up, refer to page 18.




Use brake pads which the manufacturer of your MINI has approved for your particular vehicle model. The manufacturer of your MINI cannot evaluate non-approved brake pads to determine if they are suitable for use, and therefore cannot ensure the operating safety of the vehicle in the event of their use. ◀

TIRE INFLATION PRESSURE

Information for your safety

It is not merely the tire's service life, but also driving safety and driving comfort that depend on the condition of the tires and the maintenance of the specified tire pressure.

 Check tire inflation pressures regularly and correct them if necessary, including the space-saver spare tire: at least twice a month and before long journeys. Failure to observe this precaution can result in incorrect tire pressures, which cause unstable handling response as well as tire damage, and can ultimately lead to an accident.

Do not drive with deflated, i.e. flat, tires except if Run Flat tires are fitted. A flat tire greatly impairs steering and braking response, and can lead to complete loss of control over the vehicle. ◀

Checking tire inflation pressures

Check the tire inflation pressures only on cold tires. This means after driving a maximum of 1.25 miles / 2 km or when the vehicle has been parked for at least 2 hours. Warm tires have higher pressures. After correcting the tire inflation pressure, reinitialize the Flat Tire Monitor, refer to page [71](#).




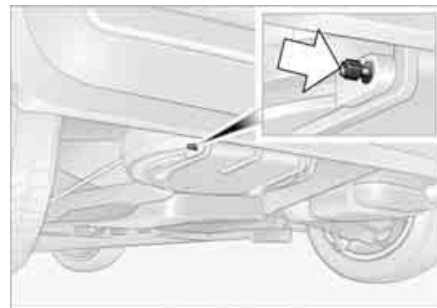
Tire inflation pressures for original tires

The tire inflation pressures for your standard tires are shown on the driver's-side door post, visible when the door is open.

Tire inflation pressures for other tire sizes

In the following tire pressure table, all pressures are given for the specified tire sizes at ambient temperature.

 In order to determine the correct inflation pressures for your tires, refer to the values for the tire size in question. ◀



Checking the inflation pressure on the space-saver spare tire

Behind the bumper there is a valve extension accessible from the outside for checking the inflation pressure.

Tire size

The tire inflation pressures apply to the tire sizes approved and the tire brands recommended by the manufacturer of your MINI or MINI Convertible. Your MINI Dealer will be glad to advise you.

TIRE INFLATION PRESSURE

Model	Tire size	Pressures specified in psi / kPa			
	All pressure specifications in the table are indicated in psi / kilopascal with cold tires. Cold = ambient temperature				
MINI COOPER	175/65 R 15 84 H 175/65 R 15 84 Q M+S	30 / 210	35 / 240	35 / 240	35 / 240
	195/55 R 16 87 H 195/55 R 16 87 H M+S 205/45 R 17 84 V 205/45 R 17 84 V M+S	30 / 210	30 / 210	35 / 240	35 / 240
	175/65 R 15 84 Q M+S 175/60 R 15 82 Q M+S 195/55 R 16 87 Q M+S 205/45 R 17 84 Q M+S 205/40 R 18 82 W	33 / 230	33 / 230	38 / 260	38 / 260
	Space-saver spare tire T 115/70 R 15 90 M	61 / 420	61 / 420	61 / 420	61 / 420
	MINI COOPER S	195/55 R 16 87 V 195/55 R 16 87 V M+S	30 / 210	30 / 210	35 / 240
205/45 R 17 84 V 205/45 R 17 84 Q M+S 205/45 R 17 84 V M+S 195/55 R 16 87 Q M+S		33 / 230	33 / 230	38 / 260	38 / 260
175/60 R 16 82 Q M+S 205/40 R 18 82 W		36 / 250	36 / 250	41 / 280	41 / 280


More information about permissible loads and weights can be found on pages [143](#), [144](#).

TIRE CODING

Knowing the tire code on the tire's sidewall makes it easier for you to choose and identify the correct tires.

Tire size

e.g.

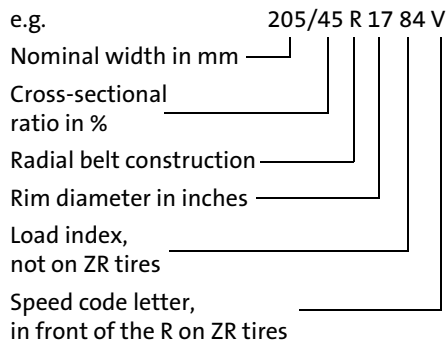

Speed code letters:

Q = up to 100 mph / 160 km/h

T = up to 118 mph / 190 km/h

H = up to 131 mph / 210 km/h

V = up to 150 mph / 240 km/h

W = up to 167 mph / 270 km/h

Tire Identification Number

Tires with DOT codes meet the guidelines of the U.S. Department of Transportation.

DOT code:

e.g.

DOT xxxx xxx 2704

Manufacturer's code
for tire make

Tire size and
tire version

Tire age

Tire age

The date on which the tire was manufactured is indicated by the code on the sidewall:

DOT...2704 indicates that the tire was manufactured in Week 27 of the year 2004.

The manufacturer of your vehicle recommends replacing all tires after 6 years at the latest, even if a tire service life of 10 years is possible.

Uniform Tire Quality Grading

Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width.

For example:

Treadwear 200 Traction AA

Temperature A

DOT quality grades

Tread wear

Traction AA A B C

Temperature A B C



All passenger car tires must conform to Federal Safety Requirements in addition to these grades. ◀

Tread wear

The tread wear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course.

For example, a tire graded 150 would wear one and one-half, 1 ½, times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

TIRE CODING

Traction

The traction grades, from highest to lowest, are AA, A, B, and C.

Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.



The traction grade assigned to this tire is based on straight-ahead braking traction tests, and does not include acceleration, cornering, hydroplaning, or peak traction characteristics. ◀

Temperature

The temperature grades are A, the highest, B and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety

Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.



The temperature grade for this tire is established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure. ◀

RSC: Run Flat tires

You will recognize Run Flat tires by a circular symbol containing the letters RSC on the side of the tire, refer to page [101](#).

M+S

Winter and all-season tires. These have better winter performance properties than summer tires.

TIRE CONDITION

Inspect your tires frequently for tread wear, signs of damage and for foreign objects lodged in the tread. Check the tread depth.

Tire tread

The tread depth should not fall below $\frac{1}{8}$ in / 3 mm.

Below $\frac{1}{8}$ in / 3 mm tread depth, there is a very high danger of hydroplaning at higher speeds even if there is only a small amount of water on the road.


Below a tread depth of $\frac{1}{6}$ in / 4 mm, winter tires display a perceptible decrease in their ability to cope with winter driving conditions, and should be replaced in the interest of safety.

TIRE CONDITION



Wear indicators in the tread-groove base, arrow, are spread around the circumference of the tire and are marked on the side wall of the tire with TWI, Tread Wear Indicator. The indicators in the tread indicate at $\frac{1}{16}$ in / 1.6 mm tread depth that the legally permitted wear limit has been reached.

Wheel/tire damage

 Due to low-profile tires, please note that wheels, tires and suspension parts are more susceptible to road hazards and consequential damage.

Unusual vibrations while driving can indicate tire damage or other damage to the vehicle. This may be caused, for example, by driving over a curb. This is also true for abnormalities in the vehicle's handling characteristics, such as a pronounced tendency to pull to the left or right.

In such situations, reduce your speed immediately. Drive carefully to the nearest MINI Dealer or tire dealer, or have the vehicle towed there, if necessary.

Tire damage, up to and including blowouts, can endanger the lives of both the vehicle occupants and other road users. ◀

RUN FLAT TIRES*



You will recognize Run Flat tires by a circular symbol containing the letters RSC on the side of the tire.

Run Flat tires consist of self-contained tires and special rims. The tire reinforcement ensures that driving remains possible to a restricted degree in the event of a pressure drop or even a flat tire.


Continuing driving with a damaged tire

Depending on the load, you can continue driving with Run Flat tires at a maximum speed of 50 mph / 80 km/h.


RUN FLAT TIRES*

If there is a total loss of tire inflation pressure, 0 psi / 0 kPa, or obvious tire damage, you can gauge the mileage for continued driving on the basis of the following indications:

- ▷ With a light load:
 - 1 to 2 persons without luggage:
approx. 155 miles / 250 km
- ▷ With a medium load:
 - 2 persons, full luggage compartment, or
4 persons without luggage:
approx. 90 miles / 150 km.
- ▷ With a full load:
 - 4 persons or more, full luggage compartment:
approx. 30 miles / 50 km.

 Drive cautiously. Do not exceed a speed of 50 mph / 80 km/h. In case of tire pressure loss you must expect changes in vehicle handling such as lower track stability during braking, longer braking distances and changes in self-steering properties when close to the handling limit. For safety reasons, the manufacturer of your vehicle recommends not having damaged Run Flat tires repaired. In this case, consult your MINI dealer. ◀

Tire change set

 In case of a flat tire, the tire change set is not needed, since your vehicle has Run Flat tires.


When changing a tire, always observe the safety measures and the procedure for changing tires starting on page 125. ◀

Your vehicle is additionally equipped with a tire change set.

In the MINI COOPER and MINI COOPER Convertible this is located in the luggage compartment under the floor mat.

In the MINI COOPER S and MINI COOPER S Convertible, the tire change set is located in a separate bag which is attached to the lashing eyelets on the luggage compartment floor by means of tie-down straps.


NEW WHEELS AND TIRES

 Have new wheels and tires mounted only by a tire specialist. Work that is improperly carried out could result in consequential damage and pose safety hazards. ◀

Your MINI Dealer will be glad to inform you about the correct wheel and tire combination for your vehicle.


Have the wheels balanced after each tire or wheel replacement.

The correct wheel and tire combination is also important for various systems that would otherwise be impaired, e.g. ABS or DSC.

 The manufacturer of your vehicle recommends that you avoid using retread tires, as this could impair driving safety. This is due to the possible variations in casing structures and, in some cases, to their extreme age, which can lead to a decrease in their durability. ◀

NEW WHEELS AND TIRES

The correct wheels and tires

 The manufacturer of your vehicle recommends mounting only wheels and tires that it has specifically tested and approved for use on your particular model. Although other wheels and tires may theoretically have the same dimensions, variations in factors such as manufacturing tolerances can result in contact between tire and bodywork, ultimately leading to serious accidents. The manufacturer of your vehicle cannot evaluate non-approved wheels and tires to determine if they are suited for use, and therefore cannot ensure the operating safety of the vehicle if they are fitted. ◀

To maintain good handling and vehicle response, use only tires of a single brand and tread configuration. In the event of a flat tire, remount the previous wheel and tire combination as soon as possible.

Recommended tire sizes and brands:

For each tire size, certain tire brands have been tested, classified as road safe and approved by the manufacturer of your vehicle. You can find out about these from a professional tire center, preferably your MINI Dealer. Observe any local regulations,

e.g. on making a corresponding entry in the vehicle documents.

The factory-approved radial belt tires are matched to your vehicle and provide optimum safety and driving comfort when used properly.


Run Flat tires:

If your vehicle is equipped with Run Flat tires, refer to Run Flat tires, please note the following: when mounting new tires or replacing summer tires with winter tires, or vice versa, use only Run Flat tires since no spare wheel is available in the event of a flat. The manufacturer of your vehicle will be glad to advise you.

Special characteristics of winter tires

The manufacturer of your vehicle recommends winter tires for driving in adverse winter road conditions. While all-season tires with the M+S designation provide better winter traction than summer tires, they generally do not achieve the full performance of winter tires.

Observing speed ratings:

 Never exceed the maximum speed for which the winter tires are rated. Unprofessional attempts by laymen to ser-

vice tires can lead to damage and accidents. Have this work performed by skilled professionals only. The technicians at your MINI Dealer will be glad to assist you with the required professional knowledge and specialized equipment. ◀

Storage

Store tires in a cool, dry place, protecting them against light whenever possible. Protect the tires against contact with oil, grease and fuel. Do not exceed the tire inflation pressure specified on the tire sidewall.

SNOW CHAINS*

Only certain types of snow chains have been tested by the manufacturer of your MINI, classified as road-safe and approved. Contact your MINI Dealer for more details. The manufacturer of your MINI recommends that you use only these approved fine-link snow chains. Their use is only permitted in pairs on the front wheels on winter tires of the following types:

▷ 175/65 R 15 M+S

▷ 175/60 R 16 M+S.


When fitting, comply with the manufacturer's instructions. With chains, do not exceed a speed of 30 mph / 50 km/h.




Do not initialize the Flat Tire Monitor after attaching snow chains to the tires.

When driving with snow chains, it can be helpful to switch off the ASC or DSC for a brief period, refer to pages [68](#), [69](#). ◀


BONNET

 Do not attempt to service your vehicle if you do not have the required technical background. If you are not familiar with the regulations to be observed, have the necessary work on your vehicle carried out only by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer. Work that is improperly carried out could result in consequential damage and pose safety hazards. ◀

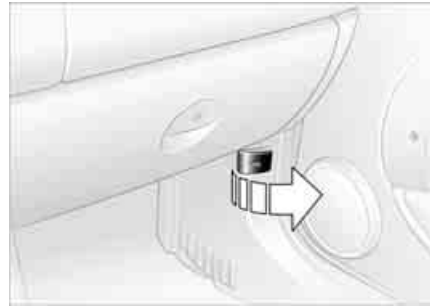

To unlock

Pull the lever in the right door area beneath the instrument panel.

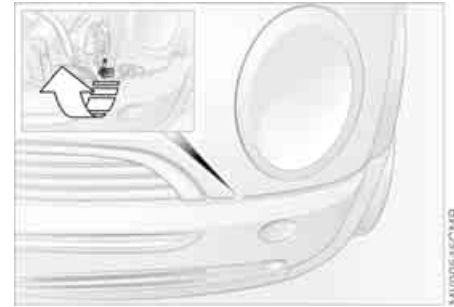


To open


1. Reach under the bonnet
2. Pull the release lever
3. Open the bonnet.

To close

Allow the bonnet to fall from a height of approx. 1 ft / 30 cm.

 To avoid injuries, as with all closing procedures be sure that the travel path of the bonnet is clear when it is closed. If it is determined that the bonnet is not completely closed while driving, stop immediately and close it securely, also refer to page 17. ◀

ENGINE COMPARTMENT: MINI COOPER AND MINI COOPER CONVERTIBLE

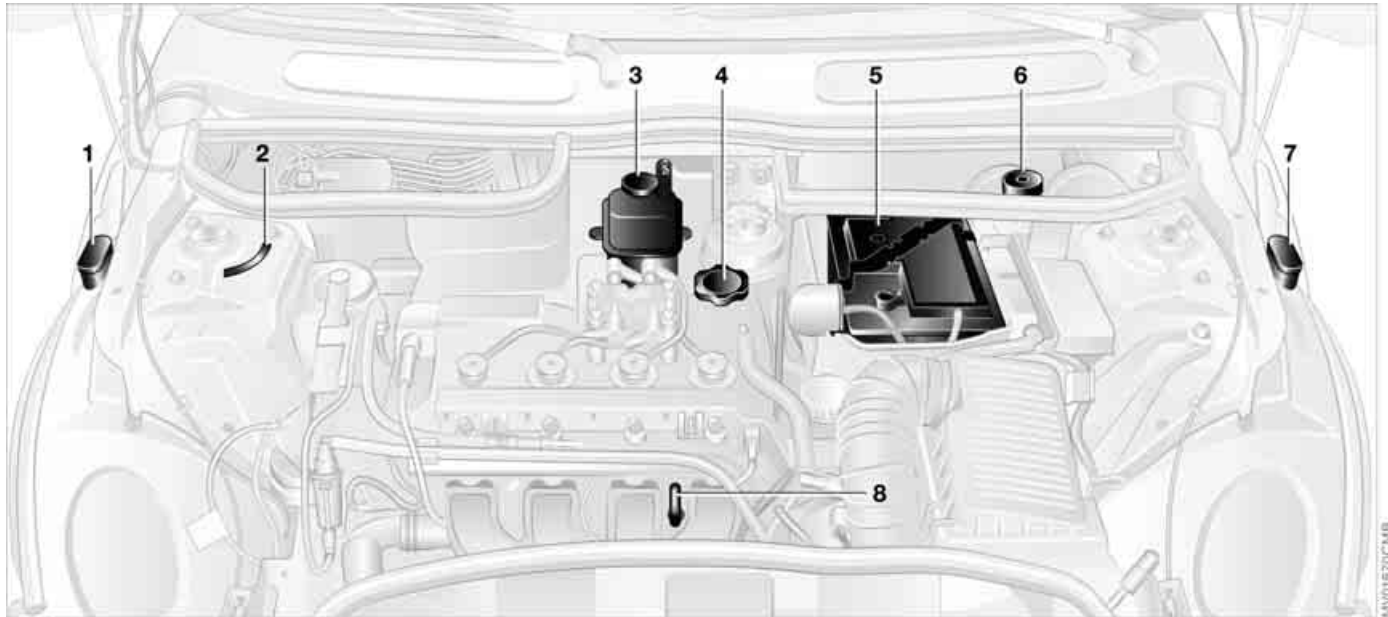

1 Reservoir for windshield and rear window* washer system [108](#)

2 Vehicle identification number

3 Coolant expansion tank [110](#)

4 Engine oil filler neck [109](#)

5 Battery [132](#)


6 Brake fluid reservoir [111](#)

7 Reservoir for headlamp cleaning system [108](#)

8 Engine oil dipstick [108](#)

MV01670CMB

ENGINE COMPARTMENT: MINI COOPER S AND MINI COOPER S CONVERTIBLE

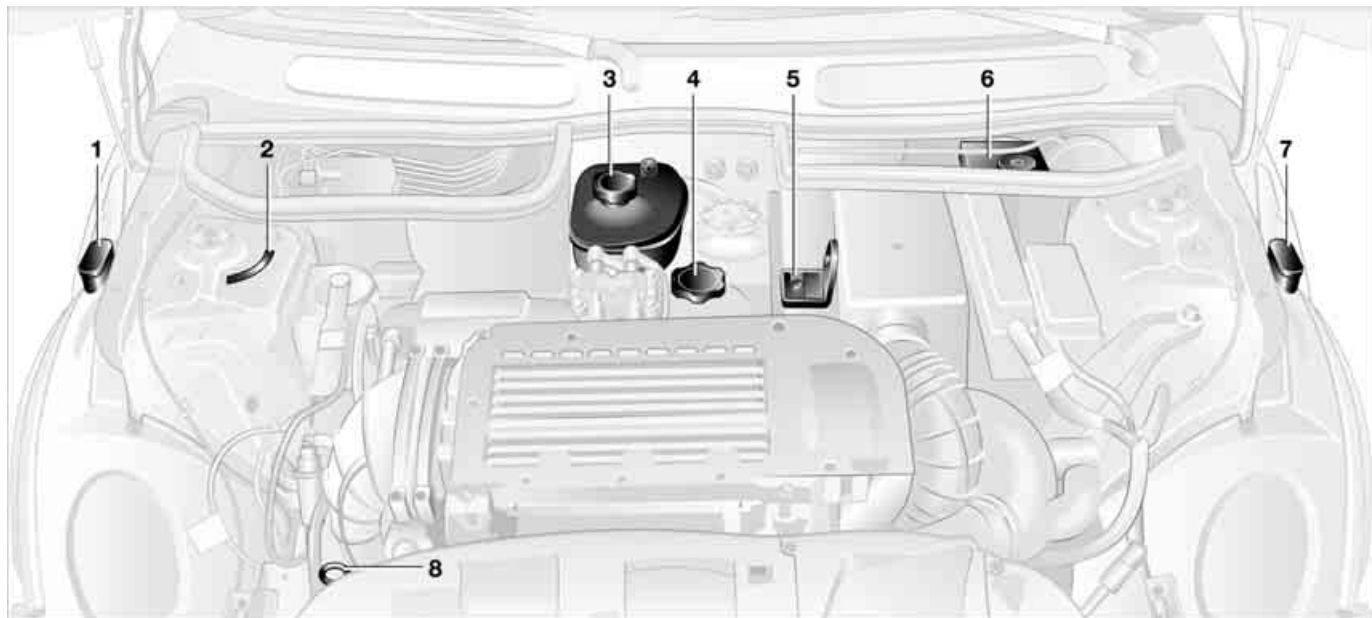

1 Reservoir for windshield and rear window* washer system [108](#)
2 Vehicle identification number

3 Coolant expansion tank [110](#)
4 Engine oil filler neck [109](#)
5 Auxiliary terminal for jump-starting [134](#)

6 Brake fluid reservoir [111](#)
7 Reservoir for headlamp cleaning system [108](#)
8 Engine oil dipstick [108](#)


WASHER FLUID




Headlamp* and window washer systems


The capacity of the headlamp washer system is approx. 2.6 quarts / 2.5 liters, that of the windshield and rear window washer system approx. 2.1 quarts / 2.0 liters.

Fill with water and, if necessary, with antifreeze, according to manufacturer's recommendations.

 We recommend that you mix the washer fluid before filling either reservoir. ◀

 Antifreeze agent for the washer systems is flammable. Always keep it well away from sparks and open flames, and store it in tightly closed containers well out of the reach of children. Always observe the instructions on the containers. ◀

ENGINE OIL

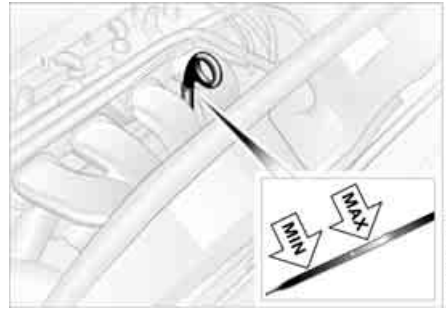

The oil volume between the two notches – MIN, MAX – on the dipstick corresponds to approx. 1.1 quarts / 1 liter. Do not fill beyond the upper notch on the dipstick. Excess oil will damage the engine.

The illustration shows by way of example the dipstick of the MINI COOPER and the MINI COOPER Convertible.


Measuring the oil level

1. Park the vehicle on a level surface
2. Switch the engine off after it has reached normal operating temperature
3. Pull the dipstick out after approx. 5 minutes and wipe it off with a lint-free cloth, paper towel, or similar material
4. Carefully push the dipstick all the way into the guide tube and pull it out again.


The oil level must be between the two marks on the dipstick.


As with fuel economy, oil consumption is directly influenced by your driving style and vehicle operating conditions.


ENGINE OIL

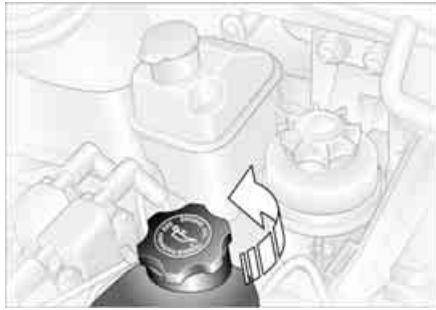

Adding engine oil

 Only top up oil when the oil level has dropped to just above the lower notch of the dipstick. However, never allow the level to drop below the lower notch. ◀

 MINI engines are designed to operate without oil additives; the use of additives could lead to damage in some cases. Continuous exposure to used oil has caused cancer in laboratory testing. For this reason, any skin areas that come into contact with oil should be thoroughly washed with soap and water. Always store oil, grease, etc., out of reach of children. Comply with all warning labels and information on lubricant containers. ◀


 Comply with the applicable environmental laws regulating the disposal of used oil. ◀

Specified engine oils

The quality of the engine oil selected has critical significance for the operation and service life of an engine. Based on extensive testing, the manufacturer of your MINI approves only certain grades of engine oil.

Use only approved MINI High Performance Synthetic Oil.


If you are unable to obtain MINI High Performance Synthetic Oil, you can add small amounts of synthetic oil in between oil changes. Only use oils with the API SH specification or higher.

 Ask your authorized MINI Dealer for details concerning the specific MINI High Performance Synthetic Oil or synthetic oils which have been approved. ◀

Viscosities


Viscosity is the oilflow rating as established in SAE classes.

The choice of the proper SAE class depends on the climatic conditions in the area where your MINI is used.


 Approved oils are in SAE classes 5W-40 and 5W-30. ◀


These oils can be used at all ambient temperatures.


COOLANT

 Do not add coolant to the cooling system when the engine is hot. Escaping coolant can cause burns. ◀

Coolant consists of water and a coolant additive. Not all commercially available additives are suitable for your MINI. Your MINI Dealer knows which additives are suitable and will be glad to advise you.

 Only use suitable additives, otherwise the engine can be damaged. The additives are hazardous to your health. ◀

 Comply with the applicable environmental laws regulating the disposal of coolant additives. ◀

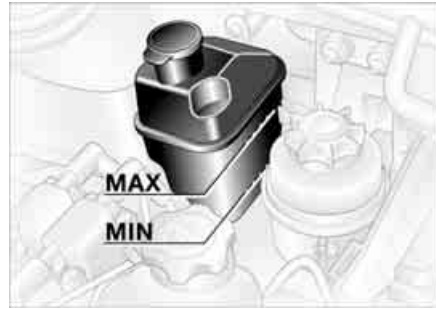


The illustration shows by way of example the coolant tank of the MINI COOPER and the MINI COOPER Convertible.

Checking coolant level

1. The engine must be at ambient temperature
2. MINI COOPER and MINI COOPER Convertible:
Slowly pull the cap of the expansion tank by the tab until the excess pressure can escape. Then remove the cap completely.
MINI COOPER S and MINI COOPER S Convertible:
Loosen the cap of the expansion tank slightly by turning it counterclockwise until the excess pressure can escape. Then remove the cap completely

3. The coolant level is correct if it is between the MIN and MAX markings on the transparent expansion tank
4. If necessary, slowly add coolant until the correct level is reached; do not overfill
5. MINI COOPER and MINI COOPER Convertible:
Press the cap on and press it down firmly.
MINI COOPER S and MINI COOPER S Convertible:
Turn the cap back on and tighten it firmly
6. Have the cause of the coolant loss removed as soon as possible.

BRAKE FLUID

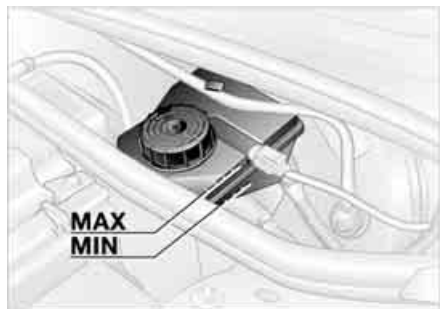

Warning lamp



The warning lamp comes on although the parking brake is released:

The brake fluid level in the reservoir is too low, refer to page 16. At the same time, brake pedal travel may become significantly longer.

Have the system checked immediately.



Display of the malfunction described above in Canadian models.

Adding brake fluid

To add brake fluid or to determine and correct the cause of brake fluid loss, please consult your MINI Dealer. Your MINI Dealer is familiar with the specifications for factory-approved brake fluids, DOT 4.

Brake fluid loss may result in extended brake pedal travel. If this occurs, refer to the information on page 96.



Brake fluid is hygroscopic, that is, it absorbs moisture from the air over time.

In order to ensure the brake system's safety and reliability, have the brake fluid changed every two years by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer, also refer to the Service and Warranty Information Booklet for US models or the Warranty and Service Guide Booklet for Canadian models. Brake fluid is toxic and also damages vehicle paintwork. Always store brake fluid in tightly closed original containers kept well away from the reach of children.

Do not spill the brake fluid and do not fill the brake fluid reservoir beyond the MAX mark. The brake fluid could ignite upon

contact with hot engine parts and cause serious burns. ◀



Comply with the applicable environmental laws regulating the disposal of brake fluid. ◀

MINI MAINTENANCE SYSTEM



The MINI maintenance system helps maintain your vehicle's road safety and operational safety.

Please bear in mind that regular maintenance is not only necessary for the safety of your vehicle, but also plays a significant role in maintaining the resale value of the vehicle.

Service interval display

While conventional systems specify maintenance according to fixed distances driven, the MINI Maintenance System takes account of the operating conditions of the vehicle, for distances can be driven in many different ways:

60,000 miles / 100,000 km short distance operation can not be equated with 60,000 miles / 100,000 km long distance operation from a maintenance standpoint.

The condition-based MINI Maintenance System includes the Engine Oil Service and Inspections I and II.

Determining the maintenance intervals according to the actual use of the vehicle covers every kind of operating situation. People who drive very little, i.e. much less than 6,000 miles / 10,000 km per year, should have the engine oil changed at least every 2 years since oil deteriorates over time, regardless of use.

For more information on the service interval display, refer to page [65](#).

Service and Warranty Information Booklet for US models, Warranty and Service Guide Booklet for Canadian models

For additional information on maintenance intervals and procedures, please refer to the Service and Warranty Information Booklet for US models or the Warranty and Service Guide Booklet for Canadian models.

As a precaution against rust, it is advisable to have the body checked for damage from rocks or gravel at the same time, depending upon operating conditions.



The manufacturer of your MINI recommends having maintenance and repair work carried out only by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer.

Make sure that maintenance work is confirmed with an entry in the Service and Warranty Information Booklet for US models or the Warranty and Service Guide Booklet for Canadian models. These entries are your proof that the vehicle has received regular maintenance. ◀

OBD SOCKET



The Onboard Diagnostic (OBD) interface socket is located on the left of the driver's side under the instrument panel and under a cover.

The cover has the letters OBD on it.

The purpose of the OBD system is to ensure proper operation of the emission control system for the vehicle's lifetime. The system monitors emission-related components for deterioration and malfunction.



An illuminated lamp informs you of the need for service, not of the need to stop the vehicle.

However, the system should be checked by your MINI Dealer at the earliest possible opportunity.



Display of the malfunction described above in Canadian models.

Under certain conditions, the indicator will blink or flash. This indicates a rather severe level of engine misfire. When this occurs, you should reduce speed and consult the nearest MINI Dealer as soon as possible. Severe engine misfire over only a short period of time can seriously damage emission control components, especially the catalytic converter.



When the gas cap is not properly tightened, the OBD system can detect the vapor leak and the indicator will light up. If the cap is subsequently tightened, the indicator lamp should go out within a few days. ◀

CARING FOR YOUR VEHICLE

Suitable car-care products



Use the cleaning and car-care products available at your MINI Dealer. ◀

Washing your vehicle

You can wash your new MINI or MINI Convertible in automatic car washes from the beginning. Preference should be for cloth car washes. If, due to lack of availability, brush car washes must be used, modern systems with soft brushes should be given preference.



When using steam cleaners or high-pressure cleaners, maintain sufficient distance to the vehicle and do not exceed a maximum temperature of 140 °F / 60 °C. If the jet is too close or the pressure is too high, this can lead to damage or initial damage that can develop into more serious damage. Water that enters vehicle components can lead to damage over the long term.

After washing the vehicle, apply the brakes briefly to dry them, otherwise water can reduce braking efficiency over the short term and the brake rotors can corrode. Switch the rain sensor off when passing through an automatic car wash, refer to page 59. Failure to do so could result in

CARING FOR YOUR VEHICLE

damage caused by undesired wiper activation. ◀

Rod antenna



If necessary, for example before entering a car wash or a garage with elevator ramp, remove the rod antenna. To do so, grip the rod antenna at the base and unscrew it from the antenna foot by turning it to the left. ◀

Headlamps



When cleaning the headlamps, please observe the following: do not rub them dry, and never use abrasives or strong solvents. Remove dirt and contamination, such as insects, by soaking with shampoo and then rinsing with plenty of water. Always use a deicer spray to remove accumulated ice and snow; never use a scraper. ◀

Vehicle paintwork

Regular care contributes greatly to driving safety and value retention.

Environmental influences varying from one region to the next can affect the vehicle paintwork. Please base the frequency and scope of car care on these various influences.

Care of upholstery

Depressions that come about on the upholstery material of the seats in daily use can be brushed out using a slightly damp brush against the grain.

The fact that velour lays down is not a quality defect, but rather is inevitable in the case of home textiles or clothing materials.

In the case of strong sunlight and longer parking periods, cover the seats or all windows to prevent discoloration.

Care of special parts

▷ Light-alloy wheels*:

Use wheel cleaner especially during the winter months, but do not use any aggressive, acidic, strong alkali or rough cleansers or steam jets above 140 °F / 60 °C. Observe the manufacturer's instructions

▷ Chrome parts* such as bonnet grill, door handles, etc.:

Especially if exposed to road salt, carefully clean these parts with plenty of water and possibly with a shampoo additive. For additional treatment, use chrome polish

▷ Rubber parts:

Treat only with water or rubber care products.



Do not use silicon sprays or other silicon-containing care products, otherwise noise and damage could occur. ◀

▷ Plastic parts, imitation leather surfaces, headliner, lamp glass, covering glass for the display elements, as well as matt black molded parts:

Clean with water and, if necessary, plastic care products. Do not dampen seats and the headliner.

Never use solvents such as lacquer thin-

CARING FOR YOUR VEHICLE

ner, heavy-duty grease remover, fuel or similar

- ▷ Wood paneling*:
Please clean wood paneling and other wood parts only with a damp cloth. Dry off with a soft cloth
- ▷ Safety belts:
Only clean using mild soap, leaving the belts fitted.
Do not dry clean, as the fabric can be destroyed.
Always roll up safety belts only when dry.
Dirty safety belts prevent unrolling and thus negatively affect safety
- ▷ Floor carpets and floor mats*:
If heavily soiled, clean using interior cleaner. Floor mats can be removed to allow the interior to be cleaned
- ▷ Wiper blades:
Clean with soapy water. Replace wiper blades twice a year, before and after the cold season. This is particularly important on vehicles fitted with a rain sensor.

Caring for leather* and imitation leather

The leather and imitation leather used by the manufacturer of your MINI are high quality products processed using state-of-the-art methods and will retain their qual-

ity level for many years if cared for properly.

Regular cleaning and care are necessary, as dust and road dirt scratch in pores and creases and lead to heavy wear as well as premature brittleness of the leather and imitation leather surface.

This is why you should use a cloth or vacuum cleaner to remove dust on a regular basis.

Since dirt and oil slowly destroy the protective layer of the leather and imitation leather, a treatment with a leather care product is necessary twice a year. This preserves the quality of the leather and prevents electrostatic charging.



Cleaning agents can contain hazardous or health-damaging substances. For this reason, always observe the warnings on the package. For interior cleaning, always open the doors or windows of the vehicle.

Do not use any products that are not intended for cleaning the vehicle. ◀

Care of the MINI Convertible's top

The appearance and service life of the convertible top largely depend on the proper care and operation of the convertible top.

You should therefore observe the following notes in particular:

- ▷ Whenever possible, park your vehicle in the shade to protect it from intense sunlight
- ▷ Do not fold the convertible top when it is wet, dirty or frozen; otherwise water marks, moisture stains and chafing could result
- ▷ If the vehicle is parked in an enclosed area for a longer period of time, make sure that there is sufficient ventilation
- ▷ Remove bird droppings immediately because they have corrosive properties.



Never use spot removers, paint thinner, solvents, cleaning fuel or similar since these products can destroy the rubber seals and cause leaks. ◀

CARING FOR YOUR VEHICLE

If the convertible top is very dirty, it is recommended that it be cleaned with a special convertible top cleaning agent. Your MINI Dealer will be glad to advise you.

Clean the convertible top as follows:

- ▷ Spray the convertible top with an approved convertible top cleaning agent
- ▷ Then scrub the convertible top with a wet sponge using circular motions
- ▷ Afterward, finish cleaning the vehicle in a car wash or rinse the convertible top thoroughly with plenty of water.


After washing the convertible top three to five times, it should be treated with a waterproofing agent.

Wind deflector*

- ▷ Clean the wind deflector with a soft sponge and water evenly across the entire surface so that water marks do not form
- ▷ Do not clean it with a vacuum cleaner or upholstery brush attachment, otherwise the net could be damaged.

VEHICLE STORAGE

Your MINI Dealer will be glad to advise you on what is important if the vehicle is to be decommissioned for longer than three months.

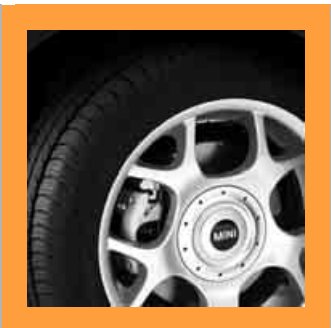

OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS

TECHNICAL DATA

DATA

INDEX

INDEX

ONBOARD TOOL KIT



The picture shows as an example the tire change set with onboard tools for vehicles with the space-saver spare tire.

Depending on the equipment version, your vehicle is equipped with a special onboard tool kit stored at the locations described below:

Tire change set with onboard tools for space-saver spare tire

In the luggage compartment under the floor mat.


MINI Mobility System with tire change set and onboard tools

In the luggage compartment under the floor mat.

Tire change set and onboard tools for Run Flat tires

- ▷ Tire change set:
In the luggage compartment in a separate pouch
- ▷ Onboard tool kit:
On the left-hand side of the luggage compartment behind the side trim panel.


WIPER BLADES

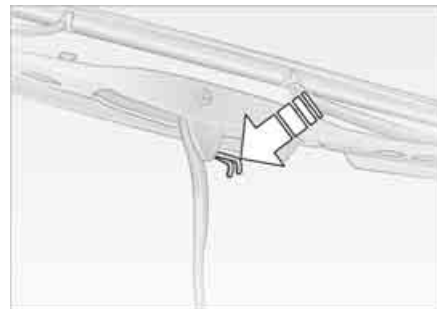

Windshield wiper

1. Rotate the wiper arm completely out from the windshield
2. Set the wiper blade at an angle
3. Press the securing spring, arrow
4. Unhook the wiper blade towards the windshield
5. Pull the wiper blade past the wiper arm toward the top
6. Insert the new wiper blade
7. Press into position until you hear it engage.

WIPER BLADES

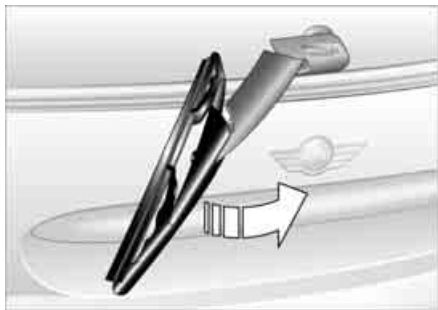


Rear window wiper*

1. Rotate the wiper arm completely out from the windshield
2. Turn the wiper blade as far as it will go to the rear
3. Press the wiper blade against the limit and thus out of the mounting
4. Press the new wiper blade into the mounting.

LAMPS AND BULBS

Lamps and bulbs are an important component of vehicle safety. Therefore, proceed carefully when handling bulbs.

To replace bulbs which are not described here, please contact a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer.

 Do not touch the glass portion of a new bulb with your bare hands since even small amounts of impurities burn into the surface and reduce the service life of the bulb. Use a clean cloth, paper napkin, or similar material, or hold the bulb by its metallic base. ◀


A replacement bulb set can be obtained at your MINI Dealer.



Whenever working on the electrical system, switch off the electrical accessory you are working on or disconnect the cable from the negative terminal of the battery. Failure to do this could result in short circuits.

To prevent injuries and damage, comply with any instructions provided by the bulb manufacturer. ◀

LAMPS AND BULBS

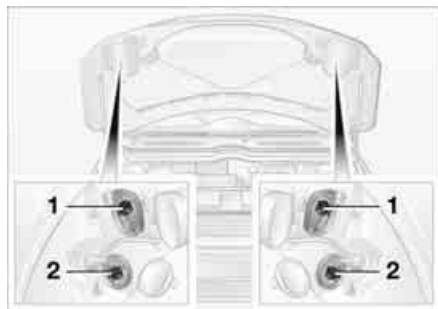


1 Low beams

H7 bulb, 55 watts

2 High beams

H7 bulb, 55 watts

 The H7 bulb is pressurized. Therefore, wear safety glasses and protective gloves. If the lamp is damaged there is a risk of injury. ◀

Replacing bulbs


The headlamps are integrated into the engine compartment.

1. Gently pull the retaining wire of the headlamp cover and guide it outwards
2. Fold down the headlamp cover

3. Disconnect the cable connector from the bulb socket and pull out the bulb
4. Place the bulb holder on the lower edge of the mounting and press it in until it engages in the bulb socket
5. Reconnect the cable connector and install the headlamp cover again.

Xenon lamps*

The service life of these bulbs is very long and the probability of a failure is very low, provided that they are not switched on and off an unusual number of times. If one of these bulbs should nevertheless fail, it is possible to continue driving with great caution using the fog lamps, provided traffic laws in your area do not prohibit this.

 Have any work on the xenon lamp system, including bulb replacement, carried out only by a MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of the MINI manufacturer. Due to high voltage, there is a risk of fatal injury if work on the xenon lamps is carried out improperly. ◀



Turn signal indicators, front

21 watt bulb

1. Open the bonnet
2. Reach into the opening for the turn signal indicators from above
3. Apply gentle pressure to the bulb holder while turning it to the left
4. Remove and replace the bulb.

Parking lamps and standing lamps

5 watt bulb

The parking lamps and standing lamps are integrated in the lamp housing of the turn signal indicator.

1. Turn the bulb holder to the left and pull out
2. Remove and replace the bulb.


LAMPS AND BULBS



Side turn signal indicators

5 watt bulb

1. Slide the lamp toward the rear of the vehicle and remove
2. Remove and replace the bulb.

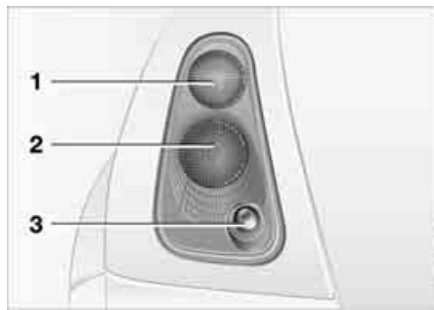


Tail lamps

Turn signal indicator 1: 21 watts

Rear lamp 2: 21/5 watt bulb

Backup lamp 3: 16 watts

- | | |
|-------------------------|--------|
| 1 Turn signal indicator | yellow |
| 2 Rear lamp/Brake lamp | red |
| 3 Backup lamp | white |

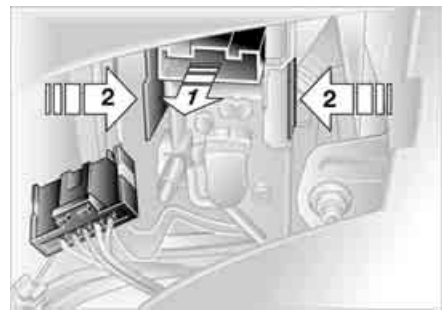

Replacing bulbs

To access the bulb holder, remove the cover on the side panel in the luggage compartment.

1. Unplug the power supply, arrow 1
2. Squeeze the retaining clips together, arrows 2, and remove the bulb holder
3. Apply gentle pressure to the bulb while turning it to the left
4. Remove and replace the bulb
5. Press the bulb holder into position until you hear it engage
6. Plug in the power supply.

LAMPS AND BULBS



Rear fog lamp*

With the space-saver spare tire option:


Access to the lamp via the back or underside of the bumper.

1. Press the clips together
2. Push the lamp out of the bumper
3. Apply gentle pressure to the bulb while turning it to the left
4. Remove and replace the bulb.

Other equipment:



In the event of a malfunction, please contact your MINI Dealer or a workshop that has specially trained personnel working in accordance with the specifications of your MINI manufacturer. ◀

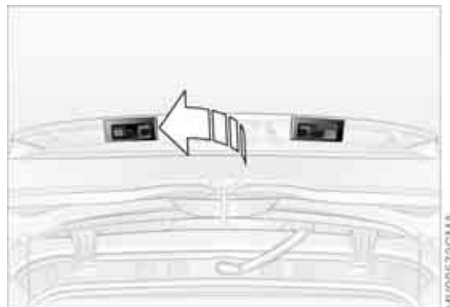

License plate lamps

5 watt bulb

By way of example, the illustration shows the license plate lamp of the MINI.

1. Apply a screwdriver to the recess and lever out the lamp cover
2. Replace the bulb.

Light-emitting diodes (LEDs)

Light-emitting diodes installed behind translucent lenses serve as the light sources for many of the controls and displays in your vehicle. These light-emitting diodes are related to conventional lasers, and legislation defines them as light-emitting diodes, Class 1.



Do not remove the protective lenses and avoid staring directly at the unfiltered beam for several hours, as inflammation of the retina could result. ◀

REPAIRING A FLAT TIRE



Safety measures in the event of a flat tire:

Stop the vehicle as far as possible from passing traffic. Switch on the hazard warning flashers.

Turn the steering wheel to the straight-ahead wheel position and engage the steering lock. Engage the parking brake and shift into 1st or reverse gear – selector lever in P.

All passengers should be outside the vehicle and well away from your immediate working area – behind a guardrail, for instance.

If a portable hazard warning lamp is available, set it up on the roadside at an appropriate distance from the rear of the vehicle. Comply with all safety guidelines and regulations. ◀

In the event of a flat tire, different procedures should be followed depending on the equipment included in your vehicle:

- ▷ Vehicles with Run Flat tires, refer to page [101](#)
- ▷ Vehicles with a space-saver spare tire, refer to the following section
- ▷ Vehicles with MINI Mobility System, refer to page [129](#).

SPACE-SAVER SPARE TIRE*

To change a space-saver spare tire, proceed as follows:

- ▷ Remove space-saver spare tire, refer to the section after the next one
- ▷ Prepare for tire change, refer to page [127](#)
- ▷ Jack up the vehicle, refer to page [128](#)
- ▷ Mount the space-saver spare tire, refer to page [128](#)
- ▷ Tighten the lug bolts, refer to page [128](#)
- ▷ Drive with space-saver spare tire, refer to page [127](#).



Tire change set

On vehicles with a space-saver spare tire, the tire change set with onboard tools is stored in the luggage compartment under the floor mat.

- 1 Chock, folding
- 2 Hubcap remover
- 3 Wheel stud wrench
- 4 Jack
- 5 Special wrench for removing the space-saver spare tire
- 6 Towing eyelet
- 7 Lifting handle

The onboard tool kit includes a pouch with a plastic bag in which you can place the damaged wheel.


SPACE-SAVER SPARE TIRE*



Removing the space-saver spare tire

The screw connection of the space-saver spare tire is in the luggage compartment under the floor mat, on the base of the storage compartment for the tire change set.

1. Loosen the screw connection using the special wrench
2. Take out the cover panel

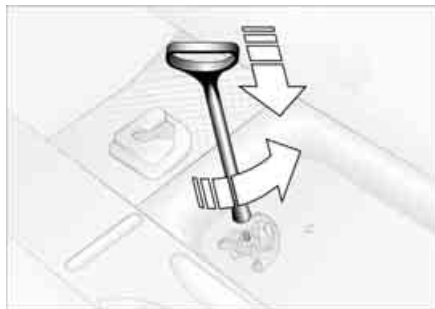

3. Screw the lifting handle from the onboard tool kit onto the thread
4. Raise the lifting handle slightly



5. Squeeze the securing spring
6. The space-saver spare tire is released and must be held by the lifting handle
7. Lower the space-saver spare tire with the lifting handle
8. Unscrew the lifting handle

SPACE-SAVER SPARE TIRE*





Driving with the space-saver spare tire


Drive cautiously. Do not exceed a speed of 50 mph / 80 km/h.

You must expect changes in vehicle handling such as lower track stability during braking, longer braking distances and changes in self-steering properties when close to the handling limit. These effects are more pronounced when driving with winter tires.


9. Pull out the space-saver spare tire towards the rear underneath the vehicle
10. Position the space-saver spare tire with the valve facing upwards
11. Unscrew the valve extension from the valve of the space-saver spare tire
12. Unscrew the dust cap from the extension and place it on the valve of the space-saver spare tire.

 Due to its different dimensions, the damaged wheel cannot be placed in the recess for the space-saver spare tire. ◀


 Only one space-saver spare tire may be mounted at one time. Reinstall a wheel and tire of the original size as soon as possible. ◀

 Check the tire inflation pressure at the earliest opportunity and correct it if necessary. Replace the defective tire as soon as possible and have the new wheel/tire assembly balanced. ◀

CHANGING TIRES


 Additional safety measures in the event of a tire change:
Change the tire only on a level, firm surface which is not slippery.
The vehicle or the jack could slip sideways on soft or slippery support surfaces, such as snow, ice, flagstones, etc..
Do not use a wooden block or similar object as a support base for the jack, as this would prevent it from extending to its full support height and reduce its load-carrying capacity.
Do not lie under the vehicle or start the engine when the vehicle is supported by the jack – risk of fatal injury. ◀

Preparing for a tire change

 Observe the safety precautions regarding flat tires on page 125. ◀


1. For vehicles with a space-saver spare tire:
Place the folding chock behind the front wheel on the other side of the vehicle; on downward inclines, place it in front of this wheel. If the wheel is changed on a surface with a more severe slope, take additional precautions to secure the vehicle from rolling
2. Loosen the lug bolts by a half turn.


CHANGING TIRES

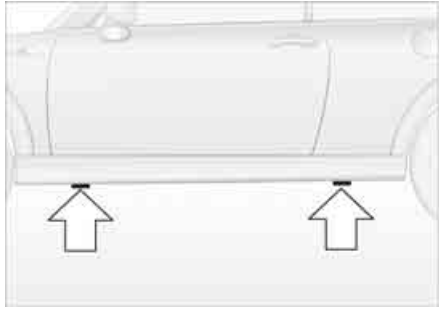

Jacking up the vehicle

1. Place the jack at the jacking point closest to the wheel.
The jack base must be perpendicular to the surface beneath the jacking point

 The vehicle jack is designed for changing wheels only. Do not attempt to raise another vehicle model with it or to raise any load of any kind. Do so could cause accidents and personal injury. ◀

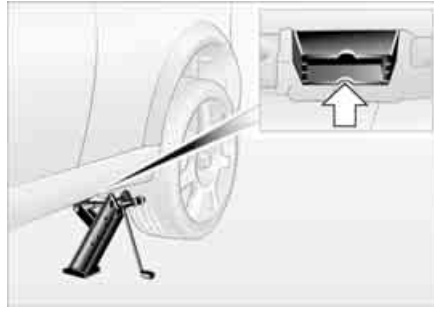

2. During jacking up, insert the jack head in the square recess of the jacking point
3. Jack the vehicle up until the wheel you are changing is raised from the ground.


Mounting a wheel

1. Unscrew the lug bolts and remove the wheel
2. Remove accumulations of mud or dirt from the mounting surfaces of the wheel and hub. Clean the lug bolts
3. Mount the new wheel
4. Screw at least two lug bolts finger-tight into opposite bolt holes
5. Screw in the remaining bolts

6. Tighten all the lug bolts firmly in a diagonal pattern
7. Lower the vehicle
8. Remove the jack.

Tightening the lug bolts

Tighten the lug bolts in a diagonal pattern.

 As soon as possible, have the secure seating of the lug bolts, tightening torque 88.5 lb ft / 120 Nm, checked using a calibrated torque wrench. Otherwise, a wheel coming loose can lead to a severe accident. ◀


Replace the defective tire as soon as possible and have the new wheel/tire assembly balanced.

MINI MOBILITY SYSTEM*

MINI Mobility System

The MINI Mobility System is provided to help you repair a flat tire. With the help of this system you can apply a liquid sealant on the inside of the tire, which seals the damaged area and enables you to continue to drive.

Preparing for tire repair

 Before using the MINI Mobility System read the warning and danger precautions on the equipment. ◀

If possible, leave objects in which have been forced into the tire.

Take off the tag regarding speed limits and stick it onto the steering wheel.

Using the MINI Mobility System

In order to repair a flat tire with the MINI Mobility System, proceed as follows:

- ▷ Pump in liquid sealant, refer to page [130](#)
- ▷ Reinflate the tire, refer to page [130](#)
- ▷ Distribute liquid sealant, refer to page [131](#)
- ▷ Check tire inflation pressure, refer to page [131](#)
- ▷ Drive on, refer to page [131](#).



MINI Mobility System with onboard tools

The MINI Mobility System with tire change set and onboard tools is located in the luggage compartment under the floor mat:

- 1 Jack
- 2 Wheel stud wrench
- 3 Hubcap remover
- 4 Wrench, screwdriver/Phillips screwdriver, towing eyelet
- 5 Compressor, hose with manometer and plug for cigarette lighter socket
- 6 Package with filling hose, valve remover and valve core
- 7 Filling canister
- 8 Hex wrench/screwdriver
- 9 Adapter for wheel lug lock


MINI MOBILITY SYSTEM*



MV00585CMA


Pumping in liquid sealant


1. Shake the filling canister
2. Screw the filling hose onto the filling canister
3. Unscrew the dust protection cap from the valve of the defective tire
4. Screw out the valve core with the valve remover. The valve remover is located in a package with the filling hose.

 Place the valve core and valve remover only on clean surfaces. ◀

5. Remove the cap from the filling hose
6. Push the filling hose onto the tire valve

7. Hold the filling canister with the cap down and squeeze. Squeeze the entire contents of the canister into the tire
8. Remove filling hose
9. Screw valve core into the tire valve with the valve remover.

 In the event of a lost or dirty valve core you will find another valve core in a package with the filling hose. Please remember that the liquid canister must be replaced every four years if the equipment has not been used. ◀

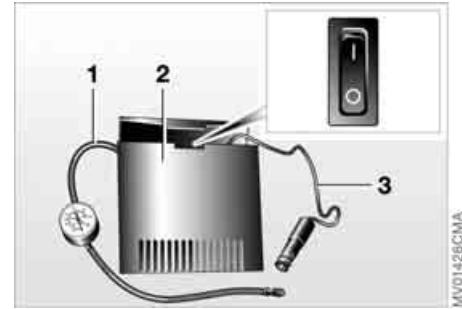


MV01426CMA


Reinflating the tire

1. Screw hose 1 with manometer onto the tire valve
2. Connect plug 3 to the cigarette lighter socket in the vehicle interior, refer to page 82
3. Ignition key in position 1: Turn on compressor 2
4. Inflate the tires to at least 26 psi / 180 kPa, but not to more than 36 psi / 250 kPa.


To check the current air pressure, shut off the device for a short time.

 Do not run the compressor for longer than 6 minutes, otherwise the device will overheat and possibly be damaged. ◀

MINI MOBILITY SYSTEM*


 If an air pressure of 26 psi / 180 kPa cannot be reached, unscrew the hose 1 and drive back and forth about 33 ft / 10 m so that the liquid sealant is distributed in the tire. Afterwards repeat the procedure. If an air pressure of 26 psi / 180 kPa is still not reached, the tire is too badly damaged. Please contact the nearest MINI Dealer. ◀

5. Turn off compressor 2
6. Unscrew hose 1 from the tire valve
7. Store the MINI Mobility System back in the vehicle.

 The instructions for using the MINI Mobility System are also given on the equipment. ◀


Distributing liquid sealant

Immediately drive for approx. 10 minutes, so that the liquid sealant is uniformly distributed.

 Do not exceed a speed of 40 mph / 60 km/h.
If possible do not drive at a speed lower than 10 mph / 20 km/h. ◀


Checking tire inflation pressure

1. After driving for approx. 10 minutes, pull over at a suitable location
2. Screw hose with manometer back onto the tire valve
3. Check the tire inflation pressures.


 The tire inflation pressure must be at least 18 psi / 130 kPa. If it is not, do not continue driving. ◀


If 18 psi / 130 kPa are displayed:

4. Ignition key position 1:
Turn on compressor 2. Correct the tire inflation pressure to the specified value, refer to the tire inflation pressure table on page 98
5. Replace the tire as soon as possible.

 The use of the MINI Mobility System may be ineffective with tire damage larger than approx. $\frac{1}{6}$ in / 4 mm. Please contact the nearest MINI Dealer if the tire cannot be made drivable with the MINI Mobility System. ◀


Driving on

 Do not exceed the permitted maximum speed of 50 mph / 80 km/h; otherwise an accident could happen. ◀

 Replace the defective tire as soon as possible and have the new wheel/tire assembly balanced. Have the MINI Mobility System refilled. ◀

Tire change set

When changing a tire, always observe the safety measures and the procedure for changing tires starting on page 125.

 In case of a flat tire the tire change set is not needed due to the availability of the MINI Mobility System. ◀

BATTERY

Storage location

MINI COOPER and MINI COOPER Convertible:

The battery is located in the engine compartment. Exact location, refer to page [106](#).

MINI COOPER S and MINI COOPER S Convertible:

The battery is located in the luggage compartment under the floor mat.

Battery care

The battery is absolutely maintenance-free, that is, the original electrolyte will normally last for the service life of the battery under moderate climatic conditions. Your MINI Dealer will be glad to advise you if you have any questions regarding the battery.

Charging the battery

Only charge the battery in the vehicle via the terminals in the engine compartment with the engine switched off, refer to 'Jump-starting', page [134](#) ff.

Disposal



After replacing old batteries, return the used batteries to your MINI Dealer or to a recycling point. Maintain the battery in an upright position for transport and storage. Secure the battery to prevent it from tilting during transport. ◀

Power failure

After a temporary power failure, e.g. due to a discharged battery, some of your vehicle's equipment will function only to a limited extent and must be reinitialized or readjusted. Individual settings are also lost and must be reprogrammed:

▷ Time:

Must be reset, refer to page [63](#)

▷ Electric power windows:

Must be reinitialized, refer to page [32](#)


▷ Radio*:


The stations must be reset, refer to the Owner's Manual for Radio

▷ Navigation system*:

It may take some time for its operability to be restored, refer to the Owner's Manual for Navigation System.

FUSES

 Do not attempt to repair a blown fuse or replace it with a fuse of a different color or Ampere rating. To do this could cause a fire in the vehicle resulting from a circuit overload. ◀

 If a second fuse blows in the same circuit, have the cause rectified by your MINI Dealer. ◀

A fuse allocation diagram is located on the inside of the fuse box cover panel.

Plastic tweezers and spare fuses can be found in the fuse box in the vehicle interior, refer to the column after next.



In the engine compartment

In the MINI COOPER and the MINI COOPER Convertible to the right of the battery. In the MINI COOPER S and the MINI COOPER S Convertible to the right of the air filter box.

Open the fuse box lid. To do so, press the clip fastener.



In the vehicle interior


On the left side of the footwell in the side trim panel.

Open the fuse box lid. To do so, press the fastener.

JUMP-STARTING


When your battery is discharged, you can use two jumper cables to start your vehicle with power from the battery in a second vehicle. Correspondingly you can help start another vehicle. Only use jumper cables with fully insulated handles on the terminal clamps.


Preparing for jump-starting

 Do not touch live wiring and cables on a running engine. There is a risk of fatal injury if you do this. Carefully observe the following instructions to avoid personal injury and/or damage to either vehicle or both vehicles. Make sure that there is no contact between the bodywork of the two vehicles to avoid a short circuit hazard. ◀

1. Check whether the battery of the support vehicle has 12 Volts and approximately the same capacity measured in Ah. These data are printed on the battery
2. Switch off the engine of the support vehicle
3. Switch off any electrical systems and components in both vehicles.

Connect the jumper cables

 Always adhere to this sequence when connecting the jumper cables; failure to observe this procedure can lead to sparking and pose an injury hazard. ◀

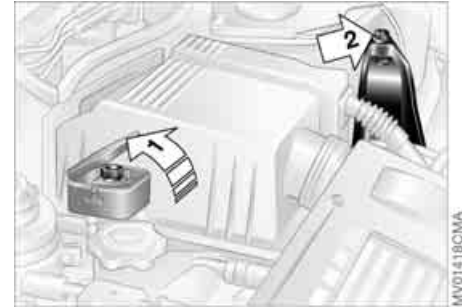

The illustration shows the auxiliary jump-starting terminal on the MINI COOPER S and the MINI COOPER S Convertible. In the MINI COOPER S and the MINI COOPER S Convertible, the auxiliary jump-starting terminal, arrow 1, acts as the positive battery terminal, refer to view of engine compartment on page 107. The cover is marked with a +.

1. Remove the cover of the battery or open the cover of the auxiliary jump-starting terminal:
 - ▷ MINI COOPER and MINI COOPER Convertible:
Remove the battery cover.
To do so, press the two clips simultaneously.

JUMP-STARTING

- ▷ MINI COOPER S and MINI COOPER S Convertible:
Open the cover of the auxiliary jump-starting terminal, arrow 1
- 2. Connect one terminal clamp of the plus/+ jumper cable to the positive battery terminal or to an auxiliary jump-starting terminal of the support vehicle
- 3. Connect the other terminal clamp of the plus/+ jumper cable to the positive battery terminal or to an auxiliary jump-starting terminal of the vehicle to be started

Engine or body ground in your MINI or MINI Convertible: arrow 2.

- 4. Connect one terminal clamp of the minus/- jumper cable to the negative battery terminal or to an engine or body ground of the support vehicle
- 5. Connect the second terminal clamp of the minus/- jumper cable to the negative terminal of the battery or to the engine or body ground of the vehicle to be started.

Performing the jump-start

1. Start the engine of the support vehicle and allow it to run at a fast idle speed for several minutes
2. Start the engine of the other vehicle in the usual manner.
If the first start attempt is not successful, wait a few minutes before another attempt in order to allow the discharged battery to recharge
3. Allow the engines of both vehicles to run for several minutes



On the MINI or MINI Convertible:
Before disconnecting the jumper cables, switch on the lighting, the rear window defroster and the highest blower speed to prevent a voltage surge from the regulator to the electrical systems and components. ◀

4. Then disconnect the jumper cables in the reverse order.

If necessary have the battery checked and completely charged at a MINI Dealer.




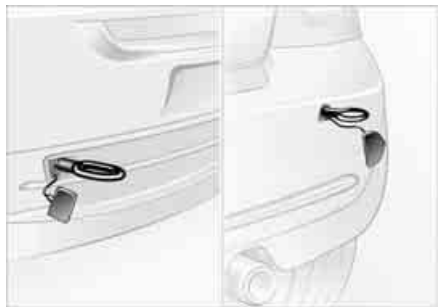
Do not use spray starter fluids to start the engine. ◀

TOWING AND TOW-STARTING

Using the towing eyelet

The screw-in towing eyelet is stored in the onboard tool kit, refer to page 120; be sure that it remains with the vehicle at all times. It can be attached at the front or rear of your vehicle.

 To prevent damage to the towing eyelet and the vehicle, please observe the following instructions:
Use only the towing eyelet supplied with the vehicle and screw it in firmly until it stops. Use the towing eyelet for towing on paved roads only. Avoid subjecting the towing eyelet to lateral loads, e.g. do not lift the vehicle using the towing eyelet. ◀




Access to the threaded socket

The illustration shows by way of example the MINI COOPER and the MINI COOPER Convertible.

Pry out the cover in the front or rear bumper by inserting a screwdriver into the recess.

Being towed


 Make sure that the ignition key is in position 1; otherwise the steering lock could engage and prevent the vehicle from being steered. There is no power assist while the engine is off. Therefore, you will need to exert more force to brake and steer the vehicle. ◀

Turn on the hazard warning flashers, if required by national regulations. If the electrical system has failed, clearly identify the vehicle being towed, e.g. by placing a sign or a warning triangle in the rear window.

MINI or MINI Convertible with manual transmission:

Put the manual gearshift lever in Neutral.

MINI or MINI Convertible with Continuously Variable automatic Transmission (CVT):

 Only tow vehicles with Continuously Variable automatic Transmission (CVT) with a tow truck, otherwise the transmission can be damaged, refer to page 137. ◀


Towing methods

In some countries, it is not permitted to tow the vehicle with a tow bar or tow rope on public roads.

Familiarize yourself with the applicable towing regulations for the country in which you are driving.


TOWING AND TOW-STARTING

With a tow bar:

 The towing vehicle must not be lighter than the vehicle being towed; otherwise, vehicle handling can no longer be controlled. ◀


The towing eyelets of both vehicles should be on the same side. If the tow bar can only be used in a diagonal position, please note the following:


- ▷ Clearance and maneuverability will be strictly limited in corners
- ▷ The inclination of the tow bar produces lateral force.

 Only attach the tow bar to the towing eyelets. Other parts of the vehicles could otherwise be damaged. ◀

With a tow rope:


When the towing vehicle is driving off, make sure that the tow rope is taut.

 Use nylon ropes or straps for towing because they prevent sudden jerking movements. Attach the tow rope only to the towing eyelets. Other parts of the vehicles could otherwise be damaged. ◀

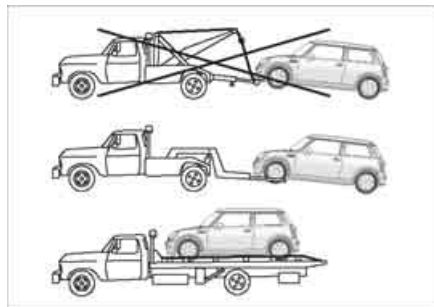


With a tow truck:

Have the MINI or MINI Convertible transported by a tow truck with a lift sling, or on a flatbed.

 Only tow vehicles with Continuously Variable automatic Transmission (CVT) with the front wheels raised or on a special transport vehicle, otherwise the transmission can be damaged. Do not lift the vehicle by the towing eyelet, nor by parts of the body or chassis. Otherwise damage could result. ◀

Tow-starting

 Do not tow-start vehicles with Continuously Variable automatic Transmission (CVT). Jump-starting, refer to page 134. ◀

Only tow-start vehicles with catalytic converters if the engine is cold. It is better to have the engine jump-started, refer to page 134.

1. Turn on the hazard warning flashers; comply with national regulations
2. Turn the ignition key to position 2
3. Engage the 3rd gear
4. Have the vehicle towed with the clutch pedal completely depressed and then slowly release the clutch pedal. After the engine has started, immediately depress the clutch pedal again completely
5. Pull over at a suitable location, remove the tow bar or tow rope, and turn off the hazard warning flashers
6. Have the vehicle checked.



OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS

TECHNICAL DATA

DATA


INDEX

INDEX

ENGINE DATA


		MINI COOPER, MINI COOPER Convertible	MINI COOPER S, MINI COOPER S Convertible
Displacement	cu in / cm ³	97.5 / 1,598	97.5 / 1,598
Number of cylinders		4	4
Maximum output at engine speed	hp / kW rpm	115 / 85 6,000	168 / 125 6,000
Maximum torque at engine speed	lb ft / Nm rpm	111 / 150 4,500	162 / 220 4,000

DIMENSIONS: MINI

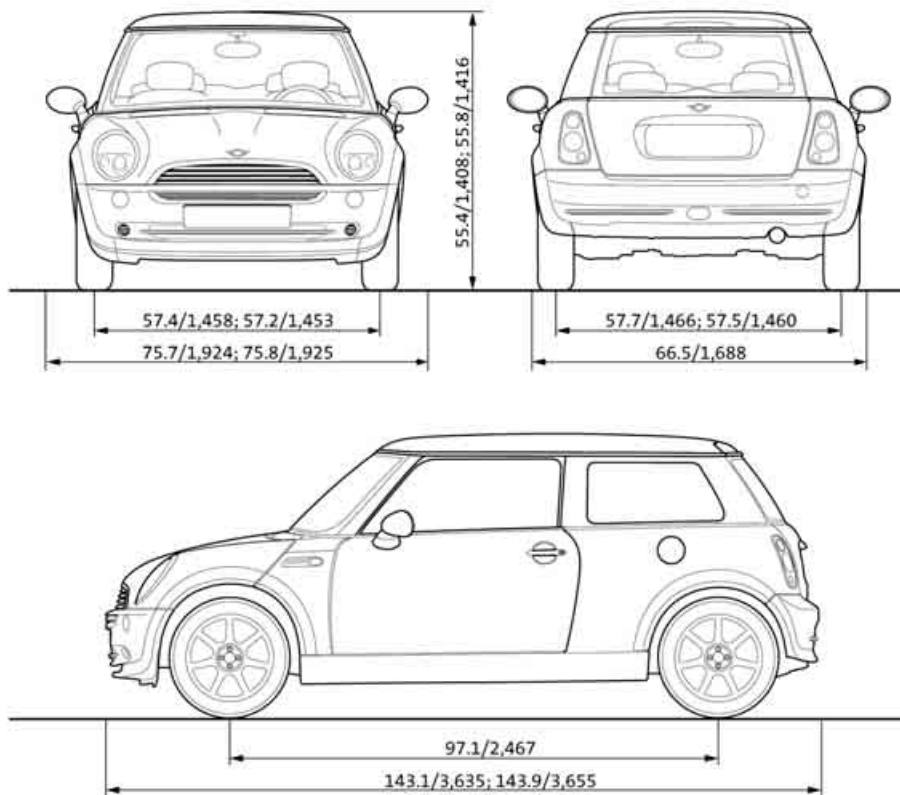

All measurements in inches / millimeters. Smallest turning circle dia. 34 ft 10 in / 10.66 m.
Values following a ; are differing values for MINI COOPER S.

DIMENSIONS: MINI CONVERTIBLE

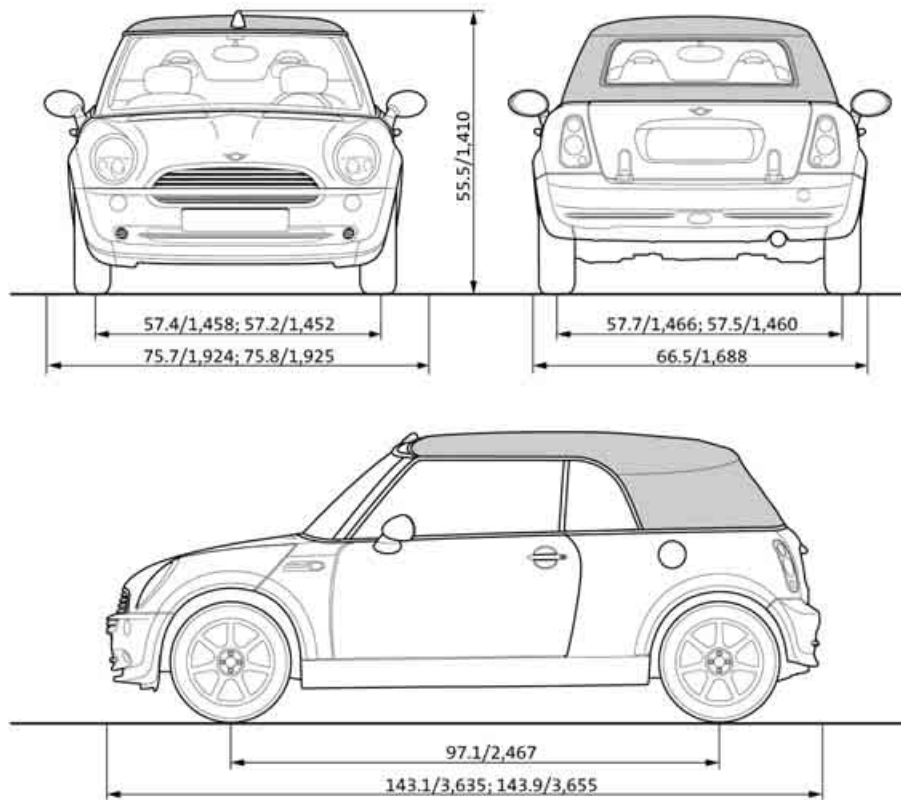

All measurements in inches / millimeters. Smallest turning circle dia. 34 ft 10 in / 10.66 m.
Values following a ; are differing values for MINI COOPER S.

WEIGHTS: MINI

		MINI COOPER	MINI COOPER S
Curb weight, with all optional special equipment with manual transmission	lbs / kg	2,524 / 1,145	2,678 / 1,215
with Continuously Variable automatic Transmission (CVT)	lbs / kg	2,557 / 1,160	–
Approved gross vehicle weight with manual transmission	lbs / kg	3,340 / 1,515	3,494 / 1,585
with Continuously Variable automatic Transmission (CVT)	lbs / kg	3,373 / 1,530	–
Cargo and luggage load capacity	lbs / kg	816 / 370	816 / 370
Approved front axle load	lbs / kg	1,918 / 870	1,962 / 890
Approved rear axle load	lbs / kg	1,609 / 730	1,698 / 770
Approved roof load, with special MINI roof rack	lbs / kg	165 / 75	165 / 75
Luggage compartment volume with rear backrest folded down	cu ft / liters cu ft / liters	5.3 / 150 23.7 / 670	5.3 / 150 23.7 / 670

WEIGHTS: MINI CONVERTIBLE

		MINI COOPER Convertible	MINI COOPER S Convertible
Curb weight, with all optional special equipment with manual transmission	lbs / kg	2,700 / 1,225	2,844 / 1,290
with Continuously Variable automatic Transmission (CVT)	lbs / kg	2,734 / 1,240	–
Approved gross vehicle weight with manual transmission	lbs / kg	3,472 / 1,575	3,616 / 1,640
with Continuously Variable automatic Transmission (CVT)	lbs / kg	3,505 / 1,590	–
Cargo and luggage load capacity	lbs / kg	771 / 350	771 / 350
Approved front axle load	lbs / kg	1,918 / 870	1,962 / 890
Approved rear axle load	lbs / kg	1,697 / 770	1,763 / 800
Approved roof load, with special MINI roof rack	lbs / kg	–	–
Luggage compartment volume with luggage compartment cover folded up	cu ft / liters	4.2 / 120	4.2 / 120
with rear backrest folded down	cu ft / liters	5.8 / 165	5.8 / 165
	cu ft / liters	21.4 / 605	21.4 / 605

CAPACITIES

			Notes
Fuel tank Reserve	gal. / liters	approx. 13.2 / 50 approx. 2.1 / 8	Fuel quality, refer to page 94
Window washer system Headlamp washer system	quarts / liters	approx. 2.1 / 2.0 approx. 2.6 / 2.5	More details, refer to page 108
Cooling system including heater circuit	quarts / liters	5.6 / 5.3 MINI COOPER and MINI COOPER Convertible 6.3 / 6.0 MINI COOPER S and MINI COOPER S Convertible	More details, refer to page 110
Engine with oil filter change	quarts / liters	4.8 / 4.5 MINI and MINI Convertible	High Performance Synthetic Oil: for more details, refer to page 109



OVERVIEW

OVERVIEW

CONTROLS

CONTROLS

OPERATION, CARE, MAINTENANCE

OPERATION

OWNER SERVICE PROCEDURES

REPAIRS

TECHNICAL DATA

DATA

INDEX

INDEX

EVERYTHING FROM A TO Z

- A**
- ABS Antilock Brake System [70](#)
 - indicator lamp [17, 18](#)
- Accessories, refer to Your individual vehicle [6](#)
- Activated-charcoal filter [80](#)
- Adjusting interior temperature [76, 79](#)
- Air circulation, refer to Recirculated air mode [76, 79](#)
- Air conditioning
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Air conditioning system [75](#)
- Air distribution
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Air outlets, refer to Ventilation [77, 80](#)
- Air pressure, refer to Tire inflation pressure [97](#)
- Air volume
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Airbags [72](#)
 - safe seating position [41](#)
 - warning lamp [18](#)
- AKI, refer to Fuel quality [94](#)
- All Season traction Control (ASC) [68](#)
 - indicator lamps [17, 18](#)
- All-season tires, refer to Winter tires [103](#)
- Antenna [114](#)
- Antifreeze
 - coolant [110](#)
 - washer fluid [108](#)
- Antilock Brake System (ABS) [70](#)
 - indicator lamp [17, 18](#)
- Anti-theft system [24](#)
- Approved axle load, refer to Weights [143, 144](#)
- Approved engine oils [109](#)
- Approved gross vehicle weight, refer to Weights [143, 144](#)
- ASC All Season traction Control [68](#)
 - indicator lamps [17, 18](#)
- Ashtray [81](#)
- Assistant systems, refer to All Season traction Control (ASC) [68](#)
 - Dynamic Stability Control (DSC) [69](#)
- AUTO program, refer to Automatic air distribution [79](#)
- Automatic
 - air distribution [79](#)
 - air volume [79](#)
 - cruise control [61](#)
- Automatic car washes [113](#)
- Automatic climate control [78](#)
- Automatic transmission
 - with Steptronic indicator lamp [56](#)
 - interlock [51](#)
 - selector lever lock [54](#)
 - shiftlock [54](#)
 - towing [136](#)
 - tow-starting [137](#)
- Average consumption [67](#)
 - setting units [67](#)
- Average speed [67](#)
 - setting units [67](#)
- Axle loads, refer to Weights [143, 144](#)
- B**
- Backrests, refer to Adjusting seats [43](#)
- Backup lamp [54](#)
 - bulb replacement [123](#)
- Bar, towing [137](#)
- Battery [132](#)
 - charging [132](#)
 - disposal [132](#)
 - indicator lamp [16](#)
 - jump-starting [134](#)
 - power failure [132](#)
- Battery care [65, 112](#)
- Belts, refer to Safety belts [45](#)
- Beverage holders [81](#)
- Blower
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Blower, refer to Air volume [76](#)
- Blowers, refer to Draft-free ventilation [77, 80](#)
- Bonnet [105](#)
 - indicator lamp [17](#)
- Bottle holders, refer to Beverage holders [81](#)
- Brake discs
 - brake system [96](#)
 - break-in procedures [92](#)
- Brake fluid [111](#)
 - adding [111](#)
 - level [96](#)
 - warning lamp [16](#)
- Brake lamps, bulb replacement [123](#)
- Brake pads [96](#)
 - break-in procedures [92](#)
 - warning lamp [18](#)
- Brake system [96](#)
 - brake fluid [96](#)
 - brake pads [96](#)
 - break-in procedures [92](#)
 - disc brakes [96](#)
 - warning lamp [17](#)
- Brake wear warning
 - brake pads [96](#)
 - warning lamp [18](#)

EVERYTHING FROM A TO Z

Brakes [96](#)

- ABS [70](#)
- brake fluid [111](#)
- brake pads [96](#)
- break-in procedures [92](#)
- handbrake [53](#)
- indicator/warning lamps [16](#), [17](#), [18](#)

Breaking in [92](#)

Bulb replacement, refer to

- Lamps and bulbs [121](#)

Buttons in multifunction

- steering wheel [20](#)
- Continuously Variable automatic Transmission (CVT) [56](#)

C

California Proposition [65](#)

- warning [7](#)

Capacities [145](#)

Car care, refer to Caring for your vehicle [113](#)

Car keys, refer to Keys [24](#)

Car radio, refer to separate Owner's Manual

Car telephone, refer to separate Owner's Manual

Car vacuum cleaner, connecting, refer to Cigarette lighter socket [82](#)

Car wash [113](#)

Car wash, refer to Washing your vehicle [113](#)

Car-care products [113](#)

Care of plastics [114](#)

Care of synthetic leather [114](#)

Care, vehicle [113](#)

Cargo area cover, refer to Luggage compartment cover [85](#)

Cargo area, refer to Luggage compartment in the MINI [85](#)

Cargo area, refer to Luggage compartment in the MINI Convertible [86](#)

Carpet care [115](#)

Cassette operation, refer to Owner's Manual for Radio

Catalytic converter, refer to Hot exhaust system [93](#)

CBC Cornering Brake Control [70](#)

CD changer, refer to Owner's Manual for Radio

CD operation, refer to Owner's Manual for Radio

Central locking system [24](#)

interior [28](#)

Changing bulbs [121](#)

Changing the wiper blades [120](#), [121](#)

Changing tires [127](#)

space-saver spare tire [125](#)

Charge-current indicator light [16](#)

Child seat, refer to Installing child-restraint systems [49](#)

Children, transporting [48](#)

Child-restraint mounting system, LATCH [50](#)

Child-restraint systems [48](#)

Chock, folding space-saver spare tire [125](#)

Chrome parts, refer to Caring for your vehicle [114](#)

Chrome-plated parts, care [114](#)

Cigarette lighter [82](#)

Cigarette lighter socket [82](#)

Circulation of air, refer to Recirculated air mode [76](#), [79](#)

Cleaning the rear window [60](#)

Cleaning the vehicle, refer to Caring for your vehicle [113](#)

Clock [63](#)

12-hour/24-hour mode [63](#) changing the time [63](#)

Closing from inside [28](#)

from outside [25](#)

Clothes hooks [93](#)

Clutch [51](#) break-in procedures [92](#)

Cockpit [12](#)

Coding, tires [99](#)

Cold start, refer to Starting the engine [52](#)

Compact disk operation, refer to Owner's Manual for Radio

Compartments [81](#)

Computer, refer to Onboard computer [66](#)

Condensed water, refer to Air conditioning [76](#), [79](#)

Configuring settings, refer to Vehicle Memory [47](#)

Consumption, refer to Average consumption [67](#) Current fuel consumption [67](#)

Contents [2](#)

Continuously Variable automatic Transmission (CVT) [54](#)

ignition [51](#)

indicator lamp [56](#)

interlock [51](#)

selector lever lock [54](#)

shiftlock [54](#)

towing [136](#)

tow-starting [137](#)

Control elements, refer to Cockpit [12](#)

EVERYTHING FROM A TO Z

- Convenience operation
 - convertible top [37](#)
 - from outside [26, 27](#)
 - glass sunroof, electric [33](#)
 - windows [31](#)
- Convertible top [35](#)
 - care [115](#)
 - convenience operation [37](#)
 - electrical malfunction [37](#)
 - emergency closing [37](#)
 - malfunction [37](#)
- Coolant [110](#)
 - indicator lamp [16](#)
 - level [110](#)
 - temperature gauge [64](#)
- Coolant temperature gauge [64](#)
- Cooling system, refer to Capacities [145](#)
- Cooling, refer to Air conditioning [76, 79](#)
- Copyright [2](#)
- Cornering Brake Control (CBC) [70](#)
 - warning lamp [17](#)
- Correct tires [99](#)
- Cosmetic mirror, refer to Illuminated vanity mirror [47](#)
- Cruise control [61](#)
 - buttons in the steering wheel [20, 21](#)
 - indicator lamp [19](#)
- Cup holders, refer to Beverage holders [81](#)
- Curb weight, refer to Weights [143, 144](#)
- Current fuel consumption [67](#)
 - setting units [67](#)
- Cylinders, refer to Engine data [140](#)
- D**
- Daily odometer, refer to Trip odometer [63](#)
- Dashboard lighting, refer to Instrument lighting [58](#)
- Dashboard, refer to Cockpit [12](#)
- Data
 - capacities [145](#)
 - dimensions [141](#)
 - engine [140](#)
 - technical [140](#)
 - weights [143](#)
- Date of the Owner's Manual [7](#)
- Daytime driving lamps [57](#)
- Deep water, refer to Driving through water [93](#)
- Defrost setting, refer to Defrosting and demisting windows [80](#)
- Defrosting and demisting windows
 - automatic climate control [80](#)
- Defrosting windows [80](#)
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Defrosting windshield, refer to Defrosting and demisting windows [80](#)
- Demisting windows [80](#)
- Digital clock [63](#)
- Dimensions [141, 142](#)
- Dimming interior rearview mirror [47](#)
- Dipstick, engine oil [108](#)
- Directional turn signal, refer to Turn signal indicators [58](#)
- Disc brakes [96](#)
- Displacement, refer to Engine data [140](#)
- Display elements [13](#)
 - with navigation system or Cockpit Chrono Pack [14](#)
- Display lighting, refer to Instrument lighting [58](#)
- Disposal
 - engine oil [109](#)
 - vehicle battery [132](#)
- Distance covered, refer to Odometer [63](#)
- Distance warning, refer to Park Distance Control (PDC) [74](#)
- Door keys [24](#)
- Door lock [27](#)
- Doors, locking and unlocking
 - acknowledgment signals [26, 27](#)
 - from inside [28](#)
 - from outside [26](#)
- DOT quality grades [99](#)
- Draft-free ventilation [77, 80](#)
- Drink holders, refer to Beverage holders [81](#)
- Driving lamps, refer to Parking lamps/Low beams [57](#)
- Driving notes [93](#)
- Driving stability control systems [68, 69](#)
- Dry air, refer to Air conditioning [76, 79](#)
- Drying air, refer to Air conditioning [76, 79](#)
- DSC Dynamic Stability Control [69](#)
 - indicator lamp [17](#)
- Dynamic Stability Control (DSC) [69](#)
 - indicator lamp [17](#)
- E**
- Easy entry to the rear [44](#)
- EBD Electronic Brake Force Distribution [70](#)

EVERYTHING FROM A TO Z

Electric glass sunroof [33](#)
Electric power windows [31](#)
initializing [32](#)

Electrical malfunction
Continuously Variable
automatic Transmission
(CVT) [56](#)
convertible top [37](#)
door lock [27](#)
driver's door [27](#)
fuel filler door [95](#)
glass sunroof, electric [34](#)
tailgate [30](#)

Electronic Brake Force
Distribution (EBD) [70](#)

Electronic Stability Program
(ESP), refer to
Dynamic Stability Control
(DSC) [69](#)

Emergency operation, refer to
Manual operation
convertible top [37](#)
driver's door [27](#)
fuel filler door [95](#)
glass sunroof, electric [34](#)
tailgate [30](#)
transmission lock for
Continuously Variable
automatic Transmission
(CVT) [54](#)

Engine
break-in procedures [92](#)
data [140](#)
electronics [18](#)
indicator lamp [18](#)
speed [65](#)
starting [51](#)
switching off [52](#)
Engine compartment
MINI COOPER and MINI
COOPER Convertible [106](#)
MINI COOPER S and MINI
COOPER S Convertible [107](#)

Engine coolant [110](#)
Engine data [140](#)
Engine oil [108](#)
capacity [145](#)
indicator/warning lamp [16](#)
recommended oils [109](#)
specified oil grades [109](#)
viscosities [109](#)

Engine oil level [108](#)
indicator/warning lamp [16](#)
Engine oil level, checking [108](#)
Engine oil pressure, indicator/
warning lamp [16](#)

Engine output, refer to Engine
data [140](#)

Entry to the rear [44](#)

ESP Electronic Stability
Program, refer to Dynamic
Stability Control (DSC) [69](#)
Exhaust system, refer to
Hot exhaust system [93](#)
Exterior mirrors [46](#)
folding in and out [46](#)
Eyelet, for towing and tow-
starting [136](#)

F

Failure of an electrical
consumer [132](#)

Fastening safety belts, refer to
Safety belts [45](#)

Filling canister, refer to MINI
Mobility System [130](#)

Filling hose, refer to MINI
Mobility System [130](#)

Filter, refer to
Microfilter [77](#)
Microfilter/Activated-
charcoal filter [80](#)

Flat tire
Flat Tire Monitor [71](#), [72](#)
MINI Mobility System [129](#)
Run Flat tires [101](#)
space-saver spare tire [125](#)
Flat Tire Monitor [71](#)
indicator lamp [17](#)

Flat tire, refer to Changing
tires [127](#)

Flat tire, refer to Tires,
condition [100](#)

Floor mats [115](#)

Fog lamps [58](#)
indicator lamp [58](#)

Foldable rear backrest [85](#), [86](#)
Folding roof [35](#)

'Follow me home' lamps [57](#)

Foot brake, refer to General
driving notes [93](#)

Front airbags [72](#)

Front turn signal indicators,
bulb replacement [122](#)

Fuel [94](#)
average consumption [67](#)
gauge [63](#), [64](#)
quality [94](#)

tank capacity [145](#)
Fuel filler door [94](#)
unlocking in the event of
electrical malfunction [95](#)

Fuel tank capacity [145](#)

Fuses [133](#)

G

Garage door opener, refer to
Integrated universal remote
control [83](#)

EVERYTHING FROM A TO Z

Gasoline gauge, refer to Fuel gauge [63](#), [64](#)

Gasoline, refer to Fuel quality [94](#)

Gear indicator, with Continuously Variable automatic Transmission (CVT) [56](#)

Gearshift lever Continuously Variable automatic Transmission (CVT) [54](#)
manual transmission [53](#)

Gearshifts, with Continuously Variable automatic Transmission (CVT) [54](#)

General driving notes [93](#)

Glass sunroof, electric [33](#)
convenience operation [27](#)
opening and closing in the event of an electrical malfunction [34](#)
remote control [26](#)

Glove compartment [81](#)

Gross weight, refer to Weights [143](#), [144](#)

H

Handbrake, refer to Parking brake [53](#)

Hazard warning flashers [12](#)

Head airbags [72](#)

Head restraints [43](#)

Headlamp flasher [58](#)
indicator lamp [19](#)

Headlamp range control, dynamic, xenon lamps [57](#)

Headlamp washer reservoir [108](#)
capacity, refer to Capacities [145](#)

Headlamp washer system cleaning headlamps [60](#)
washer fluid [108](#)

Headlamps bulb replacement [122](#)
care [114](#)

Heated mirrors [46](#)

Heated rear window air conditioning system [76](#)
automatic climate control [79](#)

Heating [75](#)
exterior mirrors [46](#)
rear window [76](#), [79](#)
seats [46](#)
windshield [76](#), [79](#)

Heavy load, refer to Loading [88](#)

Height adjustment seats [42](#)
steering wheel [46](#)

Height, refer to Dimensions [141](#), [142](#)

High beams [58](#)

bulb replacement [122](#)
headlamp flasher [58](#)
indicator lamp [19](#)

High Performance Synthetic Oil, refer to Engine oil [109](#)
alternative oils [109](#)
capacity [145](#)
recommended oils [109](#)
specified oils [109](#)

Holders for beverages [81](#)

Horn [12](#)

Hot exhaust system [93](#)

Hydraulic brake [96](#)

Hydroplaning [93](#)

I

Ice warning [66](#)

Ignition [51](#)

Ignition key [24](#)

Ignition lock [51](#)

Illuminated vanity mirror [47](#)

Imitation leather [114](#)

Imprint [2](#)

Index [148](#)

Indicator and warning lamps, overview [16](#)

Indicator/warning lamp

Airbags [73](#)

ASC [68](#)

brakes [111](#)

coolant temperature [64](#)

DSC [69](#)

fasten safety belts [45](#)

Flat Tire Monitor [72](#)

fog lamps [58](#)

reserve fuel capacity [63](#), [64](#)

Individual air distribution [80](#)

Individual settings, refer to Vehicle Memory [47](#)

Inflation pressure monitor, refer to Flat Tire Monitor [71](#)

Inflation pressure, refer to Tire inflation pressure [97](#)

Inspection [65](#)

Instrument cluster, refer to Display elements [13](#)

Instrument lighting [58](#)

Instrument panel, refer to Cockpit [12](#)

Integrated universal remote control [83](#)

Interior lamp, remote control [26](#)

Interior lamps [59](#)

Interior rearview mirror [47](#)
automatic dimming [47](#)

EVERYTHING FROM A TO Z

Interlock, refer to Steering
locked [51](#)

Intermittent operation of the
wipers [59](#)

Interval
display, service [112](#)

J

Jack [125](#), [129](#)
points [128](#)

Jack, refer to Tire change set
MINI Mobility System [129](#)
Run Flat tires [102](#)
space-saver spare tire [125](#)

Jacking points [128](#)

Jets, refer to Ventilation [77](#), [80](#)

Jets, refer to Windshield
washer jets [60](#)

Jump-starting [134](#)

K

Keys [24](#)

Kickdown [55](#)

Knock control [94](#)

L

Lamp defect [121](#)

Lamp replacement, refer to
Lamps and bulbs [121](#)

Lamps and bulbs [121](#)

Lamps, refer to Parking lamps/
Low beams [57](#)

Lashing eyelets, refer to
Securing the load [88](#)

LATCH child-restraint
mounting system [50](#)

Leather care [115](#)

LEDs light-emitting diodes [124](#)

Length, refer to
Dimensions [141](#), [142](#)

License plate lamp, bulb
replacement [124](#)

Lifting handle, space-saver
spare tire [125](#)

Light switch [57](#)

Light-alloy wheels, care [114](#)

Light-emitting diodes
(LEDs) [124](#)

Lighter [82](#)

Lighting of the instruments [58](#)

'Lights on' warning [57](#)

Load securing devices, refer to
Securing the load [88](#)

Loading the vehicle [86](#)

Loads, refer to Loading cargo [86](#)

Locking
from inside [28](#)
from outside [26](#)

Locking/unlocking the vehicle,
acknowledgment
signals [26](#), [27](#)

Low beams [57](#)
bulb replacement [122](#)

Lower back support, refer to
Lumbar support [43](#)

Luggage compartment
cover [85](#)
emergency operation, refer
to Manual release [30](#)
opening from the outside [29](#)
opening with the remote
control [26](#)

opening/closing, refer to
Tailgate [29](#)

tailgate [29](#)
volume [143](#), [144](#)

Luggage compartment in the
MINI [85](#)

Luggage compartment lid
emergency operation, refer
to Manual release [30](#)
opening, remote control [26](#)

Luggage compartment lid, refer
to Tailgate [29](#)

Luggage compartment net [88](#)

Luggage rack, refer to Roof-
mounted luggage rack [89](#)

Lumbar support [43](#)

M

M+S tires, refer to Winter
tires [103](#)

Maintenance system [112](#)

Make-up mirror, illuminated [47](#)

Malfunction

Continuously Variable
automatic Transmission
(CVT) [56](#)
convertible top [37](#)
door lock [27](#)
fuel filler door [95](#)
glass sunroof, electric [34](#)
tailgate [30](#)

Manual air distribution [76](#)

Manual operation

door lock [27](#)
driver's door [27](#)
fuel filler door [95](#)
glass sunroof, electric [34](#)
power convertible top [37](#)
tailgate [30](#)

transmission lock for
Continuously Variable
automatic Transmission
(CVT) [54](#)

Manual transmission [53](#)

Master keys with remote
control [24](#)

Maximum cooling [79](#)

Maximum speed, with winter
tires [103](#)

MC operation, refer to
Owner's Manual for Radio

EVERYTHING FROM A TO Z

Mechanical keys, refer to
Master keys [24](#)

Memory, refer to Vehicle
Memory [47](#)

Microfilter
air conditioning system [77](#)
automatic climate control [80](#)

MINI Maintenance System [112](#)

MINI manufacturer [6](#)

MINI Mobility System [129](#)
compressor [130](#)
liquid sealant [130](#)

Mirrors [46](#)
heating [46](#)

Mobile telephone, refer to
separate Owner's Manual

Mobility System [129](#)

Modifications, technical, refer
to For your own safety [7](#)

Multifunction steering
wheel [20](#)

Multifunction switch
turn signal indicator/
headlamp flasher [58](#)
washer/wiper system [59](#)

N

Navigation system, refer to
separate Owner's Manual

Neck restraints, refer to Head
restraints [43](#)

New tires [102](#)

Non-smoker's equipment
package, refer to Cigarette
lighter socket [82](#)

Nylon rope, refer to Towing and
tow-starting [137](#)

O

OBD interface socket [113](#)

Octane number, refer to Fuel
quality [94](#)

Odometer [63](#)

Oil

additives, refer to Adding
engine oil [109](#)
alternative oil grades [109](#)
approved engine oils [109](#)
capacity [145](#)
dipstick [108](#)

Oil change intervals, refer to
Service and Warranty
Information Booklet for US
models, Warranty and
Service Guide Booklet for
Canadian models

Oil consumption [109](#)

Oil filter change [145](#)

Oil level [108](#)

indicator lamp [16](#)

Oil pressure, indicator lamp [16](#)

Oil service [65](#)

Onboard computer [66](#)

Onboard tool kit [120](#)
MINI Mobility System [129](#)
Run Flat tires [120](#)
space-saver spare tire [125](#)

Opening and closing
from inside [28](#)
from outside [25](#)
via remote control [26](#)
via the door lock [27](#)

Outlets, refer to
Ventilation [75, 78](#)

Outside air [76](#)
air conditioning system [76](#)

Outside air mode, automatic
climate control [79](#)

Outside temperature
display [66](#)
changing units [66](#)
in the onboard computer [66](#)

P

Paintwork care, refer to Vehicle
paintwork [114](#)

Park Distance Control (PDC) [74](#)

Parking
vehicle [93](#)

Parking aid, refer to Park
Distance Control (PDC) [74](#)

Parking brake [53](#)
warning lamp [17](#)

Parking lamps [57](#)
bulb replacement [122](#)

Parking lamps/Low beams [57](#)
Parking lock, refer to P
Parking [55](#)

Parts and accessories, refer to
Your individual vehicle [6](#)

PDC Park Distance Control [74](#)

Plastic [114](#)

Pollen, refer to
Microfilter [77](#)
Microfilter/Activated-
charcoal filter [80](#)

Power convertible top [35](#)

Power failure [132](#)

Power output, refer to Engine
data [140](#)

Power supply, refer to Cigarette
lighter socket [82](#)

Power windows [31](#)

Pressure, tires [97](#)
re-inflation using MINI
Mobility System [130](#)

Protective function, electric
glass sunroof [34](#)

Pumping in liquid sealant [130](#)

Q

Quality grades, refer to
Uniform Tire Quality
Grading [99](#)

EVERYTHING FROM A TO Z

R

Radiator, refer to Coolant [110](#)

Radio, refer to separate

Owner's Manual

Rain sensor [59](#)

Range [66](#)

Reading lamps [59](#)

Rear backrest, foldable [85](#), [86](#)

Rear fog lamp [58](#)

bulb replacement [124](#)

indicator lamp [58](#)

Rear lamps, bulb

replacement [123](#)

Rear seats, adjusting head

restraints [43](#)

Rear shelf, refer to Luggage

compartment cover [85](#)

Rear turn signal indicators, bulb

replacement [123](#)

Rear window wiper [60](#)

replacement [121](#)

Rearview mirror [46](#)

Recirculated air mode

air conditioning system [76](#)

automatic climate control [79](#)

Reclining seat, refer to Backrest

tilt [43](#)

Refueling [94](#)

fuel filler door [94](#)

Remaining distance for

service [65](#)

Remaining distance, refer to

Range [66](#)

Remote control [25](#), [26](#)

garage door opener [83](#)

malfunction [27](#)

Remote control key, refer to

Master keys with remote

control [24](#)

Replacement key [24](#)

Replacement of tires

changing tires [125](#)

new wheels and tires [102](#)

Reporting safety defects [9](#)

Reserve indicator light, refer to

Fuel gauge [63](#), [64](#)

Reservoir, washing

systems [108](#)

Restraint systems

for children [48](#)

refer to Safety belts [45](#)

Retaining straps [88](#)

Reverse

Continuously Variable

automatic Transmission

(CVT) [55](#)

manual transmission [54](#)

Roller sun blind [34](#)

Roof load, refer to

Weights [143](#), [144](#)

Roof-mounted luggage rack [89](#)

Rope, refer to Towing and Tow-

starting [137](#)

RSC Runflat System

Component, refer to

Run Flat tires [101](#)

Run Flat tires [101](#)

tire failure [101](#)

tire inflation pressure [98](#)

tire replacement [102](#)

winter tires [103](#)

Runflat System Component

(RSC), refer to Run Flat

tires [101](#)

Runflat Tyres, refer to Run Flat

tires [101](#)

S

Safety belt height

adjustment [45](#)

Safety belts [45](#)

care [115](#)

height adjustment [45](#)

indicator lamp [17](#), [45](#)

safe seating position [41](#)

Safety lock buttons, doors,

refer to Locking [28](#)

Safety systems, refer to

Airbags [72](#)

All Season traction Control

(ASC) [68](#)

Antilock Brake System

(ABS) [70](#)

Brake system [70](#)

Dynamic Stability Control

(DSC) [69](#)

Safety tires, refer to

Run Flat tires [101](#)

Screwdriver, refer to Onboard

tool kit [120](#)

Seat adjustment [42](#)

Seat heating [46](#)

Seat-belt tensioner, refer to

Safety belts [45](#)

Seats

heating [46](#)

safe seating position [41](#)

Securing loads, refer to Loading

cargo [86](#)

Securing the load [88](#)

Securing the vehicle

from inside [28](#)

from outside [26](#)

Selector lever positions,

Continuously Variable

automatic Transmission

(CVT) [54](#)

EVERYTHING FROM A TO Z

- Selector lever shiftlock, refer to Shiftlock [54](#)
 - Selector lever, Continuously Variable automatic Transmission (CVT) [54](#)
 - Service and Warranty Information Booklet for US models, Warranty and Service Guide Booklet for Canadian models [112](#)
 - Service interval display [65](#), [112](#)
 - Shift paddles [56](#)
 - Shifting gears with Continuously Variable automatic Transmission (CVT) [55](#)
 - Shiftlock, refer to Range selection [54](#)
 - Side airbags [72](#)
 - Side turn signal indicators, bulb replacement [123](#)
 - Signal horn, refer to Horn [12](#)
 - Sitting safely [41](#)
 - with airbags [41](#)
 - with safety belt [41](#)
 - Slipstream deflector, refer to Wind deflector [39](#)
 - Smoker's equipment package, refer to Ashtray [81](#)
 - Snow chains [104](#)
 - Socket 12 V [82](#)
 - Socket for onboard diagnostics [113](#)
 - Space-saver spare tire changing tires [125](#)
 - inflation pressure [98](#)
 - Spare key [24](#)
 - Spare tire, refer to Space-saver spare tire [125](#)
 - Special oils, refer to Specified engine oils [109](#)
 - Special wash program [113](#)
 - Specified oils [109](#)
 - Speed [140](#)
 - with Run Flat tires [101](#)
 - with the space-saver spare tire [127](#)
 - with winter tires [103](#)
 - Speedometer [13](#), [14](#)
 - Speedometer, refer to Display elements [13](#), [14](#)
 - Split rear backrest, refer to Foldable rear backrest [85](#)
 - Through-loading system [86](#)
 - Sport program, Continuously Variable automatic Transmission CVT [55](#)
 - Stability control
 - All Season traction Control (ASC) [68](#)
 - Dynamic Stability Control (DSC) [69](#)
 - Standing lamps [57](#)
 - bulb replacement [122](#)
 - Starting aid, refer to Jump-starting [134](#)
 - Starting problems
 - at very low temperatures [52](#)
 - jump-starting [134](#)
 - Starting the engine [51](#)
 - Starting, refer to Starting the engine [51](#)
 - Start-off assistance, refer to ASC [68](#)
 - Start-off assistance, refer to DSC [69](#)
 - Steering lock [51](#)
 - Steering wheel [12](#)
 - settings [46](#)
 - Steering wheel lock [51](#)
 - Steering wheel with multifunction buttons [20](#), [21](#)
 - Steptronic, refer to Manual mode [55](#)
 - Storage compartments [81](#)
 - Storage space, refer to Luggage compartment in the MINI [85](#)
 - Luggage compartment in the MINI Convertible [86](#)
 - Storing the tires [103](#)
 - Storing the vehicle [116](#)
 - Sun blind, refer to Roller sun blind [34](#)
 - Sun visors [47](#)
 - Surface ice, refer to Ice warning [66](#)
 - Switches, refer to Cockpit [12](#)
 - Switching off the engine [52](#)
 - Switching the air conditioning on and off manually [76](#), [79](#)
 - Symbols [6](#)
- ## T
- Tachometer [65](#)
 - Tail lamps, bulb replacement [123](#)
 - Tail lamps, refer to Rear lamps [123](#)
 - Tailgate [29](#)
 - emergency operation [30](#)
 - indicator lamp [17](#)
 - opening from the outside [29](#)
 - releasing manually [30](#)
 - remote control [26](#)
 - Tank capacity, refer to Fuel tank capacity [145](#)
 - Tank gauge, refer to Fuel gauge [63](#), [64](#)
 - Technical data [140](#)
 - Technical modifications [7](#)

EVERYTHING FROM A TO Z

- Technical modifications, refer to For your own safety [7](#)
- Telephone call, refer to the Owner's Manual for the telephone
- Temperature
air conditioning system [76](#)
automatic climate control [79](#)
- Temperature display
ice warning [66](#)
outside temperature [66](#)
setting units [66](#)
- Temperature grades [100](#)
- Tempomat, refer to Cruise control [61](#)
- Three-point safety belt [45](#)
- Through-loading system [85](#), [86](#)
- Tightening the lug bolts
keys [125](#), [129](#)
torque [128](#)
- Tightening torque, refer to Tightening the lug bolts [128](#)
- Tire change set
MINI Mobility System [131](#)
Run Flat tires [102](#)
space-saver spare tire [125](#)
- Tire failure [125](#)
MINI Mobility System [129](#)
space-saver spare tire [125](#)
- Tire inflation pressure [97](#)
reinflation [130](#)
- Tire pressure monitor, refer to Flat Tire Monitor [71](#)
- Tire pressure monitoring, Flat Tire Monitor [71](#)
- Tires
age [99](#)
break-in procedures [92](#)
changing [127](#)
condition [100](#)
damage [101](#)
flat tire [101](#), [125](#)
inflation pressure [97](#)
replacement [102](#)
size, refer to New wheels and tires [102](#)
storage [103](#)
tread [100](#)
wear indicator, refer to Tire tread [100](#)
winter tires [103](#)
- Tires with emergency properties, refer to Run Flat tires [101](#)
- Tools, refer to Onboard tool kit [120](#)
- Torque
engine [140](#)
lug bolts [128](#)
- Tow bar [137](#)
- Tow rope [137](#)
- Tow socket for towing eyelet [136](#)
- Towing [136](#)
with automatic transmission [136](#), [137](#)
- Towing eyelet [136](#)
- Tow-starting [137](#)
- Track width, refer to Dimensions [141](#), [142](#)
- Traction grades [100](#)
- Transmission
Continuously Variable automatic Transmission (CVT) [54](#)
manual transmission [53](#)
- Transmission lock, refer to Range selection [54](#)
- Transmission malfunction, refer to Malfunction [56](#)
- Transporting children safely [48](#)
- Transporting securely, refer to Securing the load [88](#)
- Trap protection, electric glass sunroof [34](#)
- Trash container, refer to Ashtray [81](#)
- Tread depth, refer to Tire tread [100](#)
- Treadwear grade [99](#)
- Trip odometer [63](#)
- Trunk, refer to Luggage compartment in the MINI [85](#)
- Turn signal indicators [58](#)
indicator lamp [19](#)
- Turn signal indicators on the side, bulb replacement [123](#)
- Turning circle, refer to Dimensions [141](#), [142](#)
- ### U
- Uniform Tire Quality Grading [99](#)
- Units
average consumption [67](#)
average speed [67](#)
temperature [66](#)
- Universal garage door opener [83](#)
- Universal remote control [83](#)
- Unlocking
bonnet [105](#)
from inside [28](#)
from outside [26](#)
- Used batteries, refer to Disposal [132](#)
- Using antifreeze [108](#), [110](#)
- ### V
- Vacuum cleaner, connecting, refer to Cigarette lighter socket [82](#)

EVERYTHING FROM A TO Z

- Valve
 - core [129](#)
 - dust cap [127](#)
 - remover [129](#)
 - spare [129](#)
- Valve remover, refer to Onboard tool kit [129](#)
- Valve stem and replacement valve, refer to Onboard tool kit [129](#)
- Vehicle
 - battery [132](#)
 - break-in procedures [92](#)
 - care [113](#)
 - dimensions [141](#)
 - loading cargo [86](#)
 - parking [93](#)
 - storage [116](#)
 - washing [113](#)
 - weight [143](#), [144](#)
- Vehicle battery [132](#)
- Vehicle identification number, refer to Engine compartment [106](#), [107](#)
- Vehicle Memory [47](#)
- Ventilation, draft-free [77](#), [80](#)
- Ventilation, refer to Draft-free ventilation [77](#), [80](#)
- Viscosity [109](#)
- Volume
 - luggage compartment [143](#), [144](#)
- W**
- Warning and indicator lamps [16](#)
- Washer fluid [108](#)
- Washer fluid reservoir, capacity [145](#)
- Washer fluid reservoir, refer to Washer/Wiper system [108](#)
- Washer systems [108](#)
- Washer/wiper system [59](#)
- Washing your vehicle [113](#)
- Water on roadways, deep water [93](#)
- Wear indicators in the tires, refer to Tire condition [101](#)
- Weights [143](#), [144](#)
- Wheel stud wrench
 - MINI Mobility System [129](#)
 - space-saver spare tire [125](#)
- Wheel/tire combination [102](#)
- Wheelbase, refer to Dimensions [141](#), [142](#)
- Wheels and tires [102](#)
- Wheelslip control
 - All Season traction Control (ASC) [68](#)
 - Dynamic Stability Control (DSC) [69](#)
- Width, refer to Dimensions [141](#)
- Wind deflector [39](#)
- Window washer reservoir [108](#)
 - capacity, refer to Capacities [145](#)
- Window washer system
 - washer fluid [108](#)
 - washer/wiper system [59](#)
- Windows, convenience operation [26](#), [27](#)
- Windscreen wipers
 - replacement [120](#), [121](#)
- Windshield heating
 - air conditioning system [76](#)
 - automatic climate control [79](#)
- Windshield washer jets [60](#)
- Windshield wiper blades
 - care [115](#)
 - replacement [120](#), [121](#)
- Windshield wipers
 - intermittent operation [59](#)
- Windshield wipers, refer to Washer/wiper system [59](#)
- Windshield, cleaning [60](#)
- Winter tires [103](#)
 - changing [127](#)
 - condition [100](#)
 - Run Flat tires [103](#)
 - storage [103](#)
- Wood paneling [115](#)
- Work in the engine compartment [105](#)
- Wrench, refer to Onboard tool kit [120](#)
- X**
- Xenon lamps
 - bulb replacement [122](#)
 - daytime driving lamps [57](#)

REFUELING

Fuel	
Designation	
AKI: minimum	

Engine oil	
Quality	

The oil volume between the two notches on the dipstick corresponds to approx. 1.1 US quarts / 1 liter.

Tire inflation pressure	Summer		Winter	
	front	rear	front	rear
2 persons				
4 persons plus luggage				



To ensure that you always have convenient access to all essential information when you stop for fuel, we recommend that you take the time to fill out the adjoining chart by entering the data that applies to your vehicle.

MINI RECOMMENDS 



01.41.0.158.427 ue

DRIVE ME.

MINI US-En

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>