


# How to Program your Honeywell Timetracker™

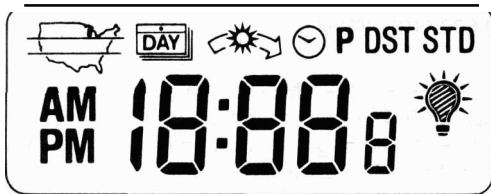

12.783

- Timetracker™ Dual Plug, CL600A-1001
- Timetracker™ Wall Switch, CL600B-1009
- Timetracker™ Tabletop, CL600D-1005


This device automatically turns your light or appliance on and off up to four times a day. Use of the Timetracker option is recommended for sunset scheduling to ensure that your light goes on at dusk, regardless of the hour at which dusk occurs. Timetracker automatically adjusts for the changing hour of sunset, allowing the light to come on every day at nightfall.

Once you have started setting and programming, Timetracker will lock itself if 50 seconds pass without a press of a button. If this happens, press LOCK, then FUNCTION until you reach the place where you left off and continue. For this reason, please read and understand this entire instruction booklet before you begin setting and programming.

#### IMPORTANT

On the CL600B-1009 wall switch model only, if the display does not show when you are ready to begin programming, the unit's battery needs recharging. With the unit wired and connected to the wall, place the switch to AUTO. (This model **MUST** be switched to AUTO to recharge the battery.) The battery will recharge sufficiently to bring the display on in **24** hours, but will take several days to become fully charged. When the display comes on, press RESET, and proceed with programming according to page **4**.

# FEATURES

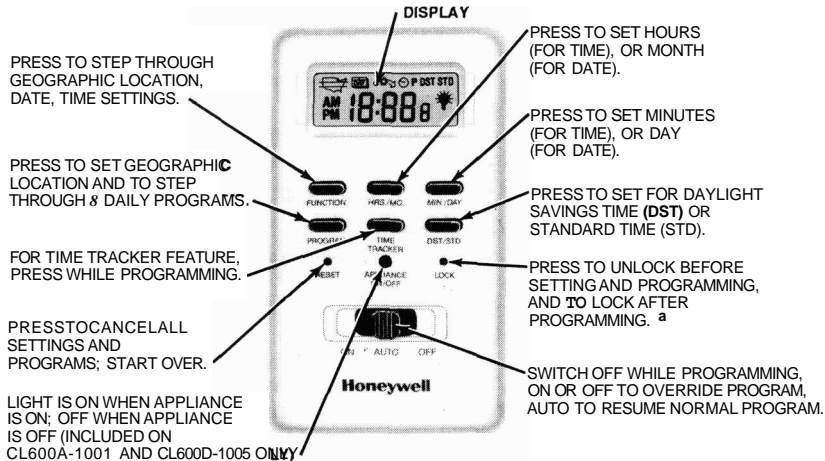


**a** DURING PROGRAMMING, TIMETRACKER WILL AUTOMATICALLY LOCK IF NONE OF THE BUITONS ARE TOUCHED FOR 50 SECONDS.

12,784


# DETERMINE YOUR PROGRAM

Fill in the times on the dial below. Start programming with your first program time after midnight. If this first time is an ON-time, start with program 1. If it is an OFF-time, skip 1, and start with 2. Continue through the day and evening, making sure that all program times are in sequence, and don't overlap. Your setting cannot be 12:00 midnight, but can be 1 59 p.m. or 12:01 a.m.

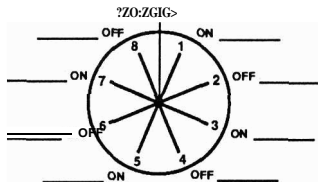


## EXAMPLES

ON AND OFF  
THREE TIME/DAY

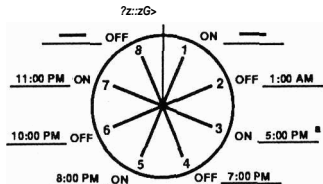

■ TIME TRACKER OPTION USED

ON AND OFF  
ONCE/DAY

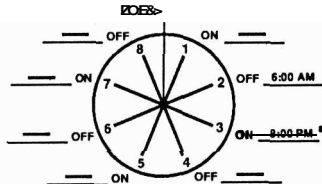


■ TIME TRACKER OPTION USED M2038

# ENTER YOUR SETTINGS AND PROGRAM

Peel off tape covering display.



Set switch to OFF.




















	PRESS		DISPLAY
	ONCE	REPEATEDLY TO DESIRED SETTING	
To start programming, press with ballpoint:	 LOCK	—	
To set geographic location (1 = South, 2=Central, 3=North):	 FUNCTION	 PROGRAM	










(continued)

(table continued)

	PRESS		DISPLAY
	ONCE	REPEATEDLY TO DESIRED SETTING	
To set date (set day at 30 if this is the 31st): To choose Daylight Savings (DST) or Standard Time (STD):	 FUNCTION	 HRS/MO   DST/STD	 MIN/DAY  
To set time:	 FUNCTION	 HRS/MO   MIN/DAY	
To set program times (refer to your notes above): Choose Program number:	 FUNCTION	 PROGRAM	
Set program time:		 HRS/MO   MIN/DAY	
Set Timetracker ON to track sundown time (for evening on-time only):	 TIME TRACKER	—	

(table continued)

	PRESS		DISPLAY
	ONCE	REPEATEDLY TO DESIRED SETTING	
To end programming, press with ballpoint:	 LOCK	or allow to lock itself by pausing 50 seconds.	
To check settings and program times:	 LOCK	 FUNCTION To review settings	 PROGRAM To review program times.
To clear memory at any time, press with ballpoint:	 RESET	—	

Set switch to AUTO.



ON    AUTO    OFF

### PROGRAMMING NOTICE

Your Timetracker takes up to a day to "learn" your program. The light or appliance may not come on with your first program until 24 hours have passed.

## **CHANGING FROM STANDARD TO DAYLIGHT-SAVING TIME (AND BACK)**

- Press LOCK.
- Press DST/STD. The DST/STD indicator in the display will change, followed by the appropriate change in time.
- Press LOCK again.

## **CHANGING THE CALENDAR**

After several months have passed, your calendar will be a few days ahead, since each month in the Timetracker™ has only 30 days. If desired, you may update your calendar as follows:

- Press LOCK.
- Press FUNCTION until calendar appears.
- Press MIN./DAY for correct day and HRSJMO. for correct month, if necessary.
- Press LOCK again.

## **IN CASE OF POWER OUTAGE**

A built-in rechargeable battery ensures that your Timetracker's program is not lost in case of a power failure. The battery is automatically recharged when the Timetracker is normally wired or plugged in, and switched to the AUTO position.

If you have any questions regarding the Timetracker, please contact Honeywell Consumer Affairs toll-free at 1-800-468-1502, Monday-Friday, 7:30 a.m.-4:00 p.m. Central time.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>