Inspiron 15 5000 Setup and Specifications



Notes, cautions, and warnings



NOTE: A NOTE indicates important information that helps you make better use of your product.



CAUTION: A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Copyright © 2017 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

2017 - 12

Rev. A01

Contents

Set up your computer	5
Create a USB recovery drive for Windows	7
Reinstall Windows using a USB recovery drive	
Views	9
Left	9
Right	10
For computers with optical drive	10
For computers without optical drive	11
Display	11
Base	12
Bottom	13
Specifications	15
Computer model	
System information	15
Operating system	15
Dimensions and weight	15
Memory	16
Ports and connectors	16
Communications	17



Contacting Dell	
Self-help resources	
Getting help and contacting Dell	26
Keyboard shortcuts	24
Computer environment	23
Display	
Video	22
Battery	21
Power adapter	21
Touchpad gestures	20
Touchpad	20
Camera	
Keyboard	19
Media-card reader	
Storage	18
Audio	18
Wireless module	18



Set up your computer

Connect the power adapter and press the power button.





NOTE: To conserve battery power, the battery might enter power saving mode. Connect the power adapter and press the power button to turn on the computer.

2 Finish operating system setup.

For Ubuntu:

Follow the instructions on the screen to finish setup.

For Windows:

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:

Connect to a network for Windows updates.



NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.

- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.



3 Locate and use Dell apps from the Windows Start menu—Recommended

Table 1. Locate Dell apps



Dell Product Registration

Register your computer with Dell.



Dell Help & Support

Access help and support for your computer.



SupportAssist

Proactively checks the health of your computer's hardware and software.



NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.



Dell Update

Updates your computer with critical fixes and important device drivers as they become available.



Dell Digital Delivery

Download software applications including software that is purchased but not pre-installed on your computer.

4 Create recovery drive for Windows.



NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.

For more information, see Create a USB recovery drive for Windows.



Create a USB recovery drive for Windows

Dell recommends that you create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.



NOTE: The following steps may vary depending on the version of Windows installed. Refer to the Microsoft support site for latest instructions.

- Connect the USB flash drive to your computer.
- 2 In Windows search, type Recovery.
- 3 In the search results, click Create a recovery drive.

The **User Account Control** window is displayed.

Click **Yes** to continue.

The **Recovery Drive** window is displayed.

- Select Back up system files to the recovery drive and click Next.
- Select the **USB flash drive** and click **Next**.

A message appears, indicating that all data in the USB flash drive will be deleted.

7 Click Create.



NOTE: This process may take up to an hour to complete.

8 Click Finish.

Reinstall Windows using a USB recovery drive



CAUTION: This process formats the hard drive and removes all data on your computer. Ensure that you back up data on your computer before beginning this task.



NOTE: Before reinstalling Windows, ensure your computer has more than 2 GB of memory and more than 32 GB of storage space.

- Connect the USB recovery drive to your computer.
- 2 Restart your computer.



- 3 Press F12 after the Dell logo is displayed on the screen to access the boot menu.
 A Preparing one-time boot menu message appears.
- 4 After the boot menu loads, select the USB recovery device under **UEFI BOOT**. The system reboots and a screen to **Choose the keyboard layout** is displayed.
- **5** Choose your keyboard layout.
- 6 In the Choose an option screen, click Troubleshoot.
- 7 Click Recover from a drive.
- **8** Choose one of the following options:
 - **Just remove my files** to do a quick format.
 - **Fully clean the drive** to do a complete format.
- **9** Click **Recover** to start the recovery process.

This may take up to an hour to complete and your computer will restart during this process.



Views

Left



1 Power-adapter port

Connect a power adapter to provide power to your computer and charge the battery.

2 Battery-status light/hard-drive activity light

Indicates the battery-charge status or the hard-drive activity.



NOTE: Press Fn+H to toggle between the battery-status light and hard-drive activity light.

Hard-drive activity light

Turns on when the computer reads from or writes to the hard drive.



NOTE: Hard-drive activity light is supported only on computers shipped with hard drive.

Battery-status light

Indicates the battery-charge status.

Solid white: Power adapter is connected and the battery has more than 5% charge.

Amber: Computer is running on battery and the battery has less than 5% charge.

Off:

- Power adapter is connected and the battery is fully charged.
- Computer is running on battery and the battery has more than 5% charge.
- Computer is in sleep state, hibernation, or turned off.

3 USB 3.1 Gen 1 (Type-C) port with Power Delivery/DisplayPort



Connect peripherals such as external storage devices, printers, and external displays.

Supports Power Delivery that enables two-way power supply between devices. Provides up to 15 W power output that enables faster charging.



NOTE: An adapter (sold separately) is required to connect a DisplayPort device.

4 HDMI port

Connect a TV or another HDMI-in enabled device. Provides video and audio output.

5 Network port

Connect an Ethernet (RJ45) cable from a router or a broadband modem for network or Internet access.

6 USB 3.1 Gen 1 ports (2)

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 5 Gbps.

7 Headset port

Connect headphones or a headset (headphone and microphone combo).

Right

For computers with optical drive



1 SD-card slot

Reads from and writes to the SD card.

2 **USB 2.0 port**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

3 Optical drive

Reads from and writes to CDs, DVDs, and Blu-ray discs.



NOTE: Blu-ray support is only available in certain regions.

4 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

For computers without optical drive



1 SD-card slot

Reads from and writes to the SD card.

2 **USB 2.0 port**

Connect peripherals such as external storage devices and printers. Provides data transfer speeds up to 480 Mbps.

3 Security-cable slot (for Noble locks)

Connect a security cable to prevent unauthorized movement of your computer.

Display





1 Left microphone

Provides digital sound input for audio recording and voice calls.

2 Camera

Enables you to video chat, capture photos, and record videos.


3 Camera-status light

Turns on when the camera is in use.

4 Right microphone

Provides digital sound input for audio recording and voice calls.

Base

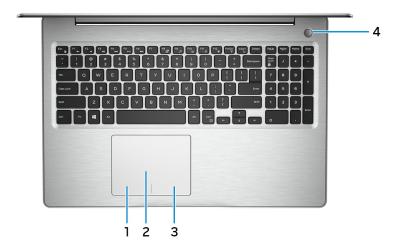

1 Left-click area

Press to left-click.

2 Touchpad

Move your finger on the touchpad to move the mouse pointer. Tap to left-click and two finger tap to right-click.

3 Right-click area

Press to right-click.

4 Power button with optional fingerprint reader

D&LL

Press to turn on the computer if it is turned off, in sleep state, or in hibernate state.

When the computer is turned on, press the power button to put the computer into sleep state; press and hold the power button for 4 seconds to force shutdown the computer.

If the power button has a fingerprint reader, place your finger on the power button to log in.





Bottom



1 Left speaker

Provides audio output.

2 Service Tag label

The Service Tag is a unique alphanumeric identifier that enables Dell service technicians to identify the hardware components in your computer and access warranty information.



3 Right speaker

Provides audio output.



Specifications

Computer model

Table 2. Computer model

Computer model Inspiron 5570

System information

Table 3. System information

Processor

• 8th generation Intel Core i5/i7

7th generation Intel Core i3/i5/i7

· 6th generation Intel Core i3

· Intel Pentium

· Intel Celeron

Chipset Integrated in processor

Operating system

Table 4. Operating system

Operating systems supported

- · Windows 10 Home (64-bit)
- · Windows 10 Professional (64-bit)
- Ubuntu

Dimensions and weight

Table 5. Dimensions and weight

Height . 22.70 mm (0.89 in)—with optical drive



· 19.90 mm (0.78 in)-without optical

drive

380 mm (14.96 in) Width

258 mm (10.16 in) Depth

Weight · 2.12 kg (4.67 lb)-without optical drive

2.33 kg (5.14 lb)-with optical drive



NOTE: The weight of your laptop varies depending on the configuration ordered and the manufacturing variability.

Memory

Table 6. Memory specifications

Two SODIMM slots Slots

Dual-channel DDR4 Type

Speed Up to 2400 MHz

Configurations supported:

Per memory module slot 2 GB, 4 GB, 8 GB, and 16 GB

4 GB. 6 GB. 8 GB. 12 GB. 16 GB. and 32 Total memory

GB

Ports and connectors

Table 7. Ports and connectors

External:	
Network	One RJ-45 port
USB	 One USB 3.1 Gen 1 (Type-C) with Power Delivery/DisplayPort Two USB 3.1 Gen 1 ports



External: One USB 2.0 port Audio/Video One HDMI 1.4b port One headset (headphone and microphone combo) port

Internal:	
M.2 slot Technology supported	 One M.2 slot for the Wi-Fi and Bluetooth combo card One M.2 slot for solid-state drive PCI Express
Communications	
Table 9. Supported communications	

Ethernet 10/100 Mbps Ethernet controller integrated on system board

Wireless

Wi-Fi 802.11ac + Wi-Fi 802.11a/b/g/n

Wi-Fi 802.11b/g/n

Bluetooth 4.0

Bluetooth 4.1

Bluetooth 4.2

Miracast



NOTE: Windows 10 currently supports up to Bluetooth 4.1.



Wireless module

Table 10. Wireless module specifications

Transfer rate	Up	to 433 Mbps	Up	to 867 Mbps	Up	to 150 Mbps
Frequency bands supported		ial band 2.4 Hz/5 GHz		ial band 2.4 Hz/5 GHz	2.4	1 GHz only
Encryption	٠	64-bit and 128- bit WEP	•	64-bit and 128- bit WEP		64-bit and 128- bit WEP
	٠	CKIP	٠	CKIP		CKIP
	٠	TKIP	•	TKIP		TKIP
	٠	AES-CCMP	•	AES-CCMP		AES-CCMP

Audio

Table 11. Audio specifications

Controller	Realtek ALC3234 with Waves MaxxAudio Pro
Speakers	Two
Speaker output	Average: 2 WPeak: 2.5 W
Microphone	Digital-array microphones

Storage

Table 12. Storage specifications	
Interface	SATA 6 Gbps for hard driveSATA 6 Gbps for solid-state driveSATA 1.5 Gbps for optical drive
Hard drive	One 2.5-inch drive
Maximum configuration supported	Up to 2 TB (5400 rpm)

Solid-state drive (SSD)

M.2 SATA SSD

M.2 NVMe SSD

Maximum configuration supported

· M.2 SATA SSD: Up to 256 GB

M.2 NVMe SSD: Up to 512 GB

Technology supported

PCI Express

Optical drive (optional)

One 9.5 mm DVD+/-RW drive or Blu-ray

Disc writer



NOTE: Blu-ray support is only available in certain regions.

Media-card reader

Table 13. Media-card reader specifications

Type One SD-card slot

Cards supported SD card

Keyboard

Table 14. Keyboard specifications

Type · Standard keyboard

· Backlit keyboard (optional)

Shortcut keys Some keys on your keyboard have two

symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.



- NOTE: Press Fn+Esc to switch the primary behavior of the function keys (F1-F12) between two modes multimedia key mode and function key mode.
- NOTE: You can define the primary behavior of the shortcut keys by pressing Fn+Esc or by changing Function Key Behavior in System Setup.

Keyboard shortcuts

Camera

Table 15. Camera specifications

Resolution . Still image: 0.92 megapixel

· Video: 1280 x 720 (HD) at 30 fps

Diagonal viewing angle 75 degrees

Touchpad

Table 16. Touchpad

Resolution · Horizontal: 1228

Vertical: 928

Dimensions • Height: 80 mm (3.15 in)

Width: 105 mm (4.13 in)

Touchpad gestures

For more information about touchpad gestures for Windows 10, see the Microsoft knowledge base article 4027871 at support.microsoft.com.



Power adapter

Table 17. Power adapter specifications

Type · 45 W: For computers shipped with

integrated graphics card

• 65 W: For computers shipped with

discrete graphics card

Diameter (connector) 4.5 mm

Input voltage 100 VAC-240 VAC

Input frequency 50 Hz-60 Hz

Input current (maximum) 1.30 A/1.60 A/1.70 A

Output current (continuous) 2.31 A/3.34 A

Rated output voltage 19.50 VDC

Temperature range:

Operating 0°C to 40°C (32°F to 104°F)

Storage -40°C to 70°C (-40°F to 158°F)

Battery

Table 18. Battery specifications

Type 3-cell "smart" lithium ion (42 WHr)

Dimensions:

Width 184.15 mm (7.25 in)

Depth 97.15 mm (3.82 in)

Height 5.9 mm (0.23 in)

Weight (maximum) 0.2 kg (0.44 lb)

Voltage 11.40 VDC

Life span (approximate) 300 discharge/charge cycles

Temperature range:



Operating	0°C to 35°C (32°F to 95°F)
Storage	-40°C to 65°C (-40°F to 149°F)
Coin-cell battery	CR-2032
Operating time	Varies depending on operating conditions and can significantly reduce under certain power-intensive conditions.

Video

Table 19. Video specifications

	Integrated	Discrete
Controller	 Intel UHD Graphics 620 on computers shipped with 8th generation Intel Core i5/i7 processors 	AMD Radeon 530
	 Intel HD Graphics 620 on computers shipped with 7th generation Intel Core i3/15/i7 processors 	
	 Intel HD Graphics 610 on computers shipped with Intel Pentium and Celeron processors 	
Memory	Shared system memory	Up to 4 GB GDDR5

Display

Table 20. Display specifications

	15.6-inch HD Non- touchscreen TN (Twisted Nematic) panel	15.6-inch FHD Touch/ Non-touchscreen TN (Twisted Nematic) panel
Resolution (maximum)	1366 x 768	1920 x 1080
Viewing angle	40/40/10/30	40/40/10/30
Pixel pitch	0.252 mm	0.179 mm
Dimensions:		



	15.6-inch HD Non- touchscreen TN (Twisted Nematic) panel	15.6-inch FHD Touch/ Non-touchscreen TN (Twisted Nematic) panel
Height (excluding bezel)	344 mm (13.54 in)	
Width (excluding bezel)	194 mm (7.64 in)	
Diagonal (excluding bezel)	395 mm (15.55 in)	
Refresh rate	60 Hz	
Operating angle	0 degrees (closed) to 135 d	egrees
Controls	Brightness can be controlled	d using shortcut keys

Computer environment

Airborne contaminant level: G1 as defined by ISA-S71.04-1985

Table 21. Computer environment

	Operating	Storage
Temperature range	0°C to 35°C	-40°C to 65°C
	(32°F to 95°F)	(-40°F to 149°F)
Relative humidity	10% to 90%	0% to 95%
(maximum)	(non-condensing)	(non-condensing)
Vibration (maximum)*	0.66 GRMS	1.30 GRMS
Shock (maximum)	110 G [†]	160 G [‡]
Altitude (maximum)	-15.20 m to 3048 m (-50 ft to 10,000 ft)	-15.20 m to 10,668 m (-50 ft to 35,000 ft)

^{*} Measured using a random vibration spectrum that simulates user environment.



[†] Measured using a 2 ms half-sine pulse when the hard drive is in use.

[‡] Measured using a 2 ms half-sine pulse when the hard-drive head is in parked position.

Keyboard shortcuts



NOTE: Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Table 22. List of keyboard shortcuts

Keys	Description
F1	Mute audio
F2 ●	Decrease volume
F3	Increase volume
F4 I≪■	Play previous track/chapter
F5 ▶Ⅱ	Play/Pause
F6 ▶H	Play next track/chapter
F8	Switch to external display
F9 P	Search
F10	Toggle keyboard backlight (optional)
F11 ₩	Decrease brightness
F12	Increase brightness
	Turn off/on wireless
Fn + S	Toggle Scroll Lock



Keys	Description
Fn + Esc	Toggle Fn-key lock
Fn + B	Pause/Break
Fn + Insert	Sleep
Fn + R	System request
Fn + Ctrl	Open application menu
	Toggle between battery-status light and hard- drive activity light
Fn + H	NOTE: Hard-drive activity light is supported only on computers shipped with a hard drive.



Getting help and contacting Dell

Self-help resources

You can get information and help on Dell products and services using these self-help resources:

Table 23. Self-help resources

Information about Dell products and services

Dell Help & Support app

www.dell.com



Accessing help

Online help for operating system

Troubleshooting information, user manuals, setup instructions, product specifications, technical help blogs, drivers, software updates, and so on.

Dell knowledge base articles for a variety of computer concerns.

In Windows search, type Help and

Support, and press Enter.

www.dell.com/support/windows www.dell.com/support/linux

www.dell.com/support

- Go to www.dell.com/support.
- 2 Type the subject or keyword in the Search box.
- Click **Search** to retrieve the related 3 articles.

about your product:

- Product specifications
- Operating system
- Setting up and using your product
- Data backup
- Troubleshooting and diagnostics

Learn and know the following information See Me and My Dell at www.dell.com/ support/manuals.

> To locate the Me and Mv Dell relevant to your product, identify your product through one of the following:

Select **Detect Product**.



- Factory and system restore
- BIOS information

- Locate your product through the drop-down menu under View Products.
- Enter the **Service Tag number** or **Product ID** in the search bar.

Contacting Dell

To contact Dell for sales, technical support, or customer service issues, see www.dell.com/contactdell.



NOTE: Availability varies by country and product, and some services may not be available in your country.



NOTE: If you do not have an active internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com