OPERATOR'S MANUAL	<u> </u>
SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, INCLUDE MANUALS: 66302-X LOWER PUMP END (PN 97999-648) & S-632 GENERAL INFORMATION MANUAL (PN 97999-624)	REVISED: 6-7-10 (REV. B)
3-1/4" AIR MOTOR	650385-X4X
17:1 RATIO TWO E	BALL PUMP SERIES
6" STROKE 300	SERIES STAINLESS STEEL
READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT. It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.	
SERVICE KITS	PUMP DATA
 Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life. <u>637041</u> for repair of Air Motor section. Service Note: The Air Motor Service/Parts Manual is not shipped with the pump but it is included with each Service Kit. If this Service/Parts Information is needed, request the Air Motor Operator's Manual from ARO. (Manual 6534X-X, PN 97999-028). <u>637307-X43</u> for repair of Lower Pump section. Refer to the chart on page 2 for description of -XXX options. 	MODEL 650385-X4X Air Inlet 1/4-18 NPTF-1(f) (Not Shown) Air Motor 65365
SPECIFICATIONS	37-5/8 (See Manual 6534X-X)
Model Series (Refer to option chart) 650385-X4X Type Air Operated, Two Ball Ratio 17:1 Air Motor 65365 Motor Repair Kit 637041 Motor Diameter 3-1/4" (8.3 cm) Stroke 6" Air Inlet 1/4" - 18 NPTF-1(f) Air Exhaust 1-1/4", 11-1/2 NPTF-1(f) Lower Pump End Series 66302-X4X Lower Pump Repair Kit 637307-X43 Material Inlet 1" 11-1/2 NPTF-1(f) & 2" 11-1/2 PTF (m) (SHORT) 1" 11-1/2 NPTF-1(f) Material Outlet 1" 11-1/2 NPTF-1(f) Weight 35.5 Lbs (16.1 Kgs) PERFORMANCE Air Inlet Pressure Range 30 - 150 PSI (2 - 10.3 bar) Fluid Pressure Range 510 - 2550 PSI (35 - 176 bar) Max. Rec'd Cycles / Minute 60	(956 mm) Spacer Section NUT Y85-29-C (3) CONNECTOR See Figure 2 SPACER ROD 94209 (3) Material Outlet 1" NPTF-1 (f) 60° FROM AIR EXHAUST (481 mm) 12-11/16 (322 mm) CONNECTOR See Figure 2 SPACER ROD 94209 (3) Material Outlet 1" NPTF-1 (f) 66302-X4X (See Manual 66302-X) (See Manual 66302-X) FEMALE INLET
Displacement In ³ Per Cycle 5.5	Material Inlet
Volume/Cycle	FIGURE 1
Cycles Per Gallon	Accessories Available: 91790 Silencer, 66101 Wall Bracket.
Flow @ 60 Cycles / Minute 1.3 GPM (4.92 lpm) Noise Level @ 60 Psi - 40 Cpm 74.8 db(A) *	
	This is one of the four documents which support the pump. Replacement copies of these forms are available upon request. 650385-X MODEL OPERATOR'S MANUAL GENERAL INFORMATION - INDUSTRIAL PISTON PUMPS
* The pump sound pressure level has been updated to an Equivalent Continuous Sound	 66302-X LOWER PUMP END OPERATOR'S MANUAL 6534X-X AIR MOTOR OPERATOR'S MANUAL

Level (L_{Aeq}) to meet the intent of ANSI S1. 13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

 INGERSOLL RAND COMPANY LTD

 209 NORTH MAIN STREET – BRYAN, OHIO 43506

 ③ (800) 495-0276 • FAX(800) 892-6276

 www.ingersollrandproducts.com

PUMP OPTION DESCRIPTION CHART



GENERAL DESCRIPTION

WARNING HAZARDOUS PRESSURE. Do not exceed maxi-

Pump ratio is an expression of the relationship between the pump motor area and

the lower pump end area. EXAMPLE: When 150 p.s.i. (10.3 bar) inlet pressure is supplied to the motor of a 6:1 ratio pump it will develop a maximum of 750 p.s.i. (52 bar) fluid pressure (at no flow) - as the fluid control is opened, the flow rate will in-

WARNING Refer to general information sheet for additional

The Two-Ball pumps are primarily designed for the pumping of medium viscosity fluids, Stainless Steel construction offers compatibili-

ty with a wide range of fluids. The two-ball design provides better

priming of the lower foot valve. The double acting feature is standard

in all ARO industrial pumps, material is delivered to the pump dis-

The motor is connected to the lower pump end by a spacer section.

This allows for lubrication of the upper packing gland and prevents

motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is ade-

guately filled with lubricant to protect the upper packings and insure

crease as the motor cycle rate increases to keep up with the demand.

safety precautions and important information.

charge outlet on both the up and down stroke.

mum operating pressure of 2550 psi (176 bar) at 150 psi (10.3

=

- PLUNGER TYPE

PACKING MATERIAL

bar) inlet air pressure.

PUMP RATIO X

INLET PRESSURE TO PUMP MOTOR

SPRING ARRANGEMENT

MAXIMUM PUMP

FLUID PRESSURE

PACKING MATERIAL 3 GLASS FILLED PTFE C UHMW-PE

G UHMW-PE/LEATHER STAG'D

(PACKINGS ARE UPPER AND LOWER UNLESS NOTED) P UHMW-PE/PTFE STAG'D (UPPER) UHMW-PE (LOWER)

R PTFE/UHMW-PE STAG'D (UPPER) PTFE (LOWER)

SPRING ARRANGEMENT


4 MULTIPLE WAVE SPRING

PLUNGER TYPE 3 HD SS W/HD CHROME PLATING B HD SS W/CERAMIC COATING

PUMP CONNECTION - UPPER / LOWER

NOTE: All threads are right hand.

- 1. Lay the pump assembly on a workbench.
- 2. Remove the three nuts from the three spacer rods. (Fig. 1)
- 3. Pull the air motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
- Using e-ring pliers, slide the retaining ring up far enough to allow the sleeve to move upward and release the two connectors. (Fig. 2)

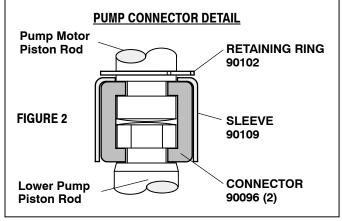

REASSEMBLY

- 1. Align the pump motor with the lower pump end.
- 2. Install the two connectors and retain with the sleeve, slide the retaining ring back into position.
- 3. Reinstall the spacer rods to the pump motor.
- 4. Bring the motor and lower pump together and retain with the three nuts.
- longest service life.

TROUBLE SHOOTING

Pump problems can occur in either the Air Motor Section or the Lower Pump End Section, use these basic guidelines to help determine which section is affected.

If the pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet/outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet/ outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and/or air leaks from the air motor.

If the pump cycles but does not deliver material.

• Refer to the lower pump end manual for further trouble shooting.



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com