<b>OPERATOR'S MANUAL</b>	650940-X-B
INCLUDING: SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING INCLUDE MANUALS: 6694X-X Lower Pump End (pn 97999-12), 67314-B Hydraulic Motor (pn 97999-1220) &RELEASED: 10-13-11 (REV. H)1-14-00 REVISED: 10-13-11 (REV. H)4.125 SQ." HYDRAULIC MOTOR 0.8:1 RATIO 6" STROKE650940-XXD-B TWO BALL PUMP SERIES 400 SERIES STAINLESS STEEL1-14-00 REVISED: 10-13-11	
READ THIS MANUAL CAREFULLY BEFORE INSTALLING, OPERATING OR SERVICING THIS EQUIPMENT. It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.	
SERVICE KITS	PUMP DATA
<ul> <li>Use only genuine ARO® replacement parts to assure compatible pressure rating and longest service life.</li> <li><u>637450</u> for repair of hydraulic motor section.</li> <li><u>637211-XX3</u> for repair of lower pump section. Refer to the chart on page 2 for description of -XXD options.</li> </ul>	MODEL 650940-XXD-B         *       Items included in 67322 Motor and Tie Rod Assembly.         Hydraulic Inlet (female)         1/2 - 14 N.P.T.F 2
SPECIFICATIONS	Hydraulic Motor 67322
SPECIFICATIONS         Model Series (refer to option chart)       650940-XXD-B         Type       Hydraulic Operated, Two-Ball Double Acting Pump         Ratio       0.8:1         Hydraulic Motor       67314-B         Motor Repair Kit       637450         Motor Size       4.125 sq." (26.6 sq. cm)         Stroke       6" (15.2 cm)         Hydraulic Inlet (female)       1/2 - 14 N.P.T.F 2         Hydraulic Return (female)       3/4 - 14 N.P.S.M.         Lower Pump End Series       66941-XXD         Lower Pump Repair Kit       637211-XX3         Material Inlet (male)       2 - 11-1/2 N.P.T.F 1         Material Outlet (female)       1-1/4 - 11-1/2 N.P.T.F 1         Weight       140 lbs (63.5 kgs)         PERFORMANCE         Hydraulic Inlet Pressure Range       50 - 2000 p.s.i. (3.4 - 137.9 bar)         Fluid Pressure Range       40 - 1600 p.s.i. (2.8 - 110.3 bar)         Maximum Rec'd Cycles / Minute       50         Displacement In <sup>3</sup> Per Cycle       59.6         Volume / Cycle       33.0 oz. (976.3 ml)         Cycles Per Gallon       3.9	47-7/8" (1216.0 mm)       Hydraulic Motor 67322 ★ (see manual 67314-B)         Spacer Section       Cap Screw Y6-130-C (3) ★ Lock Washer Y14-750-K (3) ★         33-1/2" (850.9 mm)       Connector (see figure 2)         33-1/2" (850.9 mm)       Spacer Rod 95907 (3) ★         Cap Screw Y6-128-C (3) Lockwasher Y14-750-K (3)         Material Outlet (female) 1-1/4 - 11-1/2 N.P.T.F 1 (95° from hydraulic inlet)         Lower Pump 66941-XXD (see manual 6694X-X)         2 - 11-1/2 N.P.T.F 1 (male)
Flow @ 50 Cycles / Minute 12.9 g.p.m. (48.8 l.p.m.) Noise Level N/A	Material Inlet       Figure 1         Accessories Available: 65138 Floor Mount, 62151 Wall Mount Bracket, 67136 Floor / Follower Adapter.       IMPORTANT         IMPORTANT       This is one of the four documents which support the pump. Replacement copies of these forms are available upon request.       650940-X-B Model Operator's Manual (pn 97999-885)         S-632 General Information – Industrial Piston Pumps (pn 97999-624)

6694X-X Lower Pump End Operator's Manual (pn 97999-12)
 67314-B Hydraulic Motor Operator's Manual (pn 97999-1220)

ARO *Dingersoll Rand* 

INGERSOLL RAND COMPANY LTD

209 NORTH MAIN STREET - BRYAN, OHIO 43506 (3) (800) 495-0276 • FAX(800) 892-6276 © 2011 CCN 99835019 www.ingersollrandproducts.com

# PUMP OPTION DESCRIPTION CHART

PLUNGER TYPE

SPRING ARRANGEMENT

MAXIMUM PUMP

### PACKING MATERIAL (packings are upper and lower unless noted)

#### C UHMW-PE

- K Carbon-Graphite filled PTFE
- L Mineral filled PTFE
- P UHMW-PE / PTFE staggered (upper) / UHMW-PE (lower)
- R PTFE / UHMW-PE staggered (upper) / Mineral filled PTFE (lower)

#### SPRING ARRANGEMENT

6 Wave springD Wave spring with alternate seat material


#### PLUNGER TYPE

D Hardened stainless steel with hard chrome plating

# **PUMP CONNECTION – UPPER / LOWER**

### NOTE: All threads are right hand.

- 1. Lay the pump assembly on a workbench.
- 2. Remove the top three (Y6-130-C) cap screws and (Y14-750-K) lockwashers from the three spacer rods (figure 1).
- Pull the hydraulic motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
- 4. Using e-ring pliers, slide the "e" ring up far enough to allow the sleeve to move upward and release the two connectors (figure 2).

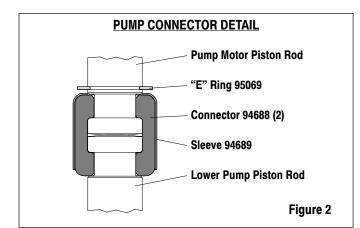

## REASSEMBLY

- 1. Align the pump motor with the lower pump end. Position the hydraulic inlet 95° from the material outlet.
- Install the two connectors and retain with the sleeve, slide the "e" ring back into position.
- 3. Reinstall the spacer rods to the pump motor.
- 4. Bring the motor and lower pump together and retain with the three (Y14-750-K) lockwashers and (Y6-130-C) cap screws.

# GENERAL DESCRIPTION

PACKING MATERIAL

PUMP RATIO X

650940 - X X D - B

## ▲ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 1600 p.s.i. (110.3 bar) at 2000 p.s.i. (137.9 bar) inlet hydraulic pressure.

INLET PRESSURE TO PUMP MOTOR FLUID PRESSURE Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 90 p.s.i. (6.2 bar) inlet pressure is supplied to the motor of a 5:1 ratio pump it will develop a maximum of 450 p.s.i. (31.0 bar) fluid pressure (at no flow) – as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

# **WARNING** Refer to general information sheet for additional safety precautions and important information.

- The two-ball pumps are primarily designed for the high volume transfer of light and medium viscosity fluids compatible with 400 series stainless steel. The lower pump is designed for easy priming and the double acting feature is standard in all ARO industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

# **TROUBLE SHOOTING**

Pump problems can occur in either the hydraulic motor section or the lower pump end section. Use these basic guidelines to help determine which section is affected.

## If the pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or hydraulic fluid leaks from the hydraulic motor.

If the pump cycles but does not deliver material.

• Refer to the lower pump end manual for further trouble shooting.



Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com