

# KUSTOM<sup>®</sup>

## OWNER'S MANUAL

# SIENNA<sup>™</sup>30

Thank you for purchasing the Sienna30 model acoustic/electric guitar amplifier. Kustom has listened to musicians throughout the world and stands proudly behind each and every one we make. Flexible, feature laden, great sounding, able to adapt to all kinds of music, this amplifier really delivers what you have been looking and waiting for. Whatever style you choose, it's ready!

Kustom, with a 30-year tradition of excellence, proudly delivers a rugged and dependable amp designed and engineered in the USA. Again, thank you for your purchase. Please take a few minutes to learn about all of the built-in professional features.

Model	Power	Equalizer	Channels	Impedance	Effects	Amplifier Type	Dimensions	Weight
Sienna30	30 W	3 Band	Two	8 Ohms	Reverb Chorus	MOS-FET Transistor	14.97" x 18.2" x 9.7"	31 lbs.

## ENGLISH

### Danger

Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably to noise induced hearing loss but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the following permissible noise level exposures:

DURATION PER DAY (HOURS)	8	6	4	3	2	1
SOUND LEVEL (dB)	90	93	95	97	100	103

According to OSHA, any exposure in the above permissible limits could result in some hearing loss. Ear plugs or protectors in the ear canal or over the ears must be worn when operating this amplification system in order to prevent a permanent hearing loss. If exposure in excess of the limits as put forth above, to insure against potentially harmful exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of inducing high sound pressure levels, such as this amplification system, be protected by hearing protectors while this unit is in operation.



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE CHASSIS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

### AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF NON-INSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THIS SYMBOL IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE UNIT.




APPARATUS SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be kept for future reference.
3. Read and understand all warnings listed on the operating instructions.
4. Follow all operating instructions to operate this product.
5. This product should not be used near water, i.e. Bathtub, sink, swimming pool, wet basement, etc.
6. Only use dry cloth to clean this product.
7. Do not block any ventilation openings, It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
8. Do not install this product near any heat sources ;such as, radiators, heat registers, stove or other apparatus (including heat producing amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the Other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord being walked on or pinched, particularly at Plugs, convenience receptacles and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
11. Only use attachments specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

# KUSTOM


Kustom Inc., 4940 Delhi Pike, Cincinnati, OH • USA  
(800) 999-5558 Fax: (513) 347-2192 / www.kustom.com

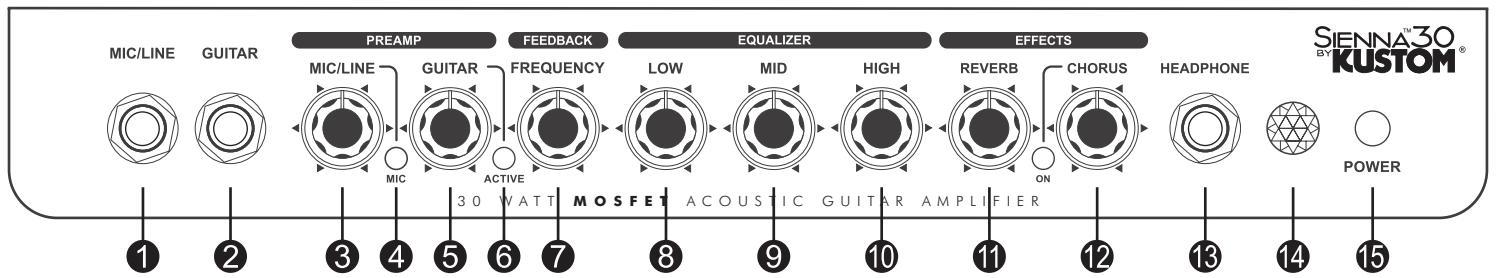

- 1.) Mic/Line Input** - this is a 1/4" 2 conductor input jack for plugging in a Hi-Z microphone or instrument. It is intended for microphones but will accept other instruments as well.
- 2.) Guitar Input** - this is a 1/4" 2 conductor input jack for plugging in your instrument. It is intended for guitar or Hi-Z microphones but will accept other instruments as well.
- 3.) Mic/Line Volume** - this control is the output volume control for the mic/line input. Slowly increase the control to increase the volume. If you are using a high impedance microphone, be careful when increasing the volume. Depending on mic position, it may feedback if mic is in front of speaker.
- 4.) Mic/Line** - this switch will select a mic or line level input. If you are using a high impedance microphone, be careful when increasing volume. Depending on mic placement, feedback may occur.
- 5.) Guitar Volume** - this control is the output volume control for the guitar input. Slowly increase the control to increase the volume. If you are using a guitar with an on-board preamp, set it's level for a mid position before increasing this control otherwise distortion may occur.
- 6.) Active** - this switch will place a -20db pad in the circuit which will allow use of active on-board electronics from pre-amplified guitars. This will help keep the signal extremely clean.
- 7.) Frequency** - this control is a tight Hi-Q cut filter notch with an extremely narrow width. It sweeps between 50Hz & 500Hz and "fine tunes" the midrange of the acoustic guitar. This helps eliminate unwanted "ringing" tones. It is preset to -10db.
- 8.) Low** - this control is the bass control. It is active and set to boost or cut frequencies at 60 Hz. This will effect the low frequency signals. Turning it counterclockwise, the low will be rolled off -18db. Clockwise, it will boost +18db. Especially good for "cleaning up" preset patches or making thin toned guitars sound fuller.
- 9.) Mid** - this control is the midrange control. It is active and set to boost or cut frequencies 1.5KHz. This will effect the mid-low frequency signals. Turning it counterclockwise, the low-mids will be rolled off -12db. Clockwise, it will boost +12db. Especially good for "cleaning up" guitar overtones.
- 10.) High** - this is the high frequency tone control. It is active and set to boost or cut frequencies at 5KHz. This will effect the high frequency signals. Turning it counterclockwise, the highs will be rolled off -18db. Clockwise, it will boost +18db. This will add or subtract the high end shimmer and clarity.
- 11.) Reverb Level** - this control adds the spring reverb and mixes it into the main signal buss. Reverberation creates a trail like effect with the sound. It lets the notes "hang in the air" longer, extending the sound.
- 12.) Chorus On/Off** - this is the switch to turn on and off the chorus circuit.
- 13.) Chorus Level** - this is the Speed Control for the chorus circuit.
- 14.) Headphone Jack** - this is a 1/4" 3 conductor jack for plugging headphones. It will sum the signal and put the sound in both ears, thereby creating a pseudo-stereo sound. Volume will be determined by the volume control on the channel you are on. It will disconnect the internal speaker when plugged in. This will allow quiet practicing.
- 15.) Jewel Light** - this jewel light lets you know that the amplifier is on.


# Suggested Settings

(These settings are general starting points. They are designed to get you close to the sound you are looking for. If the control is not shown, then it doesn't apply to this particular sound. )

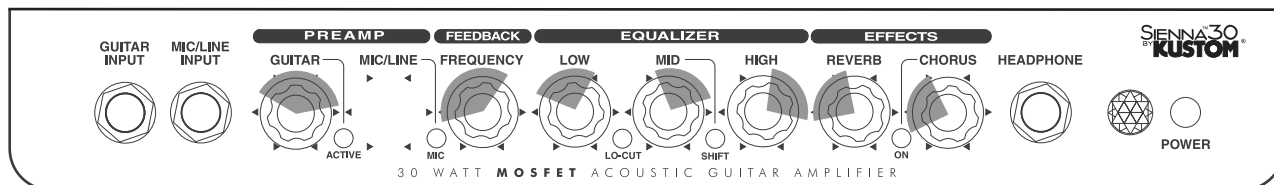

**Standard Single Input Setup** - in this setup your acoustic/electric guitar is plugged into inputs 1. (Remember, if you are using an active guitar or pre-amplified guitar, press the active switch in. We also suggest that you turn it's output level to about mid way up and this will give you a cleaner sound as well as giving you available headroom for leads.) The tone controls follow both inputs. Of course, you can adjust the tone controls to any desired sound but in this setup, we suggest these tone control settings. It will deliver a clear, clean sound that has enough top end clarity to cut through. Add low and low mid for a beefier presence but be careful as this can "muddy up" the sound. Adjust the feedback control to eliminate those unwanted "ringing" frequencies.

Adjust the reverb and chorus to suit the music or to your taste.

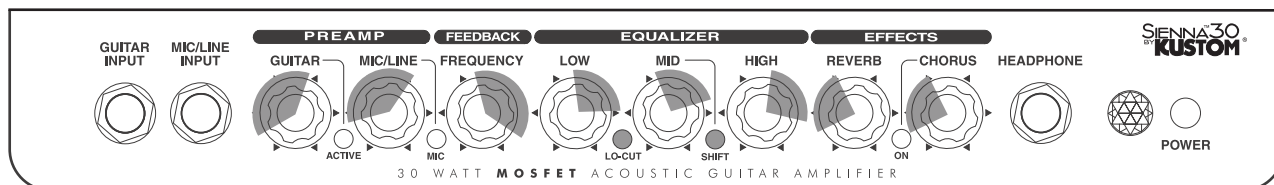

**Standard Dual Input Setup** - in this setup two inputs are utilized. Guitar is plugged into guitar input jack and a Hi-Z microphone is plugged into mic/line Input. Assuming you are also using a microphone, plug it into the mic/line jack and slowly turn up the mic/line volume control. Balancing the two types of inputs gives you a much more natural acoustic guitar sound. You could also plug in any combination of inputs such as: keyboards, microphones or other guitars.

This can also be a basic mini-PA system. It could be used for plugging in a CD player or cassette decks and a microphone for singing. It can be used for playing over prerecorded tapes with mixing capabilities.

As mentioned earlier, you can adjust the tone controls to any desired sound but in this setup we suggest these tone control settings. Of course it depends on the listening environment. It will deliver a clear, clean sound that has enough top end clarity to let the acoustic sound cut through.

Adjust the reverb and chorus to suit the music or to your taste.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>