# **ONKYO**®

# 7.1ch Home Theater System

# HT-SR800

AV Receiver (HT-R550) Front Speakers (SKF-550F) Center Speaker (SKC-550C) Surround Speakers (SKM-550S) Surround Back Speakers (SKB-550) Powered Subwoofer (SKW-550)

### **Instruction Manual**

Thank you for purchasing an Onkyo 7.1ch Home Theater System. Please read this manual thoroughly before making connections and plugging in the unit. Following the instructions in this manual will enable you to obtain optimum performance and listening enjoyment from your new 7.1ch Home Theater System.

Please retain this manual for future reference.

### **Contents**

Introduction2
Connection 19
Turning On & First Time Setup 36
Basic Operation Playing your AV components 42 Listening to the Radio
Enjoying the Listening Modes 48
Advanced Operation55
Troubleshooting65



#### **WARNING:**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

#### **CAUTION:**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



#### WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN







The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

#### Important Safety Instructions

- 1. Read these instructions.
- 2. Keep these instructions.
- 3. Heed all warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING

- 13. Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Damage Requiring Service

Unplug the apparatus from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- A. When the power-supply cord or plug is damaged,
- B. If liquid has been spilled, or objects have fallen into the apparatus,
- C. If the apparatus has been exposed to rain or water,
- D. If the apparatus does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the apparatus to its normal operation,
- E. If the apparatus has been dropped or damaged in any way, and
- F. When the apparatus exhibits a distinct change in performance this indicates a need for service.
- 16. Object and Liquid Entry

Never push objects of any kind into the apparatus through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.

The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases shall be placed on the apparatus.

Don't put candles or other burning objects on top of this unit.

17. Batteries

Always consider the environmental issues and follow local regulations when disposing of batteries.

18. If you install the apparatus in a built-in installation, such as a bookcase or rack, ensure that there is adequate ventilation.

Leave 20 cm (8") of free space at the top and sides and 10 cm (4") at the rear. The rear edge of the shelf or board above the apparatus shall be set 10 cm (4") away from the rear panel or wall, creating a flue-like gap for warm air to escape.

#### **Precautions**

- Recording Copyright—Unless it's for personal use only, recording copyrighted material is illegal without the permission of the copyright holder.
- AC Fuse—The AC fuse inside the unit is not userserviceable. If you cannot turn on the unit, contact your Onkyo dealer.
- 3. Care—Occasionally you should dust the unit all over with a soft cloth. For stubborn stains, use a soft cloth dampened with a weak solution of mild detergent and water. Dry the unit immediately afterwards with a clean cloth. Don't use abrasive cloths, thinners, alcohol, or other chemical solvents, because they may damage the finish or remove the panel lettering.

#### 4. Power

#### WARNING

BEFORE PLUGGING IN THE UNIT FOR THE FIRST TIME, READ THE FOLLOWING SECTION CAREFULLY.

AC outlet voltages vary from country to country. Make sure that the voltage in your area meets the voltage requirements printed on the unit's rear panel (e.g., AC 230–240 V, 50 Hz or AC 120 V, 60 Hz).

The power cord plug is used to disconnect this unit from the AC power source. Make sure that the plug is readily operable (easily accessible) at all times.

Pressing the [STANDBY/ON] button to select Standby mode does not fully shutdown the unit. If you do not intend to use the unit for an extended period, remove the power cord from the AC outlet.

5. Never Touch this Unit with Wet Hands—Never handle this unit or its power cord while your hands are wet or damp. If water or any other liquid gets inside this unit, have it checked by your Onkyo dealer.

#### 6. Handling Notes

- If you need to transport this unit, use the original packaging to pack it how it was when you originally bought it.
- Do not leave rubber or plastic items on this unit for a long time, because they may leave marks on the case.
- This unit's top and rear panels may get warm after prolonged use. This is normal.
- If you do not use this unit for a long time, it may not work properly the next time you turn it on, so be sure to use it occasionally.

#### For U.S. models

# FCC Information for User CAUTION:

The user changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

#### For Canadian Models

**NOTE:** THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. For models having a power cord with a polarized plug: **CAUTION:** TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

#### Modèle pour les Canadien

**REMARQUE:** CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

Sur les modèles dont la fiche est polarisée:

ATTENTION: POUR ÉVITER LES CHOCS ÉLECTRIQUES, INTRODUIRE LA LAME LA PLUS LARGE DE LA FICHE DANS LA BORNE CORRESPONDANTE DE LA PRISE ET POUSSER JUSQU'AU FOND.

# **Speaker Precautions**

#### **Placement**

- The speaker cabinets are made out of wood and are therefore sensitive to extreme temperatures and humidity, do not put them in locations subject to direct sunlight or in humid places, such as near an air conditioner, humidifier, bathroom, or kitchen.
- Do not put water or other liquids close to the speakers.
   If liquid is spilled over the speakers, the drive units may be damaged.
- Speakers should only be placed on sturdy, flat surfaces that are free from vibration. Putting them on uneven or unstable surfaces, where they may fall and cause damage, will affect the sound quality.
- Subwoofer is designed to be used in the upright vertical position only. Do not use it in the horizontal or tilted position.
- If the unit is used near a turntable, CD player or DVD player, howling or slipping of sound may occur. To prevent this, move the unit away from the turntable, CD player or DVD player otherwise lower the unit's output level.

#### Using Close to a TV or Computer

TVs and computer monitors are magnetically sensitive devices and as such are likely to suffer discoloration or picture distortion when conventional speakers are placed nearby. To prevent this, the SKF-550F and SKC-550C feature internal magnetic shielding. In some situations, however, discoloration may still be an issue, in which case you should turn off your TV or monitor, wait 15 to 30 minutes, and then turn it back on again. This normally activates the degaussing function, which neutralizes the magnetic field, thereby removing any discoloration effects. If discoloration problems persist, try moving the speakers away from your TV or monitor. Note that discoloration can also be caused by a magnet or demagnetizing tool that's too close to your TV or monitor.

#### Input Signal Warning

The speakers can handle the specified input power when used for normal music reproduction. If any of the following signals are fed to them, even if the input power is within the specified rating, excessive current may flow in the speaker coils, causing burning or wire breakage:

- 1. Interstation noise from an untuned FM radio.
- 2. Sound from fast-forwarding a cassette tape.
- High-pitched sounds generated by an oscillator, electronic musical instrument, and so on.
- 4. Amplifier oscillation.
- 5. Special test tones from audio test CDs and so on.
- Thumps and clicks caused by connecting or disconnecting audio cables (Always turn off your amplifier before connecting or disconnecting cables.)
- 7. Microphone feedback.

# **Enjoying Home Theater**

#### Speaker Sets A and B


You can use two sets of speakers with the AV receiver: speaker set A and speaker set B.

Speaker set A (included speakers) should be used in your main listening room for up to 7.1-channel playback.

\*While speaker set B is on, speaker set A is reduced to 5.1-channel playback.


Speaker set B (not included) can be used in another room and offers 2-channel stereo playback.

\*Only analog input sources are output by speaker set B.

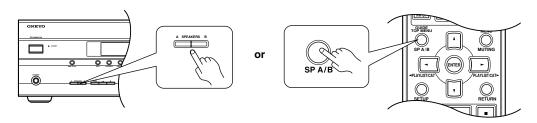


Speaker set A	Speaker set B	Indicator	Output
	On		Set A: 5.1 channels
On	Oli	A B	Set B: 2 channels
	Off	Α	Set A: 7.1 channels
Off	On	В	Set B: 2 channels
Oil	Off		No sound

# Main Room (speaker set A, the supplied speakers)

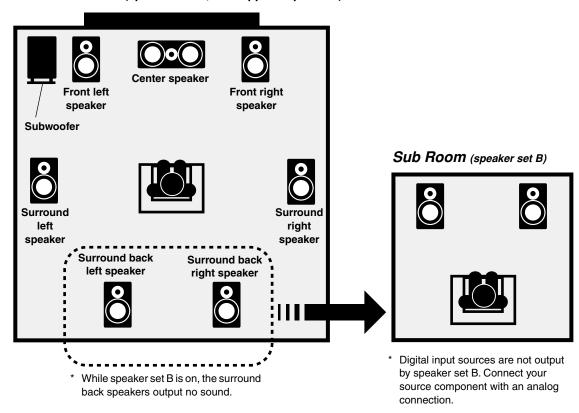

# **Package Contents**

Make sure you have the following items:

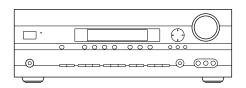

AV receiver (HT-R550)










Surround and Surround back speakers (SKM-550S/SKB-550)



Subwoofer (SKW-550)




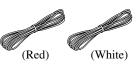

Speaker cable for front speakers 11 ft. (3.5 m)



Speaker cable for center speaker 10 ft. (3 m)

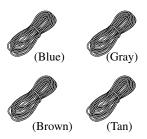

Speaker cables for surround speakers 30 ft. (9 m)



RCA cable for subwoofer connection 10 ft. (3 m)



4 floor pads for the subwoofer

\* In catalogs and on packaging, the letter at the end of the product name indicates the color. Specifications and operation are the same regardless of color.



Remote controller and two batteries (AA/R6)



Indoor FM antenna



AM loop antenna



Speaker setup microphone



Speaker terminal tool



Front speakers (SKF-550F)



Center speaker (SKC-550C)

#### **Features**

#### **Amplifier**

- · 7-channel amplifier
- 110 watts per channel rms into 8 ohms, 2 channels driven at 1 kHz, less than 0.9% total harmonic distortion (FTC rating)
- WRAT (Wide Range Amplifier Technology)
- · Optimum Gain Volume Circuitry
- Audyssey 2EQ/HTIB room correction\*1

#### **Processing**

- Dolby\*2 Digital EX and Dolby Pro Logic IIx
- DTS, DTS-ES Matrix/Discrete, DTS Neo:6, and DTS 96/24\*3
- Neural Surround\*4 (North American models only)
- Theater-Dimensional\*5 virtual surround sound
- Linear PCM 192 kHz/24-bit D/A converters on all channels
- Pure Audio listening mode (not North American model)
- Powerful and highly accurate 32-bit DSP processing

#### Audio/Video

- 2 HDMI\*6 inputs, 1 output
- Adjustable crossover (40, 50, 60, 80, 100, 120, 150, 200 Hz)
- HDTV-capable component video (3 inputs, 1 output)
- 3 S-Video inputs, 2 outputs
- 4 assignable digital inputs (2 optical, 2 coaxial)
- · Subwoofer pre out
- Color-coded 7.1 multichannel input for use with Super Audio CD and DVD-Audio
- A/B speaker drive
- Color-coded speaker terminal posts

#### Tuner

- XM\*7 Satellite Radio (North American models only)
   \*XM Passport System required; sold separately.
- SIRIUS\*8 Satellite Radio (North American models only)
- 40 radio presets
- AM/FM auto tuning

#### Remote Controller

· Preprogrammed for use with other AV components

#### Speaker

- · Color-coded speaker terminals and speaker cables
- · Subwoofer Auto standby function
- Magnetically shielded front and center speakers

#### \*1 AUDYSSEY

Manufactured under license from Audyssey Laboratories. U.S. and foreign patents pending. Audyssey 2EQ/HTIB is a trademark of Audyssey Laboratories.

# \*2 DOLBY DIGITAL • EX PRO LOGIC IIX

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and the double-D symbol are registered trademarks of Dolby Laboratories.



"DTS" and "DTS-ES | Neo: 6" are registered trademarks of DTS, Inc. "96/24" is a trademark of DTS, Inc.



Neural Surround name and related logos are trademarks owned by Neural Audio Corporation.

> Theater-Dimensional is a trademark of Onkyo Corporation.

#### \*6 HDMI

HDMI, the HDMI logo and High Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing, LLC. This unit incorporates HDMI technology.

XM Ready<sup>®</sup> is a registered trademark of XM Satellite Radio Inc. All rights reserved.

# \*8 SIRIUS

©2005 SIRIUS Satellite Radio Inc. "SIRIUS," the SIRIUS dog logo, channel names and logos are trademarks of SIRIUS Satellite Radio Inc. Available only in the contiguous United States (excluding Alaska and Hawaii) and Canada.

### **Getting Started in Five Easy Steps**

# Connect the speakers and your AV components to the AV receiver. Page 19

# 2. Turning On =

With the hookup complete, you're ready to switch on.

r page 36

# A few simple settings to get the very best from your system. HDMI Video Setup Automatic Digital Input Input Display

# 4. Playing Your AV Components =

Speaker Setup

Enjoying movies and music.

r page 42

# Time to really enjoy your home theater system! page 48

# **Contents**

Introduction
Important Safety Instructions2 Precautions3 Speaker Precautions4
Enjoying Home Theater5 Speaker Sets A and B5
Package Contents       6         Features       7         Getting to Know the AV Receiver       10         Remote Controller       13         Speakers       18

Connection	
Connecting Your Speakers	19
Connecting Antennas	22
Connecting Your Components	24
About AV Connections	24
Connecting Audio and Video Signals	
to the AV Receiver	
Which Connections Should I Use?	25
TV or Projector	
DVD player	
Components with HDMI	
VCR or DVD Recorder for Playback	
VCR or DVD Recorder for Recording	31
Camcorder, Games Console,	
or Other Device	31
Satellite, Cable, Set-top box,	
or Other Video Source	
CD Player or Turntable	
RI Dock	34
Cassette, CDR, MiniDisc,	
or DAT Recorder	
Connecting Onkyo 🕞 Components	35
Connecting the Power Cord	35

Turning On & First Time Setup			
Turning On the AV Receiver	36		
First Time Setup	37		
Automatic Speaker Setup			
(Audyssey 2EQ/HTIB)	37		
HDMI Video Setup	40		
Digital Audio Input Setup	41		
Changing the Input Display	41		

Basic Operation	
Playing Your AV Components	
Listening to the Radio	
Common Functions46Setting the Display Brightness46Adjusting the Bass and Treble46Muting the AV Receiver46Using the Sleep Timer47Using Headphones47Adjusting Speaker Levels47	

<b>Enjoying the Listening Modes</b>	
Using the Listening Modes	48
Selecting Listening Modes	48
About the Listening Modes	50
Using the Late Night Function	
(Dolby Digital only)	52
Using the CinemaFILTER	52
Using the Audio Adjust Settings	52


Advanced Operation	
Recording	55
Advanced Setup	56
Advanced Speaker Settings	
Digital Input Signal Formats	61
Correcting Sound and Picture Sync	61
Controlling Other Components	62
Entering Remote Control Codes	62
Remote Control Codes for Onkyo	
Components Connected via RI	63
Resetting REMOTE MODE Buttons	63
Resetting the Remote Controller	63

Troubleshooting
Specifications69


# **Getting to Know the AV Receiver**

#### **Front Panel**

#### North American Model

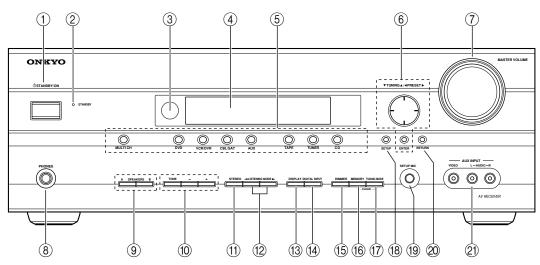

#### Other Models

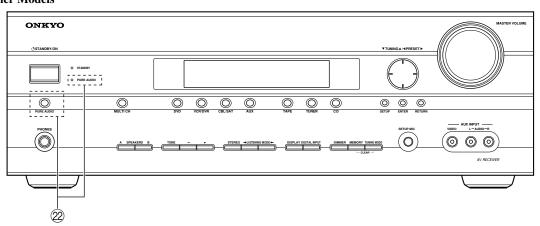

For detailed information, see the pages in parentheses.

- ① **STANDBY/ON button (36)**Sets the AV receiver to On or Standby.
- ② STANDBY indicator (36) Lights up when the AV receiver is on Standby and flashes while a signal is being received from the remote controller.
- ③ Remote-control sensor (13)
  Receives control signals from the remote controller.
- 4 **Display** See "Display" on page 11.
- (5) Input selector buttons (42) Select the input sources.

The [MULTI CH] button selects the multichannel DVD input.

(6) Arrow/TUNING/PRESET and ENTER buttons

When the tuner is selected, the TUNING [▲] [▼] buttons are used for radio tuning, and the PRESET [◄] [▶] buttons are used to select radio presets (see page 45). With the setup menus, they work as arrow buttons and are used to select and set items. The ENTER button is also used with the setup menus.

- (7) MASTER VOLUME control (42) Sets the volume of the AV receiver to MIN, 1 through 79, or MAX.
- (8) PHONES jack (47) This 1/4-inch phone jack is for connecting a standard pair of stereo headphones for private listening.
- (9) SPEAKERS A and B buttons (5, 42) Turn speaker sets A and B on or off.

#### Getting to Know the AV Receiver—Continued

#### ① TONE, [-], and [+] buttons (46)

Used to adjust the bass and treble.

#### (11) STEREO button (48)

Selects the Stereo listening mode.

#### 12 LISTENING MODE [◀]/[▶] buttons (48)

Select the listening modes.

#### (13) DISPLAY button (43)

Displays various information about the currently selected input source.

#### (4) DIGITAL INPUT button (41, 61)

Used to assign the digital inputs and to specify the format of digital input signals.

#### 15) DIMMER button (46)

Adjusts the display brightness.

#### (6) MEMORY button (45)

Used when storing or deleting radio presets.

#### (17) TUNING MODE button (44)

Selects the Auto or Manual tuning mode for AM and FM radio.

#### (18) SETUP button

Used to access the setup menus.

#### (19) **SETUP MIC (38)**

The automatic speaker setup microphone connects here.

#### 20 RETURN button

Selects the previously displayed setup menu.

#### 21 AUX INPUT (31, 55)


Used to connect a camcorder, games console, and so on. There are jacks for composite video and analog audio.

#### 22 PURE AUDIO button and indicator (48)

The North American model doesn't have this button and indicator.

Selects the Pure Audio listening mode. The indicator lights up when this mode is selected.

#### Display

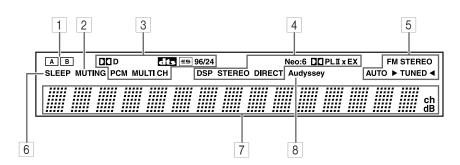

For detailed information, see the pages in parentheses.

#### A and B speaker indicators (5, 42)

Indicator A lights up when speaker set A is on. Indicator B lights up when speaker set B is on.

#### 2 MUTING indicator (46)

Flashes while the AV receiver is muted.

#### 3 Input signal format indicators

Show the audio signal format of the current input source.

#### 4 Listening mode indicators (50)

Show the selected listening mode.

#### 5 Radio indicators

**FM STEREO (44):** Lights up when tuned to a stereo FM station.

**AUTO (44):** For AM and FM radio, lights up when Auto Tuning mode is selected, and disappears when Manual Tuning mode is selected.

**TUNED (44):** Lights up when tuned to a radio station.

#### 6 SLEEP indicator (47)

Lights up when the Sleep function has been set.


#### 7 Message area

Displays various information about the selected input source.

#### 8 Audyssey indicator (37)

Lights up during automatic speaker setup.

#### **Rear Panel**

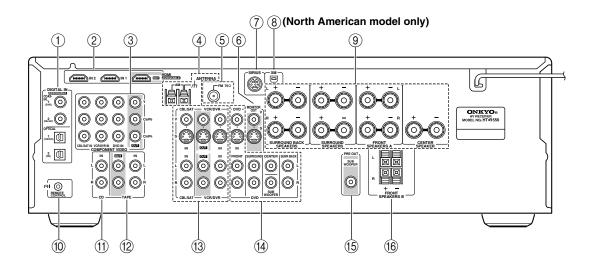

#### 1) DIGITAL IN OPTICAL 1, 2 and COAXIAL 1, 2

These optical and coaxial digital audio inputs are for connecting components with optical or coaxial digital audio outputs, such as CD and DVD players.

#### (2) HDMI IN 1, 2, and OUT

These jacks are for connecting HDMI-compatible components. Audio and video signals received by the HDMI IN jacks pass through to the HDMI OUT jack.

#### **③ COMPONENT VIDEO**

A DVD player, TV, or other component that supports component video can be connected here.

#### (4) AM ANTENNA

These push terminals are for connecting an AM antenna.

#### (5) FM ANTENNA

This jack is for connecting an FM antenna.

#### **6** MONITOR OUT

The S-Video or composite video output should be connected to a video input on your TV or projector.

# SIRIUS antenna (North American models only)

This jack is for connecting a SIRIUS Satellite Radio antenna (see the separate SIRIUS instructions).

#### (8) XM antenna (North American models only)

This jack is for connecting an XM Passport System, sold separately (see the separate XM instructions).

# (9) FRONT SPEAKERS A, SURROUND SPEAKERS, CENTER SPEAKER, and SURROUND BACK SPEAKERS

These terminal posts are for connecting speaker set A.

#### 10 RI REMOTE CONTROL

This RI Remote Interactive jack can be connected to the RI jack on another RI-capable Onkyo component. To use RI, you must make an analog audio connection (RCA) between the AV receiver and the other component, even if they are connected digitally.

#### (11) CD IN

This analog audio input is for connecting a CD player's analog audio output.

#### 12) TAPE IN/OUT

This analog audio input and output are for connecting a recorder with an analog audio input and output, such as a cassette deck, MD recorder, etc.

#### 13 VCR/DVR IN/OUT and CBL/SAT IN

The VCR/DVR inputs and outputs can be used to connect a VCR or DVR (digital video recorder).

The CBL/SAT inputs can be used to connect a cable/satellite receiver, set-top box, etc.

#### (14) DVD IN

These jacks can be used to connect a DVD player with an analog multichannel audio output for SACD and DVD-Audio playback.

#### **15) SUBWOOFER PRE OUT**

A powered subwoofer can be connected here.

#### **16 FRONT SPEAKERS B**


These push terminals are for connecting speaker set B.

See pages 19–35 for hookup information.


#### **Remote Controller**

#### Installing the Batteries


To open the battery compartment, press the small hollow and slide open the cover.

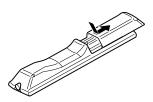

2 Insert the two supplied batteries (AA/R6) in accordance with the polarity diagram inside the battery compartment.

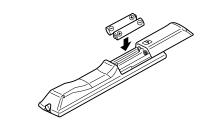

3 Slide the cover shut.

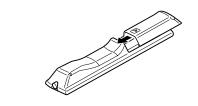


#### Notes:

- If the remote controller doesn't work reliably, try replacing the batteries.
- Don't mix new and old batteries or different types of batteries.
- If you intend not to use the remote controller for a long time, remove the batteries to prevent damage from leakage or corrosion.
- Expired batteries should be removed as soon as possible to prevent damage from leakage or corrosion.

#### **Aiming the Remote Controller**

When using the remote controller, point it toward the AV receiver's remote control sensor, as shown below.

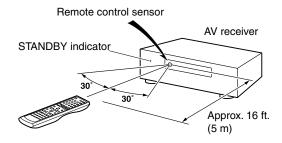

#### Notes:

- The remote controller may not work reliably if the AV receiver is subjected to bright light, such as direct sunlight or inverter-type fluorescent lights. Keep this in mind when installing.
- If another remote controller of the same type is used in the same room, or the AV receiver is installed close to equipment that uses infrared rays, the remote controller may not work reliably.
- Don't put anything on top of the remote controller, such as a book or magazine, because a button may be pressed continuously, thereby draining the batteries.
- The remote controller may not work reliably if the AV receiver is installed in a rack behind colored glass doors. Keep this in mind when installing.
- The remote controller will not work if there's an obstacle between it and the AV receiver's remote control sensor.

#### **Using the Remote Controller**

Including the AV receiver, the remote controller can be used to control up to seven different components. The remote controller has a specific operating mode for use with each type of component. Modes are selected by using the six REMOTE MODE buttons.


#### **■ RECEIVER/TAPE Mode**

In RECEIVER/TAPE mode, you can control the AV receiver and an Onkyo cassette recorder connected via RI.



DVD

#### DVD and CD/MD/CDR/DOCK Modes

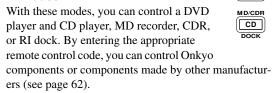




With these modes, you can control a TV, VCR, and satellite or cable receiver. You must enter the appropriate remote control code first (see page 62).



SAT

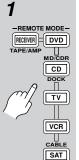

Press one of the REMOTE MODE buttons to select a mode.

2 Use the buttons supported by that mode to control the component.

RECEIVER/TAPE mode: see right column

DVD mode:

see page 16

CD/MD/CDR/DOCK mode:

see page 17

TV, VCR, SAT/CABLE modes:


see page 64

#### Note:

Some of the remote controller operations described in this manual may not work as expected with other components.

#### **RECEIVER/TAPE Mode**

RECEIVER/TAPE mode is used to control the AV receiver. It can also be used to control an Onkyo cassette recorder connected via **RI**.

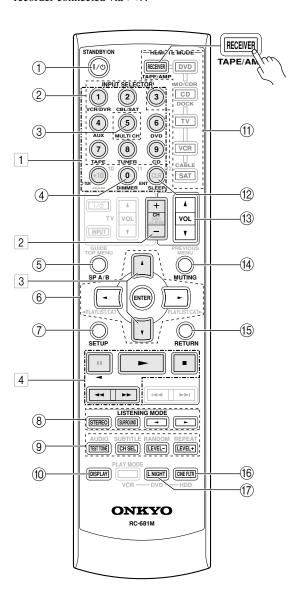

Buttons 1, 2, 3, and 4 are used when the TUNER or TAPE input is selected.

#### Remote Controller—Continued

For detailed information, see the pages in parentheses.

#### (1) STANDBY/ON button (36)

Sets the AV receiver to On or Standby.

#### 2 INPUT SELECTOR buttons (42)

Used to select the input sources.

#### ③ MULTI CH button (43)

Selects the multichannel DVD input.

#### 4 DIMMER button (46)

Adjusts the display brightness.

#### (5) SP A/B button (5, 42)

Used to turn speaker sets A and B on or off.

#### 6 Arrow [▲]/[▼]/[◄]/[►] and ENTER buttons Used to select and adjust settings.

#### (7) SETUP button

Used to access the setup menus.

#### (8) LISTENING MODE buttons (48)

Used to select the listening modes. These buttons work in all remote controller modes.

#### STEREO button

Selects the Stereo listening mode.

#### SURROUND button

Selects the Dolby and DTS listening modes and the Neural Surround listening mode (North American model only).

#### [◀]/[▶] buttons

Used to select the available listening modes.

#### TEST TONE, CH SEL, LEVEL-, and LEVEL+ buttons (47, 59)

Used to adjust the level of each speaker.

#### 10 DISPLAY button (43)

Displays various information about the selected input source.

#### (11) REMOTE MODE buttons (14)

Used to select the remote controller modes. When a remote controller button is pressed, the REMOTE MODE button for the currently selected mode lights up.

#### 12 SLEEP button (47)

Used with the Sleep function.

#### (13) VOL [▲]/[▼] button (42)

Adjusts the volume of the AV receiver regardless of the currently selected remote controller mode.

#### (14) MUTING button (46)

Mutes or unmutes the AV receiver.

#### 15 RETURN button

Selects the previously displayed setup menu.

#### (6) CINE FLTR button (52)

Used with the CinemaFILTER function.

#### 17) L NIGHT button (52)

Used with the Late Night function.

#### ■ Buttons used when the TUNER input is selected

To select the Tuner (AM/FM) as the input source, press:

#### 1 Number, D TUN, and ENT buttons (45)

Used to select AM and FM radio stations directly.

#### 2 CH +/- button (45)

Used to select radio presets.

#### 3 Arrow [▲]/[▼] buttons

For AM and FM, the Up and Down  $[ \blacktriangle ]/[ \blacktriangledown ]$  buttons are used for tuning.

#### ■ Buttons used when the TAPE input is selected

To select your Cassette deck as the input



#### 4 Playback buttons

On twin cassette decks, only deck B can be controlled.

#### Play [▶] button

Starts playback.

#### Stop [■] button

Stops playback.

#### Reverse Play [◀] button


Starts reverse playback.


#### Rewind and FF [◄◄]/[▶▶] buttons

The Rewind [◄◄] button starts rewind. The FF [►►] button starts fast forward.

#### **DVD Mode**

By default, the remote controller is set to control an Onkyo DVD player.

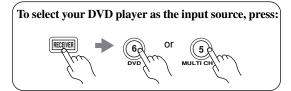

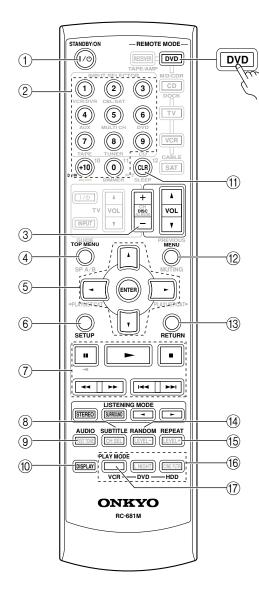

#### (1) STANDBY/ON button

Sets the DVD player to On or Standby.

#### 2 Number buttons

Used to enter title, chapter, and track numbers and times for locating specific points.

#### ③ DISC +/- button

Selects discs on a DVD changer.

#### (4) TOP MENU button

Selects a DVD's top menu.

#### ⑤ Arrow [▲]/[▼]/[◄]/[►] and ENTER buttons

Used to navigate DVD menus and the DVD player's onscreen setup menus.

#### **6** SETUP button

Used to access the DVD player's onscreen setup menus.

#### (7) Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward, Previous, and Next.

#### (8) SUBTITLE button

Selects subtitles.

#### (9) AUDIO button

Selects foreign language soundtracks and audio formats (e.g., Dolby Digital or DTS).

#### 10 DISPLAY button

Displays information about the current disc, title, chapter, or track, including elapsed time, remaining time, total time, and so on.

#### (11) CLR button

Cancels functions and clears entered numbers.

#### 12 MENU button

Displays a DVD's menu.

#### 13 RETURN button

Exits the DVD player's onscreen setup menus.

#### (14) RANDOM button

Used with the random playback function.

#### (15) REPEAT button

Used with the repeat playback functions.

#### 16 VCR, DVD, and HDD buttons

Used to select VCR, HDD (hard disk drive), or DVD playback on a VCR/DVD recorder with a built-in hard disk drive.


#### (17) PLAY MODE button

Selects play modes on components with selectable play modes.

#### CD/MD/CDR/DOCK Mode

By default, the remote controller is set to control an Onkyo CD player.

# To select the input source, press: OD player TO SELECTION TAPE TAPE TAPE TAPE TO SELECTION TAPE TO PLAY TAPE TO PRODUCT TO

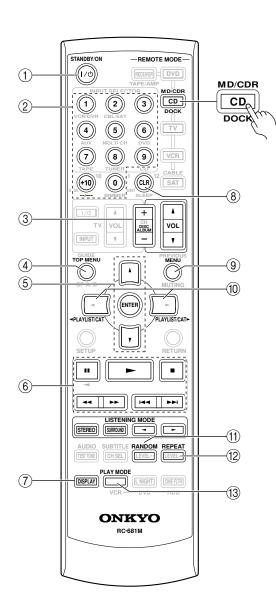

#### 1 STANDBY/ON button

Sets the component to On or Standby.

#### 2 Number buttons

Used to enter track numbers and times for locating specific points on CD/MD players.

#### ③ DISC/ALBUM +/- button

Selects discs on a CD changer, or the next or previous album on an HDD-compatible component connected to an RI Dock.

#### (4) TOP MENU button

Works as a Mode button when used with a DS-A2 RI Dock.

#### (5) Arrow [▲]/[▼] and ENTER buttons

Used to navigate menus on an HDD-compatible component connected to an RI Dock.

#### 6 Playback buttons

From left to right: Pause, Play, Stop, Fast Reverse, Fast Forward. Previous and Next.

#### (7) DISPLAY button

Displays information about the current disc or track on a CD player or MD/CD recorder, including elapsed time, remaining time, total time, and so on. On an HDD-compatible component connected to an RI Dock, it turns on the back light for 30 seconds.

#### (8) CLR button

Cancels functions and clears entered numbers on a CD player or MD/CD recorder.

#### MENU button

Used to navigate menus on an HDD-compatible component connected to an RI Dock.

#### PLAYLIST [◄]/[►] buttons

Selects the previous or next playlist on an HDD-compatible component connected to an RI Dock.

#### (11) RANDOM button

Used with the random/shuffle playback function.

#### 12 REPEAT button

Used with the repeat playback functions.

#### (13) PLAY MODE button

Used to select play modes on components with selectable play modes.


Works as a Resume button when used with a DS-A2 RI Dock.

# **Speakers**


#### Subwoofer (SKW-550)

For detailed information, see the pages in parentheses.

#### ■ Front

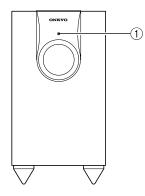

#### ■ Rear

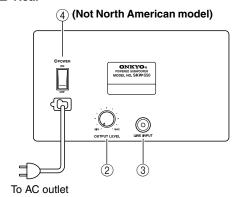

#### 1 STANDBY/ON indicator

Red: Subwoofer in standby mode

Green: Subwoofer on

With the Auto Standby function, the SKW-550 automatically turns on when an input signal is detected in Standby mode. When there's no input signal for a while, the SKW-550 automatically enters Standby mode.

#### 2 OUTPUT LEVEL control (42)

This control is used to adjust the volume of the subwoofer.

#### **③ LINE INPUT (20)**

This RCA input should be connected to the subwoofer pre out on the AV receiver with supplied RCA cable.

# 4 POWER switch (Not North American model)(36)

Press this switch to the ON position to turn on the power. Press it to the OFF position to turn off the power.


#### Note:

The Auto Standby function turns the subwoofer on when the input signal exceeds a certain level. If the Auto Standby function does not work reliably, try slightly increasing or decreasing the subwoofer output level on the AV receiver (page 59).

#### ■ Attaching and detaching the speaker grilles

Front and Center speakers have detachable grilles. Use the following method to attach or detach the grilles.

- While holding the bottom edge of the speaker grille with your both hands, pull it gently toward you to remove the bottom of the grille.
- In the same way, gently pull the upper edge of the speaker grille toward you to remove it from the main unit.
- **3.** To replace the grill, push the projections at the corners into the grille plug holes on the speaker cabinet.

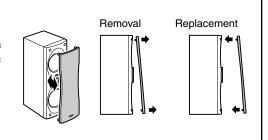

# **Connecting Your Speakers**

#### **Enjoying Home Theater**

Thanks to the AV receiver's superb capabilities, you can enjoy surround sound with a real sense of movement in your own home—just like being in a movie theater or concert hall. You can enjoy DVDs featuring DTS and Dolby Digital. With analog and digital TV, you can enjoy Dolby Pro Logic IIx and Onkyo's own DSP surround listening modes.

#### Front left and right speakers (SKF-550F)

These output the overall sound. Their role in a home theater is to provide a solid anchor for the sound image. They should be positioned facing the listener at about ear level, and equally spaced from the TV. Angle them inward slightly so as to create a triangle, with the listener at the apex.

#### Center speaker (SKC-550C) -

This speaker enhances the front left and right speakers, making sound movements distinct and providing a full sound image. For movies it's used mainly for dialog. Position it close to your TV facing forward at about ear level, or at the same height as the front left and right speakers.

#### Subwoofer (SKW-550)

The subwoofer handles the bass sounds of the LFE (Low-Frequency Effects) channel. The volume and quality of the bass output from your subwoofer will depend on its position, the shape of your listening room, and your listening position. In general, a good bass sound can be obtained by installing the subwoofer in a front corner, or at one-third the way along the wall, as shown.

**Tip:** To find the best position for your subwoofer, while playing a movie or some music with good bass, experiment by placing your subwoofer at various positions within the room, and choose the one that provides the most satisfying results.

If the subwoofer is placed on a hard floor (wood, vinyl, tile, etc.) and playback is very loud, the subwoofer's feet may damage the flooring. To prevent this, place the supplied pads underneath the subwoofer's feet. The pads


woofer's feet. The pads also provide a stable base for the subwoofer.



# Surround back left and right speakers (SKB-550)

These speakers are necessary to enjoy Dolby Digital EX, DTS-ES Matrix, DTS-ES Discrete. They enhance the realism of surround sound and improve sound localization behind the listener. Position them behind the listener about 2–3 feet (60–100 cm) above ear level.

 While speaker set B is on, these speakers output no sound.

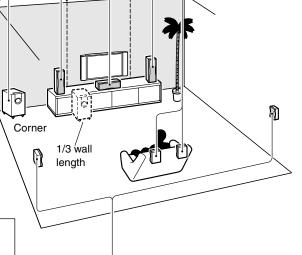

1/3

 $\frac{1}{3}$ 

 $\frac{1}{3}$ 

#### Surround left and right speakers (SKM-550S)

These speakers are used for precise sound positioning and to add realistic ambience.

Position them at the sides of the listener, or slightly behind, about 2–3 feet (60–100 cm) above ear level. Ideally they should be equally spaced from the listener.


#### **Speaker Connection Precautions**


Read the following before connecting your speakers:

- You can connect speakers with an impedance of between 8 and 16 ohms. If you use speakers with a lower impedance, and use the amplifier at high volume levels for a long period of time, the built-in amp protection circuit may be activated.
- Disconnect the power cord from the wall outlet before making any connections.
- Pay close attention to speaker wiring polarity. In other
  words, connect positive (+) terminals to only positive
   (+) terminals, and negative (-) terminals to only negative (-) terminals. If you get them the wrong way
  around, the sound will be out of phase and will sound
  unnatural.
- Unnecessarily long or very thin speaker cables may affect the sound quality and should be avoided.
- Be careful not to short the positive and negative wires.
   Doing so may damage the AV receiver.




- Don't connect more than one cable to each speaker terminal. Doing so may damage the AV receiver.
- Don't connect a speaker to several terminals.

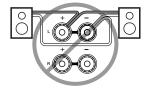

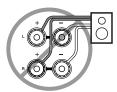

#### **Using the Speaker Terminal Tool**

The supplied speaker terminal tool makes it easy to tighten and loosen the speaker terminals. If you are using banana plugs, to ensure optimum sound quality, tighten the speaker terminal before inserting the banana plug.

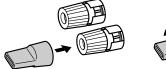



#### Connecting Speaker Set A

The AV receiver's positive (+) speaker terminals and speaker's positive (+) terminals are color-coded for ease of identification. (The negative (–) speaker terminals are all black.) Match the color of each cable to the corresponding speaker terminal.

Speaker terminal	Color
Front left	White
Front right	Red
Center	Green
Surround left	Blue
Surround right	Gray
Surround back left	Brown
Surround back right	Tan

1 On the AV receiver, unscrew the terminal. Fully insert the bare wires. Make sure that the bare wire is touching the inside of the pole. Screw the terminal tight.



On the speakers, while pressing the terminal lever, insert the wire into the hole, and then release the lever.




**3** Using the supplied RCA cable, connect the AV receiver's SUBWOOFER PRE OUT to LINE INPUT on the subwoofer.

Make sure the cable is plugged all the way.

# Connecting Speaker Set B (sold separately)

1 Strip 3/8" (10 mm) of insulation from the ends of the speaker cables, and twist the bare wires tightly, as shown.

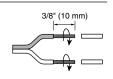

While pressing the lever, insert the wire into the hole, and then release the lever.

Make sure that the terminals are gripping the bare wires, not the insulation.




#### Note:

When speaker set B is turned on, speaker set A is reduced to 5.1-channel playback.

#### **Connecting Your Speakers**—Continued

The following illustration shows which speaker should be connected to each pair of terminals.

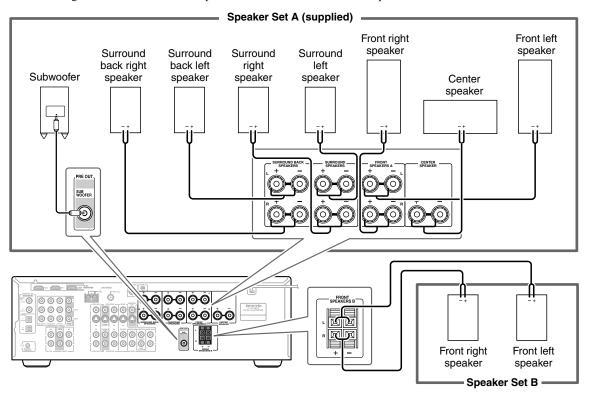


#### **Wall Mounting**

The speakers can easily be mounted on a wall by using the attached wall brackets.

To mount a front, surround, or surround back speaker vertically, use its wall bracket, as shown, to hang it on a screw that's securely screwed into the wall.

To mount the center speaker horizontally, use its two wall brackets, as shown, to hang it on two screws that are securely screwed into the wall.

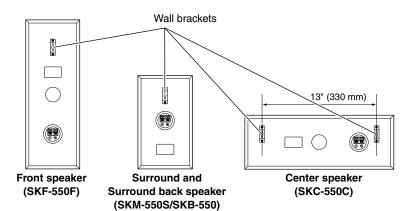


#### Caution:

A mounting screw's ability to support a speaker depends on how well it's anchored to the wall. If you have hollow walls, screw each mounting screw into a stud. If there are no studs, or the walls are solid, use suitable wall anchors.

Use screws with a head diameter of 5/16" (9 mm) or less and a shank diameter of 1/8" (4 mm) or less. With hollow walls, use a cable/pipe detector to check for any power cables or water pipes before making any holes.

Leave a gap of between 5/16" (7 mm) and 7/16" (10 mm) between the wall and the base of the screw head, as shown.


(We recommend that you consult a home installation professional.)

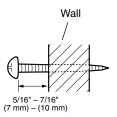

# **Connecting Antennas**

This section explains how to connect the supplied indoor FM antenna and AM loop antenna, and how to connect commercially available outdoor FM and AM antennas.

The AV receiver won't pick up any radio signals without any antenna connected, so you must connect the antenna to use the tuner.

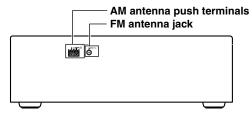

#### **Connecting the Indoor FM Antenna**

The supplied indoor FM antenna is for indoor use only.

1 Attach the FM antenna, as shown.

#### ■ American Model




#### **■** Other Models



Once your AV receiver is ready for use, you'll need to tune into an FM radio station and adjust the position of the FM antenna to achieve the best possible reception.

# **2** Use thumbtacks or something similar to fix the FM antenna into position.

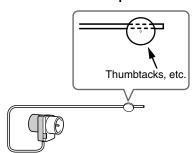

**Caution:** Be careful that you don't injure yourself when using thumbtacks.

If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead (see page 23).

#### **Connecting the AM Loop Antenna**


The supplied indoor AM loop antenna is for indoor use only.

1 Assemble the AM loop antenna, inserting the tabs into the base, as shown.



# 2 Connect both wires of the AM loop antenna to the AM push terminals, as shown

(The antenna's wires are not polarity sensitive, so they can be connected either way around). Make sure that the wires are attached securely and that the push terminals are gripping the bare wires, not the insulation.

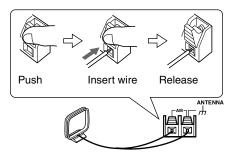


Once your AV receiver is ready for use, you'll need to tune into an AM radio station and adjust the position of the AM antenna to achieve the best possible reception.

Keep the antenna as far away as possible from your AV receiver, TV, speaker cables, and power cords.

If you cannot achieve good reception with the supplied indoor AM loop antenna, try using it with a commercially available outdoor AM antenna (see page 23).

#### **Connecting an Outdoor FM Antenna**

If you cannot achieve good reception with the supplied indoor FM antenna, try a commercially available outdoor FM antenna instead.

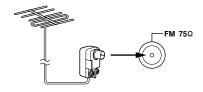


#### Notes:

- Outdoor FM antennas work best outside, but usable results can sometimes be obtained when installed in an attic or loft.
- For best results, install the outdoor FM antenna well away from tall buildings, preferably with a clear line of sight to your local FM transmitter.
- Outdoor antenna should be located away from possible noise sources, such as neon signs, busy roads, etc.
- For safety reasons, outdoor antenna should be situated well away from power lines and other high-voltage equipment.
- Outdoor antenna must be grounded in accordance with local regulations to prevent electrical shock hazards.


#### ■ Using a TV/FM Antenna Splitter

It's best not to use the same antenna for both FM and TV reception, as this can cause interference problems. If circumstances demand it, use a TV/FM antenna splitter, as shown.

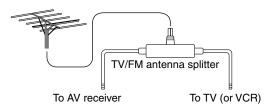

#### **Connecting an Outdoor AM Antenna**

If good reception cannot be achieved using the supplied AM loop antenna, an outdoor AM antenna can be used in addition to the loop antenna, as shown.

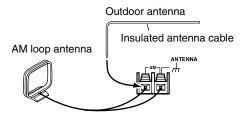

Outdoor AM antennas work best when installed horizontally outside, but good results can sometimes be obtained indoors by mounting horizontally above a window. Note that the AM loop antenna should be left connected. Outdoor antenna must be grounded in accordance with local regulations to prevent electrical shock hazards.

# **Connecting Your Components**

#### **About AV Connections**

- Before making any AV connections, read the manuals supplied with your other AV components.
- Don't connect the power cord until you've completed and double-checked all AV connections.

#### **Optical Digital Jacks**

The AV receiver's optical digital jacks have shutter-type covers that open when an optical plug is inserted and close when it's removed. Push plugs in all the way.

**Caution:** To prevent shutter damage, hold the optical plug straight when inserting and removing.

#### **AV Connection Color Coding**

RCA-type AV connections are usually color coded: red, white, and yellow. Use red plugs to connect right-channel audio inputs and outputs (typically labeled "R"). Use white plugs to connect left-channel audio inputs and outputs (typically labeled "L"). And use yellow plugs to connect composite video inputs and outputs.



- Push plugs in all the way to make good connections (loose connections can cause noise or malfunctions).
- To prevent interference, keep audio and video cables away from power cords and speaker cables.



#### AV Cables and Jacks

#### Video

	Cable	Jack	Description
Component video cable	Y PB PR PR	© Y	Component video separates the luminance (Y) and color difference signals (PR, PB), providing the best picture quality. (Some TV manufacturers label their component video jacks slightly differently.)
S-Video cable		© s	S-Video separates the luminance and color signals and provides better picture quality than composite video.
Composite video cable		© v	Composite video is commonly used on TVs, VCRs, and other video equipment. Use only dedicated composite video cables.


#### **Audio**

	Cable	Jack	Description
Optical digital audio cable		OPTICAL	This offers the best sound quality and allows you to enjoy Dolby Digital and DTS. The audio quality is the same as for coaxial.
Coaxial digital audio cable		COAX- IAL	This offers the best sound quality and allows you to enjoy Dolby Digital and DTS. The audio quality is the same as for optical.
Analog audio cable (RCA)		L (iii)	This cable carries analog audio. It's the most common connection format for analog audio and can be found on virtually all AV components.
Multichannel analog audio cable (RCA)			This cable carries multichannel analog audio and is typically used to connect DVD players with a 7.1-channel analog audio output. Several standard analog audio cables can be used instead of a multichannel cable.

**Note:** The AV receiver does not support SCART connections.

#### Connecting Audio and Video Signals to the AV Receiver

By connecting both the audio and video outputs of your DVD player and other AV components to the AV receiver, you can switch the audio and video signals simultaneously simply by changing the input source on the AV receiver.

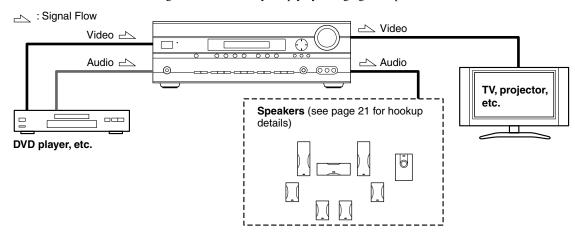

#### Which Connections Should I Use?

The AV receiver supports several connection formats for compatibility with a wide range of AV equipment. The format you choose will depend on the formats supported by your other components. Use the following sections as a guide. For video components, such as a DVD player, you must make an audio connection and a video connection.


#### Audio Connection Formats

When choosing a connection format, bear in mind that the AV receiver doesn't convert between formats.

#### Video Connection Formats

Video equipment can be connected by using any one of the following video connection formats: composite video, S-Video, or component video, the latter offering the best picture quality.

When choosing a connection format, bear in mind that the AV receiver doesn't convert between formats, so only outputs of the same format as the input will output the signal.

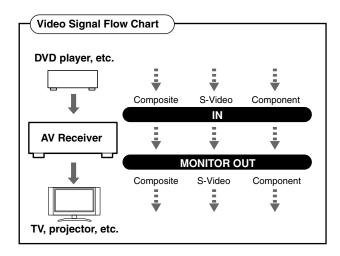


#### **Connecting a TV or Projector**

Step 1: Choose a video connection from A, B, and C.

Step 2: Choose an audio connection from a, b, and c.

- With connection **a**, you can listen to and record audio from your TV and listen via speaker set B.
- To enjoy Dolby Digital and DTS, use connection **b** or **c**. (For recording, use **a** and **b**, or **a** and **c**.)

Connection	AV receiver	Signal flow	TV	Picture quality
A	COMPONENT VIDEO OUT	$\Rightarrow$	Component video input	Best
В	MONITOR OUT S	$\Rightarrow$	S-Video input	Better
C	MONITOR OUT V	$\Rightarrow$	Composite video input	Standard
а	CBL/SAT IN L/R	⇐	Analog audio L/R output	
Ь	DIGITAL IN COAXIAL 2	⇐	Digital coaxial output	
С	DIGITAL IN OPTICAL 1	<b>⇐</b>	Digital optical output	

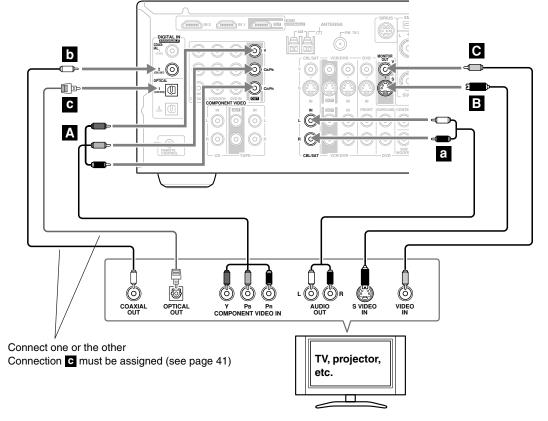



If your TV has no audio outputs, connect an audio output from your VCR or cable or satellite receiver to the AV receiver and use its tuner to listen to TV programs through the AV receiver (see pages 30 and 32).

#### Connecting a DVD player


#### Step 1: Choose a video connection from A, B, and C.

You must connect the AV receiver to your TV via the same type of connection.

#### Step 2: Choose an audio connection from a, b, and c.

- With connection **a**, you can listen to and record audio from a DVD and listen via speaker set B.
- To enjoy Dolby Digital and DTS, use connection **b** or **c**. (For recording, use **a** and **b**, or **a** and **c**.)
- If your DVD player has main left and right outputs and multichannel left and right outputs, be sure to use the main left and right outputs for connection a.

Connection	AV receiver	Signal flow	DVD player	Picture quality
A	COMPONENT VIDEO DVD IN	<b>⇐</b>	Component video output	Best
В	DVD IN S	<b>⇐</b>	S-Video output	Better
C	DVD IN V	<b>⇐</b>	Composite video output	Standard
а	DVD IN FRONT	⇐	Analog audio L/R output	
b	DIGITAL IN COAXIAL 1	<b>⇐</b>	Digital coaxial output	
С	DIGITAL IN OPTICAL 1	<b>⇐</b>	Digital optical output	

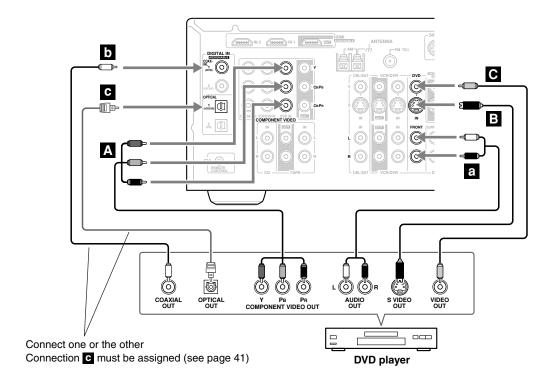


To connect a DVD player or DVD-Audio/SACD-capable player with a multichannel analog audio output, see page 28.

#### Hooking Up the Multichannel DVD Input

If your DVD player supports multichannel audio formats such as DVD-Audio or SACD, and it has a multichannel analog audio output, you can connect it to the AV receiver's multichannel DVD input.

Use a multichannel analog audio cable, or several normal audio cables, to connect the AV receiver's DVD IN FRONT L/R, CENTER, SURROUND L/R, SURR BACK L/R, and SUBWOOFER jacks to the 7.1-channel analog audio output on your DVD player. If your DVD player has a 5.1-channel analog audio output, don't connect anything to the AV receiver's SURR BACK L/R jacks.

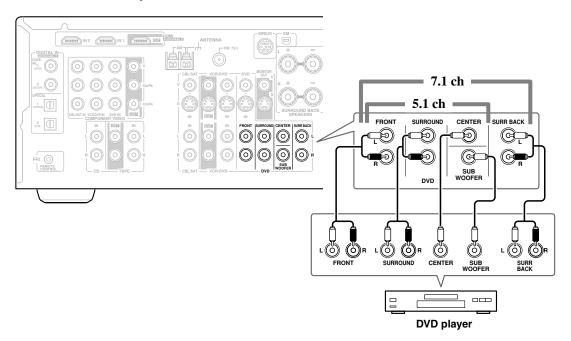


#### **Connecting Components with HDMI**

If you have an HDMI-compatible player, you can connect it to the AV receiver with an HDMI cable.

- Step 1: Connect your HDMI-compatible TV to the AV receiver's HDMI OUT jack.
- Step 2: Connect your HDMI-compatible player to the AV receiver's HDMI IN 1 or 2 jack.
- Step 3: Connect your HDMI-compatible player to an analog and/or digital audio input on the AV receiver.
  - \* Audio and video signals received via the HDMI IN 1 and 2 jacks are output by the HDMI OUT jack as they are (HDMI pass-through), so even if you only make the connections in steps 1 and 2, your TV will output sound. However, if you want to listen through the speakers connected to the AV receiver, in addition to an HDMI connection, you'll also need to make a separate analog or digital audio connection.

#### Step 4: Assign the HDMI IN.

Turn on the AV receiver, and then assign the HDMI IN (see page 40)

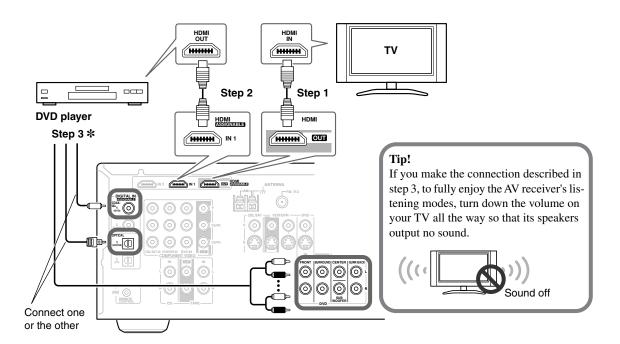

#### **Notes:**

- Audio and video signals received via the HDMI IN jacks are output only by the HDMI OUT.
- · Audio and video signals received via inputs other than the HDMI IN jacks are not output by the HDMI OUT.
- The HDMI video stream is compatible with DVI (Digital Visual Interface), so TVs and displays with a DVI input can be connected by using an HDMI-to-DVI adapter cable. (Note that DVI connections only carry video, so you'll need to make a separate connection for audio.) However, reliable operation with such an adapter is not guaranteed. In addition, video signals from a PC are not supported.
- To watch an HDMI source that's connected via the AV receiver's HDMI jacks, the AV receiver must be turned on, otherwise no HDMI signal will be output.
- The HDMI audio signal (sampling rate, bit length, etc.) may be restricted by the connected source component. If
  the picture is poor or there's no sound from a component connected via HDMI, check its setup. Refer to the
  connected component's instruction manual for details.

#### Connecting a VCR or DVD Recorder for Playback



With this hookup, you can use your VCR's tuner to listen to your favorite TV programs via the AV receiver, useful if your TV has no audio outputs.


#### Step 1: Choose a video connection from A, B, and C.

You must connect the AV receiver to your TV via the same type of connection.

#### Step 2: Choose an audio connection from a, b, and c.

- With connection **a**, you can listen to the VCR or DVD recorder even via speaker set B.
- To enjoy Dolby Digital and DTS, use connection **b** or **c**. (To listen via speaker set B, use **a** and **b**, or **a** and **c**.)

Connection	AV receiver	Signal flow	VCR or DVD recorder	Picture quality
Α	COMPONENT VIDEO VCR/DVR IN	←	Component video output	Best
В	VCR/DVR IN S	<=	S-Video output	Better
C	VCR/DVR IN V	⇐	Composite video output	Standard
а	VCR/DVR IN L/R	←	Analog audio L/R output	
b	DIGITAL IN COAXIAL 2	←	Digital coaxial output	
C	DIGITAL IN OPTICAL 1	⇐	Digital optical output	

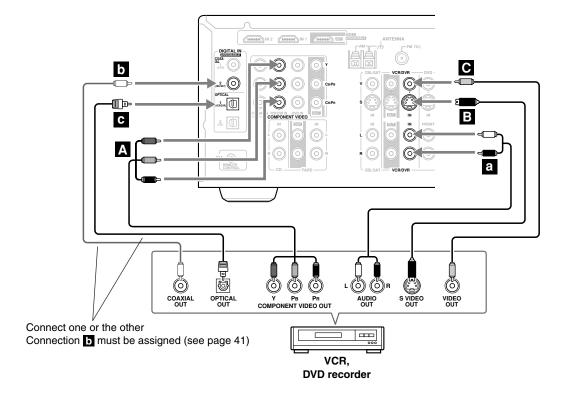


#### Connecting a VCR or DVD Recorder for Recording

#### Step 1: Choose a video connection from A and B.

The video source to be recorded must be connected to the AV receiver via the same type of connection.

#### Step 2: Make the audio connection a.

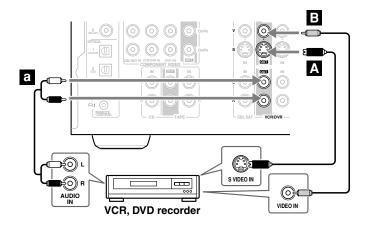


Connection	AV receiver	Signal flow	VCR or DVD recorder	Picture quality
A	VCR/DVR OUT S	$\Rightarrow$	S-Video input	Better
В	VCR/DVR OUT V	$\Rightarrow$	Composite video input	Standard
a	VCR/DVR OUT L/R	$\Rightarrow$	Analog audio L/R input	_

#### Connecting a Camcorder, Games Console, or Other Device

Step 1: Make the video connection A.

Step 2: Make the audio connection a.

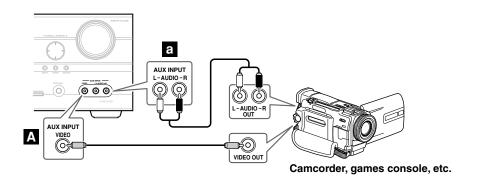

Connection	AV receiver	Signal flow	Camcorder or console	
A	AUX INPUT VIDEO	←	Composite video output	
а	AUX INPUT L-AUDIO-R	⇐	Analog audio L/R output	

#### Connecting a Satellite, Cable, Set-top box, or Other Video Source



With this hookup, you can use your satellite or cable receiver to listen to your favorite TV programs via the AV receiver, useful if your TV has no audio outputs.


#### Step 1: Choose a video connection from A, B, and C.

You must connect the AV receiver to your TV via the same type of connection.

#### Step 2: Choose an audio connection from a, b, and c.

- With connection a, you can listen to and record audio from the video source and listen via speaker set B.
- To enjoy Dolby Digital and DTS, use connection **b** or **c**. (For recording, use **a** and **b**, or **a** and **c**.)

Connection	AV receiver	Signal flow	Video source	Picture quality
Α	COMPONENT VIDEO CBL/SAT IN	<b>←</b>	Component video output	Best
В	CBL/SAT IN S	<b>⇐</b>	S-Video output	Better
C	CBL/SAT IN V	<=	Composite video output	Standard
а	CBL/SAT IN L/R	<b>←</b>	Analog audio L/R output	
b	DIGITAL IN COAXIAL 2	←	Digital coaxial output	
C	DIGITAL IN OPTICAL 1	⇐	Digital optical output	

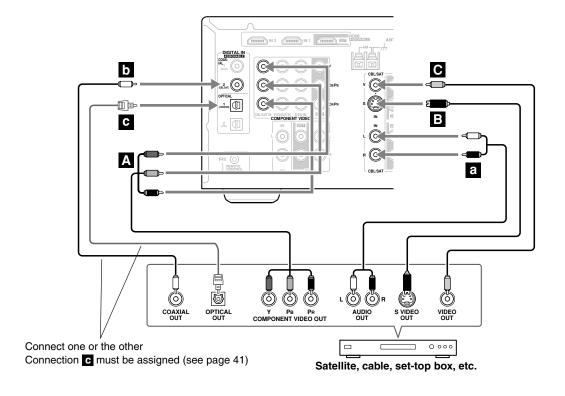


#### **Connecting a CD Player or Turntable**

#### ■ CD Player or Turntable (MM) with Built-in Phono Preamp

#### Step 1:

Choose a connection that matches your CD player (a, b, or c). Use connection a for a turntable with a built-in phono preamp.

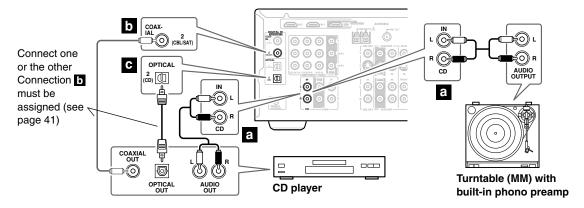


- With connection a, you can listen to and record audio from your CD player or turntable and listen via speaker set B.
- To connect the CD player digitally, use connection **b** or **c**. (For recording, use **a** and **b**, or **a** and **c**.)

Connection	AV receiver	Signal flow	CD or turntable
а	CD IN L/R	←	Analog audio L/R output
b	DIGITAL IN COAXIAL 2	⇐	Digital coaxial output
C	DIGITAL IN OPTICAL 2	<b>⇐</b>	Digital optical output


#### ■ Turntable (MM) with no Phono Preamp Built-in

A phono preamp is necessary to connect a turntable that doesn't have a phono preamp built-in.

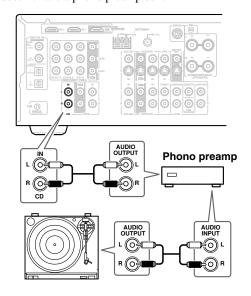

#### ■ Turntable with an MC (Moving Coil) Cartridge

An MC head amp and phono preamp are necessary to connect a turntable with an MC (Moving Coil) cartridge.

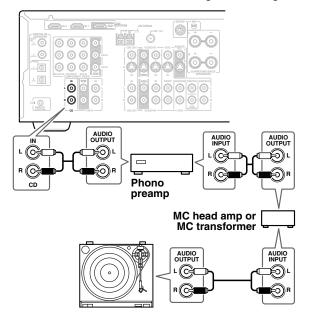

#### Connecting an RI Dock

#### ■ RI Dock with video


Connect your RI Dock's analog audio output jacks and S-Video output jack to the AV receiver's CBL/SAT IN L/R jacks and CBL/SAT IN S jack.

#### ■ RI Dock without video

Connect your RI Dock's analog audio output jacks to the AV receiver's TAPE IN L/R jacks (1).

#### Notes:

- Connect the Remote Interactive Dock with an RI cable (see page 35).
- Set the Remote Interactive Dock's RI MODE switch to HDD or HDD/DOCK.
- Set the AV receiver's Input Display to DOCK (see page 41).
- Refer to the Remote Interactive Dock's instruction manual.

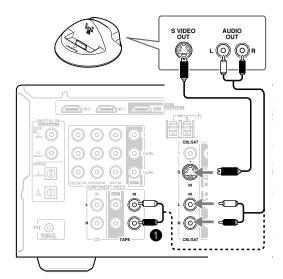


(DS-A1 hookup shown here.)

#### Connecting a Cassette, CDR, MiniDisc, or DAT Recorder

#### Step 1:

Choose a connection that matches the recorder (a, b, or c), and then make the connection.

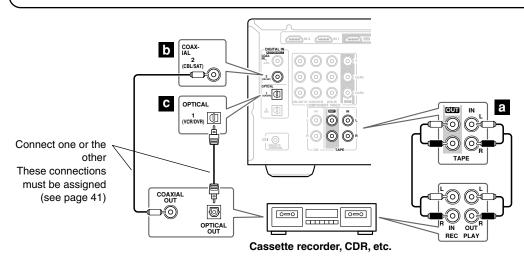

- With connection **a**, you can listen via speaker set B.
- To connect the recorder digitally, use connections a and b, or a and c.

Connection	AV receiver	Signal flow	Cassette/CDR/MD/DAT recorder
a	TAPE IN L/R TAPE OUT L/R	<b>←</b> ⇒	Analog audio L/R output Analog audio L/R input
b	DIGITAL IN COAXIAL 2	⇐	Digital coaxial output
C	DIGITAL IN OPTICAL 1	<b>←</b>	Digital optical output

#### Connecting Onkyo RI Components

- **Step 1:** Make sure that each Onkyo component is connected to the AV receiver with an analog audio cable (connection **a** in the hookup examples) (see pages 27 to 34).
- Step 2: Make the RI connection.
- **Step 3:** If you're using an MD, CDR, or RI Dock, change the input Display (see page 41).

With **R**I (Remote Interactive), you can use the following special functions:

#### ■ Auto Power On/Standby

When you start playback on a component connected via  $\mathbf{RI}$ , if the AV receiver is on Standby, it will automatically turn on and select that component as the input source. Similarly, when the AV receiver is set to Standby, all components connected via  $\mathbf{RI}$  will also go on Standby. This function will not work on components connected to an AC OUTLET on the AV receiver.

#### **■** Direct Change


When playback is started on a component connected via  $\mathbf{RI}$ , the AV receiver automatically selects that component as the input source. If your DVD player is connected to the AV receiver's multichannel DVD input, you'll need to press the [MULTI CH] button to hear all channels (see page 43), as the Direct Change  $\mathbf{RI}$  function only selects the FRONT DVD IN jacks.

#### ■ Remote Control

You can use the AV receiver's remote controller to control your other **R1**-capable Onkyo components, pointing the remote controller at the AV receiver's remote control sensor instead of the component. You must enter the appropriate remote control code first (page 63).

#### **Notes:**

- Use only RI cables for RI connections. RI cables are supplied with Onkyo players (DVD, CD, etc.).
- Some components have two RI jacks. You can connect either one to the AV receiver. The other jack is for connecting additional RI-capable components.
- Connect only Onkyo components to RI jacks.
   Connecting other manufacturer's components may cause a malfunction.
- Some components may not support all RI functions. Refer to the manuals supplied with your other Onkyo components.

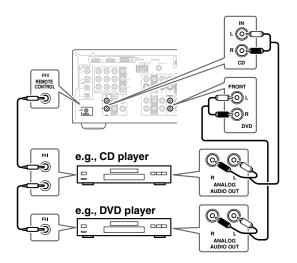


#### **Connecting the Power Cord**


• Connect the AV receiver's power cord to a suitable wall outlet.

#### Notes:


- Before connecting the power cord, connect all of your speakers and AV components.
- Turning on the AV receiver may cause a momentary power surge that might interfere with other electrical equipment on the same circuit. If this is a problem, plug the AV receiver into a different branch circuit.

# **Turning On the AV Receiver**

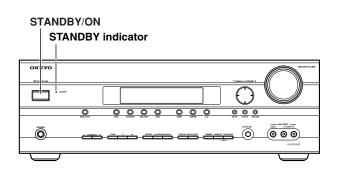

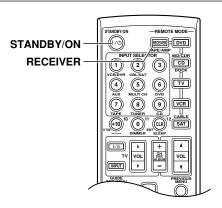

#### **Turning On and Standby**

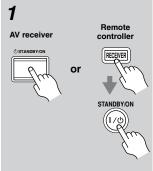

Press the [STANDBY/ON] button.

Alternatively, press the remote controller's [RECEIVER] button, followed by the [STANDBY/ON] button.

The AV receiver comes on, the display lights up, and the STANDBY indicator goes off.

To turn the AV receiver off, press the [STANDBY/ON] button again. The AV receiver will enter Standby mode. To prevent any loud surprises when you next turn on the AV receiver, always turn down the volume before you turn it off.

**To turn on the subwoofer, press its [POWER] switch to the ON position** (not North American models).

#### Smooth Operation in a Few Easy Steps

To ensure smooth operation, here's a few easy steps to help you configure the AV receiver before you use it for the very first time. These settings only need to be made once.

■ Do the automatic speaker setup—this is essential! See "Automatic Speaker Setup (Audyssey 2EQ/HTIB)" on page 37.



Have you connected a component to an HDMI IN?

If you have, see "HDMI Video Setup" on page 40.




■ Have you connected a component to a digital audio input?

If you have, see "Digital Audio Input Setup" on page 41.



Have you connected an Onkyo MD recorder, CD recorder, or RI Dock?

If you have, see "Changing the Input Display" on page 41.

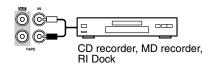

## **First Time Setup**

This section explains the settings that you need to make before using the AV receiver for the very first time.

#### **Automatic Speaker Setup (Audyssey 2EQ/HTIB)**

With the supplied speaker setup microphone, the Audyssey 2EQ/HTIB function can measure the number of speakers connected, their sizes, crossover frequencies, and distances from the listening position, and then calculate the optimal speaker settings for your listening environment.

Before using this function, connect and position all of the supplied speakers.

#### Measurement Points


To create a listening area in which several people can enjoy home theater simultaneously, the Audyssey 2EQ/HTIB function takes measurements at three points within the listening area:

- 1) First measurement point
  - This is the center point of the listening area, or the listening position if it's just one person.
- ② Second measurement point
  - The right side of the listening area.
- **③ Third measurement point**


The left side of the listening area.

The distances between points ① and ② and points ① and ③ must be at least 1 meter.

From the examples below, choose the listening area that best matches yours and place the microphone accordingly when prompted.

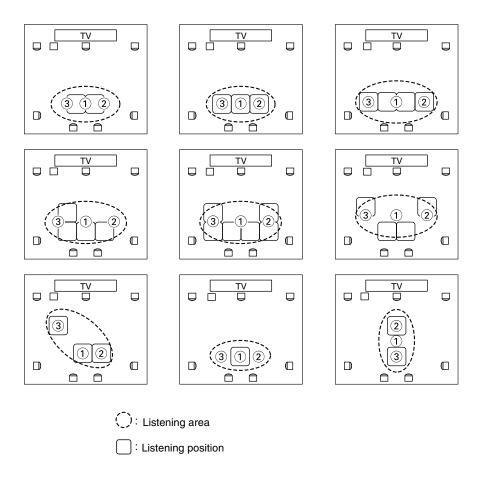

#### Using Audyssey 2EQ/HTIB

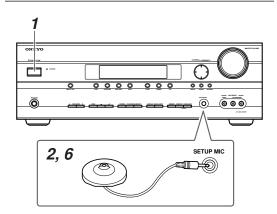

- 1 Turn on the AV receiver.
- Put the speaker setup microphone at measurement point ① (page 37), and connect it to the SETUP MIC jack.

SETUP MIC



Set Mic at 1st.

#### **Notes:**

- Make sure the microphone is horizontal.
- If there's an obstacle between the microphone and any speaker, the automatic setup will not work correctly. Set up the room as you would when enjoying a DVD.
- Positioning the microphone close to where your ears would normally be will provide better results. You can adjust the height of the microphone by using a tripod or level table.
- 3 Press [ENTER].

The automatic speaker setup starts.



Now measuring..

A test tone is output by each speaker in turn, as the Audyssey 2EQ/HTIB function determines which speakers are connected. This takes a few minutes.

#### Note:

 If any extraneous noise is picked up by the microphone, the automatic setup may not work correctly, so don't make any noise.

#### **Notes:**

- If the AV receiver was previously muted, it will be unmuted.
- Automatic speaker setup cannot be performed while a pair of headphones is connected.
- It takes about 10 minutes to complete the automatic speaker setup.
- When the following display appears, move the speaker setup microphone to measurement point ② (page 37), and then press [ENTER].





Audyssey 2EQ/HTIB performs more measurements.

This takes a few minutes.

When the following display appears, move the speaker setup microphone to measurement point ③ (page 37), and then press [ENTER].






Audyssey 2EQ/HTIB performs more measurements.

This takes a few minutes.

When the measurements are complete, the results are calculated and saved automatically.

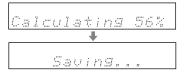

When the automatic speaker setup is complete, disconnect the speaker setup microphone.

Unplus SeturMic

#### Notes:

- When the automatic speaker setup is complete, the Equalizer Settings (page 60) will be set to "Audyssey."
- You can cancel the automatic speaker setup at any point in this procedure simply by disconnecting the setup microphone.

### First Time Setup—Continued

#### Error Messages

While the automatic speaker setup is in progress, one of the following error messages may appear:

#### ☐ Ambient noise is too high

This message appears if there's too much background noise and the measurements cannot be performed properly. Remove the source of the noise and try again.

#### ☐ Speaker Detect Errors



This message appears if one of the speaker-related errors below occurs.

- · One of the front speakers has not been detected.
- One of the surround speakers has not been detected.
- The surround back speakers have been detected but the surround speakers haven't.
- The right surround back speaker has been detected but the left surround back speaker hasn't.
- The number of speakers detected on the second or third measurement was different to the number detected on the first measurement.

#### ☐ Write Error



This message appears if saving fails.

#### To Retry the Automatic Speaker Setup

#### Press the [ENTER] button.

Make sure speakers that cannot be detected are connected properly.



#### Changing the Speaker Settings Manually


In some situations, the measurements taken by the automatic speaker setup may not provide usable results. If running the speaker setup a second time still doesn't provide usable results, you'll have to set the speaker settings manually (see pages 56–60).

#### Using a Powered Subwoofer

If you're using a powered subwoofer, because it outputs very low-frequency sound and its position is usually low down, it may not be detected by the automatic speaker setup. In this case, increase the subwoofer's volume, set it to its highest crossover frequency, and then try running the automatic speaker setup again. Note that if the volume is set too high and the sound distorts, it may not be detected, so use an appropriate volume level. If the subwoofer has a low-pass filter switch, set it to Off or Direct. Refer to your subwoofer's instruction manual for details.

#### **HDMI Video Setup**

If you connect a video component to HDMI IN 1 or 2, use this setting to assign that input to an input selector.

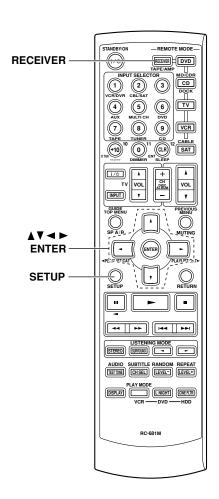




Press the [RECEIVER] button, followed by the [SETUP] button.



Use the Up and Down [▲]/[▼] buttons to select "Video Input," and then press [ENTER].

Video Input

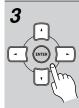

Use the Up and Down [▲]/[▼] buttons to select "HDMI DVD," "HDMI VCR," or "HDMI CBL" and use the Left and Right [◄]/[▶] buttons to change the setting.

If you connect a video component to HDMI IN 1 or 2, you must assign that input to an input selector. For example, if you connect your DVD player to HDMI IN 1, you must assign HDMI DVD setting to IN1.

**IN1:** Select if the video component is connected to HDMI IN 1.

**IN2:** Select if the video component is connected to HDMI IN 2.

**No:** Select if you're not using the HDMI OUT.


HDMI DVD#HO
HDMI Input
video

4

Press the [SETUP] button.

Setup closes.

#### **Digital Audio Input Setup**

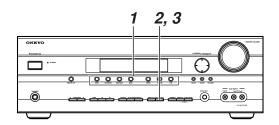

To enjoy Dolby Digital and DTS, you must connect your DVD player to the AV receiver digitally (coaxial or optical).

These are the default digital audio input assignments.

Input selector	Default assignment
DVD	COAX 1
VCR/DVR	OPT 1
CBL/SAT	COAX 2
TAPE	
CD	OPT 2
AUX	

You can change the digital audio input assignments if necessary. For example, if you connect your DVD player to the OPTICAL 1 DIGITAL IN (OPT1), you must assign that input to the DVD input selector, as follows.



# Press the input selector button for the input selector that you want to assign.

(Digital inputs cannot be assigned to the TUNER input selector.)



## Press the [DIGITAL INPUT] button.

The current assignment appears.

DUD # COAX1



Press the [DIGITAL INPUT] button repeatedly to select COAX1, COAX2, OPT1, OPT2, or "---" (analog).

DUD #OPT1


#### Note:

Make sure that components connected digitally are configured to output digital audio. Refer to the relevant manuals.

#### **Changing the Input Display**

If you connect an RI-capable Onkyo MiniDisc recorder, CD recorder, or RI Dock to the TAPE IN/OUT or CBL/SAT IN jacks, for RI to work properly, you must change this setting.

This setting can only be changed on the AV receiver.

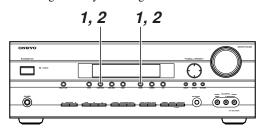



Press the [TAPE] or [CBL/SAT] input selector button so that "TAPE" or "CBL/SAT" appears on the display.



TAPE







or

CBL/SAT

Press and hold down the [TAPE] or [CBL/SAT] input selector button (about 2 seconds) to change the setting.

Repeat this step to select MD, CDR, or DOCK.

For the TAPE input selector, the setting changes in this order:

$$\begin{array}{c} \text{TAPE} \rightarrow \text{MD} \rightarrow \text{CDR} \rightarrow \text{DOCK} \\ \uparrow \end{array}$$

For the CBL/SAT input selector, the setting changes in this order:


 $CBL/SAT \leftrightarrow DOCK$ 


#### Note:

DOCK can be selected for the TAPE input selector or CBL/SAT input selector, but not both at the same time.

## **Playing Your AV Components**

#### **Basic AV Receiver Operation**

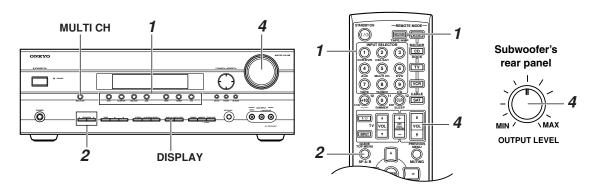

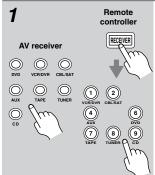

Use the AV receiver's input selector buttons to select the input source.

To select the input source with the remote controller, press the [RECEIVER] REMOTE MODE button, and then use the INPUT SELECTOR buttons.

AV receiver Remote controller

A SPEANERS B

SP A/B

To turn the speakers on or off, use the AV receiver's SPEAKERS [A] and [B] buttons, or use the remote controller's [SP A/B] button.

Pressing the remote controller's [SP A/B] button cycles through the following settings: Speaker Set A  $\rightarrow$  Speaker Set A&B  $\rightarrow$  Speaker Set B  $\rightarrow$  Off.

Note that while speaker set B is on, speaker set A is reduced to 5.1-channel playback.




See page 5 for more information about speaker sets A and B.

3

#### Start playback on the source component.

To watch a DVD or other video source, on your TV, select the video input that's connected to the AV receiver's MONITOR OUT jack.

If your TV is connected to the HDMI OUT, see the tip on page 29.

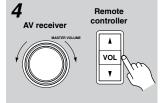

## To adjust the volume, use the MASTER VOLUME control, or the remote controller's [VOL] button.

The volume can be set to MIN, 1 through 79, or MAX. Since the AV receiver is designed for home theater enjoyment, it has a wide volume range for precise adjustment.


#### To set the level of the subwoofer, use the OUTPUT LEVEL control.


Because our ears are less sensitive to very low bass sounds, there's a temptation to set the level of the subwoofer too high. As a rule of thumb, set the subwoofer level to what you think is the optimal level, and then back it off slightly.

5

#### Select a suitable listening mode and enjoy!

See "Using the Listening Modes" on page 48.

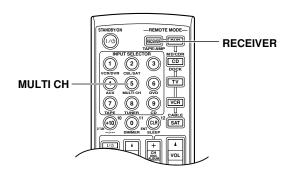

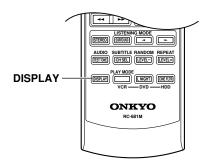


#### **Using the Multichannel DVD Input**

The multichannel DVD input is for connecting a component with a 7.1-channel analog audio output, such as a DVD-Audio or SACD-capable DVD player, or an MPEG decoder. See page 28 for hookup information.



# Press the [RECEIVER] REMOTE MODE button, followed by the [MULTI CH] button.

The MULTI CH indicator appears on the display.

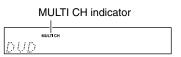


Audio from the multichannel DVD input will now be used for the DVD input source.

#### Note:

 While the multichannel DVD input is selected, the Speaker Configuration settings on page 56 are ignored, and signals from the multichannel input are fed to the speakers as they are.


#### **Displaying Source Information**

You can display various information about the current input source as follows.

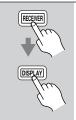

Press the [RECEIVER] REMOTE MODE button, and then press the [DISPLAY] button repeatedly to cycle through the available information.

The following information can typically be displayed:

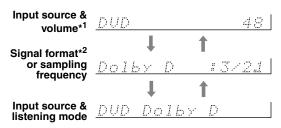

- \*1 When AM or FM radio is used, the band, preset number, and frequency are displayed.
- \*2 If the input signal is analog, or AM or FM radio is selected, no format information is displayed. If the input signal is PCM, the sampling frequency is displayed. If the input signal is digital but not PCM, the signal format is displayed. Information is displayed for about 3 seconds, then the previous display reappears.

#### Note:

 The listening mode is displayed only when speaker set A is on.


#### **Interpreting Surround Channel Information**

$$\frac{3}{4} \times \frac{2}{8} \frac{1}{C}$$

- A: The number of front channels (front left, front right, and center).
- B: The number of surround channels (surround left and surround right). If there's surround back channel information, this number will be 3.
- C: LFE channel for subwoofer (1 means yes).

## Listening to the Radio

#### Listening to AM/FM Stations

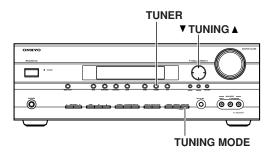


With the built-in tuner, you can enjoy AM and FM radio stations.



## Use the [TUNER] input selector button to select AM or FM.

In this example, FM has been selected.

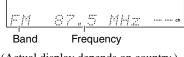

(Actual display depends on country.)

#### ■ AM Frequency Step Setup (not North America)

You must specify the AM frequency step used in your area. Note that when this setting is changed, all radio presets are deleted.

- Press the [SETUP] button, use the Up and Down [▲]/[▼] buttons to select "0. Hardware Setup," and then press [ENTER].
- Use the Up and Down [▲]/[▼] buttons to select "AM Freq," and then use the Left and Right [◄]/[▶] buttons to select:

10 kHz: Select if 10 kHz steps are used in

your area.

**9 kHz:** Select if 9 kHz steps are used in

your area.

**3** Press the [SETUP] button. Setup closes.

#### Tuning into AM/FM Radio Stations

#### **■** Auto Tuning Mode



Press the [TUNING MODE] button so that the AUTO indicator appears on the display.

2

## INING ▲/◀PRESET ►

## Press the TUNING Up or Down $[\![\Delta]\!]/[\![\nabla]\!]$ button.

Searching stops when a station is found.


#### ■ Manual Tuning Mode



Press the [TUNING MODE] button so that the AUTO indicator disappears from the display.

**2**▼TUNING A / ∢PRI


## Press and hold the TUNING Up or Down $[\blacktriangle]/[\blacktriangledown]$ button.

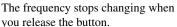

Press the buttons repeatedly to change the frequency one step at a time.

The American model changes FM frequency in 0.2 MHz steps, 10 kHz steps for AM. For other models it's 0.05 MHz steps for FM and 9 kHz (or 10 kHz) steps for AM.

When tuned into a station, the TUNED indicator appears. When tuned into a stereo FM station, the FM STEREO indicator also appears.

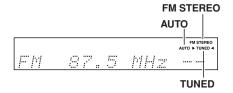

#### **Tuning into Weak FM Stereo Stations**


If the signal from a stereo FM station is weak, it may be impossible to get good reception. In this case, switch to Manual Tuning mode and listen to the station in mono.

#### Note:

You can also use the remote controller's Up and Down
 [▲]/[▼] buttons to tune the radio.

#### **■** Tuning into Stations by Frequency

You can tune into AM and FM stations directly by entering the appropriate frequency.

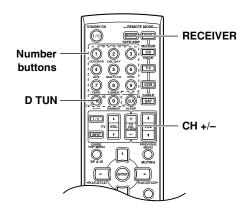



## Press the [RECEIVER] button, followed by the [D TUN] button.



(Actual display depends on country.) The [RECEIVER] button flashes.




# Within 8 seconds, use the number buttons to enter the frequency of the radio station.

For example, to tune to 87.5 (FM), press 8, 7, 5.

**Note**: While the [RECEIVER] button is flashing, the input source cannot be changed by using the remote controller.


### **Presetting AM/FM Stations**

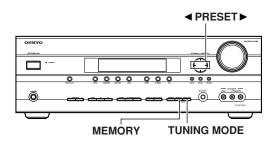

You can store a combination of up to 40 of your favorite AM/FM radio stations as presets.

Tune into the AM/FM station that you want to store as a preset.

## **Press the [MEMORY] button.**The preset number flashes.

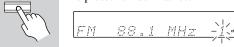

While the preset number is flashing (about 8 seconds), use the PRESET [◄]/[►] buttons to select a preset from 1 through 40.



# Press the [MEMORY] button again to store the station or channel.

The station or channel is stored and the preset number stops flashing.

Repeat this procedure for all of your favorite AM/FM radio stations.

#### **■ Selecting Presets**




To select a preset, use the PRE-SET [◀]/[▶] buttons, or the remote controller's CH [+/–] button.


#### ■ Deleting Presets

1	Select the preset that you want to delete. See the previous section.
MEMORY TUNING MODE	While holding down the [MEM-ORY] button, press the [TUNING MODE] button.
CLEAR	The preset is deleted and its number disappears from the display.

## **Common Functions**

This section explains functions that can be used with any input source.

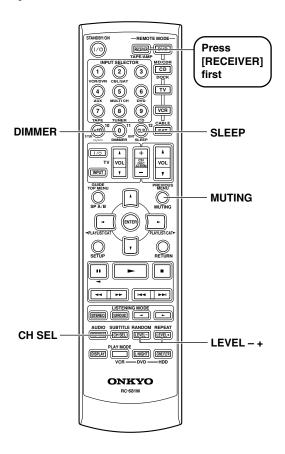

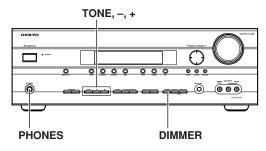

#### **Setting the Display Brightness**

You can adjust the brightness of the display.




Press the remote controller's [DIMMER] button repeatedly to select: dim, dimmer, or normal brightness.

Alternatively, you can use the AV receiver's [DIMMER] button.

#### **Adjusting the Bass and Treble**

You can adjust the bass and treble for the front speakers, except when the Direct or Pure Audio (not North American models) listening mode is selected.

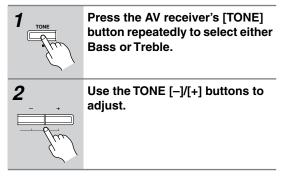

#### **■** Bass

You can boost or cut low-frequency sounds output by the front speakers from -10 dB to +10 dB in 2 dB steps.

#### **■** Treble


You can boost or cut high-frequency sounds output by the front speakers from -10 dB to +10 dB in 2 dB steps.

#### Note:

 To bypass the bass and treble tone circuits, select the Direct or Pure Audio (not North American model) listening mode.

#### **Muting the AV Receiver**

You can temporarily mute the output of the AV receiver.

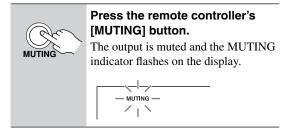

**To unmute the AV receiver,** press the remote controller's [MUTING] button again, or adjust the volume. The output is unmuted and the MUTING indicator goes off. Muting is cancelled when the AV receiver is set to Standby.

#### **Using the Sleep Timer**

With the sleep timer, you can set the AV receiver so that it turns off automatically after a specified period.



# Press the remote controller's [SLEEP] button repeatedly to select the required sleep time.

You can set the sleep time from 90 to 10 minutes in 10 minute steps.

The SLEEP indicator appears on the display when the sleep timer has been set, as shown. The specified sleep time appears on the display for about 5 seconds, then the previous display reappears.

SLEEP indicator




**To cancel the sleep timer,** press the [SLEEP] button repeatedly until the SLEEP indicator disappears.

To check the remaining sleep time, press the [SLEEP] button. Note that if you press the [SLEEP] button while the sleep time is being displayed, you'll shorten the sleep time by 10 minutes.

### **Using Headphones**

For private listening, you can connect a pair of stereo headphones (1/4-inch phone plug) to the AV receiver's PHONES jack.

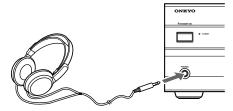

#### **Notes:**

- Always turn down the volume before connecting your headphones.
- Speaker sets A and B are turned off while the headphones plug is inserted in the PHONES jack.
- When you connect a pair of headphones, the listening mode is set to Stereo, unless it was set to Pure Audio, Mono, Stereo, or Direct, in which case it stays the same.
- When the multichannel DVD input is selected, only the front left and front right channels can be heard in the headphones.

#### **Adjusting Speaker Levels**

You can adjust the volume of each speaker in speaker set A. These temporary adjustments are cancelled when the AV receiver is set to Standby.



Use the remote controller's [CH SEL] button to select each speaker, and use the [LEVEL-] and [LEVEL+] buttons to adjust the volume.

You can adjust the volume of each speaker from -12 dB to +12 dB (-15 dB to +12 dB for the subwoofer).



#### Notes:

- You cannot use this function while the AV receiver is muted.
- Speakers that are set to No or None in the Speaker Configuration cannot be adjusted.

#### ■ Speaker Set B

While speaker set B is on, you can adjust the volume of the left and right speakers, from -12 dB to +12 dB.



- These settings are stored when the AV receiver is set to Standby.
- While speaker set B is on, you cannot adjust the levels of speaker set A's surround back speakers.

#### ■ Headphones

While a pair of headphones is connected, you can adjust the volume of each headphone speaker, from -12 dB to +12 dB each.



 These settings are stored when the AV receiver is set to Standby.


## **Using the Listening Modes**

#### **Selecting Listening Modes**


For a description of each listening mode, see "About the Listening Modes" on page 50.

- The Dolby Digital and DTS listening modes can only be selected if your DVD player is connected to the AV receiver with a digital audio connection (coaxial or optical).
- Listening mode availability depends on the format of the current input signal.
- While a pair of headphones is connected, you can select only the Pure Audio (not North American model), Mono, Direct, or Stereo listening mode.
- The listening modes cannot be selected while speaker set A is off.

### Selecting with the Remote Controller

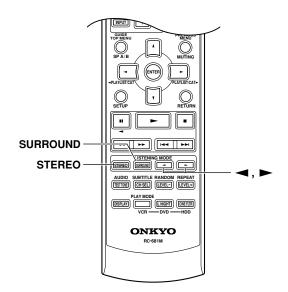

#### Selecting on the AV Receiver

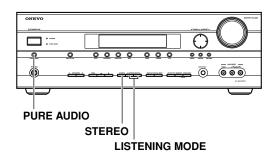

## ■ [PURE AUDIO] button (not North American model)

This button selects the Pure Audio listening mode. When this mode is selected, the AV receiver outputs no video signals and its display is turned off. Pressing this button again will select the previous listening mode.

Video received by the HDMI IN 1 and 2 inputs is passed through to the HDMI OUT even if the Pure Audio listening mode is selected.

#### **■** [STEREO] button

This button selects the Stereo listening mode.

#### ■ LISTENING MODE [◄]/[▶] buttons

Pressing these buttons repeatedly cycles through all of the listening modes that can be used with the current input source.

#### **■** [STEREO] button

This button selects the Stereo listening mode.

#### **■** [SURROUND] button

This button selects the Dolby Digital and DTS listening modes and the Neural Surround\* listening mode (\* North American model only).

#### ■ LISTENING MODE [◄]/[▶] buttons

Pressing these buttons repeatedly cycles through all of the listening modes that can be used with the current input source.

### **Using the Listening Modes**—Continued

The following table shows which listening modes can be used with each input signal format.

Source format			Dolby Digital				DTS/DTS 96/24*2			
		Analog, PCM <sup>*1</sup>	3/2.1	0/0	4/0.4.4	Other	3/2.1	2/0	DTS-ES	Multich analog
			2/2.1	2/0	1/0, 1+1	Other	2/2.1	2/0	Discrete Matrix	
Listening mode		CD, TV, radio, cassette, etc.	DVD, DTV, etc.				DVD, CD, etc.			DVD
	re Audio (Not North American models) ect	V	~	~	~	~	~	~	~	~
Ste Mo	reo no	~	~	~	~	~	~	~	~	
Mu	ltich									~
Nec	llx Movie/Music/Game *3 o:6 Cinema o:6 Music	~		~				~		
	ural Surround (North American models only)	<b>✓</b> *4								
	Dolby D		~			<b>✓</b>				
Dolby	Dolby D + Neo:6 Dolby D EX Dolby D+PLIIx Music		~							
	Dolby D+PLIIx Movie		V							
	DTS, DTS 96/24						~		<b>✓</b> *5	
	DTS-ES Discrete								~	
DTS	DTS-ES Matrix								V	
<u> </u>	DTS+Neo:6 DTS+Dolby EX DTS+PLIIx Music						~			
	DTS+PLIIx Movie						V			
T-D		<b>V</b>	~	~	~	~	~	~	V	
	Mono Movie Orchestra Unplugged ginal Studio-Mix TV Logic All Ch Stereo Full Mono	V	•	~	~	~	•	~	V	

<sup>\*1.</sup> In the Pure Audio and Direct listening modes, 32 kHz, 44.1 kHz, and 48 kHz PCM is processed at 64 kHz, 88.2 kHz, and 96 kHz respectively. In listening modes other than Pure Audio, Direct, and Stereo, 64 kHz, 88.2 kHz, and 96 kHz PCM is processed at 32 kHz, 44.1 kHz, and 48 kHz respectively.

: Only available on 6.1/7.1-channel playback systems. Not available while speaker set B is on.

: Only available on 7.1-channel playback systems. Not available while speaker set B is on.

Tip: To check the format of the digital input signal, see "Displaying Source Information" on page 43.

<sup>\*2.</sup> In listening modes other than Pure Audio, Direct, Stereo, and DTS 96/24, DTS 96/24 sources are processed as normal DTS.

<sup>\*3.</sup> If the Surr Back parameter is set to None, or speaker set B is on, normal Pro Logic II is used.


<sup>\*4.</sup> Not available for 88.2 kHz and 96 kHz PCM input signals.

<sup>\*5.</sup> If the Surr Back setting is set to None, or speaker set B is on, normal DTS is used.

<sup>\*6.</sup> Available only when surround speakers are connected.

#### **About the Listening Modes**

The AV receiver's listening modes can transform your listening room into a movie theater or concert hall, with high fidelity and stunning surround sound.

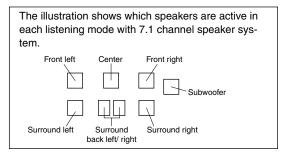

#### Pure Audio (not North American models)

In this mode, the display and video circuitry are turned off, minimizing possible noise sources for the ultimate in high-fidelity reproduction. (As the video circuitry is turned off, no video signals are output in this mode.)

#### Direct

In this mode, audio from the input source is output directly with minimal processing, providing high-fidelity reproduction. All of the source's audio channels are output as they are.

### Stereo

Sound is output by the front left and right speakers and subwoofer.

### Mono

Use this mode when watching an old movie with a mono soundtrack, or use it with the foreign language soundtracks recorded in the left and right channels of some movies. It can also be used with DVDs or other sources containing multiplexed audio, such as karaoke DVDs.

# Dolby Pro Logic II

**Dolby Pro Logic IIx** expands any 2-channel source for 7.1-channel playback. It provides a very natural and seamless surround-sound experience that fully envelops the listener. As well as music and movies, video games can also benefit from the dramatic spatial effects and vivid imaging. If you're not using any surround back speakers, **Dolby Pro Logic II** will be used instead of Dolby Pro Logic IIx.

#### PLIIx Movie

Use this mode with any stereo or Dolby Surround (Pro Logic) movie (e.g., TV, DVD, VHS).

#### PLIIx Music

Use this mode with any stereo or Dolby Surround (Pro Logic) music source (e.g., CD, radio, cassette, TV, VHS, DVD).

#### PLIIx Game

Use this mode with video games, especially those that bear the Dolby Pro Logic II logo.

### Dolby Digital

Use this mode with DVDs that bear the Dolby Digital logo, and Dolby Digital TV broadcasts. This is the most common digital surroundsound format, and it'll put you right in the middle of the action, just like being in a movie theater or concert hall.

## Dolby Digital EX DTS+Dolby EX ■ ■ ■ ■

These modes expand 5.1-channel Dolby Digital and DTS sources for 6.1/7.1-channel playback. They're especially suited to Dolby Digital EX soundtracks that include a matrix-encoded surround back channel. The additional channel adds an extra dimension and provides an envelopment.

a matrix-encoded surround back channel. The additional channel adds an extra dimension and provides an enveloping surround sound experience, perfect for rotating and fly-by sound effects. Use them with DVDs that bear the Dolby Digital or DTS logo.

## Dolby Digital+PLIIx Music DTS+PLIIx Music

These modes use the Pro Logic IIx Music mode to expand 5.1-channel Dolby Digital and DTS sources for 6.1/7.1-channel playback. Use them with Dolby Digital or DTS 5.1 music sources (e.g., DVD and Dolby Digital TV broadcasts).

## Dolby Digital+PLIIx Movie DTS+PLIIx Movie ■ ■ ■ ■

These modes use the Pro Logic IIx Movie mode to expand 5.1-channel Dolby Digital and DTS sources for 7.1-channel playback. Use them with Dolby Digital and DTS 5.1 movies (e.g., DVD and select digital TV broadcasts).

dts

### DTS

The DTS digital surround-sound format supports up to 5.1 discrete channels and uses less compression for high-fidelity reproduction. Use it with DVDs and CDs that bear the DTS logo.

## DTS 96/24

This mode is for use with DTS 96/24 sources. This is high-resolution DTS with a 96 kHz sampling rate and 24-bit resolution, providing superior fidelity. Use it with DVDs that bear the DTS 96/24 logo.

### DTS-ES Discrete

This mode is for use with DTS-ES Discrete soundtracks, which use a discrete surround back channel for true 6.1/7.1-channel playback. The seven totally separate audio channels provide better spatial imaging and 360-degree sound localization, perfect for sounds that pan across the surround channels. Use it with DVDs that bear the DTS-ES logo, especially those with a DTS-ES Discrete soundtrack.

#### **Using the Listening Modes—**Continued

### DTS-ES Matrix

This mode is for use with DTS-ES Matrix soundtracks, which use a matrix-encoded back-channel for 6.1/7.1-channel playback. Use it with DVDs that bear the DTS-ES logo, especially those with a DTS-ES Matrix soundtrack.

### DTS Neo:6

This mode expands any 2-channel source for 6.1-channel playback. It uses six full-bandwidth channels of matrix decoding for matrix-encoded material, providing a very natural and seamless surround sound experience that fully envelops the listener.

#### Neo:6 Cinema

Use this mode with any stereo movie (e.g., TV, DVD, VHS).

#### Neo:6 Music

Use this mode with any stereo music source (e.g., CD, radio, cassette, TV, VHS, DVD).

## Dolby Digital + Neo:6 DTS+Neo:6

This mode uses Neo:6 to expand 5.1-channel Dolby Digital and DTS sources for 6.1/7.1-channel playback. Use it with DVDs that bear the Dolby Digital or DTS logo and feature a 5.1-channel soundtrack.



### SURROUND

## Neural Surround (North American models only)

Neural Surround represents the latest advancement in surround technology developed for music and is adopted by XM Satellite Radio for digital radio broadcast of surround recordings and live events in surround sound. Neural Surround employs psychoacoustic frequency-domain processing, which allows delivery of a more detailed sound stage, with superior channel separation and localization of audio elements. System playback is scalable from 5.1 to 7.1 multichannel surround playback.

#### Onkyo Original DSP Modes

### Mono Movie ■ ■ ■

This mode is suitable for old movies and other mono sources. The center speaker outputs the sound as it is, while reverb is applied to the sound output by the other speakers, giving presence to even mono material.

### Orchestra

Suitable for classical or operatic music, this mode emphasizes the surround channels in order to widen the stereo image, and simulates the natural reverberation of a large hall.

### Unplugged

Suitable for acoustic instruments, vocals, and jazz, this mode emphasizes the front stereo image, giving the impression of being right in front of the stage.

### Studio-Mix

Suitable for rock or pop music, listening to music in this mode creates a lively sound field with a powerful acoustic image, like being at a club or rock concert.

## TV Logic

This mode adds realistic acoustics to TV shows produced in a TV studio, surround effects to the entire sound, and clarity to voices.

### All Ch Stereo


Ideal for background music, this mode fills the entire listening area with stereo sound from the front, surround, and surround back speakers.

### Full Mono

In this mode, all speakers output the same sound in mono, so the sound you hear is the same regardless of where you are within the listening room.


### T-D (Theater-Dimensional)

With this mode, you can enjoy virtual 5.1 surround sound even with only two or three speakers. This works by controlling how sounds reach the listener's left and right ears. Good results may not be possible if there's too much reverb, so we recommend that you use this mode in an environment with little or no natural reverb.

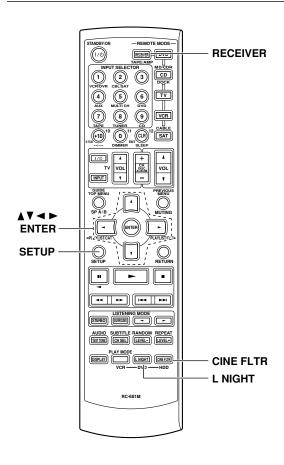

## Using the Late Night Function (Dolby Digital only)

With the Late Night function, you can reduce the dynamic range of Dolby Digital material so that you can still hear quiet parts even when listening at low volume levels—ideal for watching movies late at night when you don't want to disturb anyone.

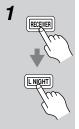

# Press the [RECEIVER] REMOTE MODE button, and then press the [L NIGHT] button repeatedly to select:

Off: Late Night function off.

Low: Small reduction in dynamic

range.

**High:** Big reduction in dynamic

range.


#### Notes:

- The effect of the Late Night function depends on the Dolby Digital material that you are playing, and with some material there will be little or no effect.
- The Late Night function is set to Off when the AV receiver is set to Standby.

#### **Using the CinemaFILTER**

With the CinemaFILTER, you can soften overly bright movie soundtracks, which are typically mixed for reproduction in a movie theater.

CinemaFILTER can be used with the following listening modes: Dolby Digital, Dolby Digital EX, PLII/IIx Movie, DTS, DTS-ES, DTS Neo:6 Cinema, DTS 96/24, Dolby/DTS+PLIIx Movie, Dolby/DTS+Neo:6, and DTS+Dolby EX.

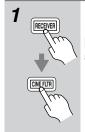

Press the [RECEIVER] REMOTE MODE button, and then press the [CINE FLTR] button repeatedly to select:

On: CinemaFILTER on.Off: CinemaFILTER off.

#### **Using the Audio Adjust Settings**

The Audio Adjust settings only affect speaker set A.



Press the [RECEIVER] button followed by the [SETUP] button.



Use the Up and Down [▲]/[▼] buttons to select "Audio Adjust," and then press [ENTER].

Audio Adjust



Use the Left and Right [◄]/[▶] buttons to change the setting. Press the Down [▼] button to select the next setting.

Repeat this step for the other settings.

#### **Using the Listening Modes—**Continued



### Press the [SETUP] button.

Setup closes.

The Audio Adjust settings are explained below.

#### Input Channel Settings

#### **■** Multiplex

This setting determines which channel is output from a stereo multiplex source. Use it to select audio channels or languages with multiplex sources, multilingual TV broadcasts, and so on.

Main: The main channel is output (default).

**Sub:** The sub channel is output.

M/S: Both the main and sub channels are output.

#### ■ Mono Input Ch

This setting determines which channel is output when the Mono listening mode is used with a stereo source.

**L+R:** Both the left and right channels are output (default).

L: Only the left channel is output.

**R:** Only the right channel is output.

#### PLII and PLIIx Music Mode Settings

These settings apply to only 2-channel (stereo) sources.

#### ■ Panorama

With this setting, you can broaden the width of the front stereo image when using the Pro Logic II Music or Pro Logic IIx Music listening mode.

On: Panorama function on.

Off: Panorama function off (default).

#### ■ Dimension

With this setting, you can move the sound field forward or backward when using the Pro Logic II Music or Pro Logic IIx Music listening mode. The default value is 0. It can be adjusted from –3 to +3. Higher settings move the sound field forward. Lower settings move it backward.

If the stereo image feels too wide, or there's too much surround sound, move the sound field forward to improve the balance. Conversely, if the stereo image feels like it's in mono, or there's not enough surround sound, move it backward.

#### ■ Center Width

With this setting, you can adjust the width of the sound from the center speaker when using the Pro Logic II Music or Pro Logic IIx Music listening mode. Normally, the center channel sound is output by only the center speaker. (If you're not using a center speaker, the center channel sound will be distributed to the front left and right speakers to create a phantom center). This setting adjusts the front left, right, and center mix, allowing you to adjust the weight of the center channel sound. It can be adjusted from 0 to 7 (default value is 3).

#### DTS Neo:6 Music Mode Setting

#### ■ Center Image

The DTS Neo:6 Music listening mode creates 6-channel surround sound from 2-channel (stereo) sources. With this setting, you can specify by how much the front left and right channel output is attenuated in order to create the center channel. It can be adjusted from 0 to 5 (default value is 2). This setting has no effect if no center speaker is connected.

When set to 0, the front left and right channel output is attenuated by half (-6 dB), giving the impression that the sound is located centrally. This setting works well when the listening position is considerably off center. When set to 5, the front left and right channels are not attenuated, maintaining the original stereo balance.

#### Dolby Digital EX Input Signal Setting

#### ■ Dolby EX

This setting determines how Dolby Digital EX signals are handled. This setting is unavailable if no surround back speakers are connected or speaker set B is on.


**Auto:** If the source signal contains a Dolby Digital EX flag, the Dolby Digital EX listening mode is used (default).

**Manual:** You can select Pro Logic IIx Movie, Pro Logic IIx Music, Dolby Digital, or Dolby Digital EX.

#### T-D Listening Angle Setting

#### ■ Lstn Angl (Listening Angle)

With this setting, you can specify the angle of the front left and right speakers relative to the listening position. Processing for the Theater-Dimensional listening mode is based on this setting. Ideally, the front left and right speakers should be equidistant from the listening position and at an angle close to one of the three available settings.

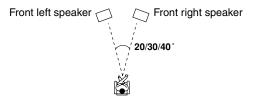

**Narrow:** Select if the listening angle is 20 degrees. **Middle:** Select if the listening angle is 30 degrees

(default).

**Wide:** Select if the listening angle is 40 degrees.

#### Multichannel Subwoofer Setting

#### **■ SW Sens**

On some DVD players, the signal from the multichannel subwoofer output is 15 dB higher than normal. You can change the subwoofer sensitivity to match your DVD player. Note that this setting only affects signals connected to the SUBWOOFER input jack of the multichannel DVD input.

You can select 0 dB (default), +5 dB, +10 dB, or +15 dB. If you find that your subwoofer is too loud, try the +10 dB or +15 dB setting.

## Recording

This section explains how to record the selected input source to a component with recording capability, and how to record audio and video from different sources.

#### **Recording the Input Source**

You can only record to a component that's connected to the TAPE OUT or VCR/DVR OUT jacks.

See pages 24–35 for information on connecting your AV components.



# Use the input selector buttons to select the component that you want to record.

Audio signals from the selected input source are output by the TAPE OUT and VCR/DVR OUT jacks.

You can listen to the source while recording. The AV receiver's VOL-UME control has no effect on recording.

On your recorder, start recording.Start playback on the source

component.


Notes:


- You cannot record from a component that's connected to a digital input. Only analog inputs can be recorded.
- The surround sound effects provided by the listening modes cannot be recorded.
- You cannot record from a component that's connected to the multichannel DVD input.
- If you select another input source while recording, that input source will be recorded instead.
- While the Pure Audio listening mode is selected, the VCR/DVR OUT V and S jacks don't output video signals, so select another mode when recording.

## Recording Audio and Video from Separate Sources

You can overdub audio onto your video recordings by simultaneously recording audio and video from two separate sources. This is possible because only the audio source is switched when an audio-only input source, such as TAPE, TUNER, or CD, is selected, the video source remains the same.

In the following example, audio from the CD player connected to the CD IN jacks, and video from the camcorder connected to the AUX INPUT VIDEO jack are recorded by the VCR connected to the VCR/DVR OUT jacks.

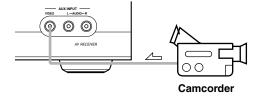

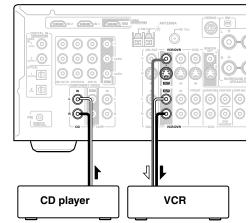

- 1. Prepare the camcorder and CD player for playback.
- 2. Prepare the VCR for recording.
- 3. Press the [AUX] input selector button.
- 4. Press the [CD] input selector button. This selects the CD player as the audio source, but leaves the camcorder as the video source.
- Start recording on the VCR, then start playback on the camcorder and CD player.

Video from the camcorder and audio from the CD player are recorded by the VCR.

## **Advanced Setup**

#### **Advanced Speaker Settings**

This section explains how to check the speaker settings and how to set them manually, which is useful if you change a speaker after performing the automatic speaker setup.

Some speaker settings are set automatically by the Automatic Speaker Setup function (see page 37).

#### Speaker Configuration

These settings are set automatically by the Automatic Speaker Setup function (see page 37).

This section explains how to specify which speakers are connected and their sizes.

For speakers with a cone diameter larger than 6-1/2 inches (16 cm), specify *Large* (full band). For those with a smaller diameter, specify *Small* (default crossover 100 Hz).




The crossover frequency can be changed on page 57.



Press the [RECEIVER] button followed by the [SETUP] button.



Use the Up and Down [▲]/[▼] buttons to select "Sp Config," and then press the [ENTER] button.

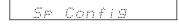



While the Subwoofer setting is selected, use the Left and Right [◄]/[▶] buttons to select **Yes** or **No**.

**Yes:** Select if a subwoofer is connected

No: Select if no subwoofer is con-

nected.

4 rpm


Use the Down [▼] button to select "Front," and then use the Left and Right [◄]/[▶] buttons to select **Small** or **Large**.

**Small:** Select if the front speakers are

**Large:** Select if the front speakers are large.

#### Note:

• If the Subwoofer setting in step 3 is set to No, this setting is fixed at Large and does not appear.

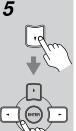

Use the Down [▼] button to select "Center," and then use the Left and Right [◄]/[▶] buttons to select Small, Large, or None.

**Small:** Select if the center speaker is small.

Large: Select if the center speaker is

large.

None: Select if no center speaker is

connected.

#### Note:

 If the Front setting in step 4 is set to Small, the Large option cannot be selected.



Use the Down [▼] button to select "Surround," and then use the Left and Right [◄]/[▶] buttons to select Small, Large, or None.

Small: Select if the surround speak-

ers are small.

**Large:** Select if the surround speakers are large.

ers are rarge.

**None:** Select if no surround speakers are connected.

#### Note:

 If the Front setting in step 4 is set to Small, the Large option cannot be selected.



Use the Down [▼] button to select "Surr Back," and use the Left and Right [◄]/[▶] buttons to select Small, Large, or None.

**Small:** Select if the surround back speakers are small.

Large: Select if the surround back

speakers are large.

None: Select if no surround back

speakers are connected.

#### Notes:

- If the Surround setting in step 6 is set to None, this setting does not appear.
- If the Surround setting in step 6 is set to Small, the Large option cannot be selected.



Use the Down [▼] button to select "Surr Back Ch," and use the Left and Right [◄]/[▶] buttons to select **2ch** or **1ch**.

**2ch:** Select if two (left and right) surround back speakers are connected.

**1ch:** Select if one surround back speaker is connected.

#### Note:

• If the Surround and Surr Back settings in steps 6 and 7 are set to None, this setting does not appear.

Continue with step 9 of the "Crossover Frequency" setting.

#### Note:

 These settings cannot be changed while headphones are connected, speaker set B is on, or the multichannel DVD input is being used.

#### Crossover Frequency

This setting is set automatically by the Automatic Speaker Setup function (see page 37).

This setting only applies to the speakers that you specified as *Small* in the "Speaker Configuration" on page 56. To get the best bass performance from your speaker system, you need to set the crossover frequency according to the size and frequency response of your speakers



Use the Down [▼] button to select "Crossover," and then use the Left and Right [◄]/[▶] buttons to select a crossover frequency.

Use the diameter of the smallest speaker in your system when choosing the crossover frequency.

Speaker cone diameter	Crossover frequency
Over 8 in. (20 cm)	40/50/60Hz*
6-1/2 to 8 in. (16–20 cm)	80Hz
5-1/4 to 6-1/2 in. (13–16 cm)	100Hz (default)
3-1/2 to 5-1/4 in. (9–13 cm)	120Hz
Under 3-1/2 in. (9 cm)	150/200Hz*

\*Choose the setting suitable for the speaker.

Continue with step 10 of the "Double Bass" setting on the next page.


#### **Notes:**

- For a more accurate setting, look up the frequency response in the manuals supplied with your speakers and set accordingly.
- Choose a higher crossover frequency if you want more sound from your subwoofer.
- These settings cannot be changed while headphones are connected, speaker set B is on, or the multichannel DVD input is being used.

#### Double Bass

This setting is **not** set automatically by the Automatic Speaker Setup function (see page 37).

With the Double Bass function, you can boost bass output by feeding bass sounds from the front left and right channels to the subwoofer. This function can be set only if the Subwoofer setting (step 3) is set to Yes, and the Front setting (step 4) is set to Large in the Speaker Configuration on page 56.

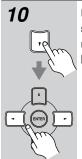

Use the Down [▼] button to select "Double Bass," and then use the Left and Right [◄]/[▶] buttons to select:

On: Double Bass function on.

Bass from the front left and right channels is also fed to the subwoofer (default).

**Off:** Double Bass function off.



Press the [SETUP] button.

Setup closes.

#### Note:

 These settings cannot be changed while headphones are connected, speaker set B is on, or the multichannel DVD input is being used.

#### Speaker Distance

These settings are set automatically by the Automatic Speaker Setup function (see page 37).


With these settings, you can specify the distance from each speaker to the listening position.

1

Measure and make a note of the distance from each speaker to the listening position.



Press the [RECEIVER] REMOTE MODE button, followed by the [SETUP] button.

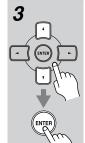

Use the Up and Down [▲]/[▼] buttons to select "Sp Distance," and then press [ENTER].

Se Distance




While "Unit" is displayed, use the Left and Right [◄]/[▶] buttons to select "feet" or "meters".

**feet:** Distances can be set in feet. Range: 1 to 30 feet in 1-foot

steps.

meters: Distances can be set in

meters. Range: 0.3 to 9 meters in 0.3-meter steps.

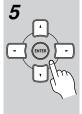

Use the Down [▼] button to select "Front," and use the Left and Right [◄]/[▶] buttons to specify the distance for the front speakers, then press the Down [▼] button to select the next speaker.

**6** Repeat step 5 for all speakers.

Speakers that you set to No or None in the Speaker Configuration (page 56) cannot be selected.



#### Press the [SETUP] button.

Setup closes.

#### **Notes:**

- The Center and Subwoofer distances can be set up to 5 ft. (1.5 m) more or less than the Front distance. For example, if the Front distance is set to 20 ft. (6 m), the Center and Subwoofer distances can be set between 15 and 25 ft. (4.5 and 7.5 m).
- The Surround and Surround Back distances can be set up to 5 ft. (1.5 m) more or 15 ft. (4.5 m) less than the Front distance. For example, if the Front distance is set to 20 ft. (6 m), the SurrRight, Surr Left, Surr Back R, and Surr Back L distances can be set between 5 and 25 ft. (1.5 and 7.5 m).
- The speaker distance cannot be adjusted while a pair of headphones is connected, speaker set B is on, or the multichannel DVD input is being used.


#### Speaker Levels

These settings are set automatically by the Automatic Speaker Setup function (see page 37).

You can set the volume level of each speaker so that all speakers can be heard equally at the listening position.




Press the [RECEIVER] REMOTE MODE button, followed by the [SETUP] button.

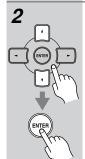

Use the Up and Down [▲]/[▼] buttons to select "Level Cal," and then press [ENTER].

A pink noise test tone is output by the front left speaker.

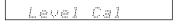

## 3

# Turn up the volume so that you can hear the test tone sufficiently.

As each speaker outputs the test tone, its name appears on the display.

Left : OdB



Use the Left and Right [◀]/[▶] buttons to adjust the speaker level, and use the Down [▼] button to select the next speaker.

The levels can be adjusted from -12 to +12 dB in 1 dB steps (-15 to +12 dB for the subwoofer).

5

#### Repeat step 4 so that the level of the test tone coming from each speaker is the same.

Speakers that you set to No or None in the Speaker Configuration (page 56) do not output the test tone.

6

#### Press the [SETUP] button.

Setup closes.



Don't forget to turn down the volume if you turned it up while setting the levels.

#### **Notes:**

- A quick way to adjust the speaker levels is to press the remote controller's [TEST TONE] button to turn on the test tone, use the [LEVEL-] and [LEVEL+] buttons to adjust the levels, and use the [CH SEL] button to select the speakers.
- The speaker levels cannot be adjusted while a pair of headphones is connected, speaker set B is on, or the AV receiver is muted.


#### Equalizer Settings

These settings are set automatically by the Automatic Speaker Setup function (see page 37).

Here you can adjust the tone of individual speakers. To set the volume of individual speakers, see page 59.




Press the [RECEIVER] REMOTE MODE button, followed by the [SETUP] button.

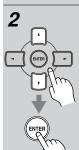

Use the Up and Down [▲]/[▼] buttons to select "Equalizer," and then press [ENTER].

Equalizer

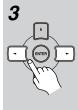

#### Use the Left and Right [◄]/[▶] buttons to select:


Off: Tone off, response flat.

Audyssey: The tone for each speaker is set automatically by the Automatic Speaker Setup function. Be sure to select this setting after having performed the Automatic Speaker Setup.


Manual: You can adjust the equal-

izer for each speaker manually.

If you selected Manual, continue with this procedure. If you selected Off or Audyssey, go to step 7.

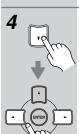

Press the Down [▼] button, and then use the Left and Right [◀]/[▶] buttons to select a speaker.

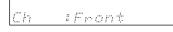



Use the Up and Down [▲]/[▼] buttons to select a frequency. Use the Left and Right [◀]/[▶] buttons to adjust the level at that frequency.

*[...* 800Hz #+3dB

The volume at each frequency can be adjusted from -6 to +6 dB in 1 dB steps.

**Tip:** Low frequencies (e.g., 80 Hz) affect bass sounds; high frequencies (e.g., 8000 Hz) affect treble sounds.



Use the Up [▲] button to select "Ch," and then use the Left and Right [◄]/[▶] buttons to select another speaker.

Repeat steps 5 and 6 for each speaker. Speakers that you've set to No or None in the Speaker Configuration (page 56) cannot be selected.



#### Press the [SETUP] button.

The setup menu closes.

#### Notes:

- · The front, center, surround, and surround back speakers can be adjusted at 80 Hz, 250 Hz, 800 Hz, 2500 Hz, and 8000 Hz. The subwoofer can be adjusted at 40 Hz, 80 Hz, and 160 Hz.
- While the Direct or Pure Audio listening mode is selected, the equalizer settings have no effect.
- This procedure can also be performed on the AV receiver by using its [SETUP], [ENTER], and arrow buttons.


#### **Digital Input Signal Formats**

The following table shows the display indicator for each digital signal format.

Format	Display
Dolby Digital	<b>00</b> D
DTS	dts
PCM	PCM

Normally, the AV receiver detects the signal format automatically. However, if you experience either of the following issues when playing PCM or DTS material, you can specify the signal format as either PCM or DTS:

- If the beginnings of tracks from a PCM source are cut off, try the PCM setting.
- If noise is produced when fast forwarding or reversing a DTS CD, try the DTS setting.

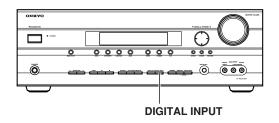



Press and hold the AV receiver's [DIGITAL INPUT] button for about 3 seconds.



While "Auto" is displayed (about 3 seconds), press the [DIGITAL INPUT] button repeatedly to select: PCM, DTS, or Auto.


PCM: Only PCM format input signals will be heard. If the input signal is not PCM, the PCM indicator will flash and there will be no sound.

DTS: Only DTS format input signals will be heard. If the input signal is not DTS, the DTS indicator will flash and there will be no sound.

Auto (default): The format is detected automatically. If no digital input signal is present, the corresponding analog input is used instead.

#### **Correcting Sound and Picture Sync**

When using progressive scanning on your DVD player, you may find that the picture and sound are out of sync. With this setting, you can correct this by delaying the audio signals. You can set it from 0 to 100 milliseconds (ms) in 20 millisecond steps.

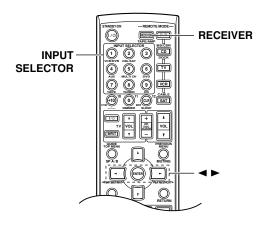



Press the [RECEIVER] REMOTE MODE button.



Press and hold, for more than 4 seconds, the input selector button for the input source that you want to correct.

This can be the [DVD], [VCR/DVR], [CBL/SAT], or [AUX] input source.



Use the Left and Right [◄]/[►] buttons to adjust the delay from 0 to 100 milliseconds in 20 millisecond steps.



#### Note:


This setting is not available when the Pure Audio listening mode is used, or the Direct listening mode is used with an analog input signal.

## **Controlling Other Components**

You can use the AV receiver's remote controller (RC-681M) to control your other AV components, including those made by other manufacturers. This section explains how to enter the necessary remote control code for the component that you want to control (e.g., DVD player, TV, or VCR).

#### **Entering Remote Control Codes**

To control another component, you must first enter the appropriate remote control code to a REMOTE MODE button. You'll need to enter a code for each component that you want to control.

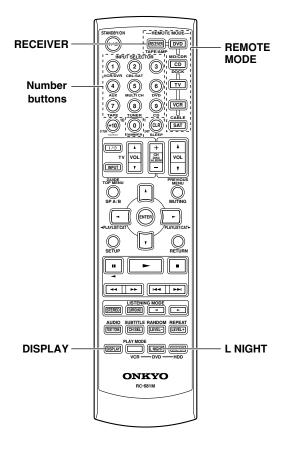

1 Look up the appropriate remote control code in the separate Remote Control Codes list. The codes are organized by category (e.g., DVD player, TV, etc.). While holding down the REMOTE 2 MODE button that you want to -REMOTE MODEset, press the [DISPLAY] button DVD for 3 seconds. The REMOTE MODE button lights up. CD VCR SAT 3 Within 30 seconds, use the number buttons to enter the 4-digit remote control code. The REMOTE MODE button flashes twice. Press the REMOTE MODE button 4 again to select the remote controller mode, point the remote controller at the component, and check the operation. If the remote controller doesn't work as

#### **Notes:**

• A remote control code cannot be entered for the [RECEIVER] REMOTE MODE button.

one that works best.

• The remote control codes provided are correct at the time of printing, but are subject to change.

expected, and several remote codes are listed, try each one in turn and use the

## Remote Control Codes for Onkyo Components Connected via RI

Onkyo components that are connected via **RI** are controlled by pointing the remote controller at the AV receiver, not the component. This allows you to control components that are out of view, in a rack, for example.

Make sure the Onkyo component is connected with an R₁ cable and an analog audio cable (RCA).

See page 35 for details.

Enter the appropriate remote control code for the [DVD] or [CD] REMOTE MODE button.

[DVD] REMOTE MODE button

**1612:** Onkyo DVD player with **□**I

[CD/MD/CDR/DOCK] REMOTE MODE button

1327: Onkyo CD player with RI

1808: Onkyo MD recorder with RI

1322: Onkyo CD recorder with RI

1993: Onkyo RI Dock with RI

See the previous page for how to enter remote control codes.

Press the [DVD] or [CD] REMOTE MODE button, point the remote controller at the AV receiver, and operate the component.

If you want to control an Onkyo component by pointing the remote controller directly at it, or you want to control an Onkyo component that's not connected via **RI**, use the following remote control codes:

• [DVD] REMOTE MODE button

**0627:** Onkyo DVD player without **□** (default)

• [CD/MD/CDR/DOCK] REMOTE MODE button

**1817:** Onkyo CD player without RI (default)

0868: Onkyo MD recorder without RI

1323: Onkyo CD recorder without RI


2990: Onkyo RI Dock without RI

#### Note:

If you connect an RI-capable Onkyo MD recorder, CD recorder, or RI Dock component to the TAPE IN/OUT or CBL/SAT jacks, for remote operation to work properly, you must set the Input Display to MD, CDR, or DOCK (see page 41).


#### **Resetting REMOTE MODE Buttons**

You can reset a REMOTE MODE button to its default remote control code.

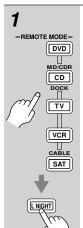

While holding down the REMOTE MODE button that you want to reset, press the [L NIGHT] button for 3 seconds.

The REMOTE MODE button lights up.

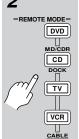

SAT


## Press the REMOTE MODE button again.

The REMOTE MODE button flashes twice, indicating that it's been reset.

The [DVD] and [CD] REMOTE MODE buttons are preprogrammed with remote control codes for controlling Onkyo DVD players and CD players respectively. When these buttons are reset, the preprogrammed code is restored.

#### **Resetting the Remote Controller**

You can reset the remote controller to its default settings.

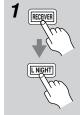

While holding down the [RECEIVER] REMOTE MODE button, press the [L NIGHT] button for 3 seconds.

The [RECEIVER] button lights up.




## Press the [RECEIVER] REMOTE MODE button again.

The [RECEIVER] button flashes twice, indicating that it's been reset.

### **Controlling Other Components**—Continued


To control another component, point the remote controller at it and use the buttons explained below. (You must select the appropriate remote control mode first.) With some AV components, certain buttons may not work as expected, and some may not work at all.

#### ■ Controlling a TV

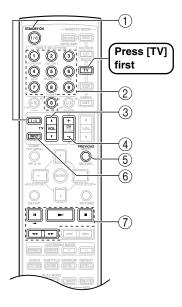


- ① **[STANDBY/ON], TV** [①/|]\* Sets the TV to On or Standby.
- 2 Number buttons
  Enter numbers.
- ③ **TV VOL** [▲]/[▼]\*
  Adjusts the TV's volume.
- (4) [CH +/-]
  Selects channels on the TV.
- (5) [PREVIOUS]
  Selects the previous channel.
- (6) [TV INPUT]\*
  Selects the TV's VCR input.
- \* Buttons marked with an asterisk
  (\*) are exclusively for controlling a TV and can be used at anytime regardless of the current
  remote controller mode.

#### ■ Controlling a VCR

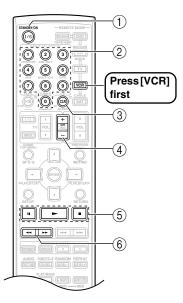

- ① **[STANDBY/ON]**Sets the VCR to On or Standby.
- 2 Number buttons Select channels.
- ③ [CLR] Cancels functions.
- (4) [CH +/-] Selects channels on the VCR.
- ⑤ [[1], [▶], [■]Pause, Play, Stop.
- ⑥ [◄], [►►]Rewind and Fast forward.

#### ■ Controlling a Satellite or Cable Receiver

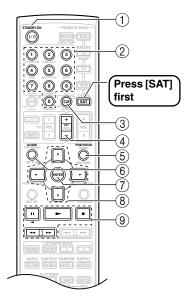

1 [STANDBY/ON]


Sets the satellite/cable receiver to On or Standby.

- 2 Number buttons
  Enter numbers.
- ③ [CLR] Cancels functions.
- (4) [CH +/-] Selects satellite/cable channels.
- (5) [PREVIOUS] Selects the previous channel.
- 6 **[GUIDE]**Displays the program guide.
- (7) **[ENTER]**Confirms the selection.
- [▲]/[▼]/[◄]/[►]
   Selects menu items.
- 9 [11], [ $\triangleright$ ], [ $\blacksquare$ ], [ $\prec$ ], [ $\triangleright$ ] Operates the VCR.

## **Troubleshooting**

If you have any trouble using the AV receiver, look for a solution in this section.

If you can't resolve the issue yourself, try resetting the AV receiver before contacting your Onkyo dealer. To reset the AV receiver to its factory defaults, turn it on and, while holding down the [VCR/DVR] button, press the [STANDBY/ON] button. "Clear" will appear on the display and the AV receiver will enter Standby mode.

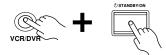

Note that resetting the AV receiver will delete your radio presets and custom settings.

#### **Power**

#### Can't turn on the AV receiver

- Make sure that the power cord is plugged into the wall outlet properly.
- Unplug the power cord from the wall outlet, wait 5 seconds or more, then plug it in again.

## The AV receiver turns off as soon as it's turned on

• The amp protection circuit has been activated. Remove the power cord from the wall outlet immediately. Disconnect all speaker cables and input sources, and leave the AV receiver with its power cord disconnected for 1 hour. After that, reconnect the power cord and set the volume to maximum. If the AV receiver stays on, set the volume to minimum, disconnect the power cord, and reconnect your speakers and input sources. If the AV receiver turns off when you set the volume to maximum, disconnect the power cord, and contact your Onkyo dealer.

#### **Audio**

#### There's no sound or it's very quiet

- Make sure that the digital input source is selected properly (page 41). Press the [DIGITAL INPUT] button repeatedly.
- Make sure the speaker set A or B is on (page 5).
- Make sure that all audio connecting plugs are pushed in all the way (page 24).
- Make sure that the polarity of the speaker cables is correct, and that the bare wire is in contact with metal part of each speaker terminal (page 20)
- Make sure that the speaker cables are not shorting.
- Check the volume. It can be set to MIN, 1 through 79, or MAX (page 42). The AV receiver is designed for home theater enjoyment and has a wide volume range for precise adjustment.

- If the MUTING indicator is shown on the display, press the remote controller's [MUTING] button to unmute the AV receiver (page 46).
- While a pair of headphones is connected, no sound is output by the speakers (page 47).
- Check the digital audio output settings on the connected device. On some games consoles, such as those that can play DVDs, the default setting is off.
- With some DVD-Video discs, you need to select an audio format from a menu.
- If your turntable doesn't have a phono preamp built-in, you must connect one between it and the AV receiver.
   If your turntable uses an MC cartridge, you must connect an MC head amp, or an MC transformer and a phono preamp.
- Make sure that the speaker setup microphone is not still connected.
- Specify the speaker distances and adjust the individual speaker levels (pages 58, 59).
- The input signal format is set to PCM or DTS. Set it to Auto (page 61).
- Audio from a DVD player connected via HDMI is not output by the speakers connected to the AV receiver.
   To listen to this audio through the speakers, in addition to an HDMI connection, you'll also need to make a separate analog or digital audio connection (page 29).
- If your DVD player is connected via HDMI and your TV produces no sound, check your DVD player's audio output settings, and be sure to select an audio format that's supported by your TV.

#### Only the front speakers produce sound

- When the Stereo or Mono listening mode is selected, only the front speakers and subwoofer produce sound.
- Make sure the speakers are configured correctly (page 56).

#### Only the center speaker produces sound

- If you use the Pro Logic IIx Movie, Pro Logic IIx
   Music, or Pro Logic IIx Game listening mode with a
   mono source, such as an AM radio station or mono TV
   program, the sound is concentrated in the center
   speaker.
- Make sure the speakers are configured correctly (page 56).

#### The surround speakers produce no sound

- When the Stereo or Mono listening mode is selected, the surround speakers produce no sound (page 50).
- Depending on the source and current listening mode, not much sound may be produced by the surround speakers. Try selecting another listening mode.
- Make sure the speakers are configured correctly (page 56).

#### The center speaker produces no sound

- When the Stereo or Mono listening mode is selected, the center speaker produces no sound (page 50).
- Make sure the speakers are configured correctly (page 56).

#### The surround back speakers produce no sound

- While speaker set B is on, speaker set A is reduced to 5.1-channel playback and the surround back speakers produce no sound.
- The surround back speakers are not used with all listening modes. Select another listening mode
  (page 50).
- Not much sound may be produced by the surround back speakers with some sources.
- Make sure the speakers are configured correctly (page 56).

#### The subwoofer produces no sound

- The subwoofer outputs no sound while only speaker set B is on. Turn on speaker set A.
- When you play source material that contains no information in the LFE channel, the subwoofer produces no sound.
- Make sure the speakers are configured correctly (page 56).

#### Speaker set B produces no sound

 Speaker set B only outputs sources that are connected to an analog input. Make sure that the analog audio cables are connected properly.

#### There's no sound with a certain signal format

- Check the digital audio output setting on the connected device. On some games consoles, such as those that can play DVDs, the default setting is off.
- With some DVD-Video discs, you need to select an audio output format from a menu.

#### Can't get 6.1- or 7.1-channel playback

 While speaker set B is on, speaker set A is reduced to 5.1-channel playback.

#### The volume cannot be set to 79

 When the volume level of each speaker has been adjusted (pages 47, 59), the maximum possible volume may be reduced.

#### Noise can be heard

- Using cable ties to bundle audio cables with power cords, speaker cables, and so on may degrade the audio performance, so don't do it.
- An audio cable may be picking up interference. Try repositioning your cables.

#### The Late Night function doesn't work

• Make sure the source material is Dolby Digital (page 52).

#### The multichannel DVD input doesn't work

- Check the multichannel DVD input connections (page 28).
- To select the multichannel DVD input, press the [MULTI CH] input selector button.
- Check the audio output settings on your DVD player.

#### **About DTS signals**

- When playing DTS program material, using the pause, fast forward, or fast reverse function on your player may produce a short audible noise. This is not a malfunction.
- When DTS program material ends and the DTS bitstream stops, the AV receiver remains in DTS listening mode and the DTS indicator remains on. This is to prevent noise when you use the pause, fast forward, or fast reverse function on your player. If you switch your player from DTS to PCM, because the AV receiver does not switch formats immediately, you may not hear any sound, in which case you should stop your player for about 3 seconds, and then resume playback.
- With some CD players, you won't be able to playback DTS material properly even though your player is connected to a digital input on the AV receiver. This is usually because the DTS bitstream has been processed (e.g., output level, sampling rate, or frequency response changed) and the AV receiver doesn't recognize it as a genuine DTS signal. In such cases, you may hear noise.

#### Video

#### There's no picture

- Make sure that all video connecting plugs are pushed in all the way (page 24).
- Make sure that each video component is properly connected.
- The AV receiver does not convert between formats, so if a video source component is connected to a component video input, your TV must be connected to the component video output (page 25).
- If a video component is connected to an HDMI input, your TV must be connected to the HDMI OUT (page 29).
- On your TV, make sure that the video input to which the AV receiver is connected is selected.
- While the Pure Audio listening mode (not North American model) is selected, the video circuits are turned off and the AV receiver outputs no video signals.
- Reliable operation with an HDMI-to-DVI adapter is not guaranteed. In addition, video signals from a PC are not supported (page 29).

#### **Tuner**

# Reception is noisy, stereo FM reception suffers from hiss, or the FM STEREO indicator doesn't appear

- · Relocate your antenna.
- Move the AV receiver away from your TV or computer.
- Listen to the station in mono (page 44).
- When listening to an AM station, operating the remote controller may cause noise.
- · Passing cars and airplanes can cause interference.
- · Concrete walls weaken radio signals.
- If nothing improves the reception, install an outdoor antenna.

#### **Remote Controller**

#### The remote controller doesn't work

- Make sure that the batteries are installed with the correct polarity (page 13).
- Make sure that the remote controller is not too far away from the AV receiver, and that there's no obstruction between the remote controller and the AV receiver's remote control sensor (page 13).
- Make sure you've selected the correct remote controller mode (page 14).
- Make sure you've entered the correct remote control code (page 62).

#### Can't control other components

- Make sure you've selected the correct remote controller mode (page 14).
- If you've connected an RI-capable Onkyo MD recorder, CD recorder, or RI Dock to the TAPE IN/OUT jacks or CBL/SAT jacks, for the remote controller to work properly, you must set the Input Display to MD, CDR, or DOCK (page 41).
- The entered remote control code may not be correct. If more than one code is listed, try each one.
- With some AV components, certain buttons may not work as expected, and some may not work at all.
- To control an Onkyo component that's connected via
   RI, point the remote controller at the AV receiver. Be sure to enter the appropriate remote control code first (page 62).
- To control an Onkyo component that's not connected via n, or another manufacturer's component, point the remote controller at the component. Be sure to enter the appropriate remote control code first (page 62).

#### Recording

#### Can't record

- On your recorder, make sure the correct input is selected.
- To prevent signal loops and damage to the AV receiver, input signals are not fed through to outputs with the same name (e.g., TAPE IN to TAPE OUT, or VCR/DVR IN to VCR/DVR OUT).
- When the Pure Audio listening mode is selected, recording is not possible because no video signals are output. Select another listening mode.

#### **Others**

#### The sound changes when I connect my headphones

 When a pair of headphones is connected, the listening mode is set to Stereo, unless it's already set to Stereo, Mono, Direct, or Pure Audio (not North American model).

#### The display doesn't work

• The display is turned off when the Pure Audio (not North American model) listening mode is selected.

## How do I change the language of a multiplex source

• Use the "Multiplex" setting on the "Audio Adjust" menu to select Main or Sub (page 53).

#### The RI functions don't work

 To use RI, you must make an RI connection and an analog audio connection (RCA) between the component and AV receiver, even if they are connected digitally (page 35).

## During automatic speaker setup, measurement fails and the message "Noise Error!" appears

 This can be caused by a speaker malfunction. Make sure all of your speakers are working properly.

#### Troubleshooting—Continued

The AV receiver contains a microcomputer for signal processing and control functions. In very rare situations, severe interference, noise from an external source, or static electricity may cause it to lockup. In the unlikely event that this happens, unplug the power cord from the wall outlet, wait at least five seconds, and then plug it back in again.

Onkyo is not responsible for damages (such as CD rental fees) due to unsuccessful recordings caused by the unit's malfunction. Before you record important data, make sure that the material will be recorded correctly.

Before disconnecting the power cord from the wall outlet, set the AV receiver to Standby.

#### **Memory Backup**

The AV receiver uses a battery-less memory backup system in order to retain radio presets and other settings when it's unplugged or in the case of a power failure. Although no batteries are required, the AV receiver must be plugged into an AC outlet in order to charge the backup system. Once it has been charged, the AV receiver will retain the settings for several weeks, although this depends on the environment and will be shorter in humid climates.

## **Specifications**

#### **Amplifier Section**

Rated Output Power (FTC)

All channels: 110 watts minimum continuous power per channel, 8 ohm loads, 2 channels

driven at 1 kHz, with a maximum total harmonic distortion of 0.9%

Rated Output Power (IEC)

7 ch  $\times$  130 W at 8 ohms, 1 kHz, 1 ch

driven

Maximum Output Power (JEITA)

7 ch  $\times$  160 W at 8 ohms, 1 kHz, 1 ch

driven

Dynamic Power 210 W (3 $\Omega$ , 1 ch driven) 190 W (4 $\Omega$ , 1 ch driven)

130 W (8 $\Omega$ , 1 ch driven)

THD (Total Harmonic

Distortion) 0.08% (Power Rated) Damping Factor 60 (Front, 1kHz, 8Ω)

Input Sensitivity and

Impedance  $200 \text{ mV} / 47 \text{ k}\Omega \text{ (LINE)}$ 

Output Level and Impedance

 $\begin{array}{ll} \text{Impedance} & 200 \text{ mV} / 470 \ \Omega \ (\text{REC OUT}) \\ \text{Frequency Response} & 5 \ \text{Hz} - 100 \ \text{kHz} / + 1 \ \text{dB} - 3 \ \text{dB} \end{array}$ 

(Direct mode)

Tone Control  $\pm 10 \text{ dB}$ , 50 Hz (BASS)  $\pm 10 \text{ dB}$ , 20 kHz (TREBLE)

Signal to Noise Ratio 100 dB (LINE, IHF-A)

Speaker Impedance  $8\Omega$ – $16\Omega$ 

#### Video Section

Input Sensitivity/Output

Level and Impedance  $1 \text{ Vp-p}/75\Omega$  (Component and S-Video Y)

 $0.7 \text{ Vp-p}/75\Omega$  (Component PB/CB, PR/CR)  $0.28 \text{ Vp-p}/75\Omega$  (S-Video C)

1 Vp-p /75 $\Omega$  (Composite)

Component Video

Frequency Response 5 Hz – 50 MHz

#### **Tuner Section**

FM Tuning Frequency

Range

North American: 87.5 MHz– 107.9 MHz

Other: 87.5 MHz- 108.0 MHz

AM Tuning Frequency

Range

North American: 530 kHz–1710 kHz

Others: 522/530 kHz-1611/1710 kHz

Radio Presets 4

#### General

Power Supply North American: AC 120 V, 60 Hz

Others: AC 230 V, 50 Hz North American: 5.9 A

Others: 670 W

Standby Power

Power Consumption

Consumption North American: 0.1 W

Others: 0.5 W

Dimensions

 $(W \times H \times D)$  435  $\times$  150  $\times$  377 mm

 $17-1/8" \times 5-7/8" \times 14-13/16"$ 

Weight 10.2 kg 22.5 lbs.

■ Video Inputs

HDMI IN1, IN2

Component DVD, VCR/DVR, CBL/SAT S-Video DVD, VCR/DVR, CBL/SAT Composite DVD, VCR/DVR, CBL/SAT, AUX

#### **■ Video Outputs**

HDMI OUT Component OUT

S-Video MONITOR, VCR/DVR Composite MONITOR, VCR/DVR

**■ Audio Inputs** 

Digital Inputs Optical: 2

Coaxial: 2

Analog Inputs DVD (MULTICHANNEL), VCR/DVR,

CBL/SAT, AUX, TAPE, CD

Multichannel Inputs 7.1

■ Audio Outputs

Analog Outputs TAPE, VCR/DVR

Subwoofer Pre Outputs

Speaker Outputs SP A (L, R, C, SL, SR, SBL, SBR)

SP B (L, R)

Phones 1

Specifications and features are subject to change without notice.

#### 7.1ch Home Theater Speaker Package

#### ■ Powered Subwoofer (SKW-550)

Bass-reflex Type:

Input sensitivity/ impedance:

 $140 \text{ mV} / 20 \text{ k}\Omega$ 

Maximum output power: 230 W (Dynamic Power) Frequency response: 25 Hz-150 Hz

Cabinet capacity: 1.34 cubic feet (38 L) Dimensions

 $(W \times H \times D)$ :  $10-7/8" \times 20-1/16" \times 16-7/16"$ 

 $(276 \times 510 \times 417 \text{ mm})$ 25.1 lbs. (11.4 kg)

Weight: 10" (25 cm) Cone Woofer Drivers unit: Power supply: North American: AC 120 V, 60 Hz

Others: AC 230-240 V. 50 Hz

Power consumption: North American: 140 W

Others: 137 W

Auto Standby function Other:

■ Center Speaker (SKC-550C) 2 Way Bass-reflex Type:

Impedance:  $8 \Omega$ Maximum input power: 130 W

Output sound pressure

87.5 dB/W/m level: 60 Hz-50 kHz Frequency response: Crossover frequency: 4.5 kHz

0.28 cubic feet (8 L) Cabinet capacity:

Dimensions

 $17-1/16" \times 6-3/16" \times 7-5/8"$  $(W \times H \times D)$ :  $(433 \times 157 \times 194 \text{ mm})$ 

Weight: 8.58 lbs. (3.9 kg)

5" (12 cm) OMF Cone (Woofer)  $\times$  2 Drivers unit: 1" (2.5 cm) Balanced Dome (Tweeter)

Terminal: Spring type color coded

Wall bracket:

Grille: Detachable Other: Magnetic shielding

#### ■ Front Speaker (SKF-550F)

2 Way Bass-reflex Type:

Impedance:  $8 \Omega$ Maximum input power: 130 W

Output sound pressure

87.5 dB/W/m level: Frequency response: 60 Hz-50 kHz Crossover frequency: 4.5 kHz

0.28 cubic feet (8 L) Cabinet capacity:

Dimensions

Weight:

 $(W \times H \times D)$ :  $6-3/16" \times 17-1/16" \times 7-5/8"$ 

 $(157 \times 433 \times 194 \text{ mm})$ 8.58 lbs. (3.9 kg)

Drivers unit: 5" (12 cm) OMF Cone (Woofer)  $\times$  2

1" (2.5 cm) Balanced Dome (Tweeter)

Terminal: Spring type color coded

Wall bracket: Grille: Detachable Other: Magnetic shielding

#### ■ Surround Speaker (SKM-550S/SKB-550)

Full-range closed box Type:

Impedance:  $8 \Omega$ Maximum input power: 130 W

Output sound pressure

level: 82 dB/W/m

Frequency response: 160 Hz-20 kHz 0.057 cubic feet (1.6 L) Cabinet capacity:

Dimensions

 $6-1/8" \times 10-1/2" \times 3-7/8"$  $(W \times H \times D)$ :

 $(155 \times 266 \times 98 \text{ mm})$ Weight: 2.86 lbs. (1.3 kg) Drivers unit: 3-1/4" (8 cm) Cone Terminal: Spring type color coded

Wall bracket:

Grille: Fixed

Specifications and appearance are subject to change without prior notice.

## Memo

#### **ONKYO CORPORATION**

Sales & Product Planning Div. : 2-1, Nisshin-cho, Neyagawa-shi, OSAKA 572-8540, JAPAN Tel: 072-831-8023 Fax: 072-831-8124

#### **ONKYO U.S.A. CORPORATION**

18 Park Way, Upper Saddle River, N.J. 07458, U.S.A. Tel: 201-785-2600 Fax: 201-785-2650 http://www.us.onkyo.com/

#### **ONKYO EUROPE ELECTRONICS GmbH**

Liegnitzerstrasse 6, 82194 Groebenzell, GERMANY
Tel: +49-8142-4401-0 Fax: +49-8142-4401-555 http://www.eu.onkyo.com/

#### **ONKYO EUROPE UK Office**

Suite 1, Gregories Court, Gregories Road, Beaconsfield, Buckinghamshire, HP9 1HQ UNITED KINGDOM Tel: +44-(0)1494-681515 Fax: +44(0)-1494-680452

#### **ONKYO CHINA LIMITED**

Unit 1&12, 9/F, Ever Gain PlazaTower 1, 88, Container Port Road, Kwai Chung, N.T., HONG KONG Tel: 852-2429-3118 Fax: 852-2428-9039 http://www.ch.onkyo.com/



10702-1

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com