



# OWNERS MANUAL



***VTM™ 60***  
***VTM™ 120***

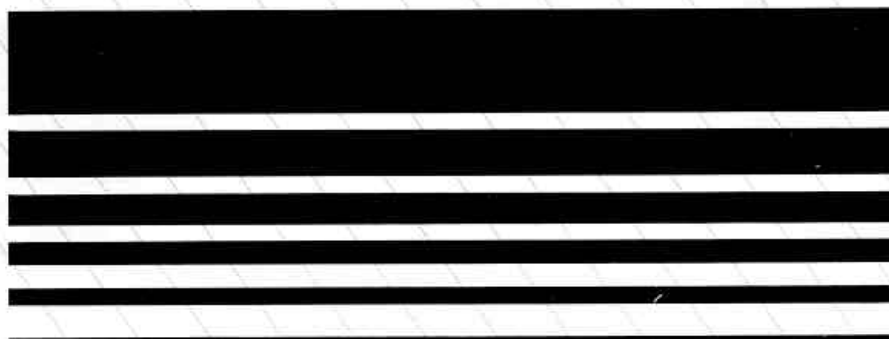

WARNING: TO PREVENT ELECTRICAL SHOCK OR FIRE HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. BEFORE USING THIS APPLIANCE, READ THE OPERATING GUIDE FOR FURTHER WARNINGS.

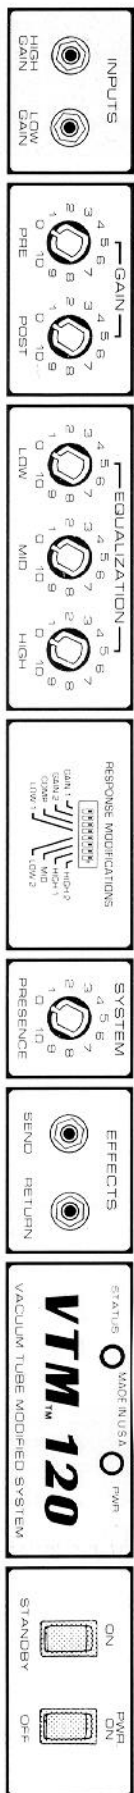

## FRONT PANEL

### HIGH GAIN INPUT (1)

Used for most electric guitars. It is 6 dB louder than the Low Gain input.

### LOW GAIN INPUT (2)

Provided for instruments that have extremely high outputs, which can result in overdriving (distorting) the High Gain input. If both inputs are used simultaneously, the output levels are the same (both are Low Gain).

### PRE GAIN (3)

Controls the input volume level of the amplifier.

### POST GAIN (4)

Controls the overall volume level of the amplifier. The final level adjustment should be made after the desired sound has been achieved.

### LOW, MID & HIGH EQ (5)

Passive tone controls that regulate the low, mid and high frequencies respectively.

### RESPONSE MODIFICATIONS (6)

#### ALL SWITCHES IN "OFF" POSITION

This position yields a vintage "British-style" tube amp response which can be somewhat distorted (depending on Pre/Post Gain adjustment), but it is particularly nice for slightly distorted, punchy, yet distinct guitar sounds.

#### GAIN #1

Activating this switch adds an additional stage of tube gain and increases the VTM's capacity to overload at low volumes. This additional gain increases the harmonic content of the sound and is an excellent choice for the guitarist looking for a crisp sound with an intermediate amount of distortion which falls between "vintage" and "full-tilt crunch".

#### GAIN #2

Activating this switch opens the extra tube gain stage all the way to its voltage limits, and, as that statement indicates, maximum all-tube preamp distortion is obtained. This position yields the sound which lucky owners of custom hot-rodged tube amps have had, but owners of stock, out-of-the-box amps have previously heard only on hit records! Tremendous sustain and controllable harmonics at a level many players think impossible are immediately available. Excellent for today's hottest metal stylization.

#### COMP

This switch activates a carefully integrated compression circuit. (This is one of the major "secrets" of the elite amp modifiers.) This circuit adds a tremendous amount of "smoothness" to the sound and further enhances sustain, without sacrificing bite or crunch. This circuit is the key to an incredibly liquid, warm tone that still screams. Full power chords ring clear and fat, single notes sing, and it seems the player only need think "feedback" and soaring harmonics cut the air like a hail of bullets.

#### LOW 1


This circuit, like the remaining four switched circuits, begins the VTM's ability to contour the overall amp EQ. The Low 1 switch adds a subtle amount of additional low end. It is strictly up to the individual preferences of the user as to the "correct" amount of bottom end that an amp of this type should have. However, it is to some degree dependent upon the guitar and speaker enclosure used. Properly used, this increased bottom can add punch and fullness to the sound. It must be repeated that this is not a "tone switch" in the normal sense of the word, but rather a true "component swap" which is accomplished via the switch.

#### LOW 2

This circuit, like Low 1, adds additional low end but in a different place than Low 1. (A third low-end voicing is obtained by activating both Low 1 and Low 2.) Again, personal preference will dictate the "proper" low voicing. Please note that even with maximum low end (Low 1 and 2 on), muddiness has been scrupulously avoided.

#### MID

This circuit noticeably alters the critical mid-range voicing of the VTM by adding a pronounced mid peak centered in the "throaty" area. The two mid voicings available from the VTM (Mid On/Off) offer the two major variations most often heard in contemporary music. Mid On is somewhat more "punchy" and "percussive". Mid Off is somewhat more "cutting" and "crisp".

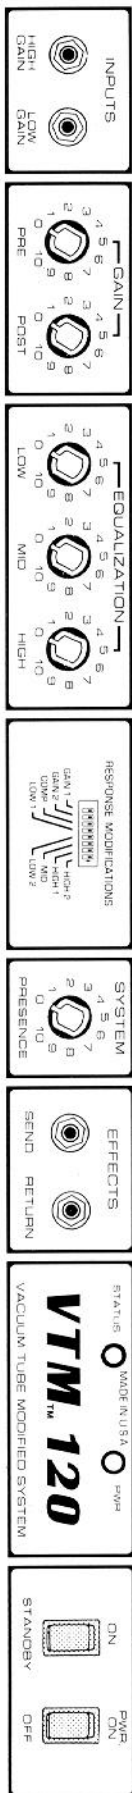

### HI 1

This circuit alters the high voicing of the VTM, and like all of the EQ "mods", is a matter of personal preference as to which high EQ is "correct". However, it is somewhat dependent upon the guitar and speaker enclosure used. The Hi 1 sounds like it adds "more" highs, but it actually works by slightly lowering the centering frequency of the active Presence control. This lowers the Presence control from the "extreme overtones" to the more typical range associated with highs and results in more "apparent highs".

### HI 2

This control (when used in conjunction with Hi 1) further alters the high-end voicing of the VTM. The proper use of the two Hi controls is dependent upon many factors; however, the added "apparent highs" obtained by activating Hi 1 and Hi 2 are particularly useful in getting a bright sound out of high-output humbucking pickups.

#### PRESENCE (7)

An active tone control that boosts the extreme high frequencies by 6 dB.

#### EFFECTS OUT (8)

Output for supplying signals to external effects or signal processing equipment.

#### EFFECTS RETURN (9)

The output of external signal processors/effects devices may be patched back into the VTM at this point.

NOTE: Effects Loop (Effects Out and Effects Return) is compatible with low level, instrument signal level devices.

#### STATUS LED (10)

Illuminates when amp is on. Does not illuminate when on standby.

#### POWER LED (11)

Illuminates when AC power is being supplied to the amp.

#### STANDBY SWITCH (12)

Allows amp to be placed in standby or active mode. In standby mode the tubes remain hot, but the amplifier is not operational.

#### POWER SWITCH (13)

Center position is OFF. Two ON positions are provided, one of which will properly ground the amplifier. Switch to the ON side that yields the lowest amount of residual hum or popping noise when the instrument is touched. 220 and 240 volt models utilize a two way On/Off switch only.

## BACK PANEL

### LINE CORD (1) (120V products only)

For your safety, we have incorporated a 3-wire line (mains) cable with proper grounding facilities. It is not advisable to remove the ground pin under any circumstances. If it is necessary to use the equipment without proper grounding facilities, suitable grounding adaptors should be used. Less noise and greatly reduced shock hazard exists when the unit is operated with the proper grounded receptacles.

### FUSE (2)

The fuse is located within the cap of the fuseholder. If the fuse should fail, IT MUST BE REPLACED WITH THE SAME TYPE AND VALUE IN ORDER TO AVOID DAMAGE TO THE EQUIPMENT AND TO PREVENT VOIDING THE WARRANTY. If the amp repeatedly blows fuses, it should be taken to a qualified service center for repair.

**WARNING: THE FUSE SHOULD ONLY BE REPLACED WHEN THE POWER CORD HAS BEEN DISCONNECTED FROM ITS POWER SOURCE.**

### GROUND SWITCH (3)

Three-position rocker-type switch which, in most applications, should be operated in its center or zero position. There may be some situations when audible hum and/or noise will come from the loudspeaker. If this situation arises, position the ground switch to either positive or negative (+ or -) or until the noise is minimized. **NOTE:** Should the noise problem continue, consult your Authorized Peavey Dealer, the Peavey Factory, or a qualified service technician. **THE GROUND SWITCH IS NOT FUNCTIONAL ON 220/240 VOLT MODELS.**

### SPEAKER OUTPUTS (4)

The VTM features the capacity to deliver full power (VTM-60 gives 60 watts/VTM-120 gives 120 watts) into 16-, 8-, or 4-ohm loads. This is accomplished by using the correspondingly labeled speaker jack(s). These jacks are configured in a switching jack circuit which automatically selects the correct output from the multi-tap output transformer. When independent cables are used with each enclosure, the patch sequence is as follows: one 16-ohm enclosure patches into the 16-ohm jack; the second 16-ohm enclosure patches into the 8-ohm jack; the third 16-ohm enclosure patches into the 4-ohm jack, and so on up to four enclosures maximum.

**NOTE:** The fourth speaker jack should not be utilized unless four 16-ohm enclosures are patched into the VTM with independent cables for each enclosure.

When speaker enclosures are "daisy-chained" (connected from enclosure to enclosure and only one cable is patched into the amplifier), the procedure is as follows: two 16-ohm enclosures patch into the 8-ohm jack; three 16-ohm enclosures patch into the 4-ohm jack; four 16-ohm enclosures patch into the 4-ohm jack.

**NOTE:** Applications requiring four 16-ohm enclosures should be connected with four independent cables from the amplifier, jacks one through four for best results.


### HUM BALANCE (5)

A control to minimize hum. To adjust, first make sure that nothing is plugged into the amp but the speaker cabinet. Turn the unit on and set the Pre Gain and Post Gain controls at 7. While listening to the speaker closely, gradually rotate the Hum Balance control using a screwdriver until hum is at a minimum. This procedure is required periodically. Reset Hum Balance after tube change.

### BOOSTER OUTPUT/REMOTE STANDBY (6)

A preamp out signal which can be routed to another power amp. When placing a one button on/off switch in this jack it can be used as a remote standby.

**NOTE:** VTM-60 back panel identical except for Fuse Rating (3 amp), Output Power, and Power Consumption — see specifications.

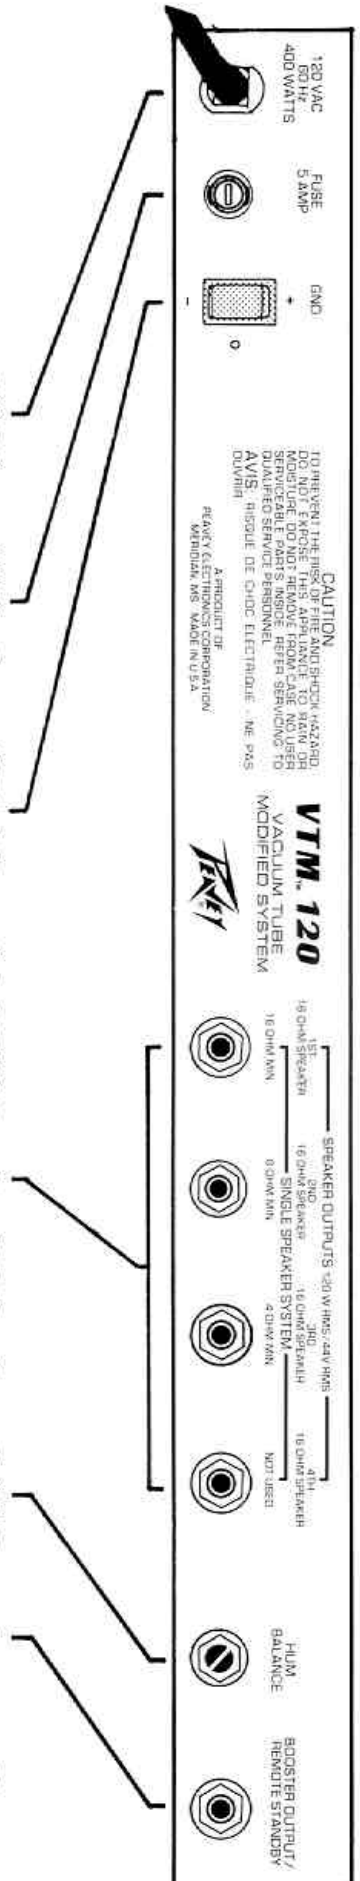

## VTM-60 SPECIFICATIONS

### POWER AMPLIFIER SECTION:

2 - 6L6GC's with 12AX7 Driver

### RATED POWER & LOAD:

60 W RMS into 16 or 8 or 4 ohms

### POWER @ CLIPPING:

(Typically @ 5% THD, 1 kHz, 120 VAC line)  
65 W RMS into 16 or 8 or 4 ohms  
(Bias must be reduced to measure)

### FREQUENCY RESPONSE:

+0, -2 dB 50 Hz to 10 kHz @ 50 W RMS into 16 ohms

### HUM & NOISE:

Adjust for minimum hum @ max gain

### POWER CONSUMPTION:

200 watts, 50/60 Hz, 120 VAC (domestic)

### PREAMP SECTION:

3 - 12AX7's

The following specs are measured @ 1 kHz with the controls preset as follows:

Post gain @ 10, Low, Mid & High EQ @ 10, Presence @ 0,  
All response modifications off (down)  
Nominal levels are with Pre Gain @ 5  
Minimum levels are with Pre Gain @ 10

### PREAMP HIGH GAIN INPUT:

(Primarily designed as distortion input)  
Impedance: very High Z, 1m ohm  
Nominal Input Level: -48 dBV, 4 mV RMS  
Minimum Input Level: -60 dBV, 1 mV RMS  
Maximum Input Level: -6 dBV, 0.5 V RMS

### PREAMP LOW GAIN INPUT:

(Primarily designed as non-distortion input)  
Impedance: very High Z, 1m ohm  
Nominal Input Level: -16 dBV, 160 mV RMS  
Minimum Input Level: -22 dBV, 80 mV RMS  
Maximum Input Level: Unlimited

### EFFECTS SEND:

Load Impedance: 10K ohms or greater  
Nominal Output: -10 dBV, 300 mV RMS

### EFFECTS RETURN:

Impedance: Very High Z, 1m ohm  
Designed Level: -10 dBV, 300 mV RMS

### BOOSTER OUTPUT: (REMOTE FOOTSWITCH)

Load Impedance: 10k ohms or greater  
Nominal Level: -10 dBV, 3 V RMS

### SYSTEM HUM & NOISE @ NOMINAL INPUT LEVEL:

(20 Hz to 20 kHz unweighted)  
Greater than 75 dB below rated power

### EQUALIZATION:

Special Low, Mid & High passive-type EQ  
Presence: +6 dB @ 5 kHz

### RESPONSE MODIFICATIONS: (Dip Switches)

Gain 1, Gain 2: Preamp Gain Select  
Compressor: Clipper Select  
Low 1, Low 2: Low Frequency Response Select  
Mid: Mid Frequency Response Select  
High 1, High 2: High Frequency Response Select

## VTM-120 SPECIFICATIONS

### POWER AMPLIFIER SECTION:

4 - 6L6GC's with 12AX7 Driver

### RATED POWER & LOAD:

120 W RMS into 16 or 8 or 4 ohms

### POWER @ CLIPPING:

(Typically @ 5% THD, 1 kHz, 120 VAC line)  
130 W RMS into 16 or 8 or 4 ohms  
(Bias must be reduced to measure)

### FREQUENCY RESPONSE:

+0, -2 dB 50 Hz to 10 kHz @ 100 W RMS into 16 ohms

### HUM & NOISE:

Greater than 88 dB below rated power

### HUM BALANCE CONTROL:

Adjust for minimum hum @ max gain

### POWER CONSUMPTION:

400 watts, 50/60 Hz, 120 VAC (domestic)

### PREAMP SECTION:

3 - 12AX7's

The following specs are measured @ 1 kHz with the controls preset as follows:

Post gain @ 10, Low, Mid & High EQ @ 10, Presence @ 0,  
All response modifications off (down)  
Nominal levels are with Pre Gain @ 5  
Minimum levels are with Pre Gain @ 10

### PREAMP HIGH GAIN INPUT:

(Primarily designed as distortion input)  
Impedance: very High Z, 1m ohm  
Nominal Input Level: -48 dBV, 4 mV RMS  
Minimum Input Level: -60 dBV, 1 mV RMS  
Maximum Input Level: -6 dBV, 0.5 V RMS

### PREAMP LOW GAIN INPUT:

(Primarily designed as non-distortion input)  
Impedance: very High Z, 1m ohm  
Nominal Input Level: -16 dBV, 160 mV RMS  
Minimum Input Level: -22 dBV, 80 mV RMS  
Maximum Input Level: Unlimited

### EFFECTS SEND:

Load Impedance: 10K ohms or greater  
Nominal Output: -10 dBV, 300 mV RMS

### EFFECTS RETURN:

Impedance: Very High Z, 1m ohm  
Designed Level: -10 dBV, 300 mV RMS

### BOOSTER OUTPUT: (REMOTE FOOTSWITCH)

Load Impedance: 10k ohms or greater  
Nominal Level: -10 dBV, 3 V RMS

### SYSTEM HUM & NOISE @ NOMINAL INPUT LEVEL:

(20 Hz to 20 kHz unweighted)  
Greater than 75 dB below rated power

### EQUALIZATION:

Special Low, Mid & High passive-type EQ  
Presence: +6 dB @ 5 kHz

### RESPONSE MODIFICATIONS: (Dip Switches)

Gain 1, Gain 2: Preamp Gain Select  
Compressor: Clipper Select  
Low 1, Low 2: Low Frequency Response Select  
Mid: Mid Frequency Response Select  
High 1, High 2: High Frequency Response Select

**THIS LIMITED WARRANTY VALID ONLY WHEN PURCHASED AND REGISTERED IN THE UNITED STATES OR CANADA. ALL EXPORTED PRODUCTS ARE SUBJECT TO WARRANTY AND SERVICES TO BE SPECIFIED AND PROVIDED BY THE AUTHORIZED DISTRIBUTOR FOR EACH COUNTRY.**

**Ces clauses de garantie ne sont valables qu'aux Etats-Unis et au Canada. Dans tous les autres pays, les clauses de garantie et de maintenance sont fixées par le distributeur national et assurées par lui selon la législation en vigueur.**

**Diese Garantie ist nur in den USA und Kanada gültig. Alle Export-Produkte sind der Garantie und dem Service des Importeurs des jeweiligen Landes unterworfen.**

**Esta garantía es válida solamente cuando el producto es comprado en E.U. continentales o en Canada. Todos los productos que sean comprados en el extranjero, están sujetos a las garantías y servicio que cada distribuidor autorizado determine y ofrezca en los diferentes países.**

#### ONE-YEAR LIMITED WARRANTY/REMEDY

PEAVEY ELECTRONICS CORPORATION ("PEAVEY") warrants this product, EXCEPT for covers, footswitches, patchcords, tubes and meters, to be free from defects in material and workmanship for a period of one (1) year from date of purchase, PROVIDED, however that this limited warranty is extended only to the original retail purchaser and is subject to the conditions, exclusions and limitations hereinafter set forth:

#### PEAVEY 90-DAY LIMITED WARRANTY ON TUBES AND METERS

If this product contains tubes or meters, Peavey warrants the tubes or meters contained in the product to be free from defects in material and workmanship for a period of ninety (90) days from date of purchase; PROVIDED, however, that this limited warranty is extended only to the original retail purchaser and is also subject to the conditions, exclusions and limitations hereinafter set forth.

#### CONDITIONS, EXCLUSIONS AND LIMITATIONS OF LIMITED WARRANTIES

These limited warranties shall be void and of no effect if:

- The first purchase of the product is for the purpose of resale; or
- The original retail purchase is not made from an AUTHORIZED PEAVEY DEALER; or
- The product has been damaged by accident or unreasonable use, neglect, improper service or maintenance, or other causes not arising out of defects in material or workmanship; or
- The serial number affixed to the product is altered, defaced or removed.

In the event of a defect in material and/or workmanship covered by this limited warranty, Peavey will:

- In the case of tubes or meters, replace the defective component without charge;
- In other covered cases (i.e., cases involving anything other than covers, footswitches, patchcords, tubes or meters), repair the defect in material or workmanship or replace the product, at Peavey's option;

and provided, however, that, in any case, all costs of shipping, if necessary, are paid by you, the purchaser.

THE WARRANTY REGISTRATION CARD SHOULD BE ACCURATELY COMPLETED AND MAILED TO AND RECEIVED BY PEAVEY WITHIN FOURTEEN (14) DAYS FROM THE DATE OF YOUR PURCHASE.

In order to obtain service under these warranties, you must:

- Bring the defective item to any AUTHORIZED PEAVEY DEALER or AUTHORIZED PEAVEY SERVICE CENTER and present therewith the ORIGINAL PROOF OF PURCHASE supplied to you by the AUTHORIZED PEAVEY DEALER in connection with your purchase from him of this product.

If the DEALER or SERVICE CENTER is unable to provide the necessary warranty service you will be directed to the nearest other PEAVEY AUTHORIZED DEALER or AUTHORIZED PEAVEY SERVICE CENTER which can provide such service.

OR

- Ship the defective item, prepaid, to:

PEAVEY ELECTRONICS CORPORATION  
International Service Center  
Highway 80 East  
MERIDIAN, MS 39301

including therewith a complete, detailed description of the problem, together with a legible copy of the original PROOF OF PURCHASE and a complete return address. Upon Peavey's receipt of these items:

If the defect is remedial under these limited warranties and the other terms and conditions expressed herein have been complied with, Peavey will provide the necessary warranty service to repair or replace the product and will return it, FREIGHT COLLECT, to you, the purchaser.

Peavey's liability to the purchaser for damages from any cause whatsoever and regardless of the form of action, including negligence, is limited to the actual damages up to the greater of \$500.00 or an amount equal to the purchase price of the product that caused the damage or that is the subject of or is directly related to the cause of action. Such purchase price will be that in effect for the specific product when the cause of action arose. This limitation of liability will not apply to claims for personal injury or damage to real property or tangible personal property allegedly caused by Peavey's negligence. Peavey does not assume liability for personal injury or property damage arising out of or caused by a non-Peavey alteration or attachment, nor does Peavey assume any responsibility for damage to interconnected non-Peavey equipment that may result from the normal functioning and maintenance of the Peavey equipment.

UNDER NO CIRCUMSTANCES WILL PEAVEY BE LIABLE FOR ANY LOST PROFITS, LOST SAVINGS, ANY INCIDENTAL DAMAGES OR ANY CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

THESE LIMITED WARRANTIES ARE IN LIEU OF ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR USE; PROVIDED, HOWEVER, THAT IF THE OTHER TERMS AND CONDITIONS NECESSARY TO THE EXISTENCE OF THE EXPRESS, LIMITED WARRANTIES, AS HEREINABOVE STATED, HAVE BEEN COMPLIED WITH, IMPLIED WARRANTIES ARE NOT DISCLAIMED DURING THE APPLICABLE ONE-YEAR OR NINETY-DAY PERIOD FROM DATE OF PURCHASE OF THIS PRODUCT.

SOME STATES DO NOT ALLOW LIMITATION ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. THESE LIMITED WARRANTIES GIVE YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

THESE LIMITED WARRANTIES ARE THE ONLY EXPRESS WARRANTIES ON THIS PRODUCT, AND NO OTHER STATEMENT, REPRESENTATION, WARRANTY OR AGREEMENT BY ANY PERSON SHALL BE VALID OR BINDING UPON PEAVEY.

In the event of any modification or disclaimer of express or implied warranties, or any limitation of remedies, contained herein conflicts with applicable law, then such modification, disclaimer or limitation, as the case may be, shall be deemed to be modified to the extent necessary to comply with such law.

Your remedies for breach of these warranties are limited to those remedies provided herein and Peavey Electronics Corporation gives this limited warranty only with respect to equipment purchased in the United States of America.

#### INSTRUCTIONS — WARRANTY REGISTRATION CARD

1. Mail the completed WARRANTY REGISTRATION CARD to:

PEAVEY ELECTRONICS CORPORATION  
POST OFFICE BOX 2898  
MERIDIAN, MISSISSIPPI 39302-2898

- a. Keep the PROOF OF PURCHASE. In the event warranty service is required during the warranty period, you will need this document. **There will be no identification card issued by Peavey Electronics Corporation.**
2. IMPORTANCE OF WARRANTY REGISTRATION CARDS AND NOTIFICATION OF CHANGES OF ADDRESS:
    - a. Completion and mailing of WARRANTY REGISTRATION CARDS — Should notification become necessary for any condition that may require correction, the REGISTRATION CARD will help ensure that you are contacted and properly notified.
    - b. Notice of address changes — If you move from the address shown on the WARRANTY REGISTRATION CARD, you should notify Peavey of the change of address so as to facilitate your receipt of any bulletins or other forms of notification which may become necessary in connection with any condition that may require dissemination of information or correction.
  3. You may contact Peavey directly by telephoning (601) 483-5365.
  4. Please have the Peavey product name and serial number available when communicating with Peavey Customer Service.

### DANGER

EXPOSURE TO EXTREMELY HIGH NOISE LEVELS MAY CAUSE A PERMANENT HEARING LOSS. INDIVIDUALS VARY CONSIDERABLY IN SUSCEPTIBILITY TO NOISE INDUCED HEARING LOSS, BUT NEARLY EVERYONE WILL LOSE SOME HEARING IF EXPOSED TO SUFFICIENTLY INTENSE NOISE FOR A SUFFICIENT TIME.

THE U.S. GOVERNMENT'S OCCUPATIONAL SAFETY AND HEALTH ADMINISTRATION (OSHA) HAS SPECIFIED THE FOLLOWING PERMISSIBLE NOISE LEVEL EXPOSURES:

DURATION PER DAY IN HOURS	SOUND LEVEL dBA, SLOW RESPONSE
8	90
6	92
4	95
3	97
2	100
1½	102
1	105
½	110
¼ or less	115

ACCORDING TO OSHA, ANY EXPOSURE IN EXCESS OF THE ABOVE PERMISSIBLE LIMITS COULD RESULT IN SOME HEARING LOSS.

EAR PLUGS OR PROTECTORS IN THE EAR CANALS OR OVER THE EARS MUST BE WORN WHEN OPERATING THIS AMPLIFICATION SYSTEM IN ORDER TO PREVENT A PERMANENT HEARING LOSS IF EXPOSURE IS IN EXCESS OF THE LIMITS AS SET FORTH ABOVE. TO INSURE AGAINST POTENTIALLY DANGEROUS EXPOSURE TO HIGH SOUND PRESSURE LEVELS, IT IS RECOMMENDED THAT ALL PERSONS EXPOSED TO EQUIPMENT CAPABLE OF PRODUCING HIGH SOUND PRESSURE LEVELS SUCH AS THIS AMPLIFICATION SYSTEM BE PROTECTED BY HEARING PROTECTORS WHILE THE UNIT IS IN OPERATION.

### CAUTION

THIS AMPLIFIER HAS BEEN DESIGNED AND CONSTRUCTED TO PROVIDE ADEQUATE POWER RESERVE FOR PLAYING MODERN MUSIC WHICH MAY REQUIRE OCCASIONAL PEAK POWER. TO HANDLE OCCASIONAL PEAK POWER, ADEQUATE POWER "HEADROOM" HAS BEEN DESIGNED INTO THIS SYSTEM. EXTENDED OPERATION AT ABSOLUTE MAXIMUM POWER LEVELS IS NOT RECOMMENDED SINCE THIS COULD DAMAGE THE ASSOCIATED LOUDSPEAKER SYSTEM. PLEASE BE AWARE THAT **MAXIMUM POWER** CAN BE OBTAINED WITH VERY LOW SETTINGS OF THE **GAIN CONTROL 3**, IF THE INPUT SIGNAL IS VERY STRONG.

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be retained for future reference.
3. Obey all cautions in the operating instructions and on the back of the unit.
4. All operating instructions should be followed.
5. This product should not be used near water, i.e. a bathtub, sink, swimming pool, wet basement, etc.
6. This product should be located so that its position does not interfere with its proper ventilation. It should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
7. This product should not be placed near a source of heat such as a stove, radiator or another heat producing amplifier.
8. Connect only to a power supply of the type marked on the unit adjacent to the power supply cord.
9. Never break off the ground pin of the power supply cord. For more information on grounding write for our free booklet "Shock Hazard and Grounding."
10. Power supply cords should always be handled carefully. Never walk or place equipment on power supply cords. Periodically check cords for cuts or signs of stress, especially at the plug and the point where the cord exits the unit.
11. The power supply cord should be unplugged when the unit is to be unused for long periods of time.
12. If this product is to be mounted in an equipment rack, rear support should be provided.
13. Metal parts can be cleaned with a damp rag. The vinyl covering used on some units can be cleaned with a damp rag or an ammonia based household cleaner if necessary.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation holes or any other openings.
15. This unit should be checked by a qualified service technician if:
  - A. The power supply cord or plug has been damaged.
  - B. Anything has fallen or been spilled into the unit.
  - C. The unit does not operate correctly.
  - D. The unit has been dropped or the enclosure damaged.
16. The user should not attempt to service this equipment. All service work should be done by a qualified service technician.



Features and specifications subject to change without notice.

**Peavey Electronics Corporation** / 711 A Street / Meridian, MS 39302-2898 / U.S.A. / (601) 483-5365 Telex: 504115 / Fax: 484-4278  
©1989 Printed in the U.S.A. #80300704 3/89



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>