


# MasterColor® Pulse Start Ceramic Metal Halide 350 Watt ED-37 (Clear) Lamp

featuring ALTO® Lamp Technology

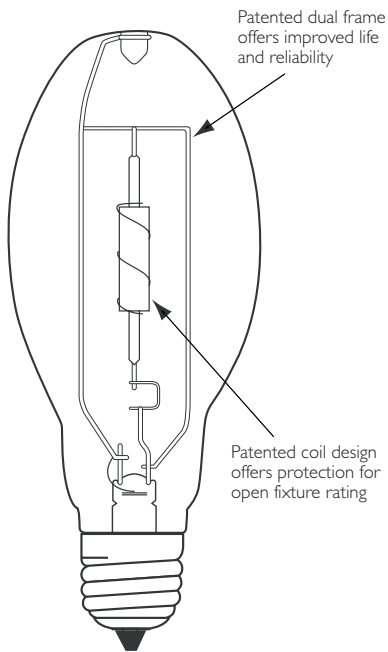

## Ordering Information

Ordering Code	CDM350/V/O/PS/4K/ALTO
ANSI Designation	M171/O, M131/O
Product Number	132571
Description	MasterColor Pulse Start Ceramic Metal Halide
Package Quantity	6

## Physical Characteristics


Bulb Size	ED-37
Bulb Finish	Clear
Base	Extended Eyelet Mogul Screw (EX39)
Max. Overall Length (MOL)	11.5 (292mm)
Light Center Length (LCL)	7.0 (178mm)
Arc Length	24mm
Arc Tube Material	Polycrystalline Alumina
Max. Permissible Bulb Temp.	400°C (752°F)
Max. Permissible Base Temp.	210°C (410°F)
Maximum Bulb to Base Eccentricity	3°
Maximum Arc Tube to Base Eccentricity	3°

## Operating Characteristics (Photometric)

Rated Initial Lumens <sup>1</sup>	31,500
Mean Lumens, Approx. <sup>2</sup>	25,200
Rated Average Life, Hours	24,000
Correlated Color Temp. (CCT) <sup>2</sup>	4200K
CIE Chromaticity Approx. <sup>2</sup>	x-.371, y-.372
Color Rendering Index (CRI)	90
Efficacy (lpw)	90

## Operating Position

Vertical ± 15°-Open or Enclosed Luminaires

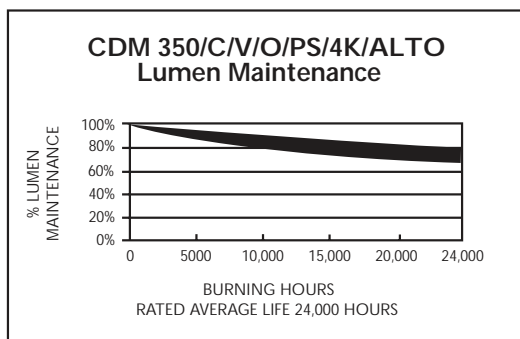

# PHILIPS

## MasterColor® Pulse Start Ceramic Metal Halide 350 Watt ED-37 (Clear) Lamp featuring ALTO® Lamp Technology

### Electrical Data (Subject to change without notice)

Lamp Watts (Nominal) . . . . .	350
Lamp Operating Voltage (rms) (Nominal) <sup>2</sup> . . . . .	150
Initial Lamp Voltage Range (rms) <sup>3</sup> . . . . .	135-165
Lamp Operating Current (Amps) (rms) (Nominal) . . . . .	2.83
Lamp Current Crest Factor (Maximum) . . . . .	1.6
Warm-up Time to 80% of Output . . . . .	5 Minutes
Restrike Time for Hot Lamp . . . . .	15 Minutes
Ballast Type . . . . .	ANSI M171/M131/O
Ballast Open Circuit Voltage (Minimum) . . . . .	254 RMS Min.
Pulse Peak Volts . . . . .	3000 Minimum, 4000 Maximum
Pulse Width @ 90% Peak (2700 Volts) . . . . .	1.3 Micro Second Minimum
Pulse Repetition Rate (Minimum) . . . . .	1 per Half Cycle
Minimum Operating Temperature . . . . .	-30° C (-22°F)

1) Measured at 100 hrs of life in vertical position.

2) Measured at rated lamp watts on a linear reactor. LPW does not include ballast losses.

3) Measured with the lamp operating at rated watts.

### WARNINGS, CAUTIONS AND OPERATING INSTRUCTIONS for Protected MasterColor® Pulse Start Ceramic Metal Halide Lamps (Vertical Operation ± 15°, Open or Enclosed Fixtures)

#### Warnings, Cautions and Operating Instructions

**R** "WARNING: These lamps can cause serious skin burn and eye inflammation from short wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Certain lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available." This lamp complies with FDA radiation performance standard 21 CFR subchapter J. (USA:21CFR 1040.30 Canada:SOR/DORS/80-381)

**If the outer bulb is broken or punctured, turn off at once and replace the lamp to avoid possible injury from hazardous short wave ultraviolet radiation. Do not scratch the outer bulb or subject it to pressure as this could cause the outer bulb to crack or shatter. A partial vacuum in the outer bulb may cause glass to fly if the envelope is struck.**

**WARNING:** The arc-tube of metal halide lamps are designed to operate under high pressure and at temperatures up to 1000° C and can unexpectedly rupture due to internal or external factors such as a ballast failure or misapplication. If the arc-tube ruptures for any reason, the outer bulb may break and pieces of extremely hot glass might be discharged into the surrounding environment. If such a rupture were to happen, **THERE IS A RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE.**

**These lamps are designed to retain all the glass particles should an arc tube rupture occur. The following operating instructions are recommended to minimize these occurrences.**

**RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.**

**This lamp contains an arc tube with a filling gas containing Kr-85 and is distributed by Philips Lighting Company, a division of Philips Electronics North America Corporation, Somerset, New Jersey, 08875.**

**CAUTION:** TO REDUCE THE RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE RESULTING FROM AN ARC-TUBE RUPTURE THE FOLLOWING **LAMP OPERATING INSTRUCTIONS** MUST BE FOLLOWED:

#### **LAMP OPERATING INSTRUCTIONS:**

1. RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.
2. Before lamp installation/replacement, shut power off and allow lamp and fixture to cool to avoid electrical shock and potential burn hazards.
3. Use only auxiliary equipment meeting Philips and/or ANSI standards. Use within voltage limits recommended by ballast manufacturer.

- A. Operate lamp only within specified limits of operation.
- B. For total supply load refer to ballast manufacturers electrical data.
- C. All Pulse Start mogul based lamps require a socket rated to withstand a 4000 volt pulse.
4. Periodically inspect the outer envelope. Replace any lamps that show scratches, cracks or damage.
5. If a lamp bulb support is used, be sure to insulate the support electrically to avoid possible decomposition of the bulb glass.
6. Protect lamp base, socket and wiring against moisture, corrosive atmospheres and excessive heat.
7. Time should be allowed for lamps to stabilize in color when turned on for the first time. This may require several hours of operation, with more than one start. Lamp color is also subject to change under conditions of excess vibration or shock, and color appearance may vary between individual lamps.
8. Lamps may require 10 to 20 minutes to re-light if there is a power interruption.
9. Take care in handling and disposing of lamps. If an arc tube is broken, avoid skin contact with any of the contents or fragments.
10. Use this lamp only in fixtures that contain Pulse Start metal halide ballasts and are specifically designed for use with Pulse Start metal halide lamps.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>