



**PX1710M**  
**LCD Monitor**

**USER'S GUIDE**

[www.planar.com](http://www.planar.com)

The information contained in this document is subject to change without notice. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be reproduced, translated to another language or stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission. Windows is a registered trademark of Microsoft, Inc. Other brand or product names are trademarks of their respective holders.

# ***Table of Contents***

---

## **Usage Notice**

<i>Precautions</i> .....	2
--------------------------	---

## **Introduction**

<i>About the Product</i> .....	3
<i>Package Overview</i> .....	4

## **Installation**

<i>Product Overview</i> .....	5
<i>Start Your Installation</i> .....	6

## **User Controls**

<i>Front Panel Controls</i> .....	8
<i>How to Use the OSD Menus</i> .....	9
<i>On-Screen Display Menus</i> .....	10

## **Appendix**

<i>Troubleshooting</i> .....	14
<i>Warning Signal</i> .....	15
<i>Product Dimensions</i> .....	16
<i>Compatibility Modes</i> .....	17

# Usage Notice



**Warning-** To prevent the risk of fire or shock hazards, do not expose this product to rain or moisture.



**Warning-** Please do not open or disassemble the product as this may cause electric shock.

## Precautions

*Follow all warnings, precautions and maintenance as recommended in this user's manual to maximize the life of your unit.*

### Do:

- Turn off the product before cleaning.
- Use only a dry soft cloth or clean room wiper when cleaning the LCD panel surface.
- Use a soft cloth moistened with mild detergent to clean the display housing.
- Use only high quality and safety approved AC/DC power adapter.
- Disconnect the power plug from AC outlet if the product is not used for a long period of time.

### Don't:

- Do not touch the LCD panel surface with sharp or hard objects.
- Do not use abrasive cleaners, waxes or solvents for your cleaning.
- Do not operate the product under the following conditions:
  - Extremely hot, cold or humid environment.
  - Areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - Place in direct sunlight.

# ***Introduction***


---

## **About the Product**


Having a 17" flat panel screen with an active matrix, thin-film transistor (TFT) liquid crystal display (LCD) , this product also demonstrates the following outstanding features:

- ❑ Analog and Digital dual signal input
- ❑ Active matrix TFT LCD technology
- ❑ 17" diagonal screen size
- ❑ 1280 x 1024 high resolution
- ❑ 31.5~80kHz horizontal scan
- ❑ 56~75Hz high refresh rate
- ❑ Auto adjustment capability
- ❑ Multilingual OSD user Controls
- ❑ Adjustment stand design
- ❑ VESA DPMS power saving
- ❑ Built-in speaker for multimedia application
- ❑ Kensington lock capability


# Package Overview

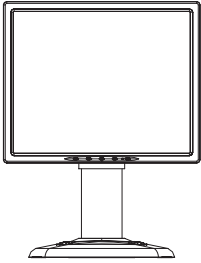


LCD Display

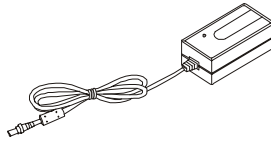


Power Adapter




Power Cord



VGA Signal Cable



DVI-D Cable



Audio-In Cable



Planar Product Family CD



User's Guide




Landing Strip


# Installation

## Product Overview

### ◆ Front View

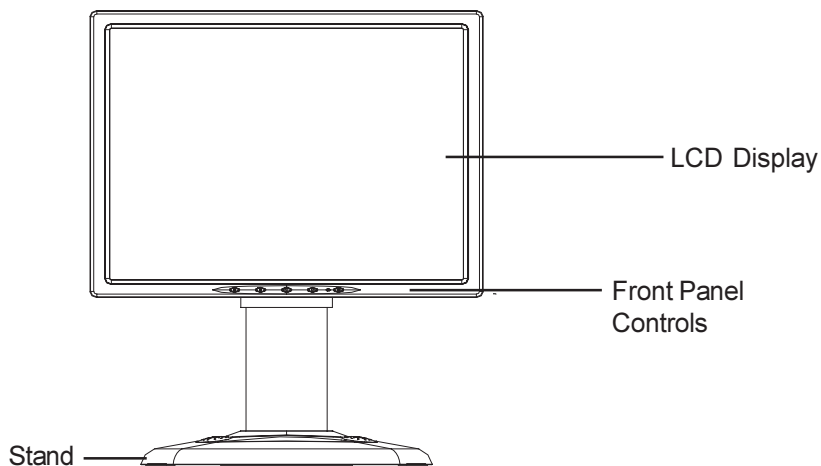

### ◆ Back View

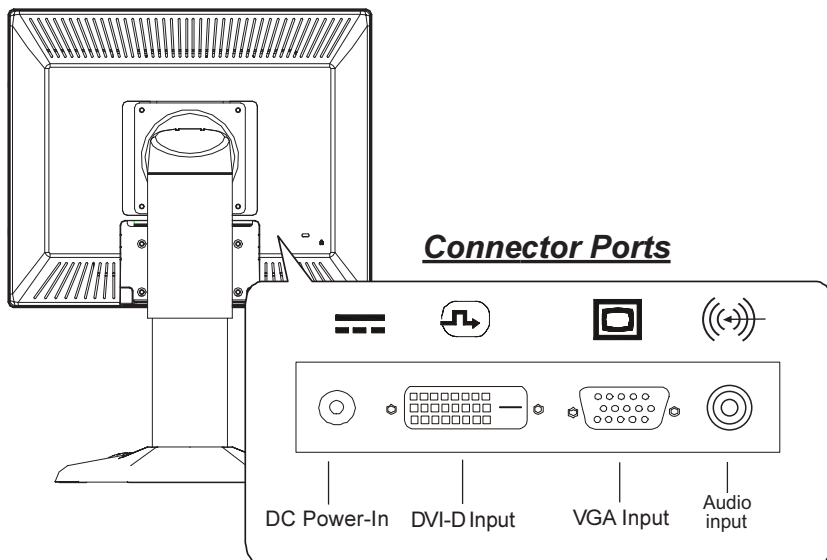

## Start Your Installation


### ◆ Connecting the Display (Figure 7.1)

To setup this display, please refer to the following figure and procedures.

1. Be sure all equipment is turned off.
2. Connect the DC power cord to the power connector; plug one end of the AC power cord into the power adapter, and then the other end into an electrical outlet(❶).
3. For the PC with Analog output: Connect the VGA signal cable from display VGA input connector to the 15-pin connector of your host computer and tighten the screws(❷).
4. Connect the Audio-In cable from the audio input port of your display to the Audio-out port of your computer (❸).
5. For the PC with DVI digital output: Connect the DVI signal cable to the connector of the display card in your computer; connect the other side to the DVI-D input port of your display. Tighten the screws(❹).
6. Turn on your computer, display and video source.


**Notice:** To ensure the LCD display can work well with your computer, please configure the display mode of your graphic card to make it less than or equal to 1280 x 1024 resolution and make sure timing of the display mode is compatible with the LCD display. We have listed the “Compatibility Modes” of this LCD display in appendices for your reference.

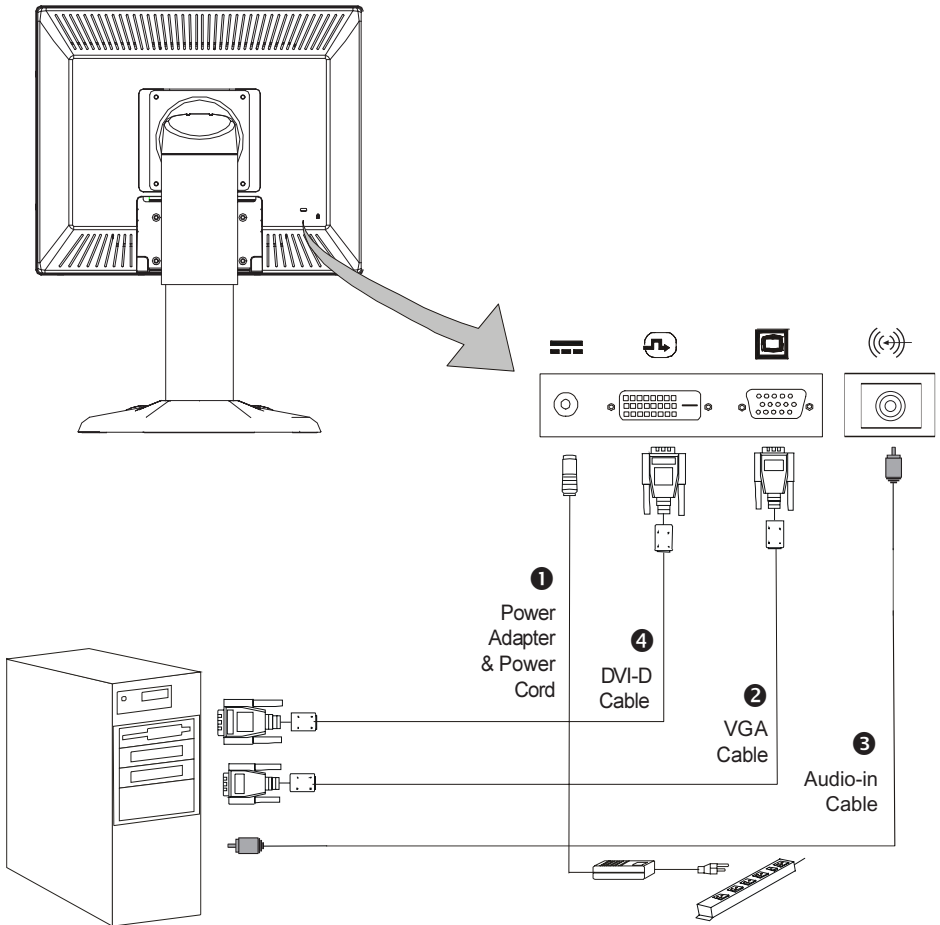

**Figure 7.1**

# User Controls

## Front Panel Controls

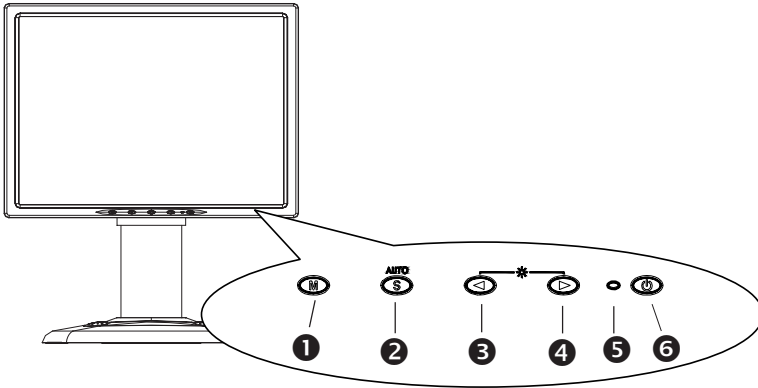


No / Icon	Control	Function
① MENU	Menu button	To pop the OSD menus.
② SELECT	Select/Auto	Select- to Select the adjustment items from OSD menus. Auto- To activate the "Auto Adjustment" function to obtain an optimum image.
③ ◀	Brightness Minus/Minus	1. Decreases the brightness of the display image. 2. Decreases value of the adjustment items.
④ ▶	Brightness Plus/Plus	1. Increases the brightness of the display image. 2. Increases value of the adjustment items.
⑤	Power LED	1. Green indicates the display is turned on. 2. Amber indicated the display is in power-save mode.
⑥ ⏻	Power Switch	Switches On/Off the power of the LCD display.

## How to Use the OSD Menu

1. Press the “MENU” button to pop up the on-screen menu and to select between the four Main Menus.
2. Choose the adjustment items by pressing the “SELECT” button.
3. Adjust the value of the adjustment items by pressing the “◀” or “▶” button.
4. Once you don't operate the OSD menu after a pre-set time, the OSD menu will automatically disappear.

# On-Screen Display Menus

*First OSD Menu:*

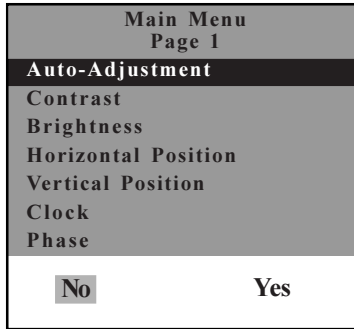

## ▶ **Auto-Adjustment**

Choose this function to obtain an optimum image.

## ▶ **Contrast**

Adjusts the contrast of the display image.

## ▶ **Brightness**

Adjusts the brightness of the display image.

## ▶ **Horizontal Position**

Changes the horizontal position of the image.

## ▶ **Vertical Position**

Changes the vertical position of the image.


## ▶ **Clock**

Changes the display data frequency to match the frequency of your graphic card. When you are experiencing vertical flickering bar, use this function to make an adjustment.

## ▶ **Phase**

Synchronizes the signal timing of the display to that of the graphic card. When you are experiencing unstable or flickering image, use this function to make an adjustment.

## Second OSD Menu:

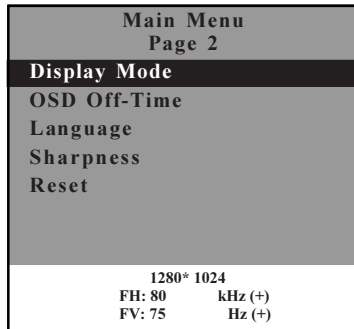

### ▶ **Display Mode**

Select this function to demonstrate the display resolution, vertical refresh, and horizontal scan of the current mode.

### ▶ **OSD Off-Time**

Adjust the time period for OSD menu to disappear.

### ▶ **Language**

Chooses the language you need.


### ▶ **Sharpness**

Adjusts the sharpness of the image.

### ▶ **Reset**

Returns the display parameters of the current mode to its factory default settings.

### Third OSD-Menu:

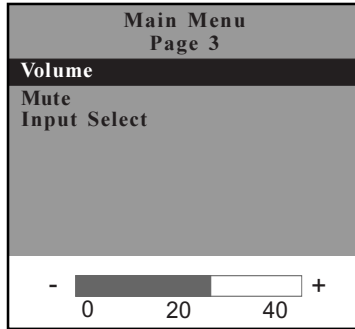

▶ **Volume**

It allows to control the volume sound.


▶ **Mute**

It allows you to disable the sound immediately.

▶ **Input Select**

Allows you to select the type of signal.

### Fourth OSD Menu:

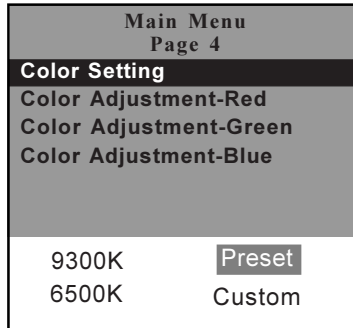

- ▶ **Color Setting**  
Adjusts the color temperature.
- ▶ **Color Adjustment-Red**  
Allows you to adjust the red color of the display.
- ▶ **Color Adjustment-Green**  
Allows you to adjust the green color of the display.
- ▶ **Color Adjustment-Blue**  
Allows you to adjust the blue color of the display.

# Appendix

## Troubleshooting

*If you are experiencing trouble with the LCD display, refer to the following trouble shooting tips. If the problem persists, please contact your local dealer or our service center.*

***Problem: No image appears on screen.***

- ▶ Check that all the I/O and power connectors are correctly and well connected as described in the “ Installation ” section.
- ▶ Make sure the pins of the connectors are not crooked or broken.

***Problem: Partial image or incorrectly displayed the image.***

- ▶ Check to see if the resolution of your computer is higher than that of the LCD display.
- ▶ Reconfigure the resolution of your computer to make it less than or equal to 1280 x 1024.

***Problem: Image has vertical flickering line bars.***

- ▶ Use “ Frequency ” to make an adjustment.
- ▶ Check and reconfigure the display mode of the vertical refresh rate of your graphic card to make it compatible with the LCD display.

***Problem: Image is unstable and flickering***

- ▶ Use “ Tracking ” to make an adjustment.

***Problem: Image is scrolling***

- ▶ Check and make sure the VGA signal cable (or adapter) is well connected.
- ▶ Check and reconfigure the display mode of the vertical refresh rate of your graphic card to make it compatible with the LCD display.

***Problem: Vague image (characters and graphics)***

- ▶ Use “ Frequency ” to make an adjustment. If this problem still exists, use “Tracking” to make an adjustment.



## Warning Signal

*If you receive any of the following warning messages on your screen. It could be that the LCD display cannot receive a signal from the computer graphics card.*

### ▶ **No Signal**

This message means that the LCD display has been powered on but it cannot receive any signal from the computer graphic card. Check all the power switches, power cables, and VGA signal cable.


### ▶ **Going to Sleep**

This message means that the LCD display is under the power saving mode. In addition, the LCD display will go to this sleeping mode when experiencing a sudden signal disconnecting problem.


### ▶ **Out of Range**

This message means that the signal of the computer graphic card is not compatible with the LCD display. When the signal is not included in the “Vide Modes” list we have listed in the Appendices of this manual, the LCD display will display this message


# Product Dimensions

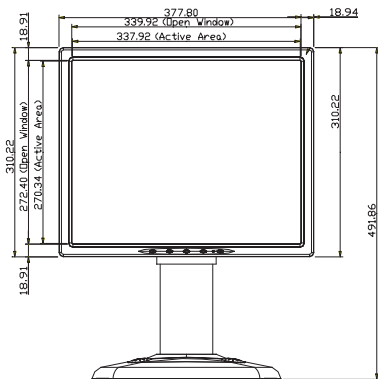

Front View

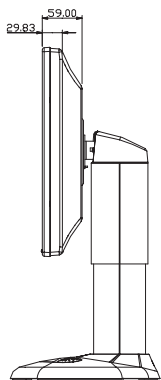

Side View

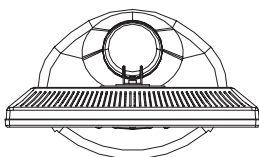

Top View

## Compatibility Modes

Mode	Resolution	V. Frequency (Hz)	H. Frequency (kHz)
IBM VGA	640 x 350	70	31.5
IBM VGA	720 x 400	70	31.5
IBM VGA	640 x 480	60	31.5
VESA VGA	640 x 480	72	37.9
VESA VGA	640 x 480	75	37.5
VESA SVGA	800 x 600	56	35.2
VESA SVGA	800 x 600	60	37.9
VESA SVGA	800 x 600	72	48.1
VESA SVGA	800 x 600	75	46.9
VESA XGA	1024 x 768	60	48.4
VESA XGA	1024 x 768	70	56.5
VESA XGA	1024 x 768	75	60.0
VESA SXGA	1280 x 1024	60	64.0
VESA SXGA	1280 x 1024	75	80.0
Apple Macintosh II	640 x 480	67	35.0
Apple Macintosh	832 x 624	75	49.7
Apple Macintosh	1024 x 768	75	60.2

**Planar Systems, Inc.**

Customer Service

**24x7 Online Technical Support:** <http://www.planar.com/support>

1195 NW Compton Drive  
Beaverton, OR 97006-1992

**Tel:** 1-866-PLANAR1 (866) 752-6271

**Email:** [PlanarSupport@planar.com](mailto:PlanarSupport@planar.com)

**Hours:** M-F, 5am - 5pm Pacific Time

© 2005 **Planar Systems, Inc. 03/05** Planar is a registered trademark of Planar Systems, Inc.

Other brands and names are the property of their respective owners.

Technical information in this document is subject to change without notice.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>