

XTS 36 MINI SPEAKER

Cat. No. 40-1994

140 Hz— 20 kHz Frequency Response Power Handling 15 watts (RMS) Maximum Power 30 watts Impedance 8Ω Speaker Complement 3" (7.62 cm) full range Enclosure: Sealed high density plastic cabinet for extended bass response Dimensions: 55/8 ¥ 39/16 ¥ 33/8 Inches (HWD) $(14.2\times9.0\times8.5~cm$) **Shipping Weight:** 1.4 lbs. (0.6 kg)

SPECIFICATIONS

CONNECTING THE SPEAKER

You need speaker wire (not supplied) to connect the speaker to your receiver or amplifier. We recommend you use wire that is color-coded or marked on one side. Use 18-gauge or larger speaker wire for distances up to 50 feet. For greater distances, use 16-gauge wire. Your local Radio Shack store has a wide selection of speaker wire.


Note: For maximum bass response and the best overall performance, be sure the polarities match when you connect the speaker to the receiver or amplifier (positive to positive and negative to negative).

 With the speaker in its appropriate location, measure the distance from the speaker to the receiver or amplifier. Then route the proper length of speaker wire from the speaker to the receiver or amplifier.


Cautions:

- Avoid routing the speaker wire near other electrical wires.
- Do not nail or staple the speaker wire.

- 2. Split apart 4 inches of speaker wire on each end.
- 3. Strip ¹/₄ inch of insulation from each wire's end. Then twist the ends of the wire to secure any loose strands.

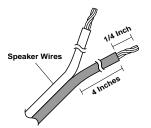


4. While pressing and holding down the black (negative) terminal tab on the back of the speaker, insert one end of the negative bare wire into the opening. Then release the tab.

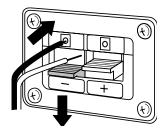


© 1995 Tandy Corporation. All Rights Reserved. Optimus and Radio Shack are registered trademarks used by Tandy Corporation. •

- 5. Repeat Step 4 to insert one end of the positive bare wire into the red (positive) terminal on the back of the speaker.
- Using the wire's color coding as a guide, insert the other end of the negative bare wire into your receiver or amplifier's negative (–) speaker terminal.
- Repeat Step 6 to connect the other end of the positive bare wire into your receiver or amplifier's positive (+) speaker terminal.
- 8. You can place the speaker on a desk, shelf, or table. You can also hang it on a wall using the keyhole slot on the back of the speaker.

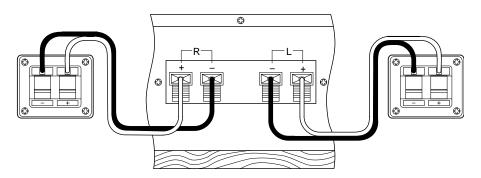

Connections for Two Speakers


RADIO SHACK A Division of Tandy Corporation Fort Worth, Texas 76102

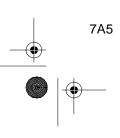


Printed in Malaysia



۲

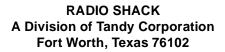



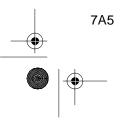

Download from Www.Somanuals.com. All Manuals Search And Download.



RADIO SHACK A Division of Tandy Corporation Fort Worth, Texas 76102

7A5

Download from Www.Somanuals.com. All Manuals Search And Download.

Printed in Malaysia

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com