

# SONY®

CDU 5211 Series

---

CDU 5211 Series

---

## CD-ROM Drive

### User's Manual

*NOTE: This manual is subject to change without notice.*

# SONY®

*Revision 1  
Copyright 2001 - Sony Australia  
Printed in Australia*

Download from [Www.Somanuals.com](http://www.somanuals.com). All Manuals Search And Download.

## Owner's Record

The model and serial numbers are located on the topside of the drive. Record these numbers in the space provided below. Refer to them whenever you call upon your sales representative regarding this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

## WARNING

*To prevent fire or shock hazard, do not expose the unit to rain or moisture.  
To avoid electrical shock, do not open the cabinet.  
Refer servicing to qualified personnel only.*

## CAUTION

The use of optical instruments with this product will increase eye hazard.  
The use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

This unit uses CD-ROM discs with the following mark.

When you use this unit as an audio CD player, use compact discs with the following mark.



## CAUTION

LASER RADIATION WHEN OPEN.  
DO NOT STARE INTO BEAM

## ATTENTION

RAYONNEMENT LASER EN CAS D'OUVERTURE.  
NE PAS REGARDER DANS LE FAISCEAU.

This label is located on the drive unit's internal chassis.

Dieses Etikett befindet sich auf dem inneren Chassis des Laufwerkes

CAUTION	INVISIBLE LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM OR VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.
VORSICHT	UNSIHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT IN DEN STRAHL BLICKEN, AUCH NICHT MIT OPTISCHEN INSTRUMENTEN.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING SE IKKE IND I STRÅLEN-HELLER IKKE MED OPTISKE INSTRUMENTER.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES. STIRR IKKE INN I STRÅLEN ELLER SE DIREKTE MED OPTISKE INSTRUMENTER.
VARNING	OSYNLIG LASERSTRÅLNING NÅR DENNA DEL ÄR ÖPPNAD. STIRRA EJ IN I STRÅLEN OCH BETRakta EJ STRÅLEN MED OPTISKA INSTRUMENT.
VARO!	AVATTAESSA OLET ALTTIINA NÄKYMÄTTÖMÄLLE LASERSÄTEILYLLE. ÄLÄ TUIJOTA SÄTEESEEN ÄLÄKÄ KATSO SÄÄ OPTISEN LAITTEEN LÄPI.

This label is located on the top of the drive.

Dieser Aufkleber befindet sich an der Oberseite des Gehäuses.

---

## ACKNOWLEDGMENTS & TRADEMARKS

All contents are subject to change at any time without notice. No responsibility is assumed for its use; nor for infringements of patents or other rights of third parties and no patent or license is implied hereby.

All trademarks are the property of their respective owners.


---

## INFORMATION

You are cautioned that any changes or modifications not expressly approved in this manual could void your warranty covering this equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CLASS 1  
LASER PRODUCT  
  
LASER KLASSE 1  
PRODUKT

This CD-ROM Drive Unit is classified as a CLASS 1 LASER PRODUCT.

The CLASS 1 LASER PRODUCT label is located on the top of the drive.

---

## Safety Notice

1. Do not install or operate the product in high temperature, humidity or dusty environment.
2. Do not attempt to open the cover to repair the product yourself.
3. Never spill liquid of any kind on the product.
4. Always follow instructions on this manual under operating the product.
5. To prevent exposure to laser emanations (harmful to human eyes), do not attempt to disassemble this unit.
6. Hold CD discs by their edges. Do not touch the surface of the discs.
7. The drive is designed to be incorporated into a computer-based system or unit which has an enclosing cover. Using the drive alone or in any other configuration is prohibited.

## Caution:

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

---

**Warnings and Precautions** 7

---

**Introduction** 8

---

Features .....8

Software Requirements.....9

**Using the Drive** 10

---

Front Panel .....10

“Maximum Speed Choice” function .....11

**Installing the Drive** 12

---

System Requirements.....12

Hardware Installation.....12

Connections &amp; Settings .....13

Connecting the IDE cable .....14

**Trouble Shooting** 15

---

**Specifications** 16

---

General .....16

Performance .....16

Audio.....16

Reliability.....16

Power Requirements .....16

Environmental Conditions .....17

Dimensions &amp; Mass.....17

### **WARNING - Possible voiding of Warranty**

Please be aware that cracked, deeply scratched or other poor quality discs used in this drive may cause damage to the drive and / or the data on the disc. Such discs may break at high speed rotation. If full care is not exercised in relation to this matter you may void the warranty of this product.

### **PRECAUTIONS**

- Do not attempt to open the drive and service it. Removing the cover may cause exposure to harmful laser beams and electrical voltages. User is recommended to get service by returning the defected drive back to the original vendor where the drive is purchased.
- Use the original packing for transporting the drive or sending back for service. The original packing were designed and tested to protect your drive under rough conditions.
- Do not put this CD-ROM drive in direct sunlight, on heat units, or near electrical appliances which draw large amounts of current.
- Keep your discs clean. Using soft, dust-free cloth to clear the surface of the disc.
- Do not drop or jolt the drive.
- Keep the area around the CD-ROM drive clean from dust, smoke, and other contaminants.

## **Features**

The CDU 5211 is an internal CD-Rom (Compact Disc - Read Only Memory) drive unit designed for use with personal computers. It comes with the following features:

### **General**

- Speed: 52X max / 40X default.
- “Maximum Speed Choice” function.
- 40 Pin ATAPI - IDE interface.
- 5 1/4 inch half-height drive form factor.
- Power loading and eject of a disc.
- ABS (Auto Balance Spindle) to reduce noise and vibration.
- 128 KB of buffer memory.
- Power saving functions.
- Vertical mount ability.
- Small CPU bandwidth consumption.
- Software volume control.
- Easy audio CD-DA control button.

### **Supported Disc Formats**

The CD 5211 is a “Multiread” compliant drive and can read data in each of the following formats:

CD-DA, CD-ROM Mode-1, CD-ROM/XA Mode-2 Form-1 & Form-2, CDI-Ready, Photo-CD, Karaoke-CD, Video CD (MPEG-1), Enhanced CD, CD Extra, I-Trax CD, CD-Text, UDF.

### **Media Types**

CD-ROM, CD-R and CD-RW.

12cm & 8cm discs.

### **Audio**

- Outputs 16-bit digital data over the ATA interface.
- Audio line output (rear panel) and headphones jack (front panel) for audio CD playback.

## **Software Requirements**

### **Reading Data**

For your computer to recognise your new CD-Rom drive and to be able to access data from it, the correct device drivers must be installed.

Most modern operating systems such as Microsoft® Windows 95™, Windows 98™, Windows ME™, Windows NT4™ and Windows 2000™ along with most versions of Linux and OS/2™ include these drivers as standard in the operating system, hence no additional drivers are required for reading discs on these operating systems.


### **Windows 3.xx™ and MS-DOS™**

If you require the drive to be recognised by Microsoft Windows 3.xx or MS-DOS you will need to install the MS-DOS™ device driver. It can be downloaded from our support web site:

<http://www.sony.com.au/support/itp>

**NOTE:** If using Windows 95 or later and you have previously installed the MS-DOS device driver it is recommended that you disable or remove MS-DOS device driver as it will decrease performance.

Front Panel

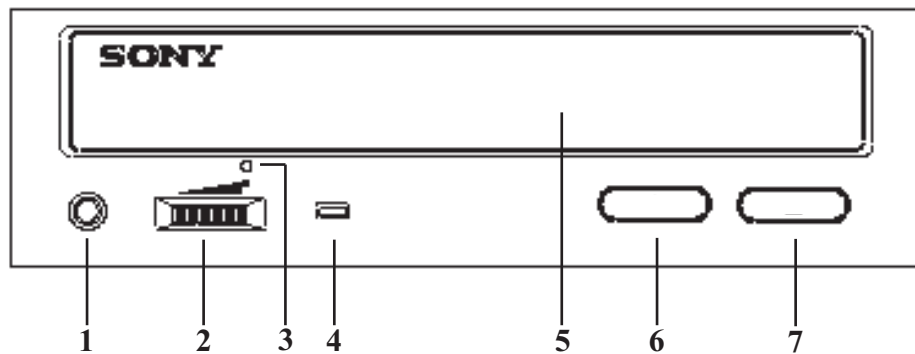

- 1 - Earphone Jack     Stereo mini-jack for headphones and/or powered speakers.
- 2 - Volume Control     Control volume of earphone jack. This control has no effect on rear panel audio output.
- 3 - Emergency Eject     In case the Eject button isn't working, insert a small paper clip into this hole to eject the tray.  
**Note:** Turn off the power before doing this manual ejection.
- 4 - On/Busy LED     The On/Busy LED will be flashing while the CD-ROM drive is busy.
- 5 - Disc Tray     The user can open or close the disc tray by pressing the Open/Close button.
- 6 - Play/Skip     Will start playing of an Audio-CD or Skip to next track if already playing an Audio-CD.
- 7 - Stop/Eject/Speed     Will eject the tray if a CD-ROM is playing.  
Will stop an Audio-CD playing, pressing it again will eject the tray as usual.  
Pressing this button can also change the max drive speed. The default max speed is 40X. Press and hold for 5 seconds to change the drive speed from 40X to 52X.  
Tray out disc will reset drive speed from 52X to 40X automatically.

“Maximum Speed Choice” function

The CDU-5211 has a Maximum Speed Choice function where the user can select between maximum speeds of 40X or 52X.

The drive always defaults to 40X.

To activate 52X operation press and hold the Stop/Eject button for 5 seconds.

The drive will then read the current disc at 52X speed.

When the disc is ejected the drive will default back to 40X operation.

It is recommended that 52X operation only be activated under the following conditions

- You are confident that the disc been used is in good condition and free from marks and scratches.
- The disc is well balanced and does not have thick printed ink or adhesive labels attached to its surface.
- The disc is not physically damaged in any manner.

Discs that have the above characteristics may reduce maximum transfer speeds due to excessive disc vibration at 52X.

**NOTE:** Physically damaged discs may void warranty - refer to “Warnings & Precautions” on page 7 of this manual.

## System Requirements

To ensure stable performance, the following system specifications are recommended.

<b>OS</b>	DOS 6.xx or higher, Windows 3.1x, 95/98/ME/2000/ NT 4.0, OS/2 Warp 3.0 or higher.
<b>Interface</b>	Vacant IDE interface connector

**NOTE:** To operate the drive using DOS 6.xx or higher you will need to install the DOS device drivers. These are available for free download from our support web site:

<http://www.sony.com.au/support/itp>

## Hardware Installation

Please refer to your PC's user manual and follow their guidelines for adding hardware components. Always follow their anti-static precautions.

- 1 Set the Master/Slave jumper on CD-ROM rear panel (refer to figure 1)
- 2 Locate an empty drive bay and slide the CD-ROM drive into the bay. Secure with four screws.
- 3 Connect the power supply cable to the CD-ROM drive. (Ensure the pin definition of power connector is the same as shown in figure 1).
- 4 Connect the 40 pin IDE / ATAPI cable to the CD-ROM drive according to the description in figure 1 (Note: Pin 1 on the cable is generally indicated by a red stripe along the edge of the ribbon cable).
- 5 Connect the sound cable from the Analogue Audio on the rear panel of CD-ROM to your sound card (if you have a sound card in your system).
- 6 Follow you PC's user manual to re-assemble your PC.

**NOTE:** For optimum performance on Windows based systems the drives DMA setting in the device manager should be enabled. Refer to your Systems help menu for assistance.

## Connections and Settings

There are three pairs of jumpers, MA (Master), SL (Slave) and CS (Cable Select) on the rear panel of your CD-ROM drive. Figure 1 shows the location of each jumper.

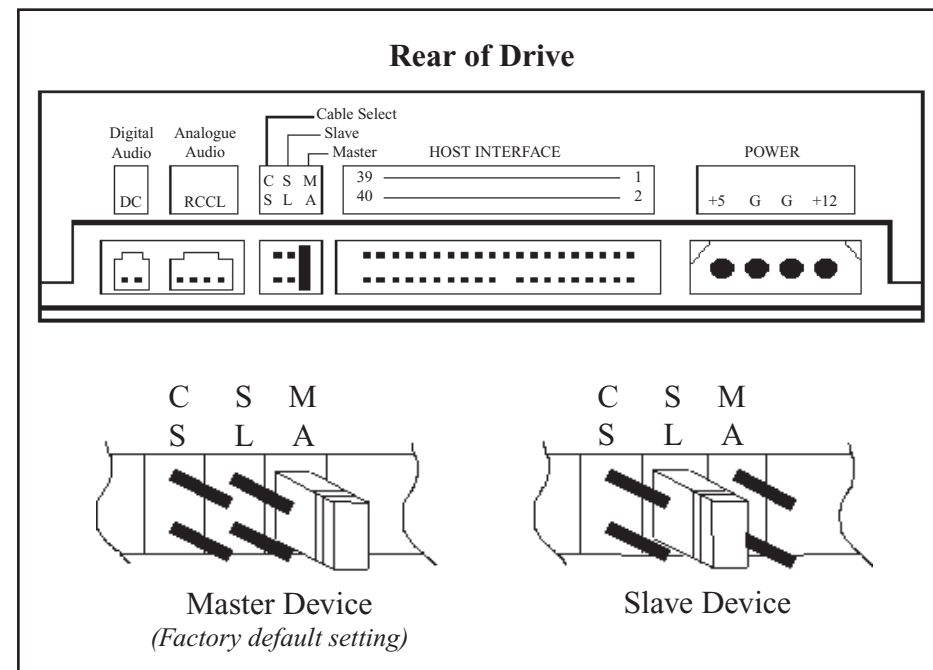


Figure 1

## CS (CSEL)

If your system supports the CS setting you can set the jumper to the "CS" position. The Master/Slave setting will then be made automatically depending on your hardware Configuration. No jumper is then required on the "MA" or "SL" pins.



## Connecting the IDE cable

Most PC systems can connect up to 4 devices on the IDE ports. Your PC should consist of a "Primary IDE Bus" and a "Secondary IDE Bus" each of which can have two devices connected to it - a "Master device" and a "Slave device" Refer Figure 2.

In most PC systems, the hard disk drive is set as the "Master Device" on the "Primary IDE Bus", **this should not be altered.**

If available it is recommended that you connect the CD-ROM drive as the "Master Device" on the "Secondary IDE Bus".

The CD-ROM drive can also be set as the "Slave Device" on either bus if both of the "Master Device" possibilities have been taken by other devices. Some devices such as CD writers and DVD drives may be required to be set as the "Master Device", in this case it is OK to set the CD-ROM drive as the "Slave Device".

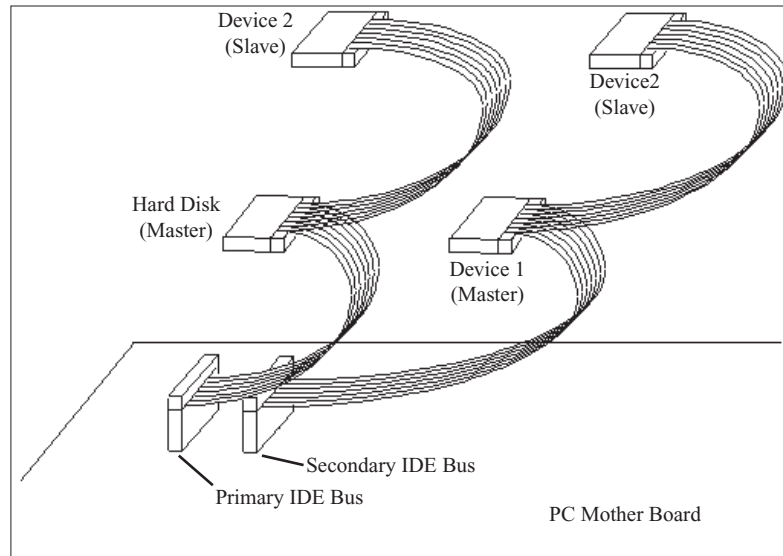


Figure 2

If you experience any trouble during installation or normal use of your CD-ROM drive, please refer to the following information.

You will find further information on our support web site:

<http://www.sony.com.au/support/itp>

## Symptoms

Appears to have no power.

CD drive not recognised by system.

The disc tray will not open.

Cannot read data on discs.

No sound.

## Action

Check DC power cable connection.

Check IDE interface connections.  
Check the MASTER/SLAVE settings of all devices.

Disable the "lock eject" feature software of the operating system.  
Shut power down and use emergency eject hole to eject disc.

Check the surface of CD media, always keep it clean and free from scratches.  
Check the quality of CD media.  
Check if other discs or music CD's are reading OK.  
Is Disc inserted upside down?  
Could disc be a UDF formatted disc? Check if a UDF reader is installed.

Check sound cable connections.  
Check the volume settings of the drive and operating system volume controls.  
Are speakers turned on?

## General

Host Interface	ATA-PI compliant.
Acceptable Formats	CD-DA, CD-Rom mode 1, CD-Rom/XA mode 2 form 1 & form 2, CD-I Ready, Video CD (MPEG-1), Karaoke CD, Photo CD, Enhanced CD, CD extra, I-Trax CD, CD-Text and UDF.
Acceptable Media Types	CD-Rom, CD-R, CD-RW,
Acceptable Disc Diameters	12 cm and 8 cm.

## Performance

Rotational Speeds	CD-Rom, Max - 52X, 7800 KB/sec. CD-Rom, Max - 40X, 6,000 KB/sec.
Random access time	80 ms.
Data Buffer	128 KB.
Burst Data Rate	Ultra DMA- 33.3 MB/sec. DMA mode 2- 16.6 MB/sec. PIO mode 4- 16.6 MB/sec.

## Audio

Earphone Output (Front)	0.7 +/- 0.2 VRMS @ 33Kohms, 1KHz, 0db
Line Output (Rear)	0.7 +/- 0.2 VRMS @ 47Kohms, 1KHz, 0db
Digital Output	5.0 Vp-p - SPDIF Standard

## Reliability

Error Rate	Mode-1 (ECC on) 10 -12 Block/Bit Mode-2 (ECC off) 10 -9 Block/Bit
MTBF	70,000 POH @ 25% duty cycle

## Power Requirements


Operation Max	+5V = 1.0 amps
	+12V = 1.5 amps
Sleep Average	+5V = 0.03 amps
	+12V = 0.01 amps
Voltage Requirements	+5V +/- 5% and less than 100m Vp-p ripple voltage
	+12V +/- 10% and less than 200m Vp-p ripple voltage

## Environmental Conditions

Operating	Temp	5°C to 45°C
	Humidity	10% to 80% RH
	Altitude	0 ~ 3,500 m
Non Operating	Temp	-35°C to 60°C
	Humidity	10% to 90% RH
	Altitude	0 ~ 12,500 m

## Dimensions & Mass

Dimensions	145.8 x 41.3 x 190 mm (WxHxD +/- 0.5mm)
Weight	0.9Kg

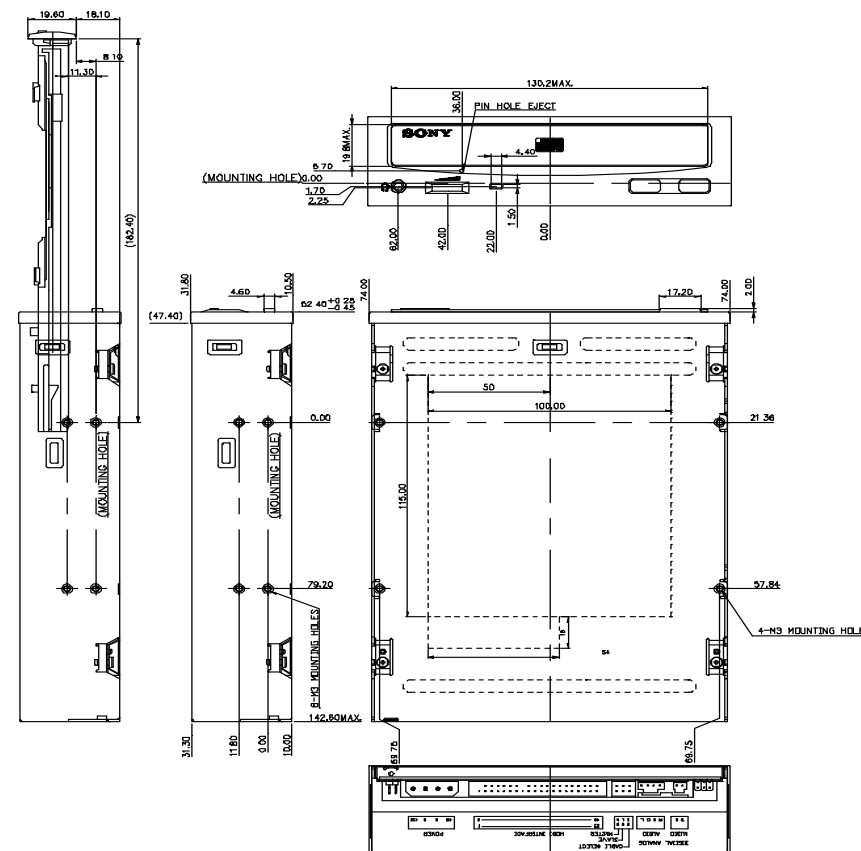

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>