

SONY®

2-660-786-02 (1)

Streaming Receiver Adaptor

Operating Instructions


BKM-FW50

© 2005 Sony Corporation

Using the BKM-FW50 Streaming Receiver Adaptor


When not connected to a network

Playback still image or video files from a memory card

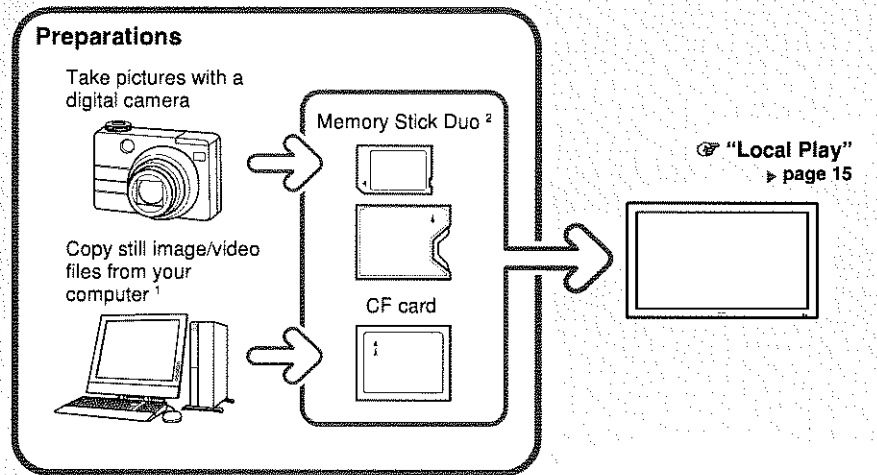

When connected to a network

Playback still image or video files downloaded from a network

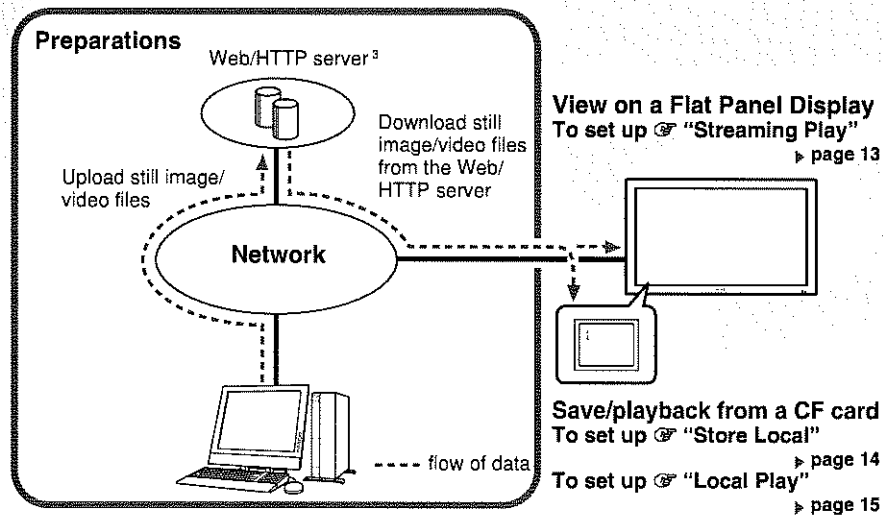

¹ Memory card reader/writer required. ² CF slot adaptor required. ³ Apache and IIS (Internet Information Server) are the only supported servers for downloading and playing back still image and video files.

Table of Contents

| | |
|---|----|
| Precautions | 4 |
| About This Manual | 4 |
| Names and Functions of Parts and Controls | 5 |
| Installation | 6 |
| Playback of Still Images or Video From a CF Card | 7 |
| Compatible media and file formats | 7 |
| Inserting a CF card | 7 |
| Using slide show playback | 8 |
| Preparations for Using the Network Functions | 9 |
| Assigning a fixed IP address to the BKM-FW50 | 9 |
| Automatically obtaining an IP address | 10 |
| Computer Operation | 11 |
| Controlling the display | 11 |
| Setting items on respective screens | 11 |
| Troubleshooting | 22 |
| List of Error Codes | 24 |
| Specifications | 27 |

Precautions

- The software specifications of this unit are subject to change for improvements without notice.
- Screens shown by application software may differ slightly from the illustrations shown in this manual.
- For safety, connect the port of this unit only to a network where there is no danger of excessive voltage or voltage surges.
- The steps described in this manual are guaranteed only for use under the following environment conditions.

Operating system:

Microsoft Windows XP

Browser:

Microsoft Internet Explorer 6.0 or later

- The following may result in damage to data or damage to the CF card or Microdrive:
 - Ejecting a CF card while it is being accessed
 - Placing a Microdrive near a strong magnet
- The Microdrive is a compact hard disk drive. Because it is storage medium utilizing a rotating disk, it is more susceptible to shocks and impact when compared to flash memory devices such as the Memory Stick and the CF card.
- To ensure security on the network, setting a user name and password is recommended. For information on how to make these settings, see the section “Setup screen” (page 20).
- Because the unit reaches high temperatures when placed near the display and used for a long period of time, be careful when removing it from the display.


-
- Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States of America and/or other countries.
 - CompactFlash and CF card are trademarks of SanDisk USA.
 - Microdrive is a registered trademark of Hitachi Global Storage Technologies.
 - Memory Stick and Memory Stick Duo are trademarks of Sony Corporation.
 - All other product names, company names, etc. mentioned in this manual are trademarks or registered trademarks of their respective owners.

About This Manual

This manual describes use and operation of the BKM-FW50 as installed in a Flat Panel Display of the FWD series and connected to a network.

For information on regular operation of the display, consult the operating instructions of the FWD series product.

Names and Functions of Parts and Controls

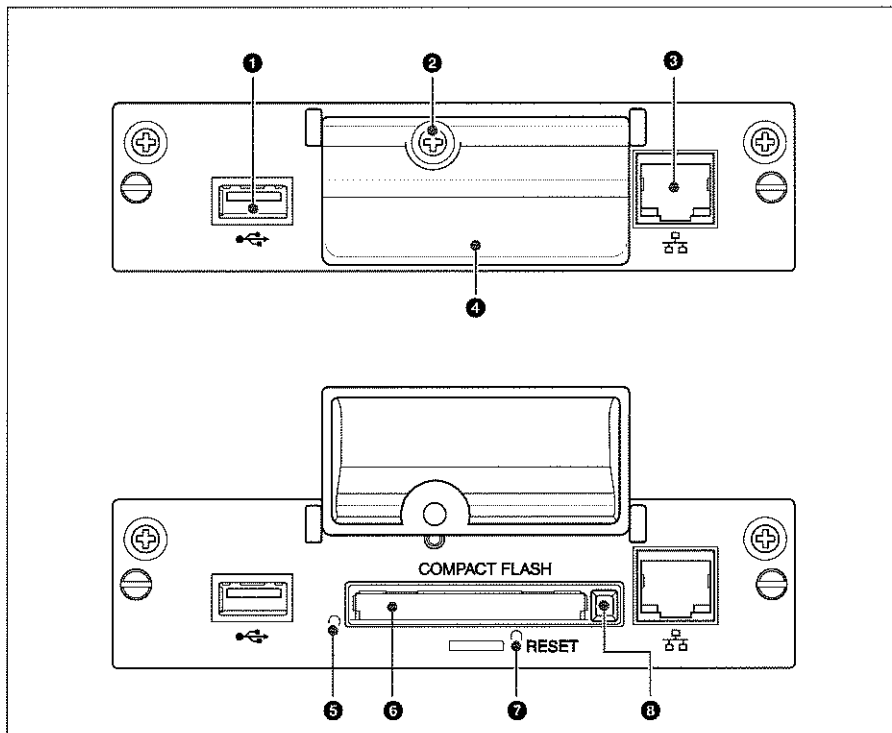

① USB port

The port will be used for expanded functions to be introduced in future.

② Memory card slot cover fastening screw

③ Network connector (10BASE-T/100BASE-TX)

Serves to connect the unit to a network, using a 10BASE-T/100BASE-TX LAN cable.

④ Memory card slot cover

⑤ Access indicator

Lights green when a CF (CompactFlash) card is being accessed by the unit. Before inserting a CF card, make sure to read "Precautions" on page 4.

⑥ Memory card slot

Accepts a CF card or a Microdrive.

⑦ RESET button


When this button is pressed and held for more than 3 seconds, all settings of the unit revert to the default condition.

⑧ Eject button

Press this button to remove a CF card from the memory card slot.


Installation

Before installation


- Turn off power to the display and all other equipment connected to the display. For the display, proceed as follows: press  to put the display into standby mode and then disconnect the power cord from the AC outlet.
- While carrying out the installation, the display must be firmly secured.

Install the BKM-FW50 inside the display as follows.

- 1 If an optional adaptor is installed, loosen its fastening screws (top and bottom) by turning counterclockwise with a flatblade screwdriver and then carefully pull out the adaptor from the display.

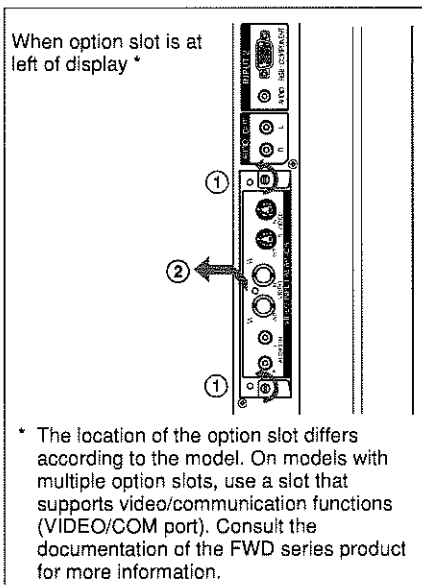

- 2 Insert the BKM-FW50 into the display with correct orientation. Make sure that the adaptor is firmly seated in the internal connector of the display. Then tighten the fastening screws (top and bottom) with a flatblade screwdriver and perform the necessary connections.

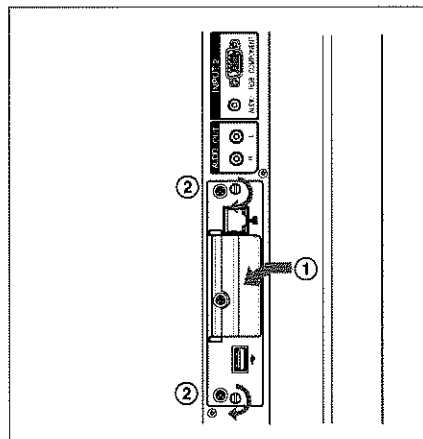

Caution

Do not touch the connector section

Never touch the connector section inside the display. Otherwise there is a risk of accidents or damage.

Playback of Still Images or Video From a CF Card

The BKM-FW50 is equipped with a memory card slot that accepts CompactFlash cards (not supplied). If you insert a CF card that contains images shot with a digital still camera into the slot of the BKM-FW50, the images can be viewed on the display in a slide show format. You can make various settings for playback of still images or video. For information on how to make these settings, see the section "Computer Operation" (page 11).

Compatible media and file formats

- Media:** CF (CompactFlash) card, Microdrive
- File format:** JPEG format, MPEG2 format etc. (For details, see page 13.)
- Recommended resolutions:**
1360 × 768, 1280 × 768,
1024 × 768
- Maximum resolution*:**
2592 × 1944
- Minimum resolution:**
640 × 480

* The higher the resolution, the longer images take to display.

Notes

- The following may result in damage to data or damage to the CF card or Microdrive:
 - Ejecting a CF card while it is being accessed
 - Placing a Microdrive near a strong magnet
- A CF card or a Microdrive can be used as storage media for the BKM-FW50.

CF card

- Buffalo: RCF-G256MB (256 MB)
RCF-G512MB (512 MB)
RCF-X64MY (64 MB)
RCF-X256MY (256 MB)
RCF-X512MY (512 MB)

- SanDisk: SDCFB 64M (64 MB)
SDCFB 512M (512 MB)
SDCFH 512MB (512 MB)
SDCFH 2GB (2 GB)

- Hagiwara Sys-Com:
HPC-CF64V (64 MB)
HPC-CF512V (512 MB)
HPC-CF512ZP (512 MB)


Microdrive

- Hitachi: HMS360402D5CF00 (2 GB)
HMS360604D5CF00 (4 GB)

- Compatibility with CF cards and Microdrives has been confirmed but is not guaranteed for all CF cards and Microdrives.

Inserting a CF card


- 1 Remove the memory card slot cover fastening screw with a Phillips screwdriver.

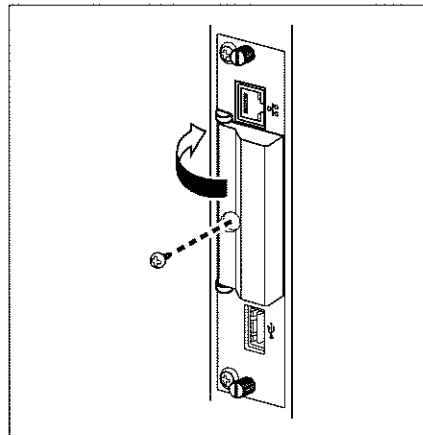

- 2 Open the memory card slot cover and insert the CF card into the memory card slot.

Note

Take care to insert the CF card with correct orientation, as shown in the illustration.

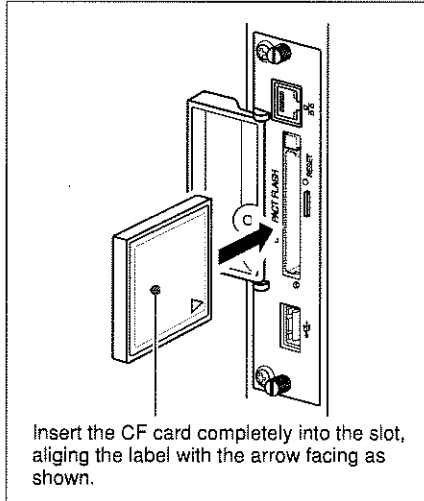

- 3** Replace the memory card slot cover and tighten the fastening screw with a Phillips screwdriver.

Using slide show playback

When a CF card which contains still images taken with a digital still camera is inserted into the BKM-FW50, JPEG format still image files will be automatically detected, and the images will be shown on the display as a slide show. (The input signal for the display must be set to OPTION 1 RGB at this time. For details, consult the operating instructions of the display.) In addition, the BKM-FW50 is set to automatically display any still image or video slide show saved in the "DCIM\101MSDCF" folder, as the factory default.

Note

The "DCIM\101MSDCF" folder is automatically created with the Sony Cyber-shot digital camera. With some models, a "DCIM\100MSDCF" folder is created. For details, consult the operating instructions of the Cyber-shot.

When inserting a Memory Stick Duo into the BKM-FW50, insert it into a commercially available Memory Stick Duo to CF adaptor first.

8 Playback of Still Images or Video From a CF Card

When using a digital camera other than the Cyber-shot, edit the memory card that was used when taking the pictures, create a folder, "DCIM\101MSDCF", on the CF card, and move the pictures you wish to view into the folder before inserting the CF card into the BKM-FW50.

Detailed control of playback method

When the display is connected to a network via the BKM-FW50, any still image or video file stored on the CF card can be shown on the display. For information on settings and operation in this case, see the section "Computer Operation" (page 11).

Removing the CF card

Note

When the access indicator is lit, images are being stored or read. Never eject a CF card or turn the power off during this time. Doing so may result in damage to data or the CF card itself.

- 1** Remove the memory card slot cover fastening screw with a Phillips screwdriver.
- 2** Press the eject button to remove the CF card.
- 3** Replace the memory card slot cover and tighten the fastening screw with a Phillips screwdriver.

Preparations for Using the Network Functions

The BKM-FW50 can be connected to a network with 10BASE-T/100BASE-TX LAN cable.

When connected to a LAN, the IP addresses of the BKM-FW50 can be set using one of the following two methods. Consult your network administrator regarding details about IP address selection.

- **Assigning a fixed IP address to the BKM-FW50**

Normally this method should be used.

- **Automatically obtaining an IP address**

If the network to which the BKM-FW50 is connected has a DHCP server, you can have the DHCP server automatically assign an IP address. Note that in this case the IP address will change every time the display in which the BKM-FW50 is installed is turned on.

Assigning a fixed IP address to the BKM-FW50

Note that a separate IP address is necessary for the display control function and for the still image/video playback function. Regarding details of IP address selection, consult your network administrator.

Setting an IP address for the display control function

First, assign an IP address to the display control function, using the following procedure. The IP address assigned in this way is used for calling the display control function of the BKM-FW50 from a computer on the network. Also consult the operating instructions of the display.

- 1 Connect the BKM-FW50 installed in the display to the network, using suitable LAN cable.
- 2 Turn power to the display on and wait for about 30 seconds.

- 3 Press the MENU button on the display to bring up the main menu.
- 4 Use the \uparrow/\downarrow buttons to select "INITIAL SETUP/INFORMATION" and press the ENTER button. The "INITIAL SETUP/INFORMATION" menu appears.
- 5 Use the \uparrow/\downarrow buttons to select "IP Address Setup" and press the ENTER button.
- 6 Use the \uparrow/\downarrow buttons to select "Manual" and press the ENTER button.
- 7 Enter the necessary items.
 - 1) Use the \uparrow/\downarrow buttons to select the item to enter manually and press the ENTER button. A cursor appears in the leftmost field of the selected item.
 - 2) Use the \uparrow/\downarrow buttons or the numeric buttons on the remote control to enter a three-digit number (0 - 255). When you press the ENTER button or the \rightarrow button, the cursor moves to the next field on the right. Enter a number in the same way.
 - 3) When all four fields of an item have been set, pressing the ENTER button or the \rightarrow button confirms the entry for that item.
 - 4) Make settings for the other items in the same way.
- 8 Use the \uparrow/\downarrow buttons to select "Execute" and press the ENTER button.

Next, assign an IP address to the still image/video playback function.

Setting an IP address for the still image/video playback function

- 1 Start the browser of the computer (Internet Explorer 6.0 or later).

- 2 Enter the IP address that was assigned to the display control function into the address field, in the format "http://xxx.xxx.xxx.xxx". Then press the Enter key on the keyboard.
When a user name and password have been set, the "Network Password" screen appears. Enter the user name and password that were set, and then proceed to the next step.
- 3 Click the "Setup" tab.
The "Setup" screen appears. This screen lets you set up the Network Password. The factory default settings are as follows:
Name: root
Password: fw50ad
- 4 Click the "Network" button.
- 5 Under "Internet Protocol (TCP/IP)", click "Specify an IP address". Then enter the IP address for the still image/video playback function in the input fields.
- 6 Click "Apply".

Automatically obtaining an IP address

If you set up the display as described below, an IP address can be assigned automatically by a DHCP server on the network.

- 1 Connect the BKM-FW50 installed in the display to the network, using suitable LAN cable.
- 2 Turn power to the display on and wait for about 30 seconds.
- 3 Press the MENU button on the display to bring up the main menu.

- 4 Use the \uparrow/\downarrow buttons to select "INITIAL SETUP/INFORMATION" and press the ENTER button. The "INITIAL SETUP/INFORMATION" menu appears.
- 5 Use the \uparrow/\downarrow buttons to select "IP Address Setup" and press the ENTER button.
- 6 Use the \uparrow/\downarrow buttons to select "DHCP" and press the ENTER button.
- 7 Use the \uparrow/\downarrow buttons to select "Execute" and press the ENTER button.

Note

The IP address may not be obtained correctly, depending on the router being used. Confirm the specifications and operations of the router before use.

Checking the automatically assigned IP address

When an IP address has been automatically assigned, you can call up the display control screen of the BKM-FW50 as follows and check which IP address has been assigned. The IP address changes each time power to the display is turned on. Therefore you must check the IP address as described here every time after turning power to the display off and on again.

- 1 Press the MENU button on the display to bring up the main menu.
- 2 Use the \uparrow/\downarrow buttons to select "INITIAL SETUP/INFORMATION" and press the ENTER button. The "INITIAL SETUP/INFORMATION" menu appears.
- 3 Use the \uparrow/\downarrow buttons to select "INFORMATION" and press the ENTER button.
- 4 Check the IP address that is displayed in the "IP address" field.

Computer Operation

Controlling the display


You can make various display settings on the screen of the computer. Make sure that the BKM-FW50 is properly installed in the display, and that the BKM-FW50, computer, and router or hub are properly connected with network cable. Then turn on power to the display, the computer, and the router or hub. There are five display screens, divided by function: "Information" screen, "Configure" screen, "Control" screen, "Player" screen, and "Setup" screen.

For details on button functions, consult the operating instructions of the FWD series product.

- 1 Start the browser of the computer (Internet Explorer 6.0 or later).
- 2 Enter the IP address that was assigned to the display control function into the address field, in the format "http://xxx.xxx.xxx.xxx". Then press the Enter key on the keyboard. When a user name and password have been set, the "Network Password" screen appears. Enter the user name and password that were set, and then proceed to the next step.
- 3 Click the function tab at the top of the screen and select the desired screen.

Setting items on respective screens


Information screen

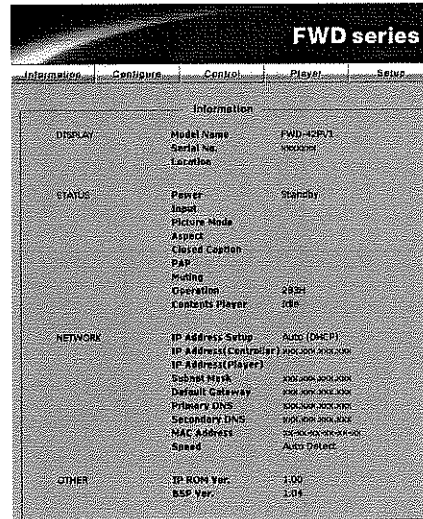

This screen shows the model name, serial number and other display information, as well as the power status and the input signal selection.

The screen is for information only. There are no items that can be set.

This screen also displays error information.

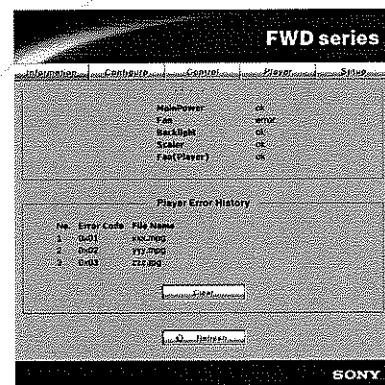

For details on error information, see "List of Error Codes" (page 24).


Clear (Delete)

Lets you delete error information displayed in the Player Error History.

Note

Up to 30 errors appear in the Player Error History in the order that they occurred. As new errors occur after this maximum is reached, old error information is deleted, starting with the oldest.

Configure screen

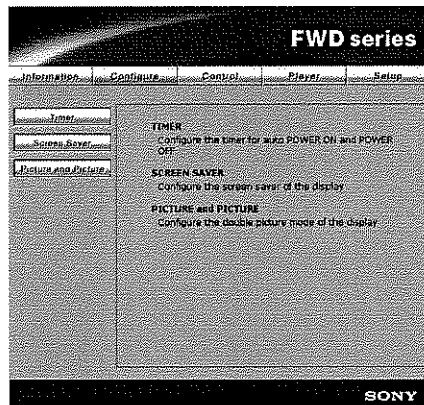

Timer

Lets you make settings for the timer function.

Click "Apply" when done.

Screen Saver

Lets you make settings for the screen saver function.

Click "Apply" when done.

Picture and Picture


Lets you make settings for the Picture and Picture function.

Click "Apply" when done.

Note

For details on these functions, consult the operating instructions of the FWD series product. Not all functions are supported by all display models.

Control screen

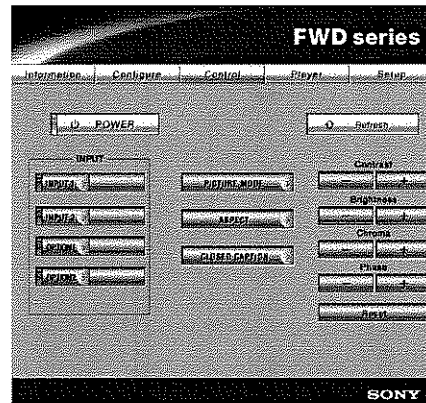

POWER

Switches the display on or off.

INPUT

Lets you select the input signal.

PICTURE MODE

Lets you select the picture mode.

ASPECT

Lets you switch the aspect ratio of the image.

CLOSED CAPTION

Lets you control the display of subtitles on the screen.

When PICTURE MODE has been set to User1, User2, or User3, the following adjustments are possible. (Also consult the operating instructions of the FWD series product.)

Contrast +/- buttons

Adjust the screen contrast.

Brightness +/- buttons

Adjust the screen brightness.


Chroma +/- buttons

Adjust the color intensity.

Phase +/- buttons

Adjust the color balance.

Player screen

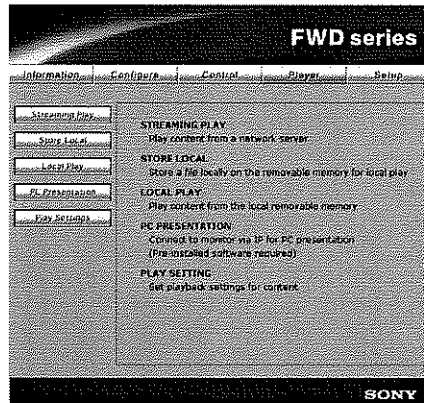

This screen lets you make settings for still image and video playback and operate the PC Presentation function of the BKM-FW50.

Supported file formats

The following formats are supported for still image/video playback.

| File type | File format | Extension |
|-------------|---|----------------|
| Still image | JPEG format | jpg, jpe, jpeg |
| | GIF format | gif |
| | PNG format | png |
| | BMP format | bmp |
| Video* | MPEG2 PS format (Up to 15 Mbps; 480p or 576p recommended) | mpg, m2v, mpeg |
| | MP3 format | mp3 |

* Format of audio in video files:

- Linear PCM
- MPEG-1 Audio Layer-2 (MP2)
- MPEG-1 Audio Layer-3 (MP3)


Supported servers

The following Web/HTTP server formats are supported:

- Apache
- IIS

The server software must be installed beforehand. For details, consult the respective operating instructions of each server software.

Streaming Play

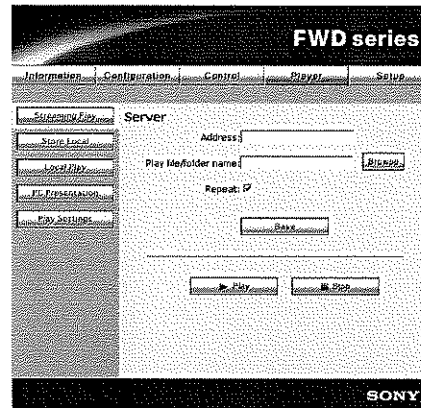

This screen lets you make settings for display and playback of still image and video files stored on a Web/HTTP server.

Note

A maximum of 1,000 files are playable with Streaming Play. Each file can be no larger than 2 GB in size.

Server Address

Enter the address of the Web/HTTP server where the still image or video files are stored. When entering the IP address of the server, enter it in the format, "http://xxx.xxx.xxx.xxx" ("xxx" represents a figure no more than three digits).

Play file/folder name

Specifies the location of the still image or video files on the Web/HTTP server specified in the "Server Address" field. You can either enter the location in the text box or click the "Browse" button and select the file or folder location on the screen that appears.

Notes

- If an "index.html" file is stored in the folder, other files and folders contained in the folder are not displayed.
- Files are played in ASCII code order. Naming files in alphabetical or numerical order is recommended.

Repeat

Select this check box if the still images or video files are to be played back repeatedly.

Save

Saves the settings made on this screen.


Play

Starts playback of the selected file or of the still image/video files in the folder specified in "Play file/folder name".

Stop

Stops still image/video playback that was initiated by clicking the "Play" button.

Store Local

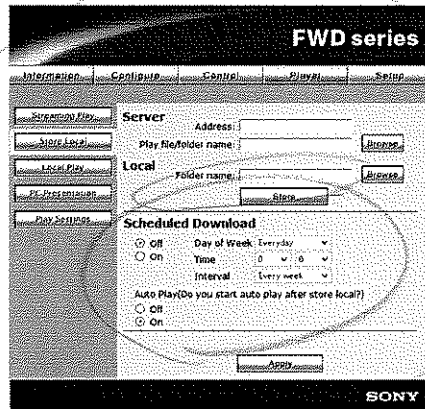


This screen lets you download still image/video playback files stored on the Web/HTTP server and save them on a CF card (not supplied) inserted in the memory card slot of the BKM-FW50.

Server Address

Enter the IP address of the Web/HTTP server.

Play file/folder name

Specifies the location of the still image or video files on the Web/HTTP server specified in the "Server Address" field. You can either enter the location in the text box or click the "Browse" button and select the file or folder location on the screen that appears.

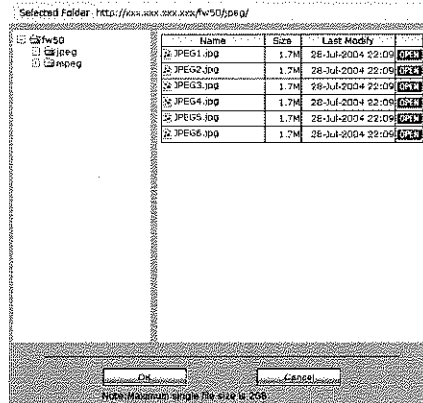


Note

If an "index.html" file is stored in the folder, other files and folders contained in the folder are not displayed.

Folder name

Specifies the save location on the CF (CompactFlash) card inserted in the memory card slot. You can either enter the location in the text box or click the "Browse" button and select the file or folder location on the screen that appears.

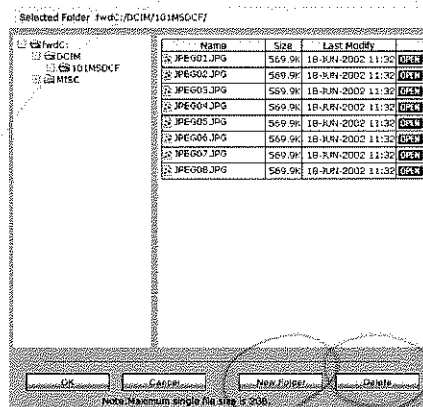

Delete

Deletes a file or folder saved on the memory card inserted in the unit.

New Folder

Creates a new folder on the memory card inserted in the unit.

Store

Starts downloading the still image or video file or the contents of the folder specified in "Play file/folder name".

Scheduled Download

This function lets you periodically download still image or video files from a Web/HTTP server to an inserted memory card. You can select the day of the week, the time, and the interval.

Notes

- When setting the start time for the scheduled download function, select a time when the display will be turned off. If the display is already on when download begins, displaying the image on the screen takes priority over the download. In such a case, a file may not be downloaded properly.
- When setting the start time for download, take the on/off timer setting on the display into consideration, as well.
- Do not turn the display off while a file is in the process of being downloaded. Doing so may cause the file to be downloaded improperly.


Auto Play

By selecting the "On" setting here, data downloaded from a Web/HTTP server is given priority, even if "On" is selected for "Auto Play" in the "Play Settings" screen (page 17), and automatic playback of still image and video files begins after downloading is complete.

Note

If the filename of a file downloaded from the server already exists on the CF (CompactFlash) card inserted in the memory card slot, the existing file will always be overwritten. When there is no space left on the CF card, an error will occur in the Scheduled Download function, and automatic downloading of new content will stop.

Local Play

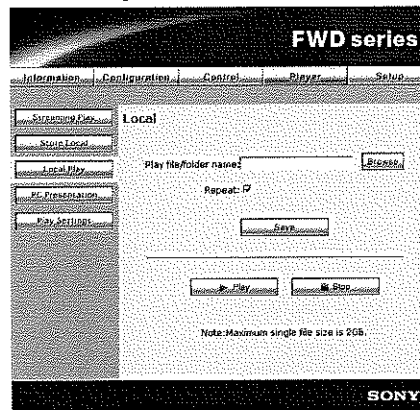


This screen lets you make settings for display and playback of still image and video files stored on a CF (CompactFlash) card inserted in the memory card slot of the BKM-FW50.

Note

A maximum of 1,000 files are playable with Local Play. Each file can be no larger than 2 GB in size.

Play file/folder name

Specifies the location of the still image or video files on the CF card. You can either enter the location in the text box or click the "Browse" button and select the file or folder location on the screen that appears. The "DCIM\101MSDCF" folder is set as the factory default.

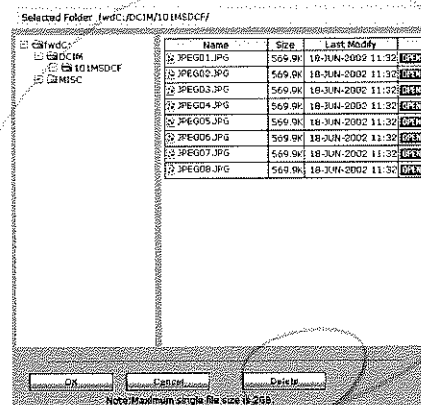

Delete

Deletes a file or folder saved on the memory card inserted in the unit.

The "DCIM\101MSDCF" folder is set as the "Play file/folder name" as the factory default.

Repeat

Select this check box if the still images or video files are to be played back repeatedly.

Save

Saves the settings made on this screen.


Play

Starts playback of the selected file or of the still image/video files in the folder specified in "Play file/folder name".

Stop

Stops still image/video playback that was initiated by clicking the "Play" button.

PC Presentation

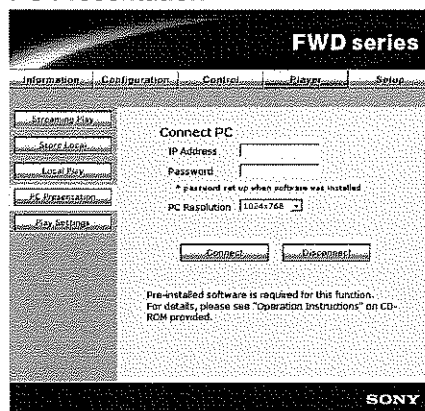

This screen lets you start and stop the PC Presentation function of the BKM-FW50. By showing the contents of the computer desktop on the display, the PC Presentation function allows using the display as an external monitor for the computer.

Note

To enable use of the PC Presentation function, UltraVNC must be installed on the computer.

UltraVNC is free software licensed under GNU GPL.

Connect PC

Select this to enable the PC Presentation function of the BKM-FW50. The following items also need to be set.

IP Address:

Enter the IP address of the computer. Enter the IP address in the following format: "xxx.xxx.xxx.xxx" ("xxx" represents a figure no more than three digits)

Password:

Enter the password that was set during the installation of UltraVNC.

PC Resolution:

Select the screen resolution of the connected computer. If the resolution selected here differs from the computer's actual resolution, the screen will not display at the proper size. Select a resolution so the screen size matches the display.


Connect

Starts the PC Presentation function. When you click this button, the desktop screen of the computer at the specified IP address appears on the display.

Disconnect

Select this to disable the PC Presentation function.

Play Settings

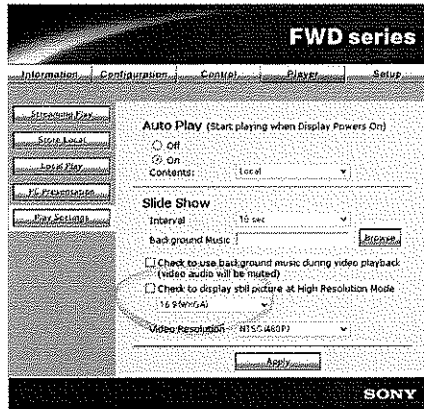

This screen lets you make settings for the slide show function and for automatic display and playback of still image and video files.

Auto Play

This setting specifies whether still image/video file playback should start automatically when the display in which the BKM-FW50 is installed is turned on. In combination with the ON timer of the display, this also allows automatic playback at a scheduled time.

To enable the function, select the "On" setting. From the "Contents" drop-down list, select either "Streaming" (automatic playback of still image/video files stored on a computer on the network) or "Local" (automatic playback of still image/video files stored on a CF card inserted in the BKM-FW50). "On" is selected as the factory default.

Slide Show

The following items can be set for the slide show function.


Interval:

Specifies the time interval until switching to the next still image or video.

Background Music:

Lets you specify background music to be played during the slide show. Only music files stored on a CF card inserted in the BKM-FW50 can be used for this function.

You can either enter the file name in the text box, or enter the folder name, click the "Browse" button, and specify the file in the screen that appears.

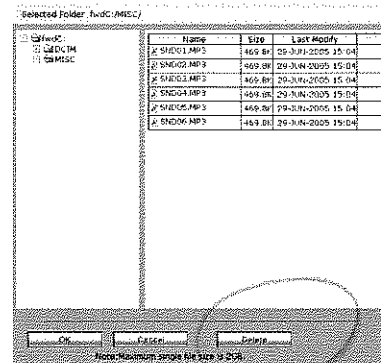

Delete

Deletes a file or folder saved on the memory card inserted in the unit.

Check to use background music during video playback (video audio will be muted):

When this check box is selected, Background Music playback will be available while any video files contained in the slide show are played back, but audio included in the video files will be muted.

Check to display still pictures in High Resolution Mode:

When this check box is selected, still images are displayed at high resolution (WXGA or XGA). If the folder includes both video files and still images, the screen turns off for several seconds to switch resolution when changing from a still image to a video (and vice versa).

The following aspect ratios can be selected for the input images.

- 16:9 (WXGA): View 16:9 images in full screen display.
- 4:3 (XGA): View 4:3 images on 4:3 normal screen.
- AUTO: Automatically detects the aspect ratio.



Make selections based on the aspect ratios of the images you wish to view. When viewing still image files, we recommend making the aspect ratios of each file the same.

Notes

- When playing files with mixed aspect ratios, black bars may appear on either side of the display, or the image may be stretched lengthwise.
- Still images with aspect ratios other than 16:9 or 4:3 can also be displayed, but black bars may appear at the top, bottom, and either side of the display, or the image may be stretched lengthwise.
- When the BKM-FW50 is connected to a display, the RGB mode is set to DTV mode. In DTV mode, the unit automatically enters over scan mode, and any text on the outer edges of an image will be cut off. For the FWD-40LX1/32LX1R/50PX2, set the over scan mode to OFF.


**Standard Resolution Mode
(Default Values): 480P**

Input still image

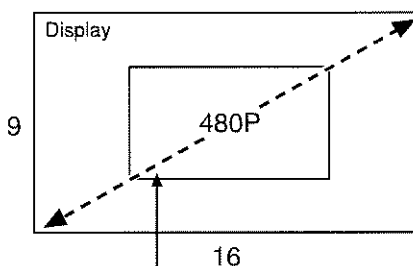


Standard resolution
The input still image is converted to standard resolution, and is enlarged according to the aspect ratio of the display.

Display: Full mode

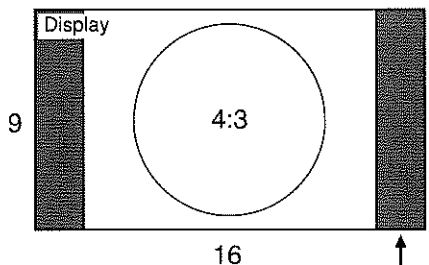

Black bar



Display: Full mode

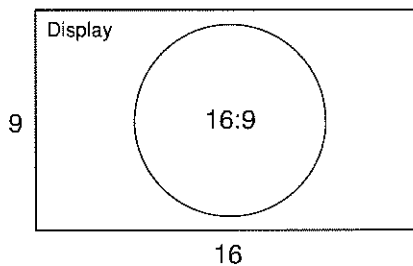


The input still image is displayed in the original aspect ratio.

High Resolution Mode: 16:9 (WXGA)

Input still image

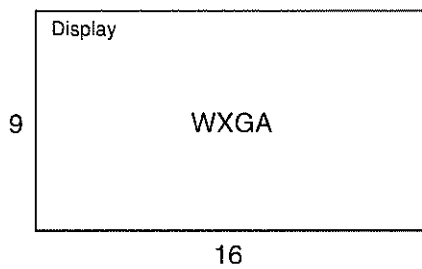



Display: Full mode

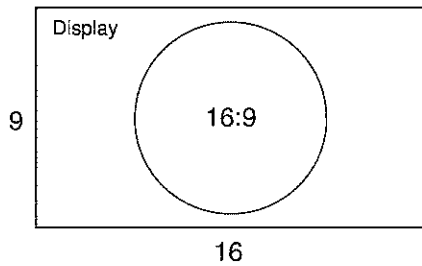


The input still image is displayed in the original aspect ratio.

High resolution mode: 4:3 (XGA)

Input still image

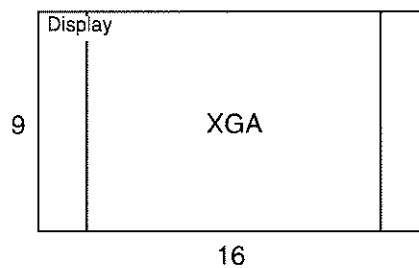


Display: Full mode

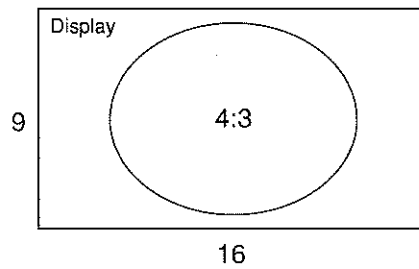

The input still image is stretched lengthwise but fills the entire screen.

Display: Normal mode

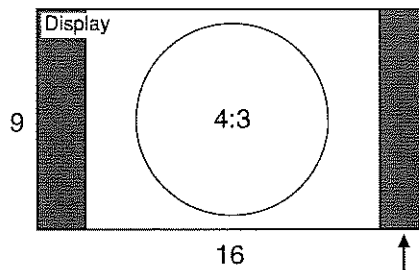

Black bar

The input still image is displayed in the original aspect ratio.


Video Resolution

Select NTSC (480p) or PAL (576p) as the playback resolution for video.

Apply

Click here to save the settings.

Setup screen

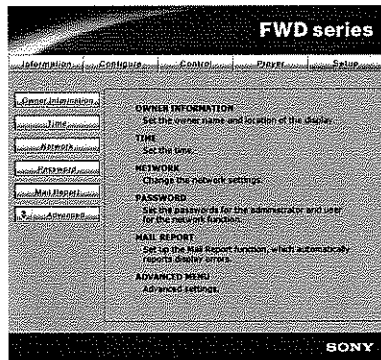

This screen lets you set up the Network Password. The factory default settings are as follows:

Name: root
Password: fw50ad

After you have made any changes or entered information, click "Apply" at the bottom of each screen to enable the settings. Special characters cannot be used in the text fields.

Owner Information

Owner

Enter owner information here.

Display Location

Enter information about the display installation location here.

Note

Do not use spaces when entering the information. Doing so may cause the file name to display incorrectly.

Memo

You can enter auxiliary information here.

Time

Time

Enter the time and the day of the week here.

Network

Internet Protocol (TCP/IP)

Select "Specify an IP address" to enter each value in the IP address's numeric string. Select "Obtain an IP address (DHCP)" to acquire an IP address automatically from the DHCP server. In this case, be aware that the IP address will change each time the display attached to the BKM-FW50 is turned on.

Note

The BKM-FW50 requires a separate IP address for the display control function and the still image/video playback function. The IP address for the display control function can be set from the menu of the display attached to the BKM-FW50. For details, see "Setting an IP address for the display control function" on page 9.

Password

The administrator and user name and password information can be entered here. The administrator name is fixed to "root". Each can be a maximum of 8 characters long.

Once a user name and password are set, the "Network Password" screen appears whenever the display control screen of the BKM-FW50 is called up. To ensure security on the network, setting a user name and password is recommended.

Mail Report

When a display function error has occurred, an error report is immediately sent by e-mail (error notification).

However, there is no error notification when an error occurs with the Player.

Address

Enter the target e-mail address here. Up to four addresses can be specified, for simultaneous sending of an error report. The maximum length for each address is 64 characters.

Mail Account

Mail Address:

Enter the allocated mail address here.
The maximum length for the address is 64 characters.

Outgoing Mail Server (SMTP):

Enter the mail server address here.
The maximum length for the address is 64 characters.

Requires the use of POP Authentication before Send e-mail (POP before SMTP):

If POP authentication is required when connecting to the SMTP server, select this check box.

Ingoing Mail Server (POP3):

When POP authentication is used for the "POP before SMTP" setting, enter the POP3 server address here.

Account Name:

Enter the mail account name here.

Password:

Enter the mail password here.

Send Test Mail:

To test whether mail can be sent successfully to the specified address(es), select this check box and click "Apply". A test mail will be sent.

Note

If any of the following items is not set or not set correctly, an error message appears, and test mail cannot be sent:

- Target address
- Mail account address and mail server address (SMTP)

Advanced

Gives access to advanced settings to enable use of various applications on the network. Make the settings as required by the respective application.

Advertisement

Lets you make settings for the Advertisement and Broadcast functions on the network.

ID Talk

Lets you make settings for the ID Talk function. ID Talk is a protocol that allows network-based control of the display in which the BKM-FW50 is installed. Controlled items includes various settings and adjustments such as color temperature and gamma. For information about supported ID Talk commands, contact your local Sony dealer.

SNMP

The BKM-FW50 is a network device which supports SNMP (Simple Network Management Protocol). Besides standard MIB-II, Sony Enterprise MIB is also supported. This screen allows making settings for SNMP.

For information about supported SNMP commands, contact your local Sony dealer.

Returning to default settings

To reset all settings made on the Setup screen to the factory default condition, use a thin pointed object to press and hold the RESET button on the front panel of the unit (page 5) for at least 3 seconds.

Troubleshooting

Before requesting service, please check the following points. If the problem persists, contact your local Sony dealer.

| Problem | Cause/Remedy |
|--|---|
| Cannot connect to network. | <ul style="list-style-type: none"> • BKM-FW50 is not correctly installed in display. → Push the BKM-FW50 fully into the slot, and tighten the fastening screws. • Cable is not connected correctly to network port. → Plug the cable firmly into the network port. • Network settings are incorrect. → When using a web browser from the computer, check the network settings of the computer. Press and hold the RESET button of the BKM-FW50 for at least 3 seconds to return the unit to the default condition. Then perform setup again. • Cable type is incorrect. → Select a straight cable or a cross-wired cable, as required by the network environment. |
| Storage medium is not recognized. | <ul style="list-style-type: none"> • The storage medium is broken. → Try using a different storage medium. • The storage medium being used is not compatible. → Try using a storage medium from another maker. |
| Cannot playback files saved on the storage medium. | <ul style="list-style-type: none"> • The file formats are incorrect. → Change the files to the appropriate format. • There are over 1,000 files saved on the storage medium. → Remove files until the number of files does not exceed 1,000. • There is a file exceeding 2 GB in size. → Make sure no file exceeds 2 GB in size. • The storage medium is broken. → Try using a different storage medium. |

| Problem | Cause/Remedy |
|---|---|
| Cannot save files from a server to local storage. | <ul style="list-style-type: none"> • A storage medium is not inserted in the BKM-FW50. → Insert a storage medium. • The storage medium is broken. → Try using a different storage medium. • There is a problem with the network environment. → Confirm the network settings. |
| Streaming playback is unavailable. | <ul style="list-style-type: none"> • There is a problem with the network environment. → Confirm the network settings. → There may be a high amount of network traffic. Change the network settings for optimal performance. • The file formats are incorrect. → Change the files to the appropriate format. |
| The display control screen (the Web screen displaying the unit's GUI) does not display. | <ul style="list-style-type: none"> • Click the refresh or reload button on your Web browser. • Make sure the IP address is correct. • Use Internet Explorer 6.0 or later. |

List of Error Codes

When an error occurs while using the BKM-FW50, an error code along with error information is displayed on the Information screen (page 11). The following explains the meanings of error codes and the methods of dealing with them.

| Error code (Hex) | When it occurs | What it means | How to deal with it |
|------------------|----------------|---|---|
| 0x10 | Streaming Play | The specified file/folder does not exist. It may also be that there is an "index.html" file within the specified folder. | Make sure the file/folder you specified exists. Or, move the contents of the folder to a folder that does not contain an "index.html" file, and specify that folder. |
| 0x11 | | The specified file is of an extension not supported by the BKM-FW50. Playable file extensions include (not case-sensitive): Video: mpg, m2v, mpeg Still image: gif, png, bmp, jpe, jpg, jpeg | Confirm the extension of the file you specified. |
| 0x12 | | The specified folder does not contain a playable file. | Make sure a file with the appropriate extension exists in the folder. |
| 0x13 | | The specified file is of a non-playable format. | Confirm the format of the file. |
| 0x14 | | The specified file (within a folder) is damaged. | Check the file. |
| 0x15 | | The specified MPEG file (within a folder) is an MPEG1 file. | Check the file. |
| 0x16 | | A network error has occurred. | Check the network environment. |
| 0x20 | | An error has occurred with the Player during playback. | Contact your local Sony dealer. |
| 0x30 | Local Play | The specified file/folder does not exist. | Make sure a CF card is inserted in the memory card slot. Also, make sure the file/folder exists at the location you specified. |

| Error code (Hex) | When it occurs | What it means | How to deal with it |
|------------------|----------------|---|---|
| 0x31 | Local Play | The specified file is of an extension not supported by the BKM-FW50. Playable file extensions include (not case-sensitive): Video: mpg, m2v, mpeg Still image: gif, png, bmp, jpe, jpg, jpeg | Confirm the extension of the file you specified. |
| 0x32 | | The specified folder does not contain a playable file. | Make sure a file with the appropriate extension exists in the folder. |
| 0x33 | | The specified file is of a non-playable format. | Check the format of the file. |
| 0x34 | | The specified file (within a folder) is damaged. | Check the file. |
| 0x35 | | The specified MPEG file (within a folder) is an MPEG1 file. | Check the file. |
| 0x40 | | An error has occurred with the Player during playback. | Contact your local Sony dealer. |
| 0x50 | Store Local | The specified file/folder does not exist in the specified server. It may also be that there is an "index.html" file within the specified folder. | Make sure the file/folder exists at the location you specified. Or, move the contents of the folder to a folder that does not contain an "index.html" file, and specify that folder. |
| 0x51 | | The folder in the specified server does not contain a downloadable file. | Make sure a file with the appropriate extension exists in the folder. |
| 0x52 | | The specified file is of an extension not supported by the BKM-FW50. Playable file extensions include (not case-sensitive): Video: mpg, m2v, mpeg Still image: gif, png, bmp, jpe, jpg, jpeg | Confirm the extension of the file you specified. |
| 0x53 | | The specified folder does not exist on the CF card. | Make sure a CF card is inserted in the memory card slot. Also, check the folders on the CF card. |

| Error code (Hex) | When it occurs | What it means | How to deal with it |
|------------------|-----------------|--|--|
| 0x54 | Store Local | A network error has occurred. | Check the network environment. |
| 0x55 | | The storage capacity on the CF card is insufficient. | Check the remaining storage capacity of the CF card. Also, delete any unnecessary files/folders on the CF card. |
| 0x56 | | The file/folder specified to be deleted does not exist. | Make sure the specified file/folder exists on the CF card. |
| 0x57 | | The file specified to be deleted is currently being accessed. | Before specifying to delete a file, make sure the file is closed. |
| 0x58 | | The path specified to create a new folder is incorrect. | This error occurs when a new folder that does not exist is specified. Confirm the new folder. |
| 0x70 | PC Presentation | A connection error has occurred. (The server does not exist, cannot connect to the network, etc.) | Make sure that the server is running and that the network environment is functioning. |
| 0x71 | | The user name and password entered are incorrect. | Make sure the user name and password match the ones registered on the server. |

Specifications

Input/output

| | |
|------------------|--|
| Network | 10BASE-T/100BASE-TX (connection speeds may differ, depending on the network environment) |
| Memory card slot | CF Type II |
| USB | Type A |

General

| | |
|---|---|
| Dimensions (including projecting parts) | 135 × 32 × 95 mm (5 3/8 × 1 5/16 × 3 3/4 inches) (W/H/D) |
| Mass | Approx. 300 g (10.6 oz.) |
| Power consumption | Approx. 10 W |
| Operating temperature | 0 to +35°C (+32 to +95°F) (environment conditions for display in which BKM-FW50 is installed) |
| Storage temperature | -10 to +40°C (+14 to +104°F) |
| LED indicators | Link (green)/ Act (orange) |
| Cable length | Max. 100 m (Category 5) |

Design and specifications are subject to change without notice.

<http://www.sony.net/>

Sony Corporation

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>