


Owners Manual

TEC LOAD CELL SCALE
(WITH LABEL PRINTER)
MODEL SL59 SERIES
(US-1. Version)

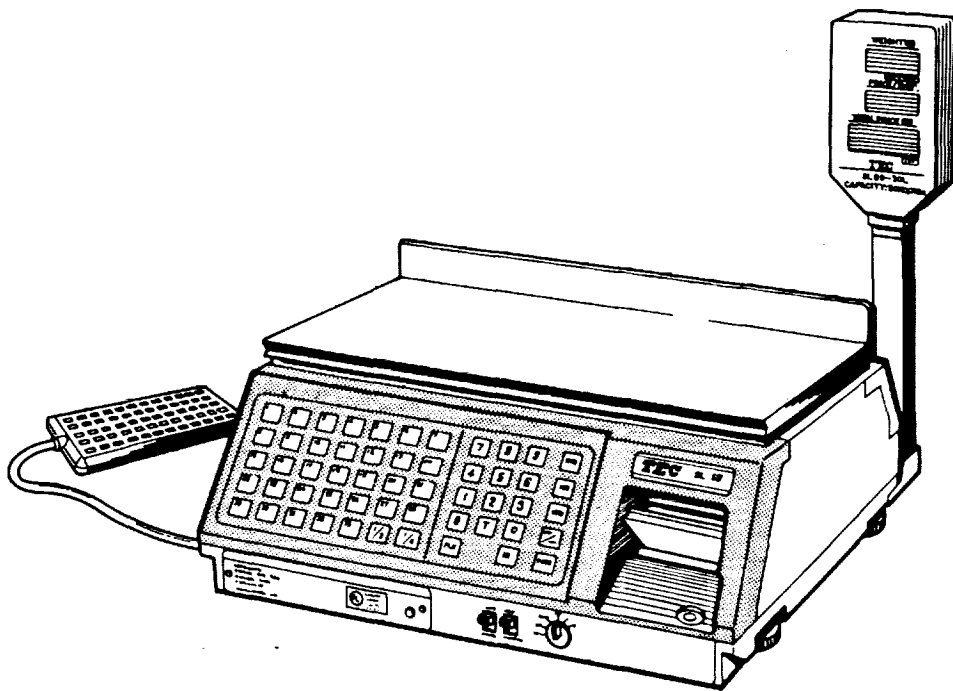

TEC TOKYO ELECTRIC CO., LTD.

TABLE OF CONTENTS

	Page
INTRODUCTION, PRECAUTIONS	2
1. SPECIFICATIONS, DIMENSIONS	3
2.3. OUT OF VIEW, REMOTE DISPLAY	4
4. KEY ARRANGEMENT	5
5. KEY AND LAMP FUNCTIONS	5
6. MAIN CONTROL LOCK	7
7. ALPHA KEYBOARD (option)	8
8. CASSETTE MAGNETIC TAPE OPERATIONS	10
9.10. LEVEL ADJUSTMENT, NOTES BEFORE STARTING OPERATION	11
11. OPERATING SECTION	13
11-1. NORMAL OPERATION	15
A. Weighed Article Registration	15
B. Non Weighed Article Registration	16
C. Fix Price Registration	19
D. Tare Function Procedure	20
E. Date Change	22
11-2. TOTAL OPERATION	23
A. Grand Total READ and RESET (1)	23
B. Grand Total READ and RESET (2)	24
C. PLU Single READ and RESET	25
D. PLU Group READ and RESET	26
E. Random Items PLU READ and RESET	27
F. Void READ and RESET	28
G. Hourly Report	29
12. PROGRAMMING SECTION	31
PART I	33
PART II	35
PART III	38
PART IV	41
PART V	42
PART VI	43
PART VII	44
PART VIII	45
PART IX	46
PART X	49
PART XI	49
13. LABEL THREADING	50
14. CLEANING THE PRINT HEAD	50
15. BEFORE YOU CALL FOR SERVICE	51

INTRODUCTION

We thank you very much for purchasing our TEC Electronic SL59 Series Scale.

This series has been designed with TEC reliability and offer a cost efficient system for a modest investment.

And the SL59 (with thermal printer) takes advantage of the latest technology in microprocessors. Because of this, the decreased cabinet size permits the system to be placed virtually anywhere in your store.

Your deli, and specialty departments can enjoy these high quality reliable TEC products. Improve your operating effectiveness and watch the increased utilization of your front end scanning investment. This electronic Load cell scale eliminates all moving parts and furnishes an accurate digital display of all information.

We believe that your needs will now be fully satisfied, and you will have total reliability in price calculation.

This manual will help to acquaint you with the proper operation and care of the SL59 series scale. Please keep it handy for future reference.

PRECAUTIONS


1. DON'T SUBJECT the weighing platter to SUDDEN SHOCKS.
2. DON'T DEPRESS THE KEYS TOO HARD. Keys will operate correctly if they are merely touched lightly.
3. Clean the cover and weighing platter by wiping with a dry cloth or a cloth soaked with detergent and wring out thoroughly. NEVER USE THINNER OR OTHER VOLATILE SOLVENT FOR CLEANING.
4. This machine has been made drip-proof, but DO NOT POUR WATER directly on it.
5. To insure scale is operating correctly, place a known weight on platter and check for correct computing. This should be done every morning before starting normal operations.
6. When in use, avoid locations subject to vibration and direct sunlight.

1. SPECIFICATION


Items	SL59-15L-US-1	SL59-30L-US-1
Max. Capacity	15lbs	30lbs
Minimum Scale Division	0.005lb	0.01lb
Display Range	0 ~ 15.025lb	0 ~ 30.05lb
Unit Price Presetable	\$0.01 ~ 99.99	Same as SL59-15L
Tare	0.005lb ~ 9.995lb	0.01lb ~ 30.00lb
Remote Display:		
Weight	5 digits	4 digits
Unit Price	4 digits	4 digits
Total Price	5 digits	5 digits
Capacity of PLU memory	102 ~ 290 PLUs (Standard type) (It depends on each PLU capacity.)	Same as SL59-15L
Display Designations	NET, PREPACK, ERROR	Same as SL59-15L
Remote Display Mode	Both sides	Same as SL59-15L
Minimum Price Display	\$0.01	Same as SL59-15L
Mechanical:		
Printer Head	Thermal Printer Head	Same as SL59-15L
Paper Feeding Mechanism	Stepping Motor	Same as SL59-15L
Paper End Detector	Micro Switch	Same as SL59-15L
Power Requirement	120V \pm 10%, 60Hz	Same as SL59-15L
Power Consumed	120V · 1A	Same as SL59-15L
Temperature Limits	32° ~ 104°F	Same as SL59-15L
Relative Humidity	45% ~ 85%	Same as SL59-15L
Weight	26.5lbs	Same as SL59-15L
Interfacing Devices:		
Alpha Numeric Keyboard	TEC RK-3,(Option)	Same as SL59-15L
Cassette Magnetic Tape Loader (OPTION)	DR-1 (AIWA CO.)	Same as SL59-15L
External Joernal Printer	TP-10 printer (Thermal) of TANDY CO.	Same as SL59-15L

Dimensions (approximate)


(Inch)

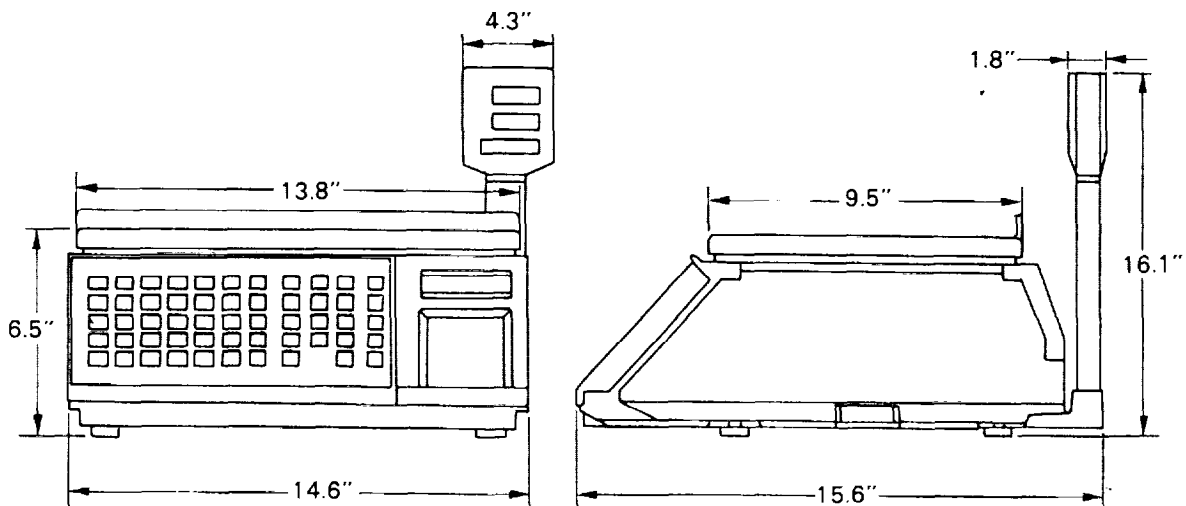

2. OVERVIEW

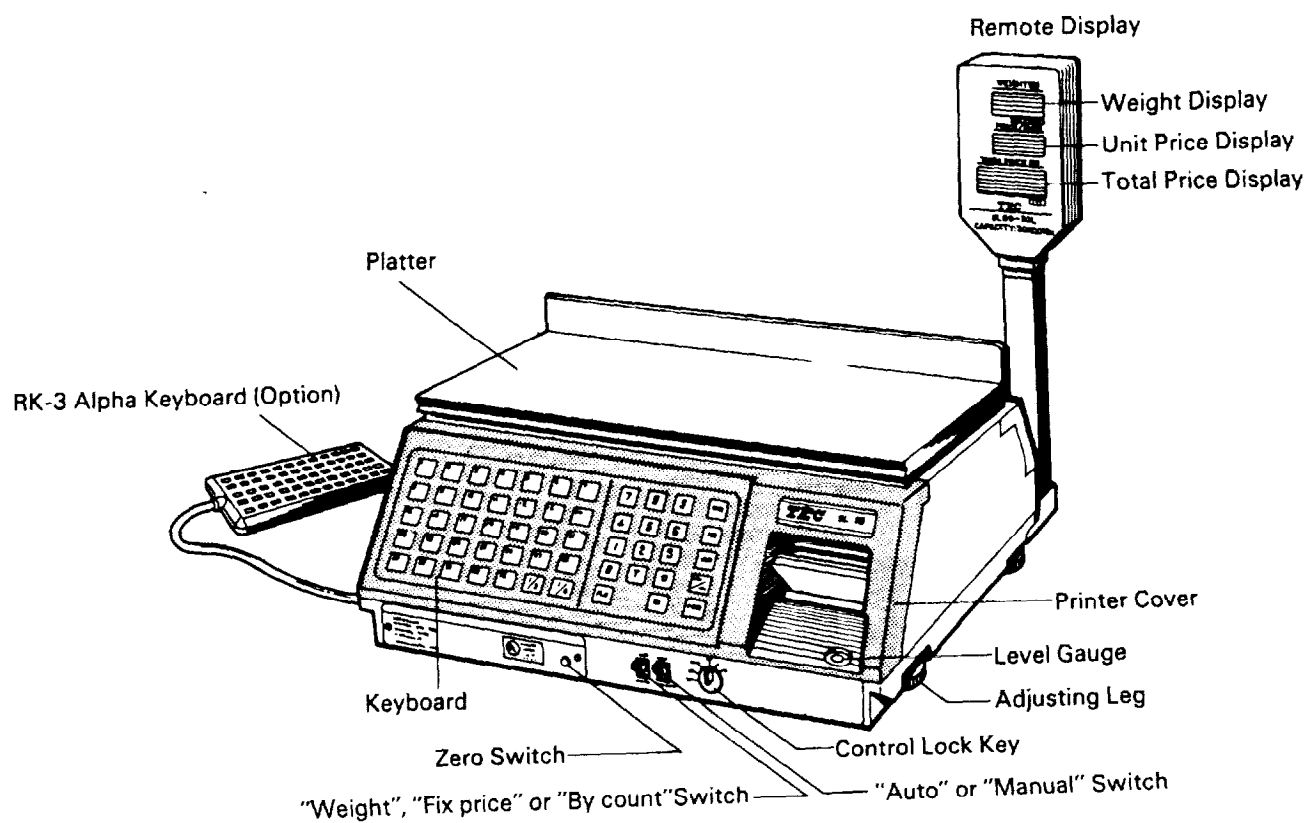


3. REMOTE DISPLAY

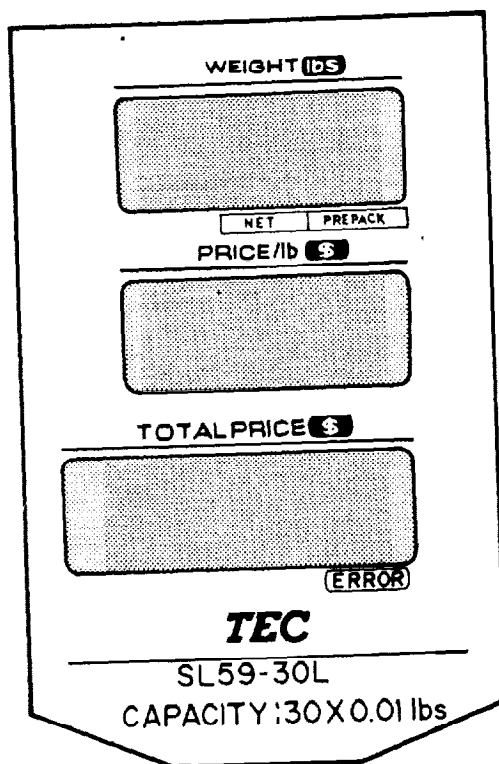





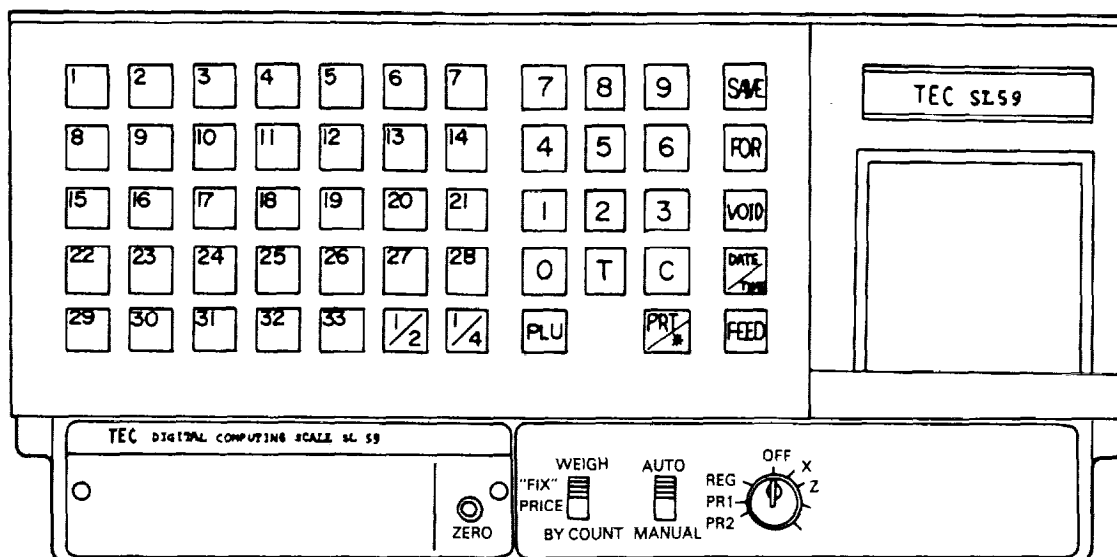















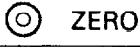



Customer and Vendor's view

4. KEY ARRANGEMENT



5. KEY AND LAMP FUNCTIONS

Name of Key & Lamp	Functions
Label Issue Mode Switch (1)  AUTO  MANUAL	"AUTO" position: This position is used to issue regular scale labels. When the weight becomes stable, the label will automatically be issued. "MANUAL" position: When the weight becomes stable, the label will be issued by depressing  Key.
Label Issue Mode Switch (2)  - WEIGH  - FIX PRICE  - BY COUNT	"WEIGH" position: This position is used in weighing function of SL59. "BY COUNT" position: It is possible to produce labels which contain information of quantity pricing, instead of weight. "FIX PRICE" position: The Unit Price enters directly to Total Price on calling up PLU, and that Total Price cannot be changed by any weighing after that.
NUMERIC Keys  ~ 	These keys are used to enter PLU Number, Unit Price and Tare weight.
CLEAR Key 	<ol style="list-style-type: none"> 1. This key is used for enter-clear of numeric key. 2. This key is used to return the machine condition to the normal weighing mode. 3. This key is used to release the scale from the SAVE mode.

Name of Key & Lamp	Functions
TARE Key 	This key is used to subtract tare weight.
SAVE Key 	<ol style="list-style-type: none"> 1. This key is used to save tare and unit price after taking off the commodity from a platter. 2. This key is used for CMT operation. 3. This key is used for adjustment of label spacing.
DATE & TIME Key 	<ol style="list-style-type: none"> 1. This key is used to indicate the time and date on remote display. 2. This key is used to change the date.
FOR Key 	<ol style="list-style-type: none"> 1. For issuing "By count" label with split price 2. In "X", "Z" control lock positions, this key is used to generate PLU Group or Random Items Total Report. 3. For issuing TEST label at "PRI" control key position.
FEED Key 	This key is used to feed labels.
DIRECT Key 	These keys are used to set and call the PLU numbers of frequently used articles.
VOID Key 	This key is used to cancel only one article's data by depressing this key after its registration.
PLU Key 	<ol style="list-style-type: none"> 1. This key is used to select a PLU number. 2. This key is used for returning to initial mode.
PRINT/VERIFY Key 	<ol style="list-style-type: none"> 1. For issuing Total labels. 2. In case of Label issue mode switch setting at MANUAL position, this key has the function of label issue.
1/2 Key  1/4 Key 	These keys are used to calculate the unit price by 1/2lb or 1/4lb.
ZERO Key 	This key is used to adjust ZERO point.
NET Lamp 	Lights when tare is subtracted.
PREPACK Lamp 	Lights when SAVE key is depressed.
ERROR Lamp 	Lights when this machine is improperly operated or has caused a function error.


6. MAIN CONTROL LOCK

The control lock has eight marked positions.

There are four control keys which will operate these locks, these are:



This key (OP) will access the REG and OFF positions.

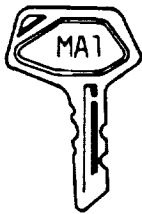


This key (MA1) will access the PR2, PR1, REG, OFF and X positions.



This key (MA2) will access the PR2, PR1, REG, OFF, X and Z positions.



This key (SE) will access all eight positions.
(SE key may be kept with your TEC representative for servicing.)

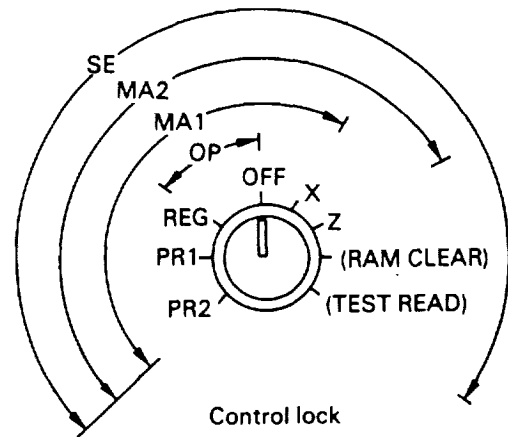


- PR2 ——— Date, time, machine No., store code, store address, Bar Code Format, and PLU can be programmed.
- PR1 ——— PLU unit price, direct key and Spacing of a label etc. can be programmed or changed.
- REG ——— Machine can be used as a scale and register the data on a label.
- OFF ——— Machine is locked and any further key entry is impossible.
- X ——— Day-Total etc. can be read out and printed out on the paper or label.
The data-memory is not reset to zero.
- Z ——— Day-Total etc. can be printed out on the paper or label and the data-memory is reset to zero.
- (RAM CLEAR) ——— Used to clear all memories (all Total and PLU file).
(Depress C Key).
- (TEST) ——— Used to indicate all test status in displays.

7. ALPHA KEYBOARD (OPTION)

(Option)

ALPHA KEYBOARD (RK-3-1) The SL59 system has the capability to be interfaced with a separate alpha keyboard. This typewriter format keyboard greatly enhances the system by allowing the programming of alpha descriptors for PLU's or Commodities. All price programming can be done through the 57 keys alpha keyboard including pricing by 1/2 pound and 1/4 pound.

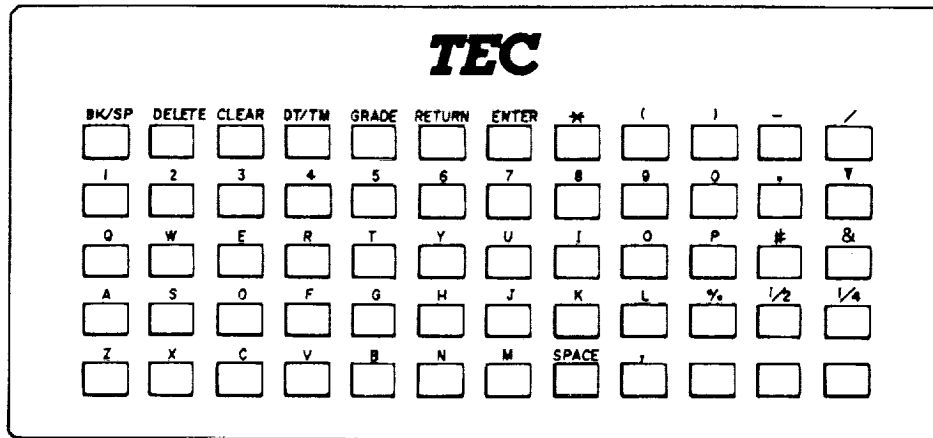

ALPHA KEYBOARD

The alpha keyboard is used with the MA1 or MA2 key at the control lock PR2, position.

NUMERIC KEYS

The numeric keys are number keys 0-9.



PLU number, unit price and store code etc. can be indexed on this keyboard instead of using the operation panel.

ALPHA KEYS

The alpha keys include the entire English alphabet. These keys are arranged in the standard typewriter format for easy data input.




SPECIAL CHARACTER KEYS

Twelve additional keys are provided to increase the read-ability of descriptors




DATE/TIME KEY

This key allows the correct programming of the calendar date and international time. Once this has been set, the Time of Day clock within the SL59 correctly maintains the time and automatically advances the date.



BACK SPACE KEY

The **BK/SP** key can be used to retreat to a prior entry in descriptor programming and make a correction.



RETURN KEY

RETURN

The programming of a two line descriptor can be performed by depressing the **RETURN** key which returns the carriage.

DELETE KEY

DELETE

When a PLU is no longer to be maintained in the PLU file the **DELETE** key is used to remove the PLU.

GRADE KEY

GRADE

The **GRADE** key is not used in the SL59 system.

ENTER KEY

ENTER

During programming, data is input to the SL59 system by using the **ENTER** key.

CLEAR KEY

CLEAR


The function of the **CLEAR** key on the alpha keyboard is identical to the same key on the operation panel. This key allows the clearing of numeric entries prior to the depression of another function key.

VERIFY KEY

.

Used to print "*" mark as special character.

(Inch)

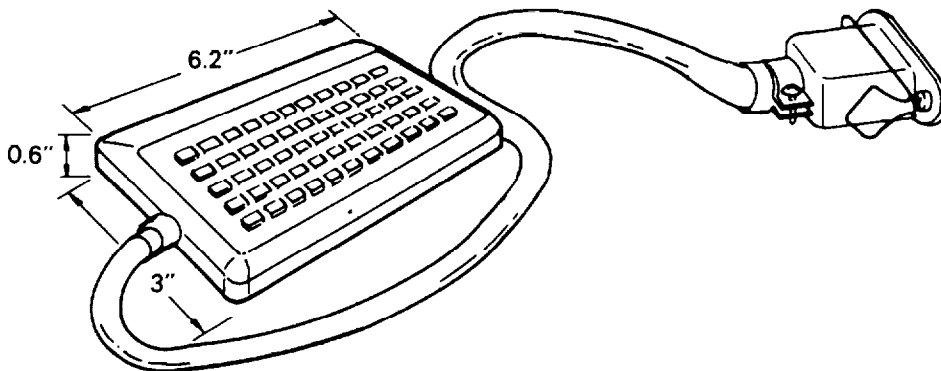

When the control lock is at the PR2 position, this remote key unit (RK-3) is used to preset the DATA of the PLU, etc.

8. CASSETTE MAGNETIC TAPE OPERATIONS

The SL59 is designed to interface with a cassette magnetic tape. This tape unit allows the transfer of the entire PLU file from the SL59 to the tape. This can be accomplished using a number of operation steps. In turn, information from the tape can also be transferred to other SL59.

1) SAVE (SL59 → CMT)

Control lock: PR1 position
 ↓
 Start the tape to be recorded after entire rewinding.
 Index 1
 ↓
 Confirm the magnetic painted part of tape running the Head.
 (Over 5 sec. after Starting.)
 Depress: SAVE key

2) SAVE Comparison

Rewind the tape entirely again.
 Start the CMT to play (Not recording).
 ↓
 Index 2
 ↓
 Depress: SAVE key

3) Load (CMT → SL59)

Start the CMT to play (Not recording).
 ↓
 Index 3
 ↓
 Depress: SAVE key

4) Load Comparison

Same procedures as "SAVE comparison".

5) Errors

Comparison Error (-4): Warning for being different points after comparison.
 Header Error (-2): Warning for the use of another Spec. Tape.
 Time Over Error (-3): Warning for being over time (14 seconds) after depressing SAVE key in Load and Comparison (Not save operation).
 Hard Error (-1): Warning for the status Error.


NOTE 1: The error mode can be released by depressing C key, and try to operate again according to the above steps.

2: When SAVE operation (SL59 → CMT) cannot be executed in 4 seconds after depressing SAVE key, it will result in Time over error mode.


9. LEVEL ADJUSTMENT

Set the scale on a stable and level surface.
Level the scale by turning the adjustable legs so that the air bubble is inside the center circle.

Level Gauge

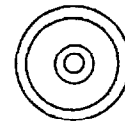


Correct

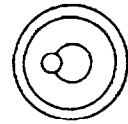


Incorrect

When the air bubble moves toward the left side, turn the right adjustable legs clockwise.

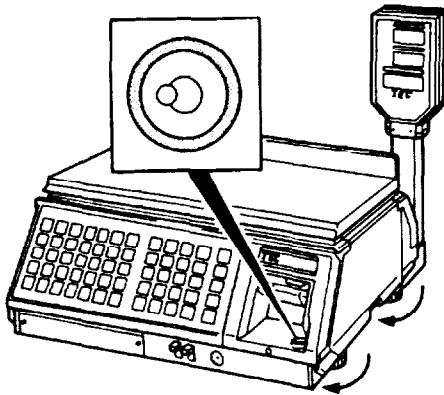

When the air bubble moves toward rear, turn the front adjustable legs clockwise.

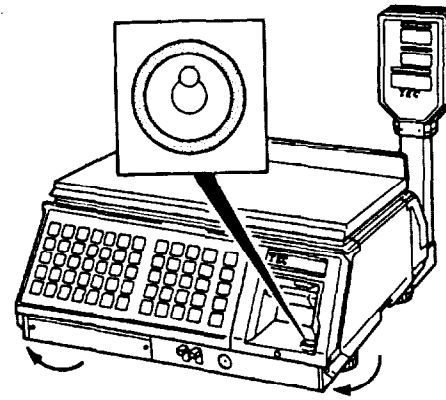

10. NOTES BEFORE STARTING OPERATION

- (1) Be sure to insert the power plug into AC outlet.
- (2) When the power plug is connected to the AC outlet, the scale goes through the test scanning sequence, such as 00000,00000,000000, then 11111, 11111, 111111... and zeros appear on the weight and total price displays. When the control lock is turned from OFF to REG over 16 seconds after the power plug is connected to the AC outlet, all "8"s appear on all displayed, thereby completing the test scanning sequence.
- (3) While scale is in the test sequence, do not put anything on the platter.
- (4) Do not move the unit while it is in operation. Should it become necessary to move it at any time, turn the control lock to OFF position and be sure to readjust the level indicator after relocating the scale.
- (5) Should a power failure occur during operation, remove the commodity from the platter and insert the power plug into AC outlet again when power is restored.
- (6) If scale is used with an unrated power source, inaccurate scaling or other errors may occur.
- (7) If Zero Point has shifted during scaling, and no tare is displayed, adjust Zero Point by depressing Zero switch.

11. OPERATING SECTION


11-1 NORMAL OPERATION

A. Weighed Article Registration

Control lock:



Label issue mode SW.:



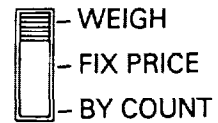


Example:

In case of a commodity of which PLU # 1501 and a unit price of \$25.00/lb are programmed in direct key **1**

In case of a commodity of which unit price of \$25.00/lb is programmed for PLU # 1501.

In case of a commodity with a unit price of \$25.00/lb. (Random Items PLU) (Optional function by Dip switch)

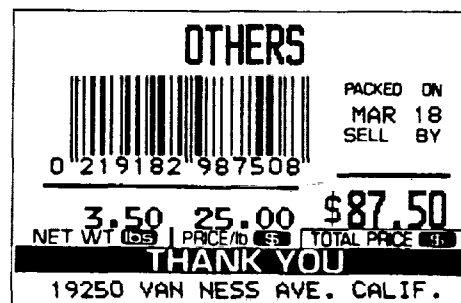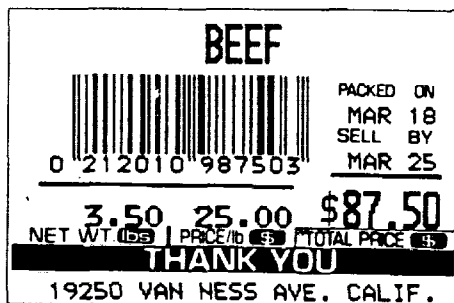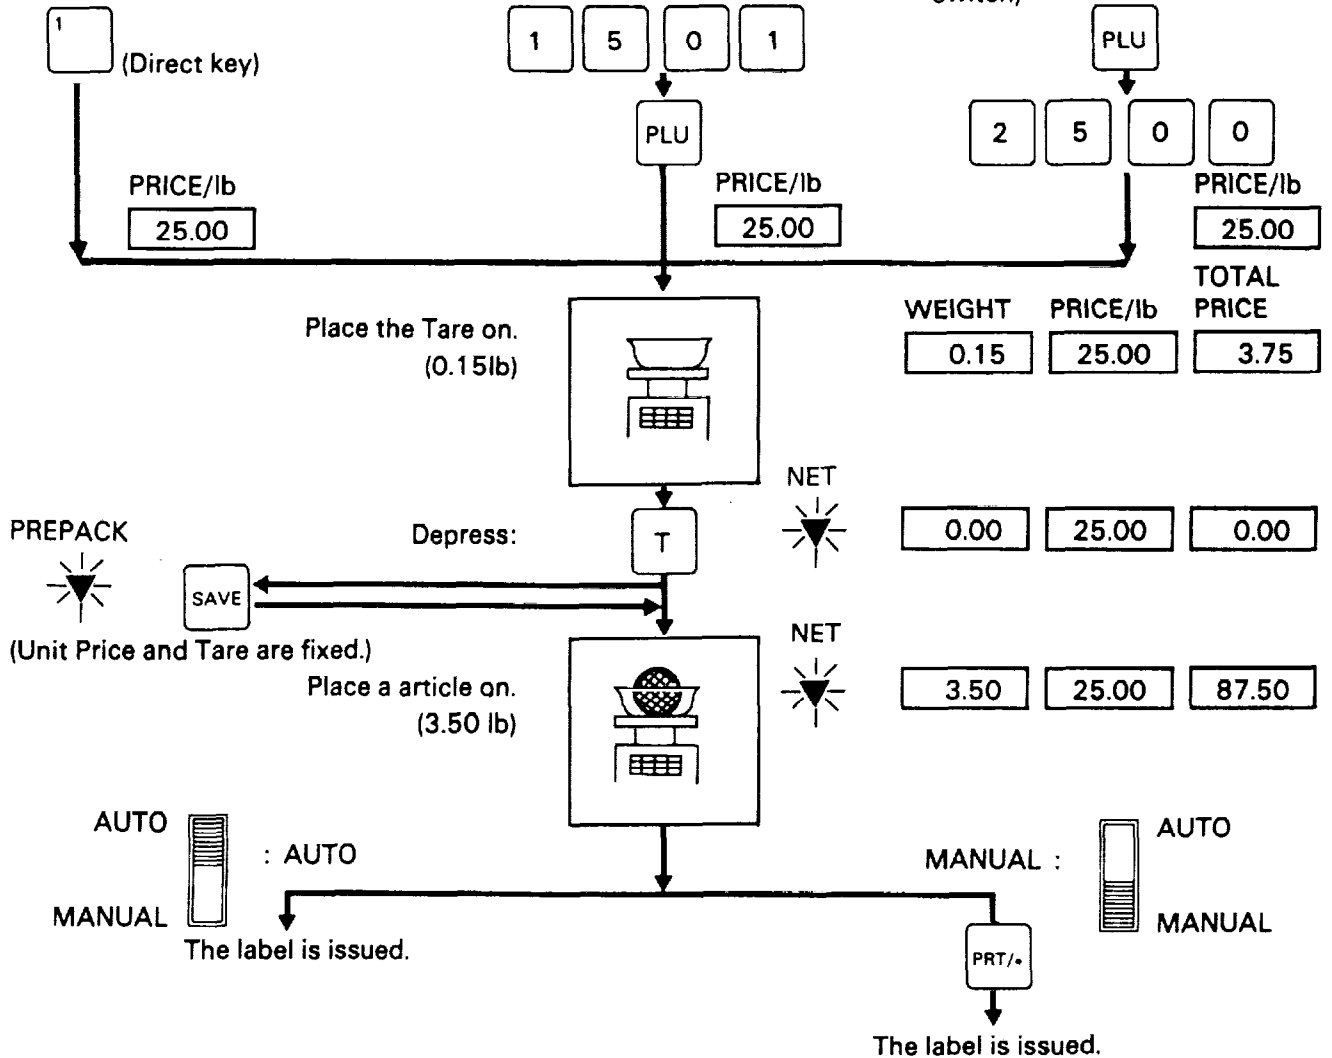



Random Items Label

(Sample labels)

*Depress **PLU** key when initial mode is desired to be returned.

Initial mode:	WEIGHT	PRICE/lb	TOTAL PRICE
	0.00	P	0000

B. Non Weighed Article Registration

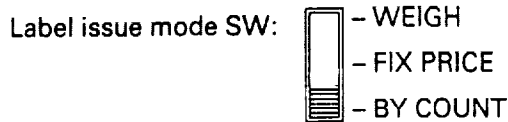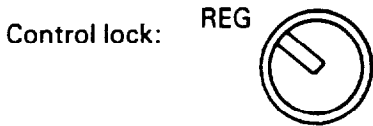

1) BY COUNT (1)




WEIGHT display: ----

Example:

In the event that PLU #1503 and a unit price of \$4.70/lb are programmed in Direct key 1.

In the event that a unit price of \$4.70/lb is programmed for PLU #1503.



in the event of a unit price of \$4.70.
(Random Items PLU)
(Optional function by Dip switch)

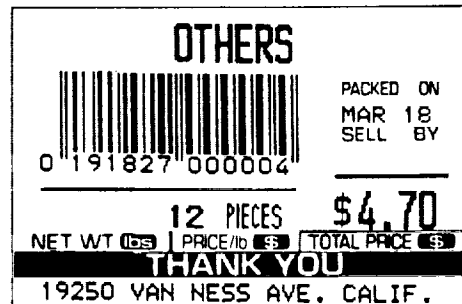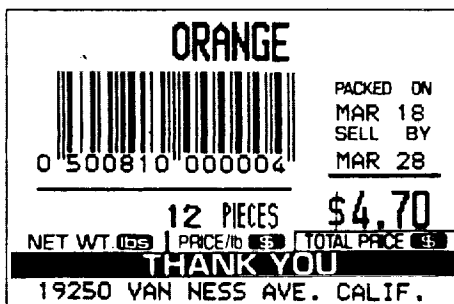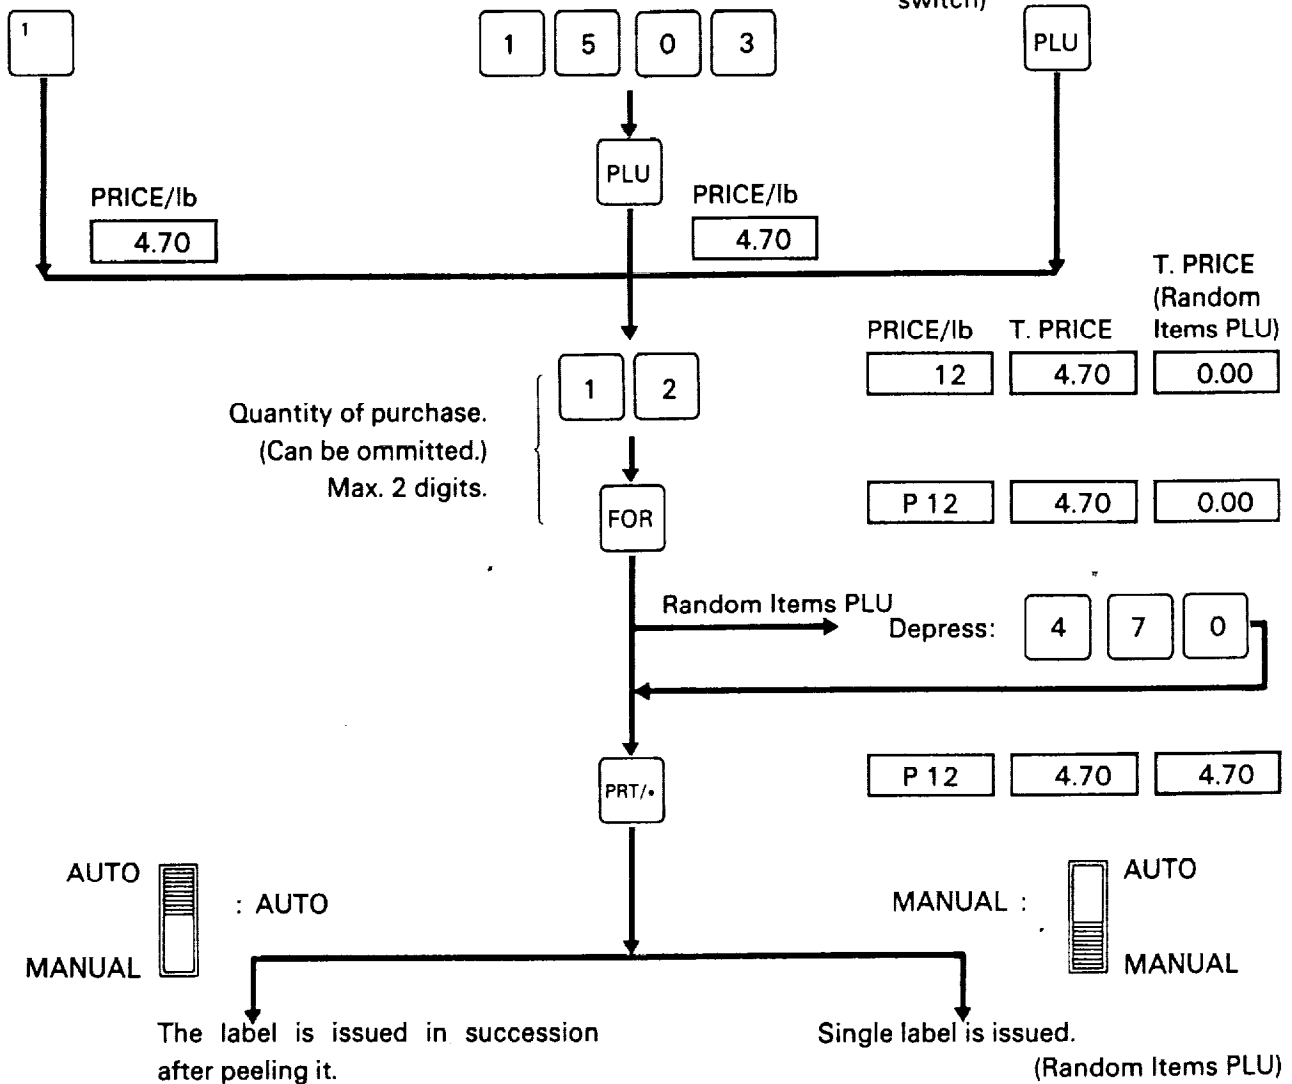

(Sample labels)


2) BY COUNT (2): Split price procedures-1

Example: In case of purchasing 17 pcs. of article for \$4.70 of unit price for 8 pcs.

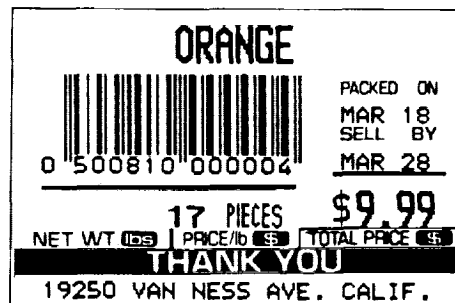
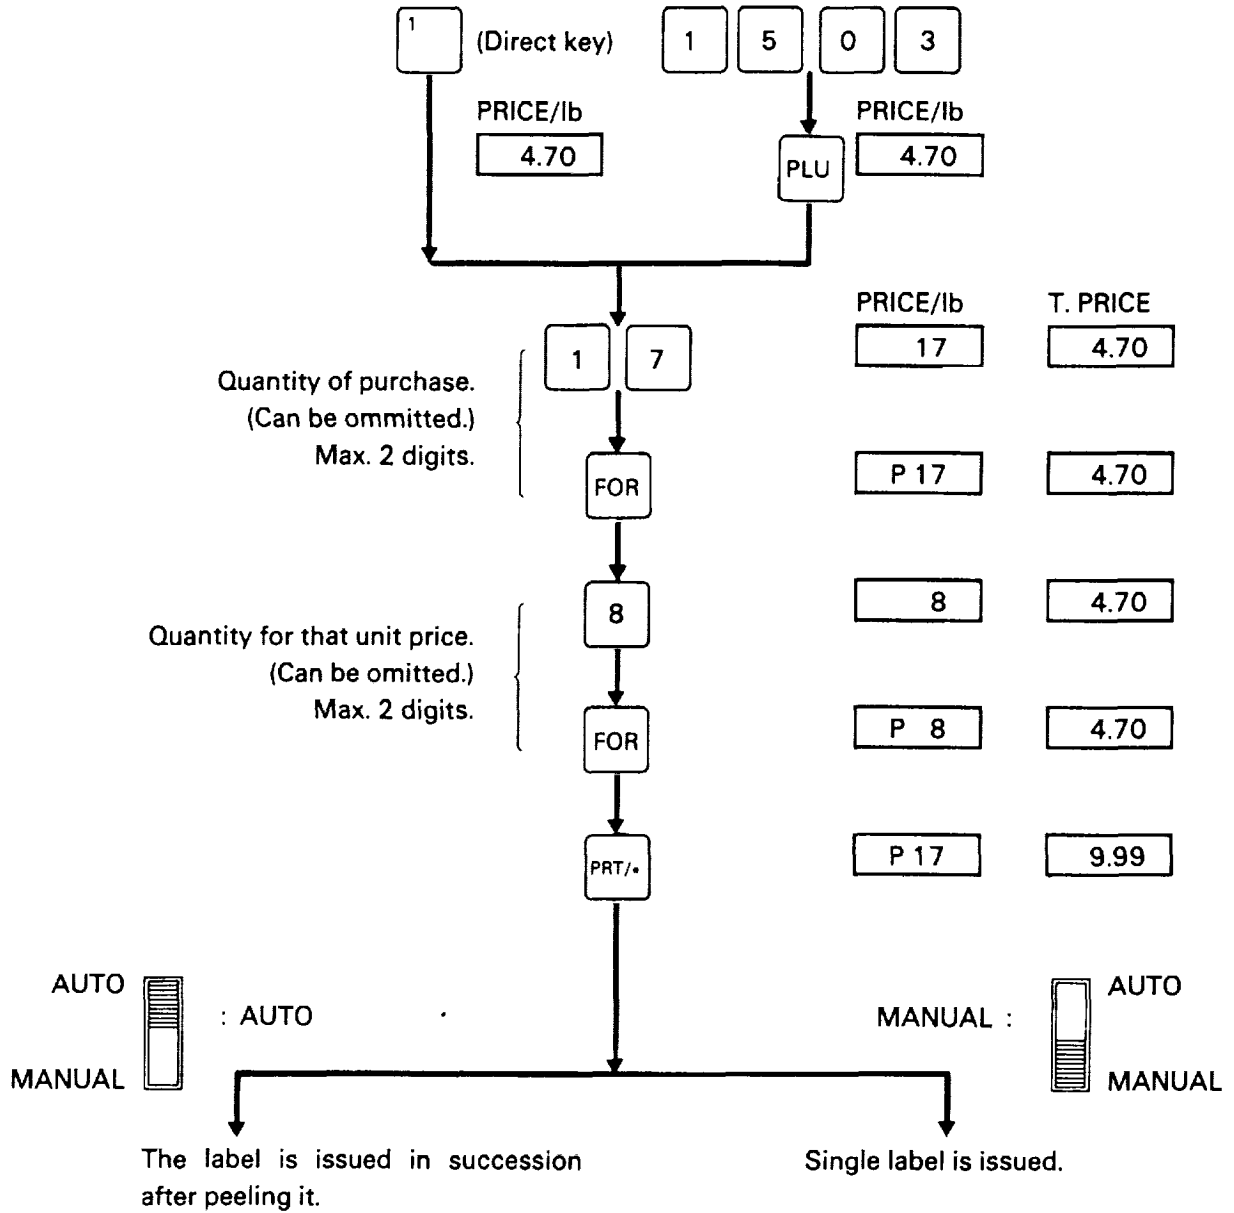


(Sample labels)

3) BY COUNT (3): Split price procedures-2
 For Open unit price and Random Items PLU.


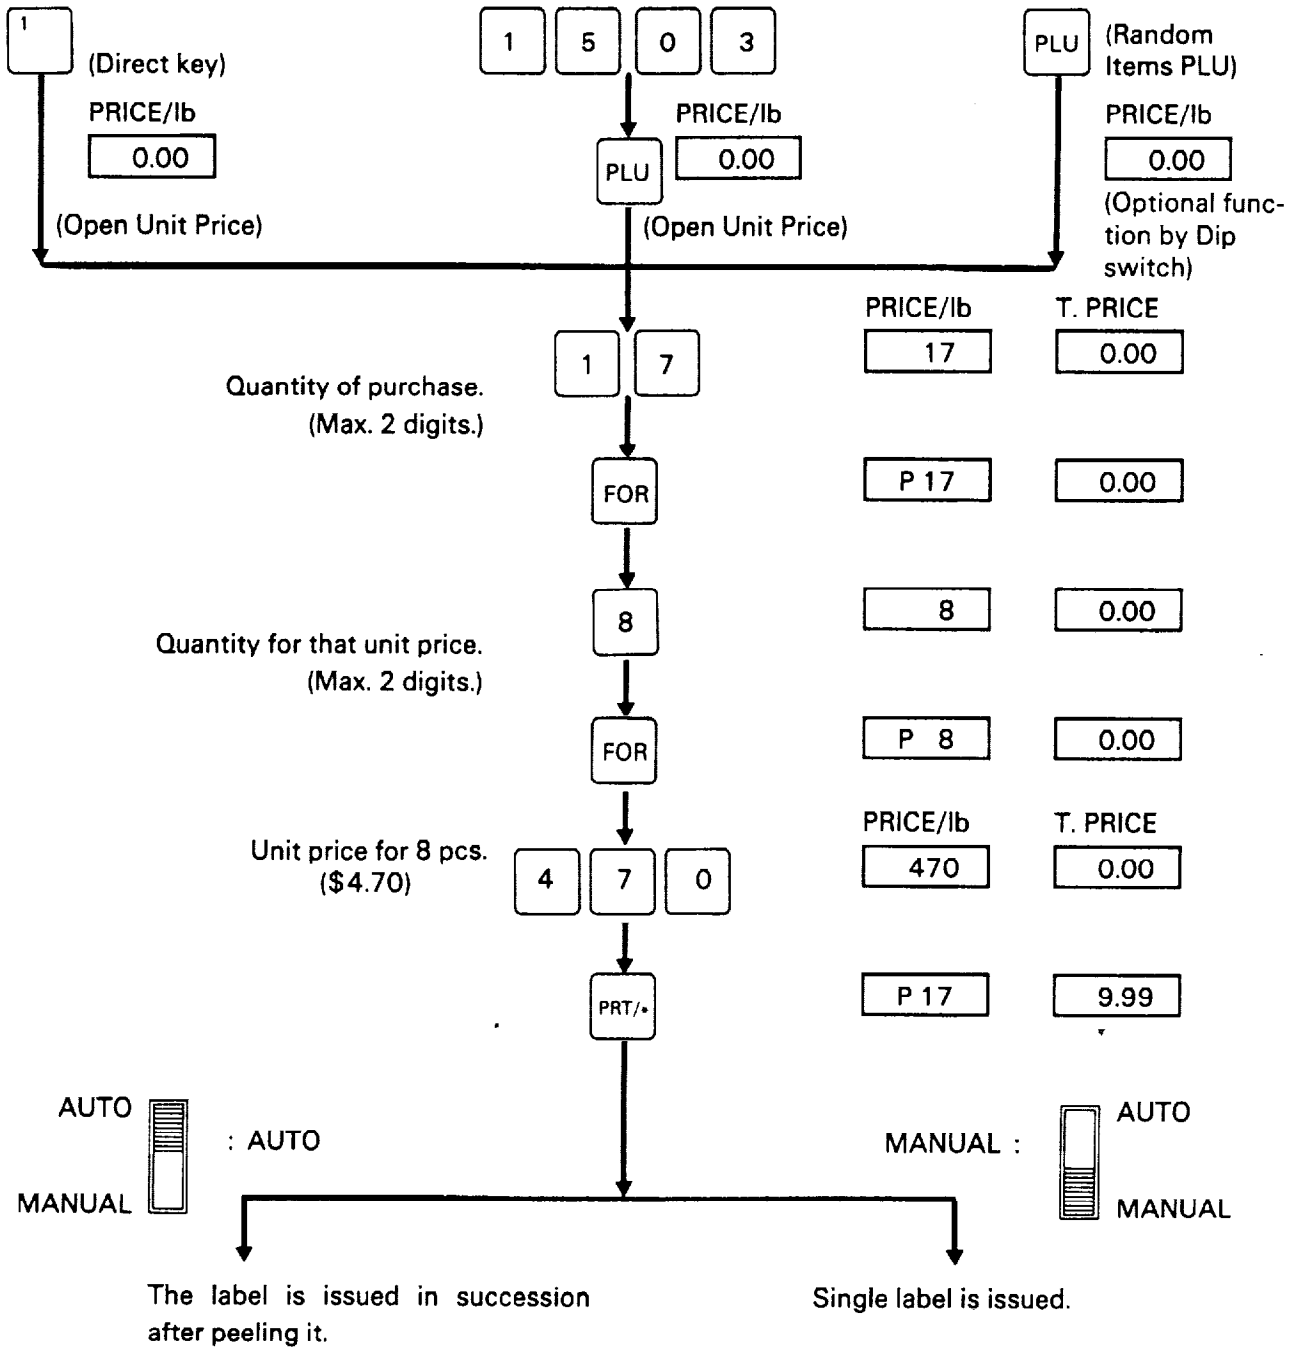


(Random Items PLU)

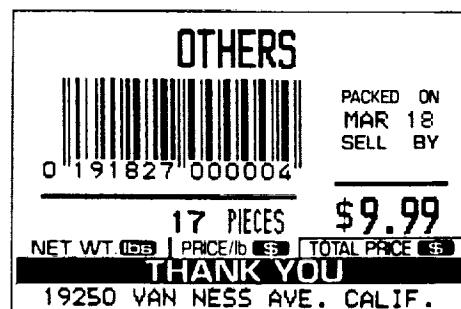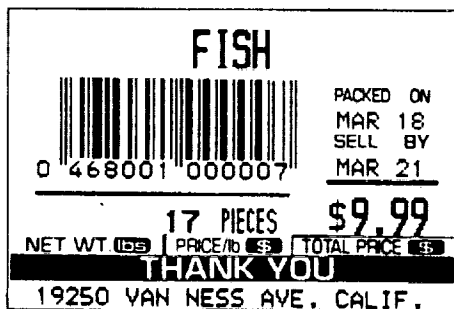

(Sample labels)



C. Fix Price Registration

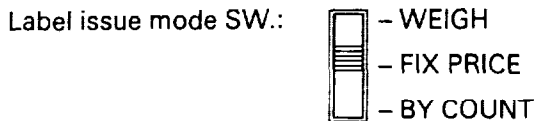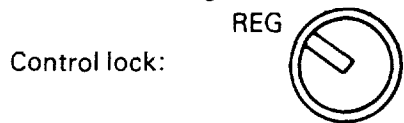

Example:

In the event that PLU # 1503 and a unit price of \$9.40/lb are programmed in Direct key **1**.

In the event that a unit price of \$9.40/lb is programmed for PLU # 1503

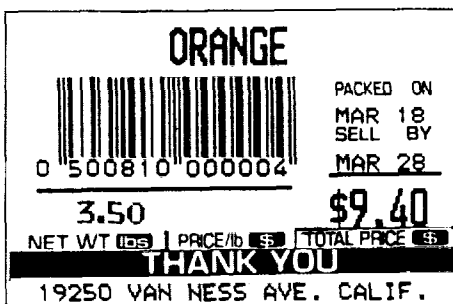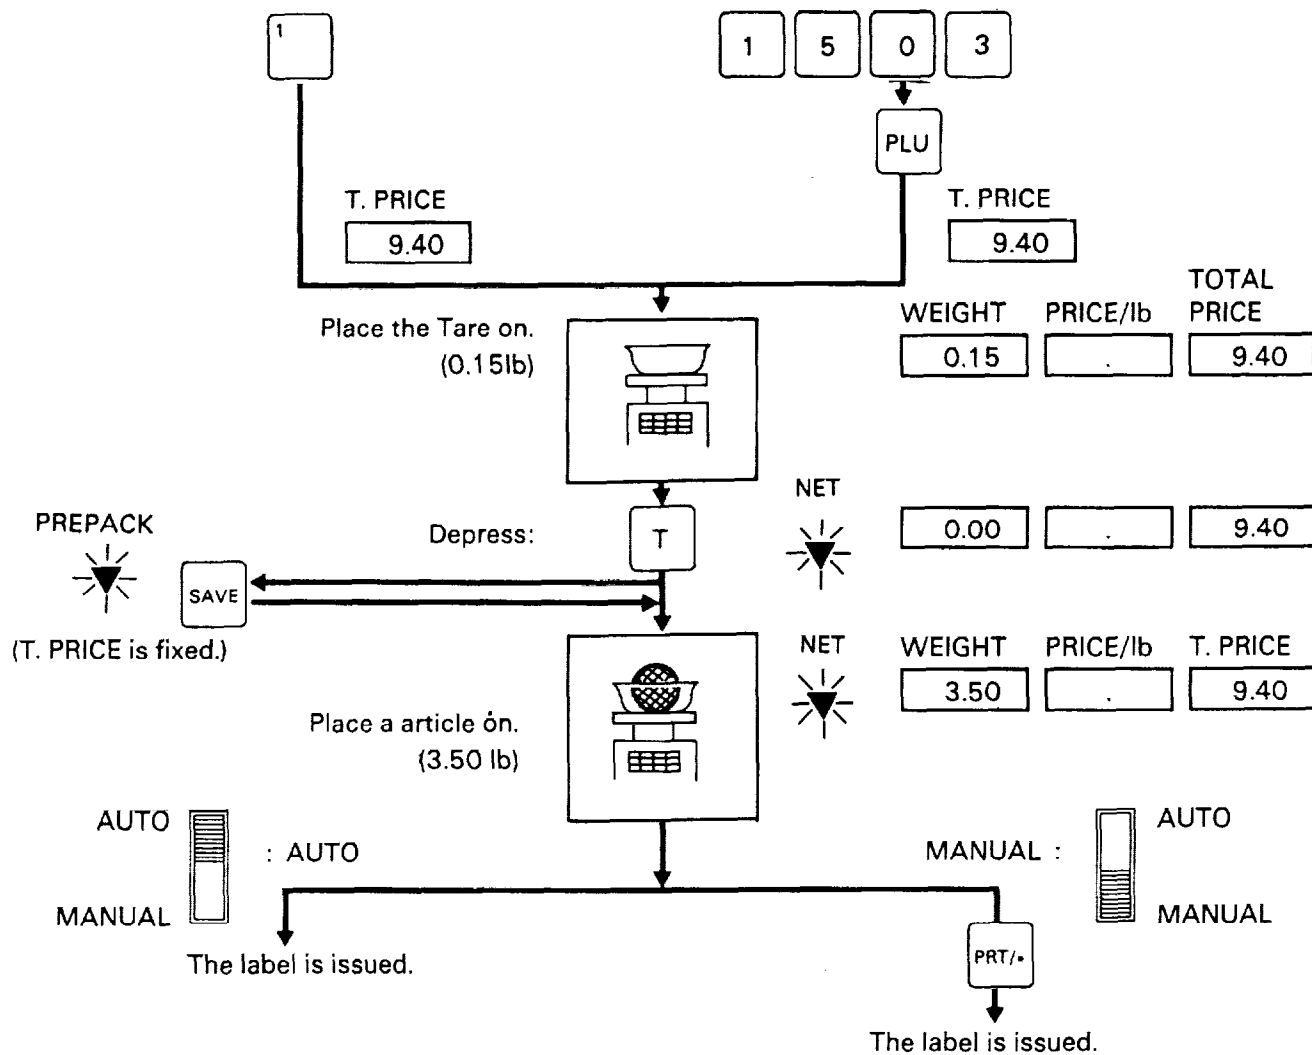

(Sample labels)






*Depress **PLU** key when initial mode is desired to be returned.

Initial mode:	WEIGHT	PRICE/lb	TOTAL PRICE
	0.00	P	0000






D. Tare function procedure

There are two kinds of tare subtraction procedures, one is "Direct tare", another is "Preset tare".






1) Direct tare subtraction (A)

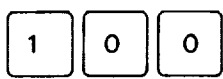		WEIGHT	PRICE/lb	TOTAL PRICE
Initial mode:		0.00	P	0000
Put on Tare.		1.00	P	0000
	Tare 1.00lb			
Depress:		0.00	P	0000
	NET 			
Take off tare.		-1.00	P	0000
	NET 			

2) Direct tare subtraction (B)

		0.00	P	0000
PLU NO.				
Ex.)		0.00	P	0100
Depress:		0.00	2.50	0.00
	Tare 0.15lb			Unit Price stored in PLU # 100.
Put on tare.		0.15	2.50	3.75
Depress:		0.00	2.50	0.00
	NET 			

3) Direct tare subtraction (C) : Random Items PLU

		WEIGHT	PRICE/lb	TOTAL PRICE
Initial mode:		0.00	P	0000
Depress:		0.00	0.00	0.00
		0.00	1.23	0.00
Place on tare.		0.15	1.23	0.18
	Tare 0.15lb			
Depress:		0.00	1.23	0.00
	NET 			

*Direct tare weight is available up to 30.00lb for 30lb scale and up to 9.995lb for 15lb scale.

4) Preset tare subtraction (A)

		WEIGHT	PRICE/lb	TOTAL PRICE	
Initial mode:		0.00	P	0000	
Ex.) 1.50 Tare weight		0.00	P	0150	
	<div style="display: flex; justify-content: space-around; width: 100px;"> 1 5 0 </div> <div style="text-align: center; margin: 5px 0;">↓</div> <div style="border: 1px solid black; padding: 2px 5px; width: 30px; margin: 0 auto;">T</div>	NET 	-1.50	P	0000

5) Preset tare subtraction (B) : Random Items PLU

		WEIGHT	PRICE/lb	TOTAL PRICE	
Initial mode:		0.00	P	0000	
	<div style="border: 1px solid black; padding: 2px 5px; width: 40px; margin: 0 auto;">PLU</div> <div style="text-align: center; margin: 5px 0;">↓</div>	0.00	0.00	0.00	
Ex.) Tare weight 1.501lb		0.00	1.50	0.00	
Index:	<div style="display: flex; justify-content: space-around; width: 100px;"> 1 5 0 </div> <div style="text-align: center; margin: 5px 0;">↓</div> <div style="border: 1px solid black; padding: 2px 5px; width: 30px; margin: 0 auto;">T</div>	NET 	-1.50	0.00	

* As for 15lb capacity scale, entry weight for preset tare must be integer times of 5.

Ex.) 1.05, 0.05, 0.10, 1.15lb

The above does not hold true with the 30lb scale.

* Unit Price called up from PLU file cannot be used for preset tare input.

* Tentative unit price change after calling up from PLU file cannot be executed except Random Items PLU and open unit price.

NOTE 1: The main circuit in the unit is turned ON when the power plug is connected to the AC outlet. The power of the load cell cannot be turned OFF by the control lock key.

NOTE 2: When the control lock key is turned to "REG" position within about 16 seconds after the power plug is connected to the AC outlet, the test scanning sequence is made, then initial mode is displayed and the scale is ready for use.

NOTE 3: ① After test scanning sequence, if initial weight is in un-stable condition, all "8" indicated on displays will go on and off.

② After test scanning sequence, if initial weight is out of the zero range which is very important limits for starting operation, "—" will be indicated on weight display.

If this situation occurs, check whether the platter is touching to something or not, weight being on the platter or not and setting place of scale being on stable or not.


NOTE 4: Depressing direct key which is not stored in PLU data beforehand causes the machine to enter to error mode.

NOTE 5: In case that tare weight is over 20 div. (30lb scale: 0.20lb, 15lb scale: 0.10lb), please be sure not to issue the tare label by setting Mode switch to MANUAL position.

NOTE 6: If a transaction is not concerned with PLU memory, the data is stored into Random Items PLU memory.

NOTE 7: When scaling operation is completed, if tare which is saved is no longer needed, depress **0** → **T** key in no-weighing on platter.

NOTE 8: Canceling the last registration.
After registering the data and issuing its label.

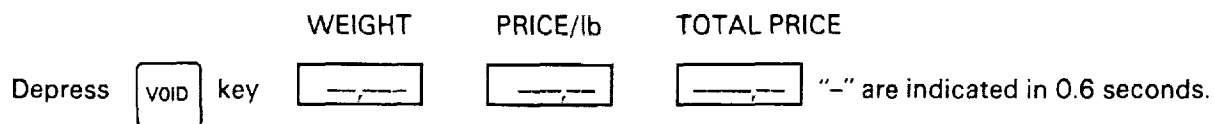


On depressing **VOID** key, the data of the last article is subtracted from the memory.

NOTE 9: In case of being selected by Dip switch, If the PLU which is called up has a programmed Tare weight in itself and that Tare weight is desired to be changed to other weight, the following procedures allow to be altered.

Example: New Tare weight 1.50lb

After calling up the PLU including Tare weight.


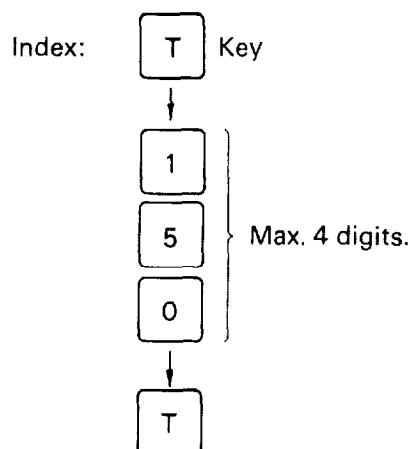


E. Date change


Control lock: REG



The Date can be changed temporarily.

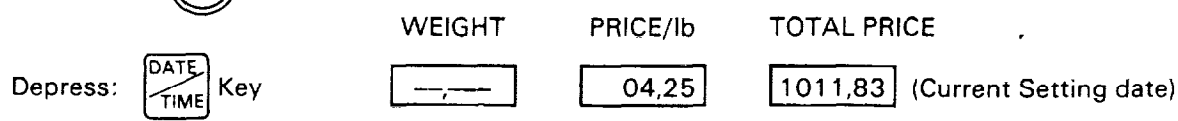

NOTE: When original date is desired.



11-2. TOTAL OPERATION




"X" position: READ

Totals which have accumulated will not be cleared.

"Z" position: RESET


All totals will clear as they are printed on labels or journal paper.

A. Grand total Read and Reset (1)




Total label including total weight, items, and amounts is issued.

(Dip sw. 2-1 : ON)
(Dip sw. 2-6 : OFF)

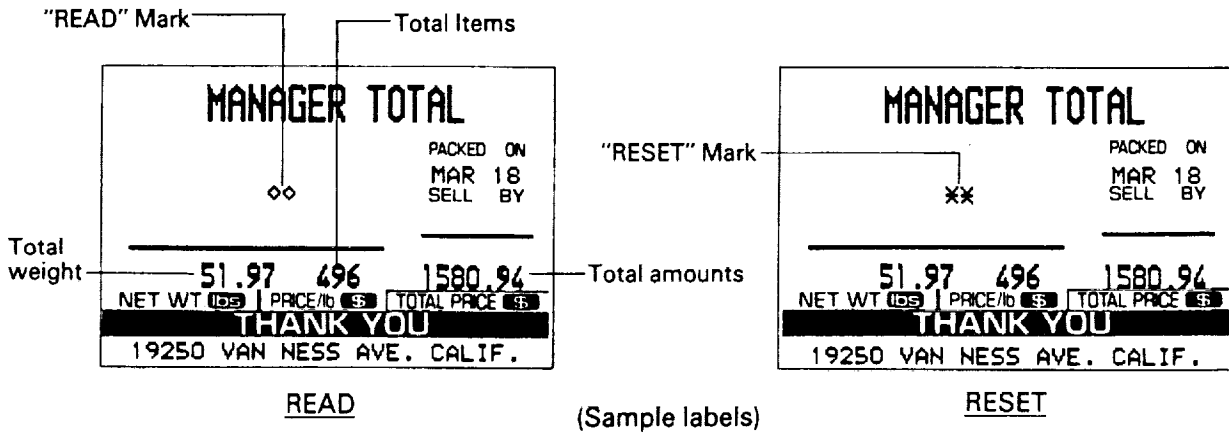

* In case of internal journal print.

(Dip sw. 2-1 : ON)
(Dip sw. 2-6 : ON)

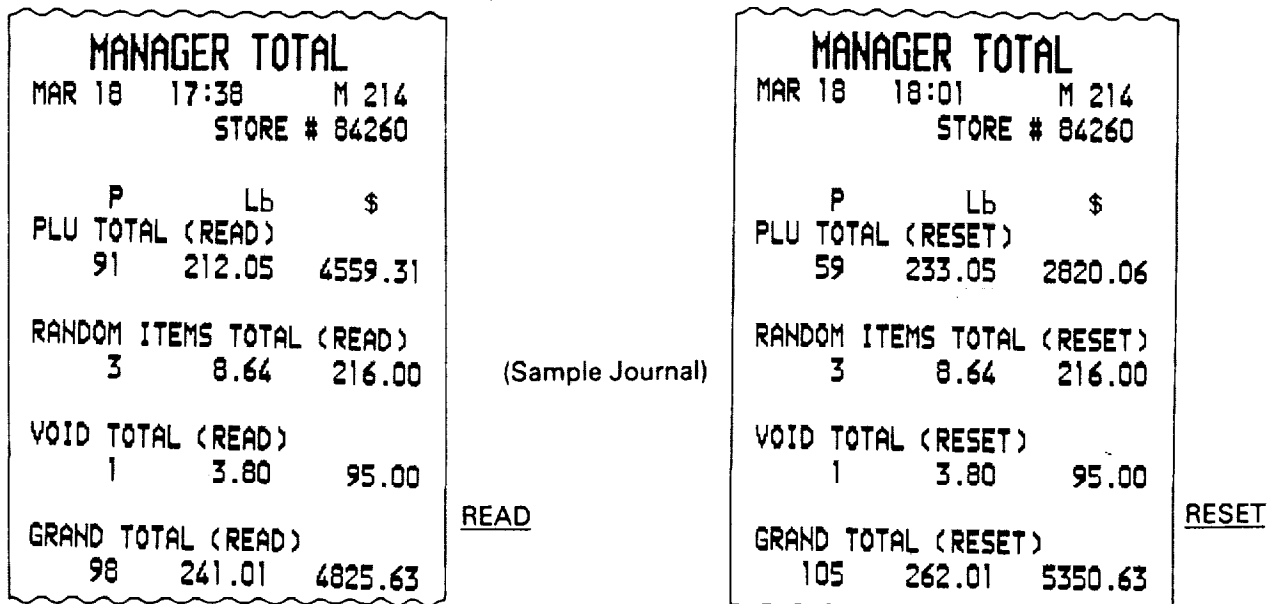

* In case of external journal print.

(By Model TP-10 printer of TANDY CO.)

(Dip sw. 2-1 : OFF)
(Dep sw. 2-6 : ON)


MANAGER TOTAL		
MAR 18	17:42	M 214
		STORE # 84260
P	Lb	\$
PLU TOTAL (READ)		
91	212.05	4559.31
RANDOM ITEMS TOTAL (READ)		
3	8.64	216.00
VOID TOTAL (READ)		
1	3.80	95.00
GRAND TOTAL (READ)		
98	241.01	4825.63

READ

(Sample journal)

B. Grand Total Read and Reset (2)

These Totals are available on journal printer only.



- 1) Internal journal
(Sample journal)

MANAGER TOTAL		
MAR 18	17:41	M 214
		STORE # 84260
PLU TOTAL (READ)		
P	Lb	\$
P.001501	#120100	T 1.20
39	98.83	2264.25
P.001502	#110230	T 0.00
12	31.52	945.60
P.001503	#500810	T 0.50
12	26.66	125.33
P.001504	#170020	T 0.80
14	29.12	1025.08
P.001505	#468001	T 1.50
14	25.92	199.05
P	Lb	\$
PLU TOTAL (READ)		
91	212.05	4559.31
RANDOM ITEMS TOTAL (READ)		
3	8.64	216.00
VOID TOTAL (READ)		
1	3.80	95.00
GRAND TOTAL (READ)		
98	241.01	4825.63

(Dip sw. 2-1 : ON)
(Dip sw. 2-6 : ON)

READ

2) External journal. (TANDY printer)

(Dip sw. 2-1 : OFF)
 (Dip sw. 2-6 : ON)

```

MANAGER TOTAL
MAR 18 17:43 M 214
STORE # 84268

PLU TOTAL (READ)

      F      Lb      $
P.001501 #120100 T 1.20
      39      98.89 2264.25
P.001502 #110230 T 0.00
      12      31.52  945.60
P.001503 #500810 T 0.50
      12      26.66  125.33
P.001504 #170020 T 0.80
      14      29.12  1025.08
P.001505 #468001 T 1.50
      14      25.92  199.05

      F      Lb      $
PLU TOTAL (READ)
      91     212.05 4559.31

RANDOM ITEMS TOTAL (READ)
      3      8.64  216.00

VOID TOTAL (READ)
      1      3.80   95.00


GRAND TOTAL (READ)
      98     241.01 4825.63
    
```

READ

(Sample journal)

C. Single PLU Read and Reset

Ex). PLU # 1501

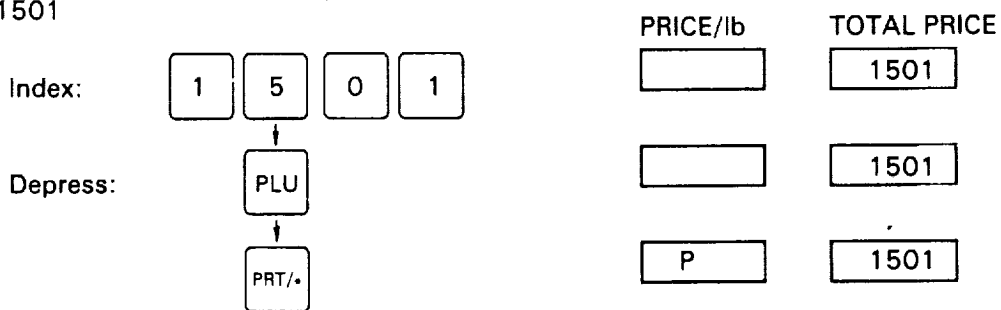

PLU Number

BEEF		
PLU ◊	PACKED ON	
001501	MAR 18	
	SELL BY	
	120100	
16.50	5	412.50
NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
THANK YOU		
19250 VAN NESS AVE. CALIF.		

READ

BEEF		
PLU ✕	PACKED ON	
001501	MAR 18	
	SELL BY	
	120100	
16.50	5	412.50
NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
THANK YOU		
19250 VAN NESS AVE. CALIF.		

RESET

(Sample labels)

PLU # 1501:

MANAGER TOTAL
 MAR 18 17:45 M 214
 STORE # 84260

PLU TOTAL (READ)

P	Lb	\$
P.001501	#120100	T 1.20
39	98.83	2264.25

READ

MANAGER TOTAL
 MAR 18 17:46 M 214
 STORE # 84260

PLU TOTAL (RESET)

P	Lb	\$
P.001501	#120100	T 1.20
39	98.83	2264.25

RESET

(Sample internal journal)

PLU # 1502:

MANAGER TOTAL
 MAR 18 17:47 M 214
 STORE # 84260

PLU TOTAL (READ)


P	Lb	\$
P.001502	#110230	T 0.00
12	31.52	945.60

READ

(Sample external journal)

D. PLU Group Total Read and Reset

PLU # 1501 ~ 1503 group.

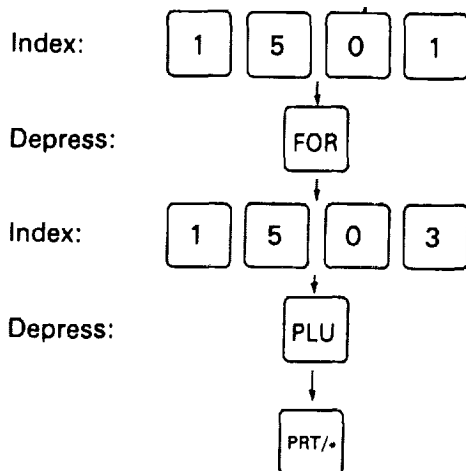

MANAGER TOTAL

PLU ◊	PACKED ON
001501--001503	MAR 18
	SELL BY

31.50	173	794.14
NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)

THANK YOU
 19250 VAN NESS AVE. CALIF.

READ

MANAGER TOTAL

PLU ×	PACKED ON
001501--001503	MAR 18
	SELL BY

15.00	168	381.64
NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)

THANK YOU
 19250 VAN NESS AVE. CALIF.

RESET

(Sample labels)

PLU # 1501 ~ 1503 group

```

MANAGER TOTAL
MAR 18 18:00 M 214
      STORE # 84260

GROUP TOTAL (READ)
PLU.001501--001503

  P      Lb      $
P.001501 #120100 T 0.00
  7      119.83  525.00
P.001502 #110230 T 0.00
  12     31.52   945.60
P.001503 #500810 T 0.50
  12     26.66   125.33
SUBTOTAL (READ)
  31     178.01  1595.93
    
```

READ

```

MANAGER TOTAL
MAR 18 18:00 M 214
      STORE # 84260

GROUP TOTAL (RESET)
PLU.001501--001503

  P      Lb      $
P.001501 #120100 T 0.00
  7      119.83  525.00
P.001502 #110230 T 0.00
  12     31.52   945.60
P.001503 #500810 T 0.50
  12     26.66   125.33
SUBTOTAL (RESET)
  31     178.01  1595.93
    
```

RESET

(Sample internal journal)

```

MANAGER TOTAL
MAR 18 17:53 M 214
      STORE # 84260


GROUP TOTAL (READ)
PLU.001501--001503

  P      Lb      $
P.001501 #120100 T 0.00
  7      119.83  525.00
P.001502 #110230 T 0.00
  12     31.52   945.60
P.001503 #500810 T 0.50
  12     26.66   125.33
SUBTOTAL (READ)
  31     178.01  1595.93
    
```


READ

(Sample external journal)


E. Random items PLU Read and Reset

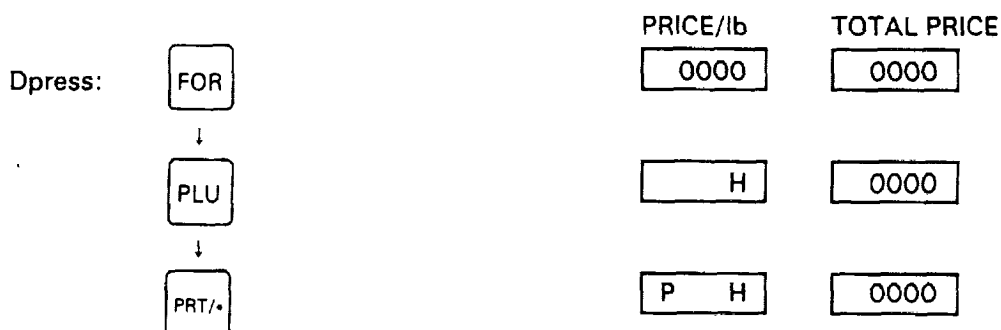

Random items total (Read) Mark

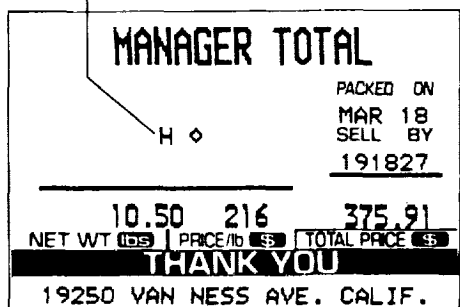



Random items total (Reset) Mark

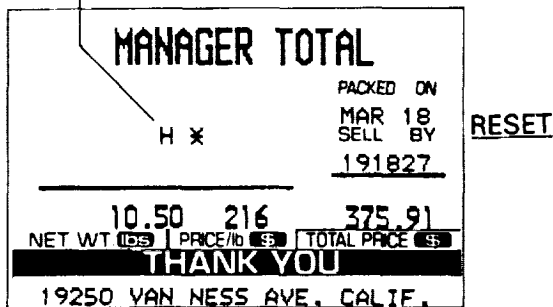

READ

RESET


(Sample labels)

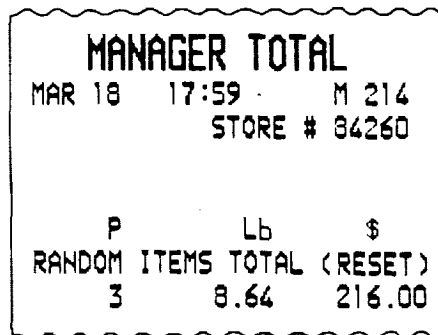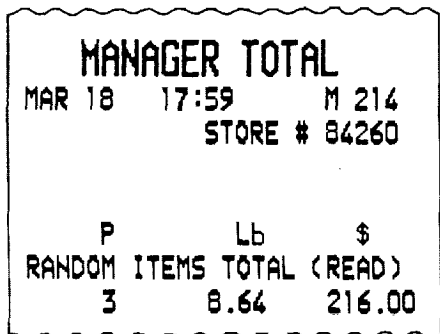

READ

RESET

(Sample internal journals)

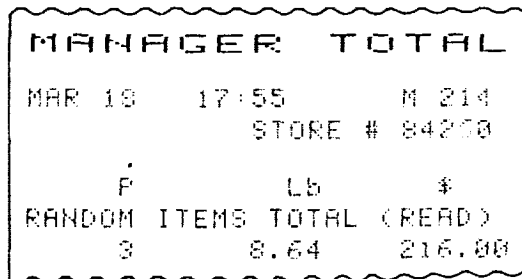

RESET

(Sample external journal)

F. Void Read and Reset

Depress:

VOID



PRT/•

PRICE/lb

-


TOTAL PRICE

0000


P -

0000

VOID (READ) Mark

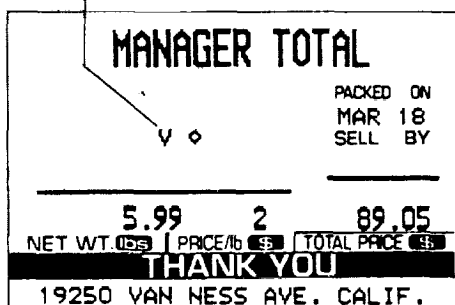

VOID (RESET) Mark

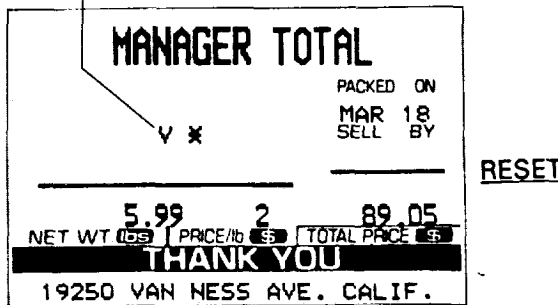

READ

RESET

(Sample labels)

MANAGER TOTAL
 MAR 18 17:59 M 214
 STORE # 84260

P	Lb	\$
VOID TOTAL (READ)		
1	3.80	95.00

READ

MANAGER TOTAL
 MAR 18 17:59 M 214
 STORE # 84260

P	Lb	\$
VOID TOTAL (RESET)		
1	3.80	95.00

RESET

(Sample internal journal)

MANAGER TOTAL
 MAR 18 17:55 M 214
 STORE # 84260

P	Lb	\$
VOID TOTAL (READ)		
1	3.80	95.00

READ

(Sample external journal)

G. Hourly Report

Dpress:



PRICE/lb	TOTAL PRICE
H-H	000000
P H-H	000000

The labels of Hourly report are issued consecutively.

HOURLY REPORT

PACKED ON
 MAR 18
 SELL BY

10-11 ◊

NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
16.24	8	212.76

THANK YOU
 19250 VAN NESS AVE. CALIF.

READ (1)

HOURLY REPORT

PACKED ON
 MAR 18
 SELL BY

12-13 ◊

NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
14.16	7	354.00

THANK YOU
 19250 VAN NESS AVE. CALIF.

READ (3)

HOURLY REPORT

PACKED ON
 MAR 18
 SELL BY

11-12 ◊

NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
8.32	4	292.88

THANK YOU
 19250 VAN NESS AVE. CALIF.

READ (2)

HOURLY REPORT

PACKED ON
 MAR 18
 SELL BY

13-14 ◊

NET WT (LBS)	PRICE/lb (\$)	TOTAL PRICE (\$)
14.56	7	512.54

THANK YOU
 19250 VAN NESS AVE. CALIF.

READ (4)

HOURLY REPORT

PACKED ON
MAR 18
SELL BY

15-16 ◊

NET WT (LBS)	PRICE/LB (\$)	TOTAL PRICE (\$)
166.13	62	2855.85

THANK YOU

19250 VAN NESS AVE. CALIF.

READ (5)

HOURLY REPORT

PACKED ON
MAR 18
SELL BY

17-18 ◊

NET WT (LBS)	PRICE/LB (\$)	TOTAL PRICE (\$)
11.52	4	345.60

THANK YOU

19250 VAN NESS AVE. CALIF.

READ (7)

HOURLY REPORT

PACKED ON
MAR 18
SELL BY

16-17 ◊

NET WT (LBS)	PRICE/LB (\$)	TOTAL PRICE (\$)
10.08	6	252.00

THANK YOU

19250 VAN NESS AVE. CALIF.

READ (6)

HOURLY REPORT

PACKED ON
MAR 18
SELL BY

TOTAL ◊

NET WT (LBS)	PRICE/LB (\$)	TOTAL PRICE (\$)
241.01	98	4825.63

THANK YOU

19250 VAN NESS AVE. CALIF.

READ
TOTAL (8)

(Sample labels)

MANAGER TOTAL

MAR 18 17:58 M 214
STORE # 84260

P	Lb	\$
HOURLY REPORT (READ)		
10-11		
8	16.24	212.76
11-12		
4	8.32	292.88
12-13		
7	14.16	354.00
13-14		
7	14.56	512.54
15-16		
62	166.13	2855.85
16-17		
6	10.08	252.00
17-18		
11	32.52	870.60
TOTAL		
105	262.01	5350.63

MANAGER TOTAL

MAR 18 17:56 M 214
STORE # 84260

P	Lb	\$
HOURLY REPORT (READ)		
10-11		
8	16.24	212.76
11-12		
4	8.32	292.88
12-13		
7	14.16	354.00
13-14		
7	14.56	512.54
15-16		
62	166.13	2855.85
16-17		
6	10.08	252.00
17-18		
11	32.52	870.60
TOTAL		
105	262.01	5350.63



(Sample labels)

12. PROGRAMMING SECTION

PART I

Setting the date, time, store code, machine number and store address.

Keyboard entry:

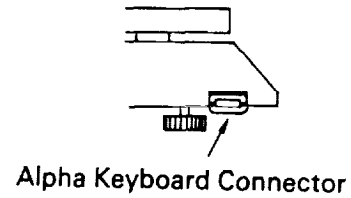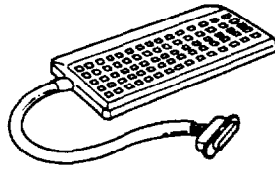


Control lock:



PRICE/lb P1

1) Date:


Example: To set date for March 18, 1984

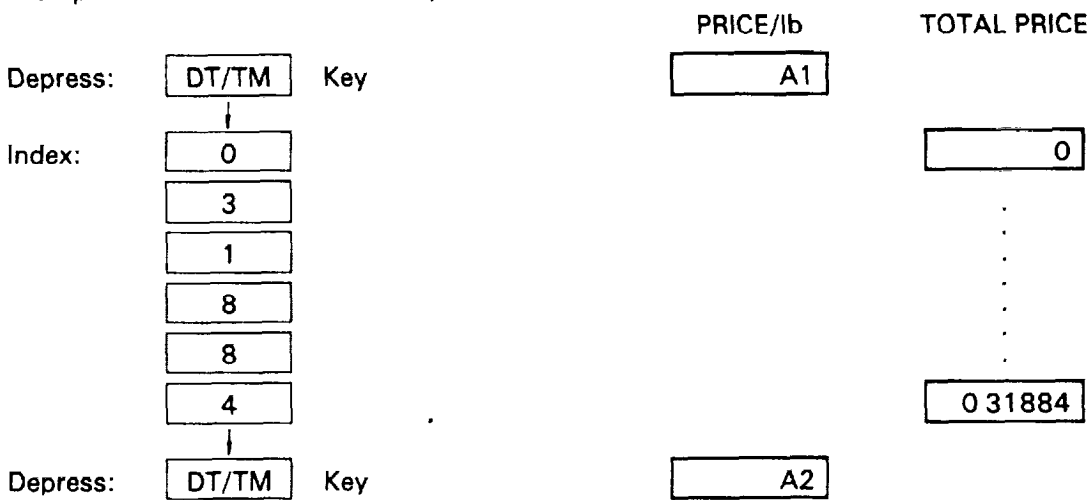

NOTE: The SL59 will check details of date input, any wrong date will result in error mode, and correct date should be entered again.

2) Time:


Example: To set time for 2 : 30 P.M.

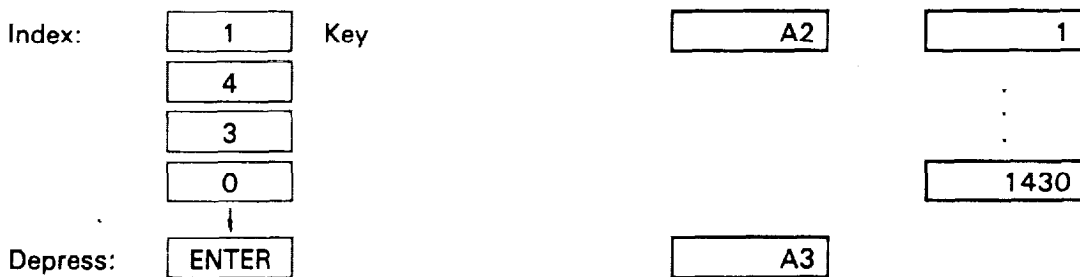

NOTE: Express all time in a 24 hour military format.
When SL59 will check details of time input, any wrong time will result in error mode, and correct time should be re-entered.

3) Store Code:

Example: To set the store code of 84260 (MAX. 5 digits)

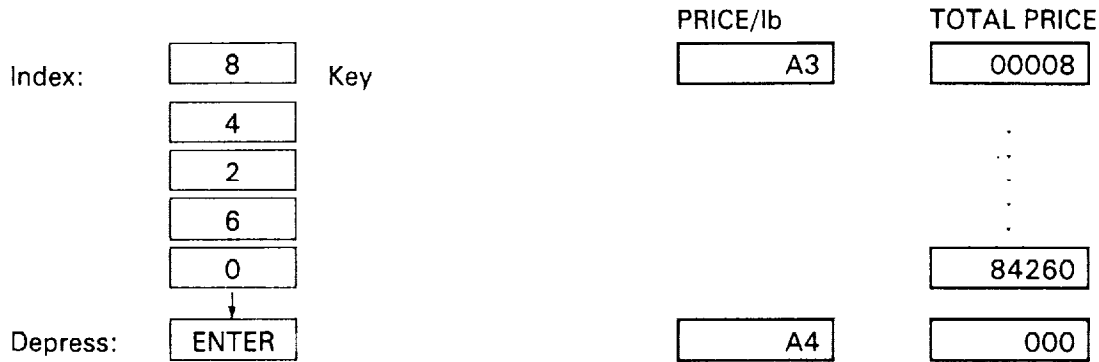

4) Machine Number (0 ~ 255):


Example: To set a machine number of 214.




NOTE: As with time setting routine the SL59 will check details of input, if number entered is over 255 then SL59 will error.

5) Store Address:


Up to 26 bottom characters in one line can be set as store address of a label.

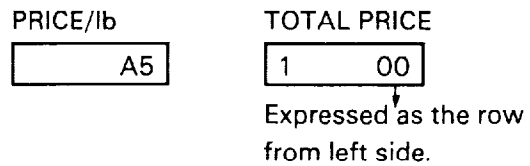


Example: To set the address of "19250 VAN NESS AVE. CALIF."

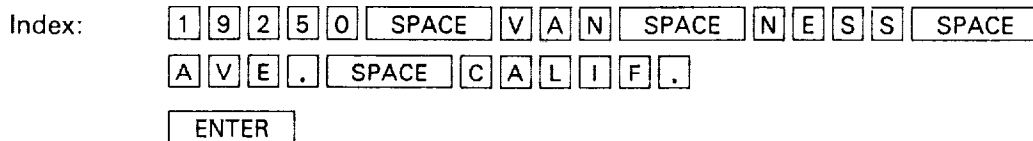

6) Initial status set:

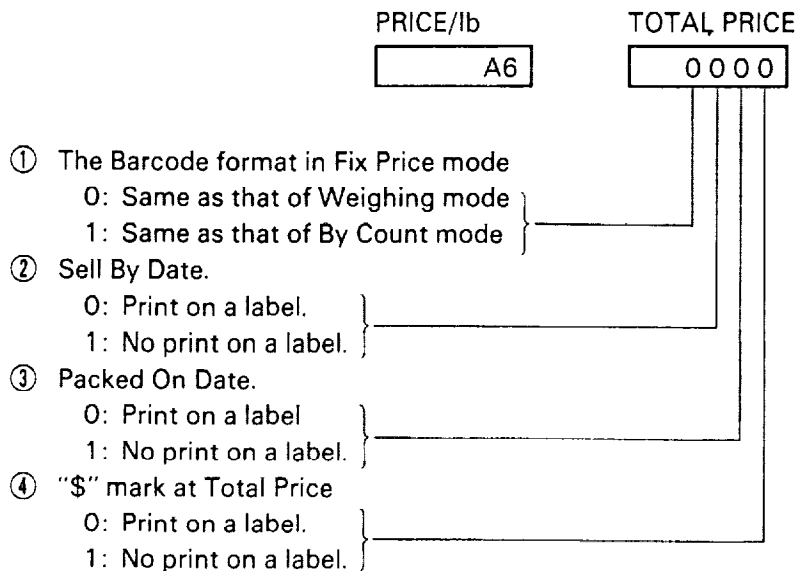


Standard status for us.: "0 0 0 0"

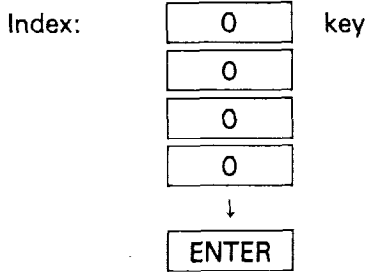

After last depression of key, a label containing the programmed information is issued automatically.

7) Sample label

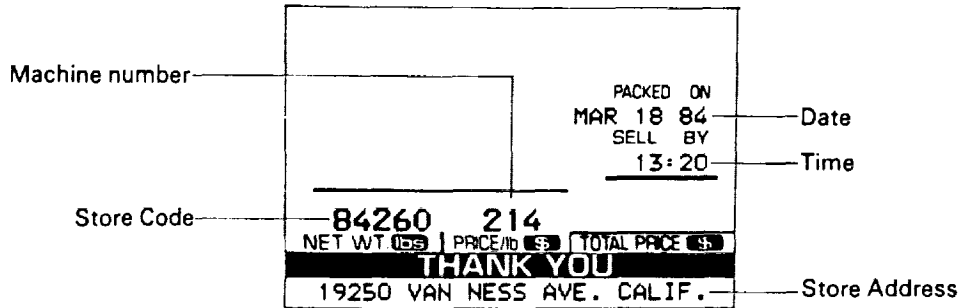


- NOTE:** 1. If the key is depressed during store address programming, all address memories will be cleared.
 2. If you want to go back to a prior entry in descriptor programming and make a correction, depress key.

PART II


1) Bar Code Formats

This machine has the capacity of printing a Bar Code format of 13 digits on a label. The user can therefore program the UPC codes themselves.

Keyboard entry:

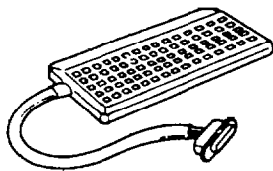

Control lock:




PRICE/lb

TOTAL PRICE

Example 1: To set following bar code format.

0	2	C 2	C 3	C 4	C 5	C 6	P C/D	P 4	P 3	P 2	P 1	C/D
Bar Code Flag	Commodity Code (Upper 5 digits)					Price Check Digits	Price (Lower 4 digits)				Total Check Digits	

Deprss:

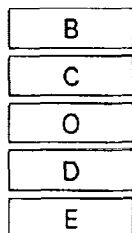

PRICE/lb

TOTAL PRICE


Select the label issue mode.	{	<input type="text" value="1"/> ... Bar Code Format for weighing.	<input type="text" value="1"/>
		or (<input type="text" value="2"/>) ... Bar Code Format for By Count.	(<input type="text" value="2"/>)
		or (<input type="text" value="0"/>) ... Bar Code Format for Weighing and By Count.	(<input type="text" value="0"/>)
Input the flag. (MAX. 2 digits)	{	<input type="text" value="ENTER"/> <input type="text" value="-2"/>	
		<input type="text" value="0"/>	
		<input type="text" value="2"/> <input type="text" value="02"/>	
Input the Commodity Code digits. (2 ~ 6)	{	<input type="text" value="ENTER"/> <input type="text" value="-3"/> <input type="text" value="00 0"/>	
		<input type="text" value="2"/>	
		<input type="text" value="3"/>	
		<input type="text" value="4"/>	
		<input type="text" value="5"/>	
		<input type="text" value="6"/> <input type="text" value="05 0"/>	
		<input type="text" value="6"/>	
Select the check digit to be or not. (0 or 1)	{	<input type="text" value="ENTER"/> <input type="text" value="-4"/> <input type="text"/>	
		<input type="text" value="1"/> ... Setting the price check digit.	(<input type="text" value="1"/>)
		or (<input type="text" value="0"/>) ... Setting no price check digit.	(<input type="text" value="0"/>)
Select the Price or Weight. (<input type="text" value="P"/> or <input type="text" value="W"/>)	{	<input type="text" value="ENTER"/> <input type="text"/>	
		* <input type="text" value="P"/> <input type="text" value="P"/>	
		or (<input type="text" value="W"/>) (<input type="text" value="1"/>)	
		<input type="text" value="4"/>	
		<input type="text" value="3"/>	
		<input type="text" value="2"/>	
		<input type="text" value="1"/> <input type="text" value="4321"/>	
		<input type="text" value="ENTER"/> (Finish) <input type="text" value="P1"/> <input type="text" value="0000"/>	

Total check digit is set automatically.

*When Price check digit is entered, next Price Digits must be input in 4 or 5 digits.

2) Sample label

(By count format was set already.)

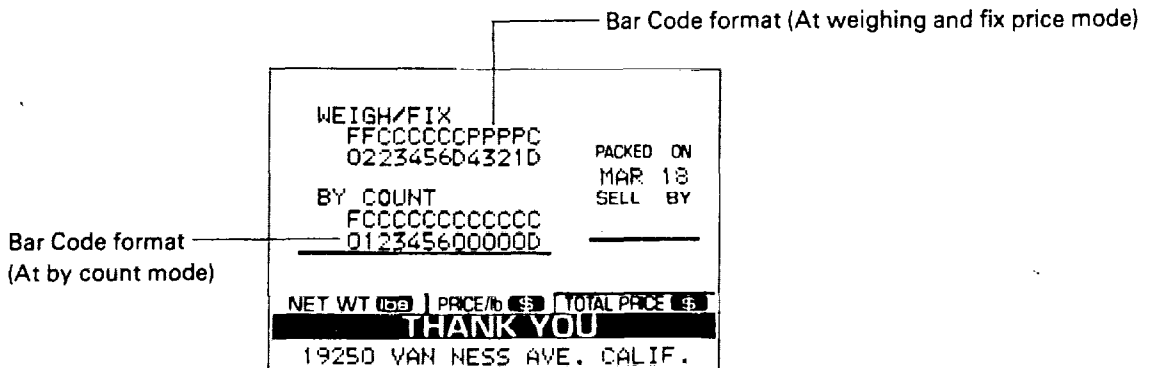

Example 2: To set following bar code format.

0	C 1	C 2	C 3	C 4	C 5	C 6	0	0	0	0	0	C/D
Bar Code Flag	Commodity Code						All "0"				Table Check Digits	


		PRICE/lb	TOTAL PRICE
Depress:	<input type="text" value="B"/>	<input type="text" value="-0"/>	<input type="text"/>
	<input type="text" value="C"/>		
	<input type="text" value="O"/>		
	<input type="text" value="D"/>		
	<input type="text" value="E"/>	<input type="text" value="-1"/>	<input type="text"/>
	<input type="text" value="2"/> ... Bar Code Format for By Count.		<input type="text" value="2"/>
	<input type="text" value="ENTER"/>	<input type="text" value="-2"/>	
	<input type="text" value="0"/> ... Flag		
	<input type="text" value="ENTER"/>	<input type="text" value="-3"/>	<input type="text" value="00 0"/>
	<input type="text" value="1"/>		
	<input type="text" value="2"/>		
	<input type="text" value="3"/>		
	<input type="text" value="4"/>		
	<input type="text" value="5"/> ... Commodity Code digits.		
	<input type="text" value="6"/>		
	<input type="text" value="0"/>		
	<input type="text" value="0"/>		
	<input type="text" value="0"/>		
	<input type="text" value="0"/>		
	<input type="text" value="0"/>		
	<input type="text" value="ENTER"/>	<input type="text" value="-4"/>	
	<input type="text" value="0"/> ... No Price check digit.		
	<input type="text" value="ENTER"/>	<input type="text" value="-5"/>	
	↓ ... No Price and Weight digits.		
	<input type="text" value="ENTER"/> (Finish)	<input type="text" value="P1"/>	<input type="text" value="0000"/>

NOTE: The label containing Bar Code programmed information is issued automatically.

3) Sample label


WEIGH/FIX FFCCCCPPPPC 0223456043210	PACKED ON MAR 18 SELL BY
BY COUNT FCCCCCCCCCCC 012345600000D	
NET WT (lb) PRICE/lb (\$) TOTAL PRICE (\$)	
THANK YOU	
19250 VAN NESS AVE. CALIF.	

Example 3: To check the bar code format stored in SL59.

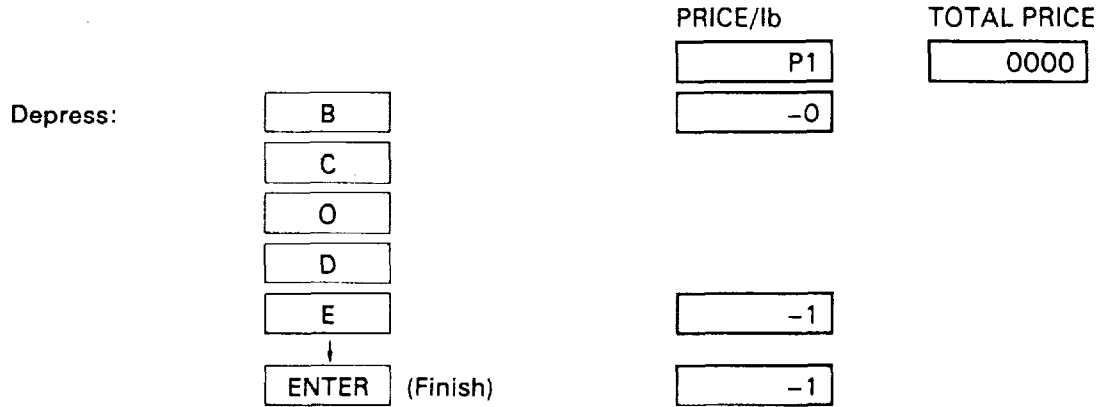

NOTE: The label containing Bar Code programmed information is issued automatically.


4) Sample label:

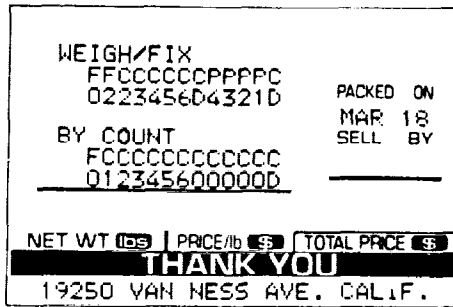

PART III

Programming the contents of PLU (PLU numbers, commodity code, Unit Price, Commodity name and shelf life).

Keyboard entry:

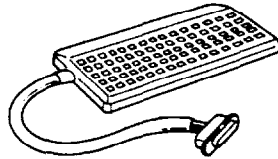


Control lock:



1) PLU Number


Example: Input PLU #1501. (MAX. 6 digits)

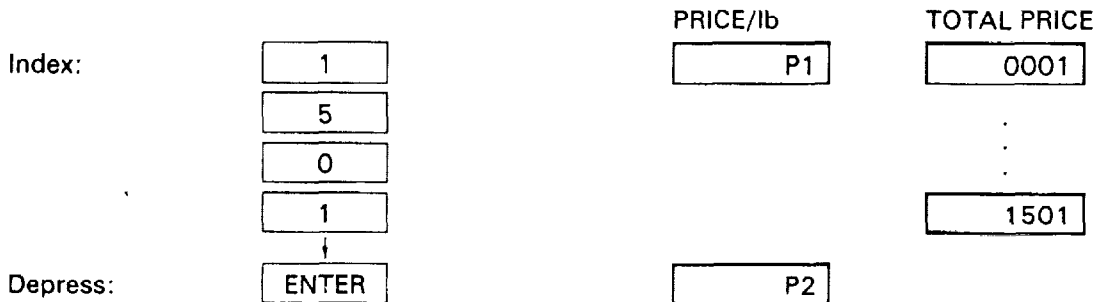

NOTE: If the machine falls into error mode when entering PLU number, once execute the reset operation (Clearing total memories), then program the PLU data again.


2) Commodity Code

Example: Input Commodity Code # 120100 (MAX. 6 digits)

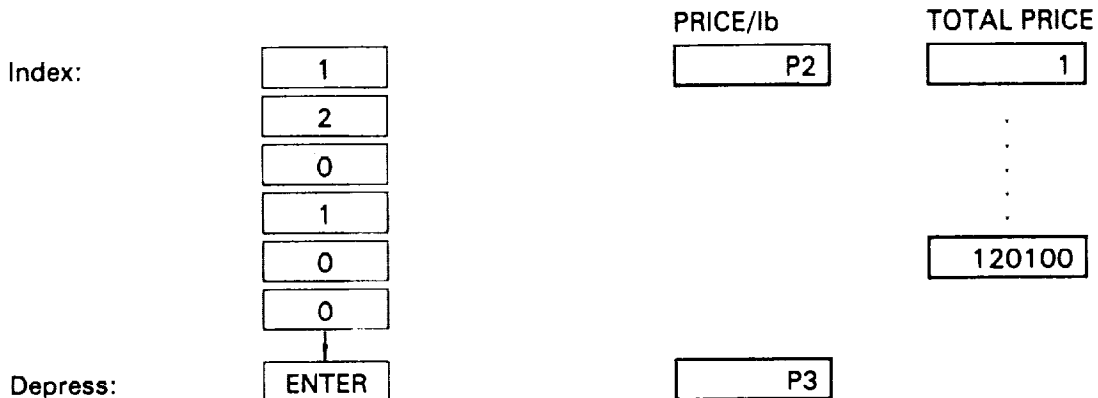

3) Commodity Name


Example: "Beef" has to be designated to print.

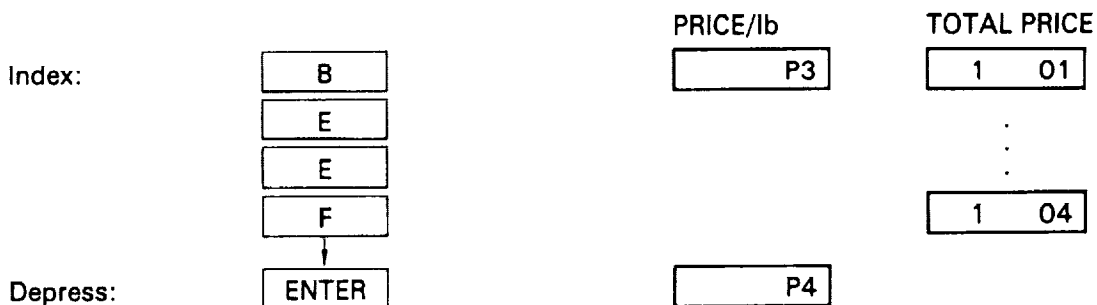

NOTE: In case that just one line of Print is used, it is possible to program up to 20 characters, including any spaces with capital letter.


A two line commodity description can also be printed on a label with up to 52 characters with small letter by using key as follows.

Example: "GRAND SIRLOIN" has to be designated to print.

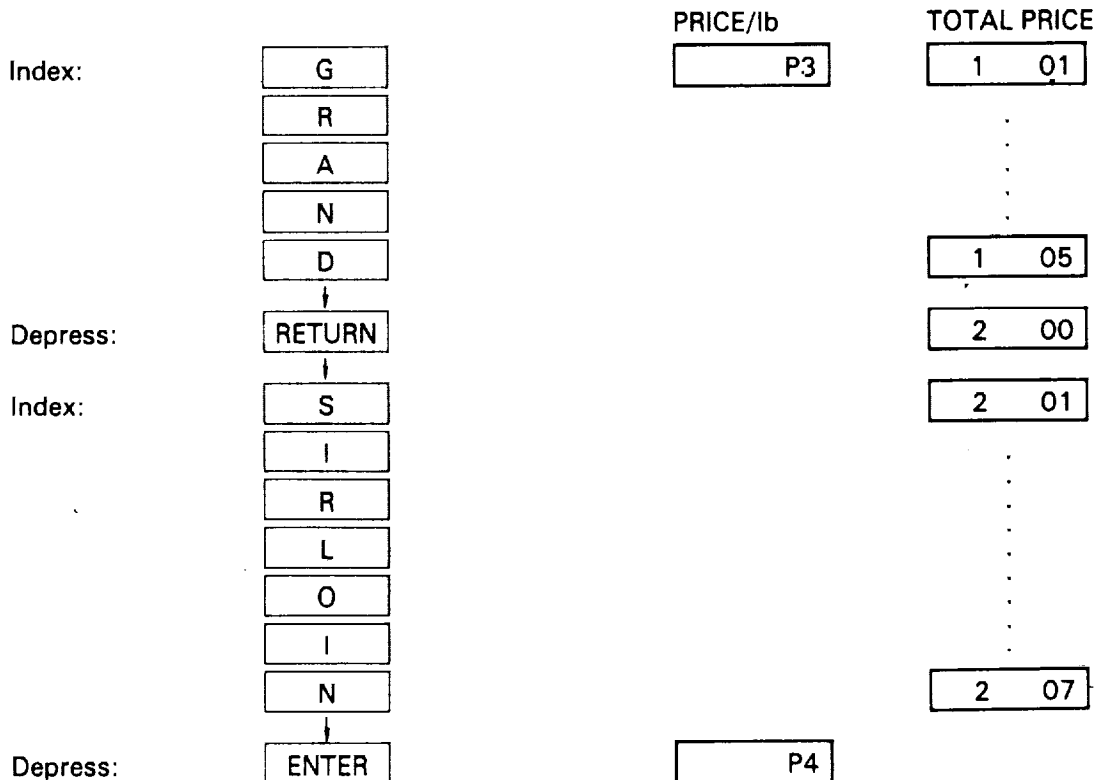

4) Unit Price

Example: Input unit price \$25.00 (per 1lb, 1/2lb, 1/4lb) MAX. 4 digits.

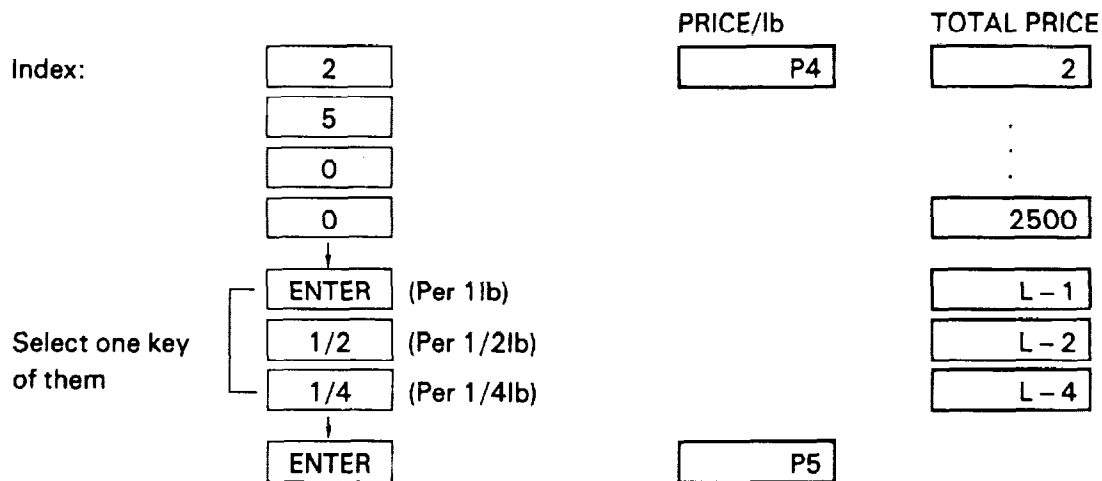

NOTE: The SL59 will check details of unit price, if unit price after calculation (1/2lb: 2 times, 1/4lb: 4 times) is exceeded 4 digits then SL59 will error.

5) Shelf-life

Shelf-life may be made up to 2 digits.


Example: Packaging a product which has 7 days shelf-life.



6) Tare (Programmed in PLU)

Tare can be set up to 4 digits.

Example: Tare weight 1.20lb

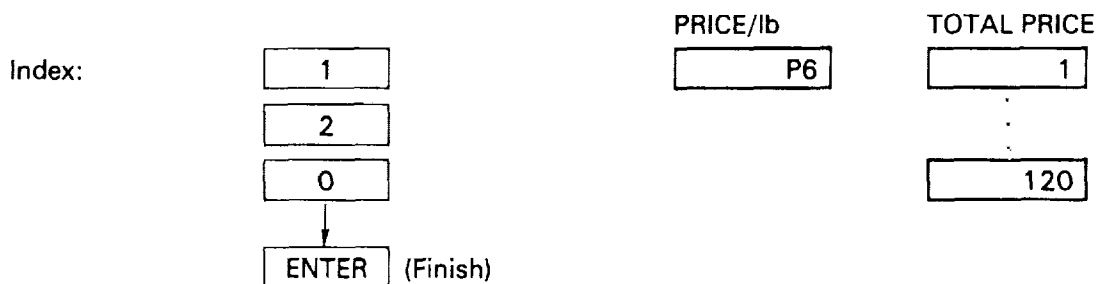

NOTE 1: Limits of Tare weight.


30lb Scale: Up to 30.00lb

15lb Scale: Up to 9.995lb

2: This tare programming is available only when selected by Dip switch (SW3-6).


3: The display is returned to the initial state automatically after above presetting.

Sample label:

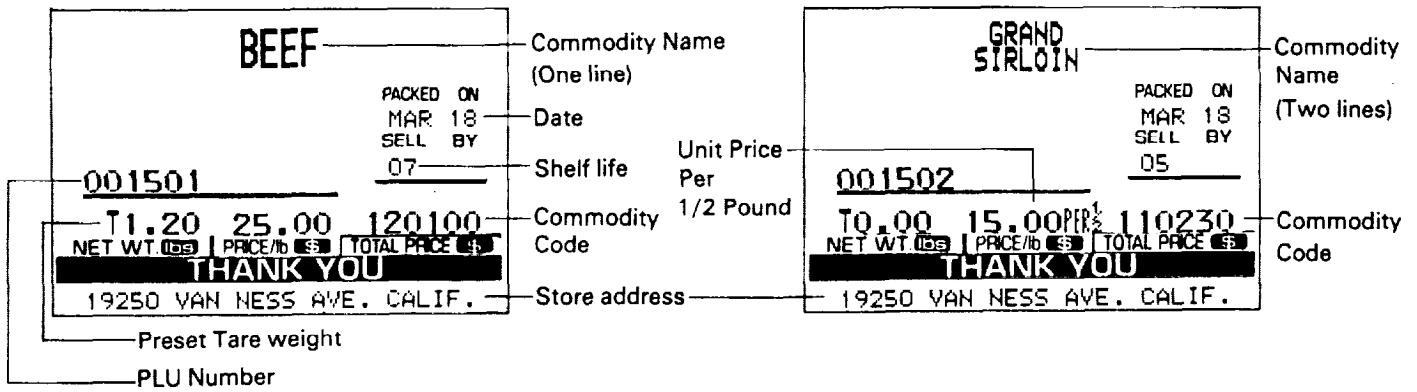


NOTE: When open unit price is desired, enter the unit price of "0.00" then depress **ENTER** key. Open price can be input only per 1 lb.

Sample label:
Open unit price

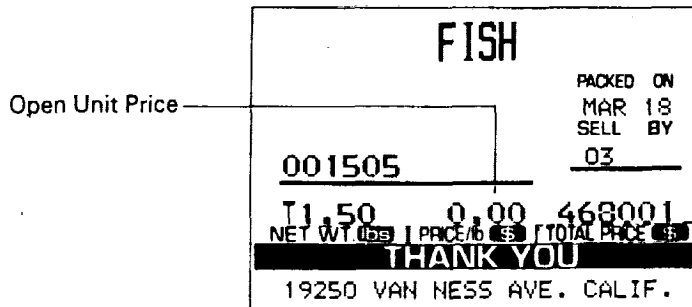


PART IV

Deleting PLU data.



Individual PLU deletion:

A. Example: PLU # 1201 needs to be removed from the file.

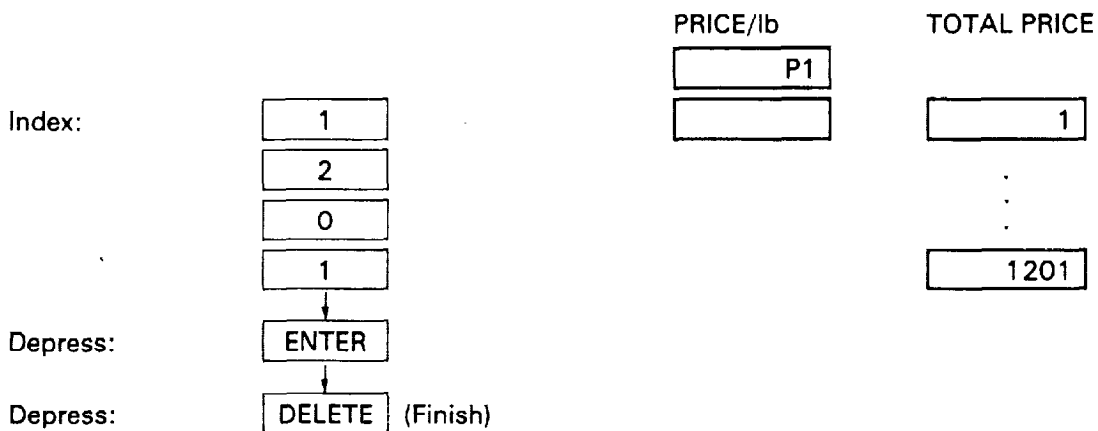

All the data programmed for PLU # 1201 is deleted.

If the unit goes into error during a PLU deletion, the unit has not been reset or the PLU number designated in above procedure (PLU: 1201) had not been preset in the files.



B. Example: Random Item PLU needs to be removed from the file.

		PRICE/lb	TOTAL PRICE
Depress:	H	H1	191827
	↓		(Current Commodity Code)
Depress:	DELETE (Finish)	P1	0000

PART V

1) Random Items PLU setting (Optional function selected by Dip switch)

This SL59 scale is provided with one Random Item PLU memory for the commodity which does not need to be filed in the PLU's beforehand.

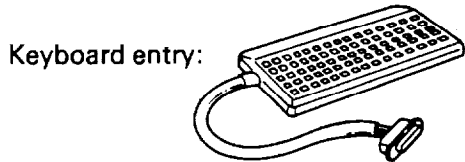

2) Commodity Code

Example: Input Commodity Code # 191827 (MAX. 6 digits)

		PRICE/lb	TOTAL PRICE
Depress:	H	H1	000000
	1		000001
	9		⋮
	1		⋮
	8		⋮
	2		⋮
	7		191827
	↓		
	ENTER	H2	


3) Commodity Name

Example: "OTHERS" has to be designated to print.

Index:	O	H2	1 01
	T		⋮
	H		⋮
	E		1 04
	R		
	S		
	↓		
Depress:	ENTER		

NOTE: This procedure is same as that of PART III.


4) Sample label:

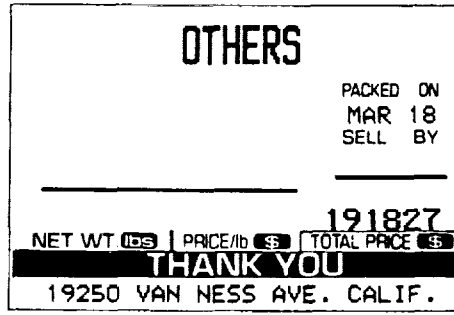

PART VI

Label length and spacing setting

Keyboard entry:

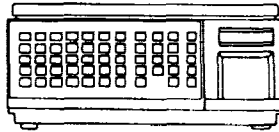

Control lock: PR1



Example: Using standard label, the lable length is 1.57 inch (From bottom to top).


		PRICE/lb	TOTAL PRICE	
Depress:	SAVE	L1	128	: Original space in memory.
Index:	1 (1.26 inch)		1	: Space setting
	2		:	
	6		126	
Depress:	PRT/+	L2	157	: Original length of label in memory
Index:	1		1	
	5		:	
	7		157	
Depress:	PRT/+		0000	

NOTE: 1. Spacing can be readjusted separately by adding (to move print up ward), or subtracting (to move print down ward) to the original figure of 1.28 (inch).

NOTE: 2. Best spacing figure can be calculated by subtracting around 0.29 (inch) from the label length figure.

PART VII

Keyboard entry:

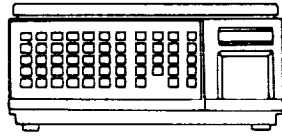


Control lock: PR1



1) Unit Price Change in PLU

Example: Change the unit price of PLU # 1504 to \$8.80 per 1/4 lb.

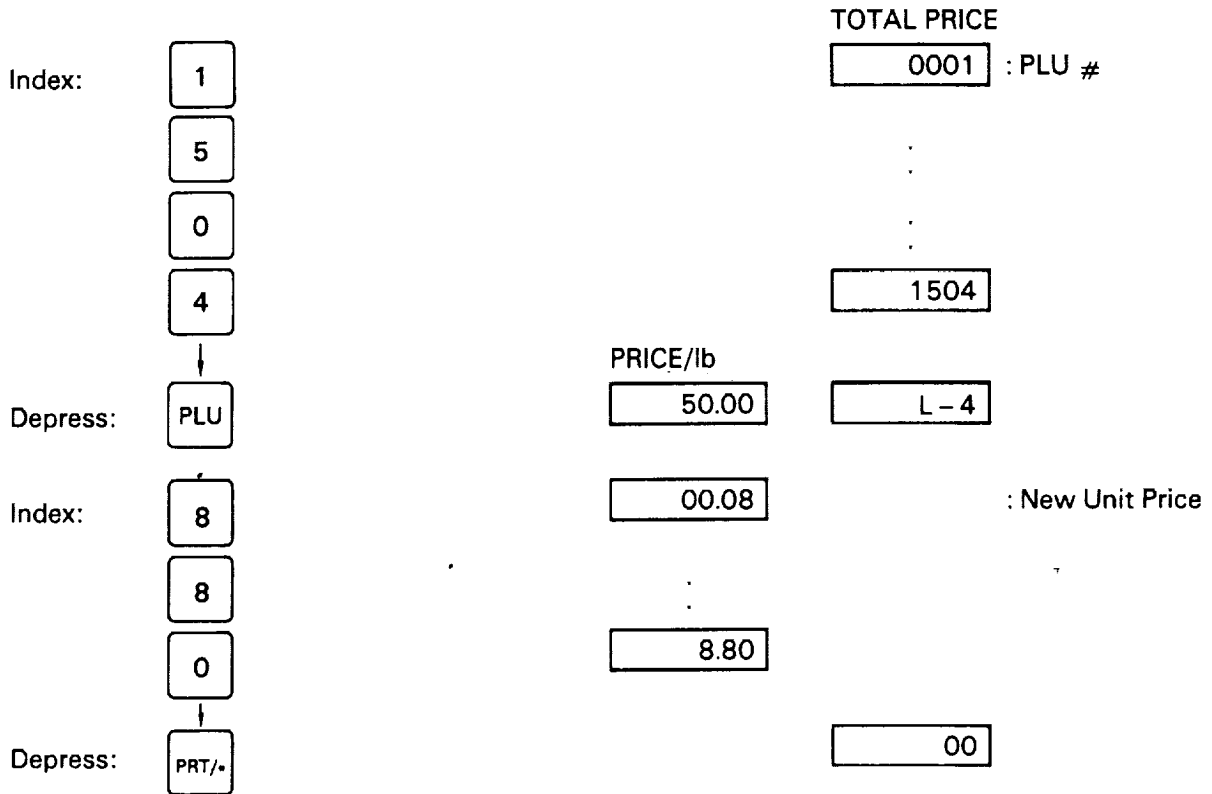


2) Shelf-life Change in PLU.

Example: New shelf-life 12 days




NOTE: New unit price and Shelf-life are retained in the PLU file.
 "Per 1/4 pound" cannot be changed.

3) Sample label:

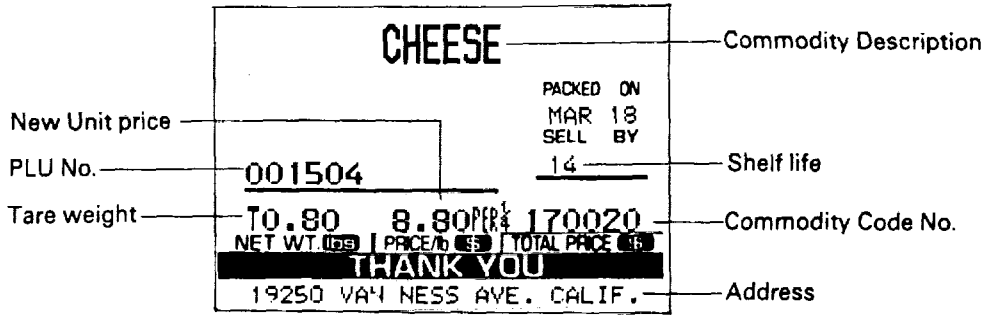

PART VIII

Keyboard entry:

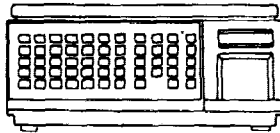

Control lock: PR1

PLU direct Key setting

The SL59 has 33 PLU direct keys which are very convenient to recall a PLU quickly.
 Example: Program PLU # 1208 to direct key 4.


		PRICE/lb	TOTAL PRICE
Depress:	4 (Direct key)	04	0000
	1	04	0001
	2		⋮
	0		⋮
	8		1208
Depress:	PLU (Finish)		0000

The memories of PLU # 1208 have been entered into # 4 direct key.

NOTE: In case of clearing the memory of Direct key, depress 0 key after calling PLU number.

PART IX

Keyboard entry:

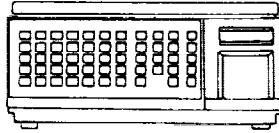


Control lock: PR1



List up of all PLU contents


There are three different kinds of listing procedures, printing it on labels, printing on journal paper, and printing on external journal paper by TANDY's printer.

1. List up on labels. (Dip switch 2-6: "OFF")
(Standard)

Depress:  key

The labels containing PLU data are issued successively one after another.

Sample label

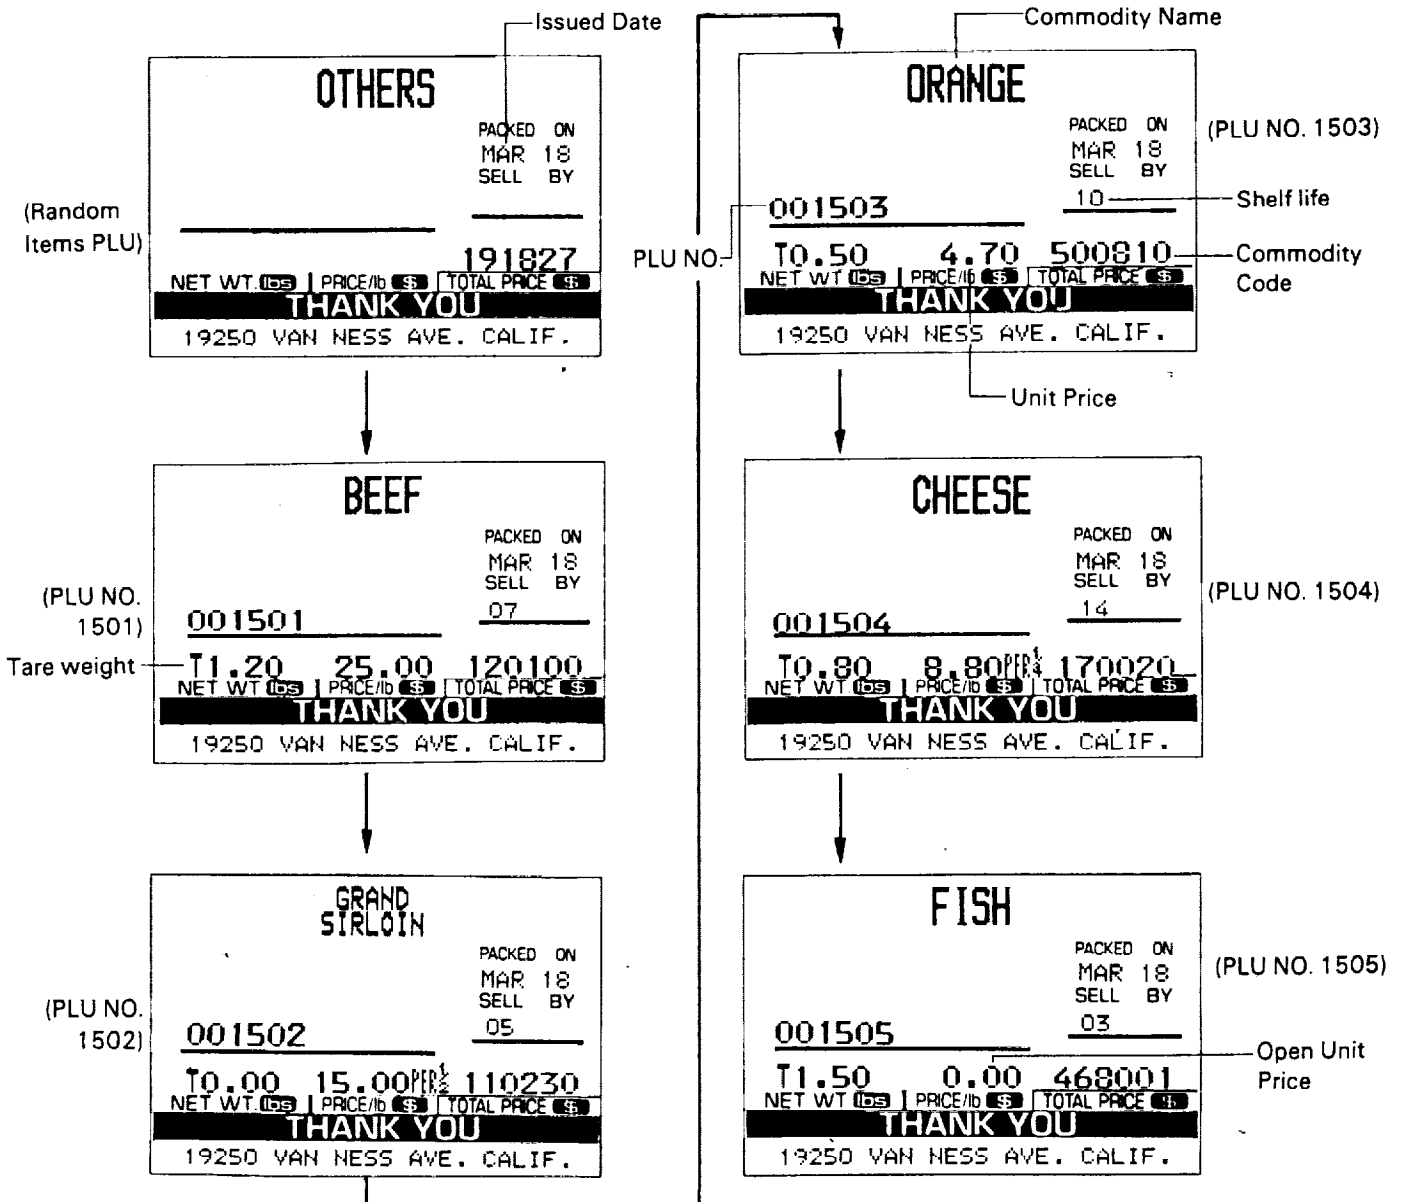

2. List up on journal paper. Dip switch 2-6 : "ON"

Dip switch 2-1 : "ON"

After exchanging label roll to journal paper, depress PRT/* key, and all PLU contents are printed on paper.

Depress: PRT/* key

Sample journal:

```

          PLU LISTING
MAR 18  15:01  M 214
          STORE # 84260

          OTHERS
                   #191827

          BEEF
P.001501 #120100 T 1.20
$25.00 PER Lb   S.L.07

          GRAND
          SIRLOIN
P.001502 #110230 T 0.00
$15.00 PER 1/2 Lb S.L.05

          ORANGE
P.001503 #500810 T 0.50
$ 4.70 PER Lb   S.L.10

          CHEESE
P.001504 #170020 T 0.80
$ 8.80 PER 1/4 Lb S.L.12

          FISH
P.001505 #468001 T 1.50
OPEN PER Lb     S.L.03
  
```

- Listing them with external printer.
 Dip switch 2-6 : "ON"
 Dip switch 2-1 : "OFF"
 Connect the printer cable to external printer.
 (Model TP-10 of TANDY CO.).

Depress: key

Sample external journal:

```

    PLU LISTING
    MAR 18 15:05 M 214
    STORE # 84260

    OTHERS
    #191827

    BEEF
    P.001501 #120100 T 1.20
    $25.00 PER Lb S.L.07

    GRAND
    SIRLOIN
    P.001502 #110230 T 0.00
    $15.00 PER 1/2 Lb S.L.05

    ORANGE
    P.001503 #500810 T 0.50
    $ 4.70 PER Lb S.L.10

    CHEESE
    P.001504 #170020 T 0.80
    $ 8.80 PER 1/4 Lb S.L.12

    FISH
    P.001505 #400001 T 1.50
    OPEN PER Lb S.L.03
    
```

NOTE: 1. If a group of PLUs are to be read, the following procedures allow a list to be generated.

Example: The contents which are desired to be listed from PLU # 1000.

Index:

 Depress: (Finish)

NOTE: 2. The contents of one PLU can be printed by the following.

Example: PLU # 1008 is to be read for verification.


Depress:

PRICE/lb : Current Unit Price

The content of PLU # 1008 will be printed out.

PART X

Keyboard entry:

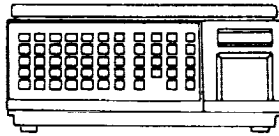


Control lock: PR1



Time of day change


Time setting should be designated in 24 hour military format.

Example: To change the time from 9:55 A.M. to 1:40 P.M.

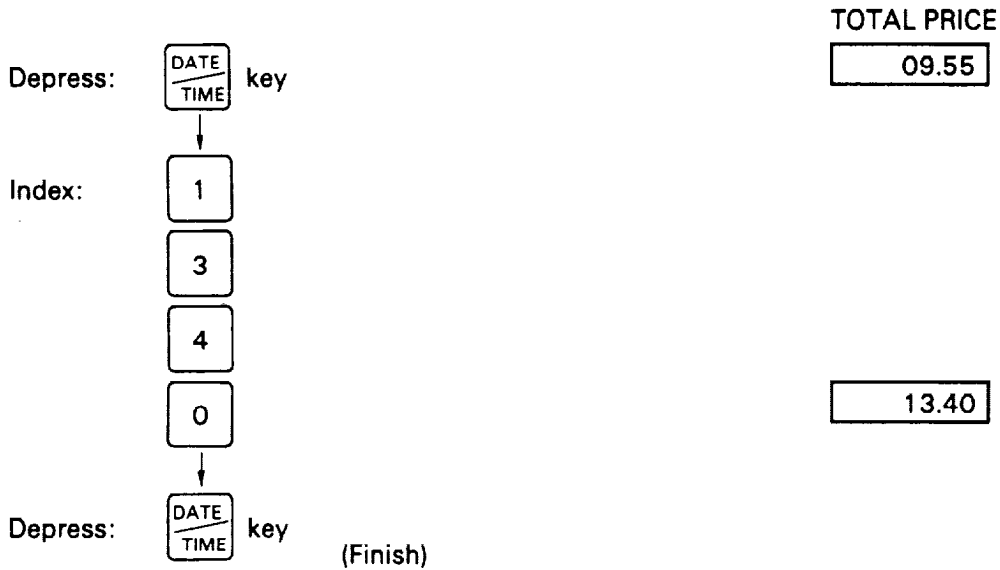

PART XI

Keyboard entry:

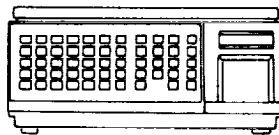

Control lock: PR1




Print Test Label


At the "PR1" position, depression of FOR key will issue a label indicating the area which is within the print matrix.

Please, check the condition of thermal head with this label everyday before starting operation.

Sample label:

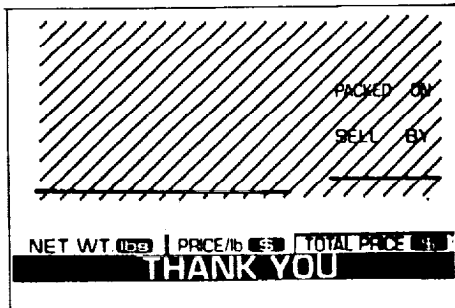

13. LABEL THREADING


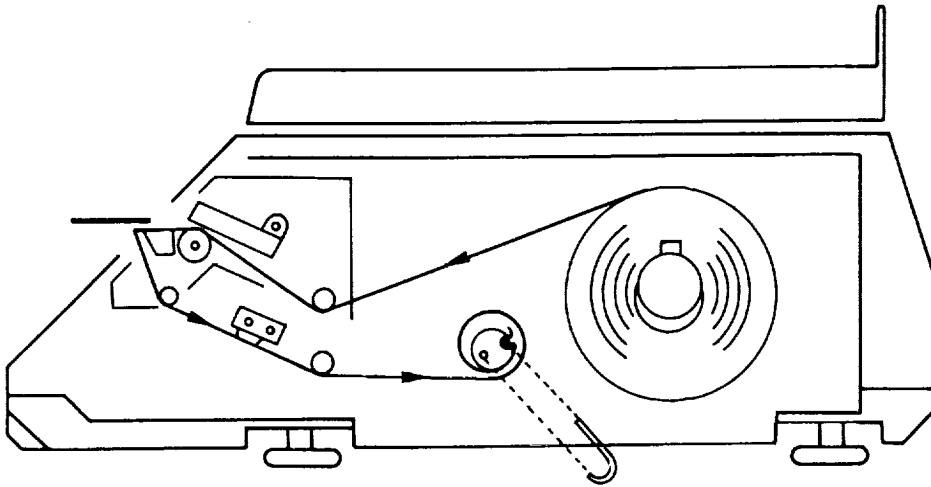


14. CLEANING THE PRINT HEAD

If the print head is dirty, clear printing is not performed. It is recommended to clean the head with thermal head cleaner everyday, before starting operation by following procedure:

- 1) Remove the printer cover and right side cover.
- 2) Push the head hold lever to arrow direction.
- 3) Lift the head pusher plate in the direction of the arrow with your hand, and hang its pin to 3rd. groove of the head hold lever in order to allow the print head to be easily seen.
- 4) Wipe off the dirt on the [] portion with the thermal head cleaner. Then push down the print head.

NOTE: DO NOT DAMAGE the print head when cleaning.

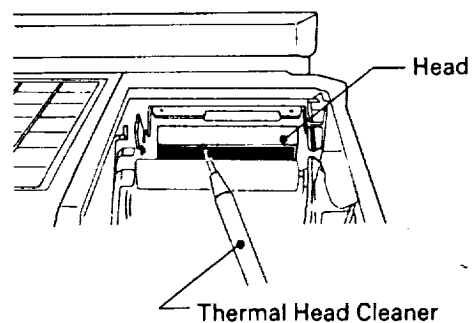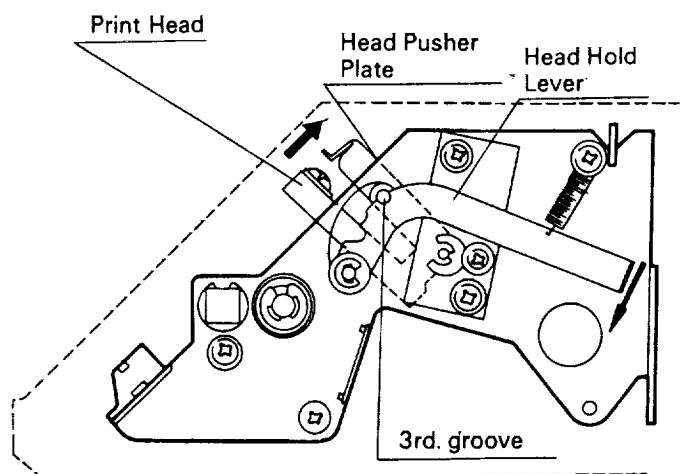

15. BEFORE YOU CALL FOR SERVICE

It is our primary concern to give you full satisfaction and better service.

If, however, any problem arises in connection with the operation of this scale, please check the following points once more before calling for service:

- A) Is the power plug fully inserted into the AC outlet?
- B) Is the control lock set to "OFF" position?
- C) Is AC power being properly supplied to outlet?
(Check it using other electric appliance.)
- D) Check circuit breaker.
- E) Has there been a power failure of any sort?
- F) Has the operation been carried out in the correct order?

This machine has been manufactured under strict quality control. If you have any trouble, however, **DO NOT TRY TO FIX IT BY YOURSELF.**



Pull the power plug out of the AC outlet, and contact your TEC representative.

CAUTION: The specifications subject to changes without notice.

1. Do not subject the weighing platter to sudden shocks.
2. Do not pour water directly on scale.



3. Clean the cover and weighing platter by wiping with a dry and soft cloth.
4. Do not use thinner or other volatile solvent for cleaning.

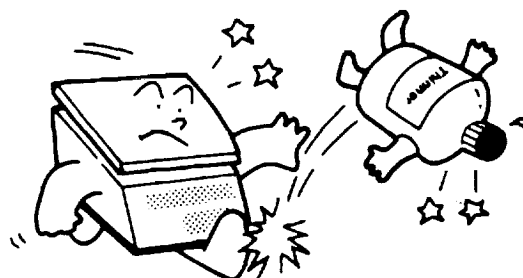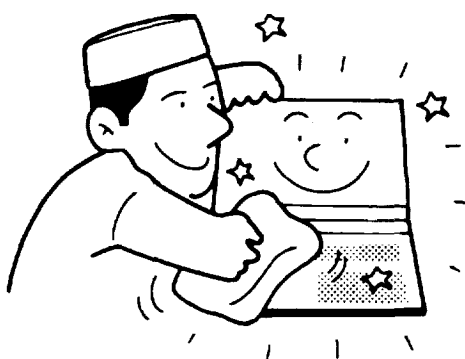

TEC

PRINTED IN JAPAN
E1-04189 8912100 ©-D

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>