

# MD6400/6430

# **DECT 6.0 MULTI-HANDSET CORDLESS PHONE** SYSTEM USER'S GUIDE



#### **Equipment Approval Information**

Your telephone equipment is is in compliance with parts 15 and 68, FCC Rules and Regulations and the Technical Requirements for Telephone Terminal Equipment published by ACTA

#### Notification to the Local Telephone Company

On the bottom of this equipment is a label indicating, among other information, the US number and Ringer Equivalence Number (REN) for the equipment. You must, upon request provide this information to your telephone company

The REN is useful in determining the number of devices you may connect to your telephone line and still have all of these devices ring when your telephone number is called. In most (but not all) areas, the sum of the RENs of all devices connected to one line should not exceed 5. A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

#### Interference Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference; and (2) This device must accept any interference received, including interference that may cause undesired

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation

Privacy of Communications may not be ensured when using this product.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna (that is, the antenna for radio or television that is "receiving" the interference).

• Reorient or relocate and increase the separation between the telecommunications equipment and receiving antenna.

 Connect the telecommunications equipment into an outlet on a circuit different from that to which the receiving antenna is connected.

If these measures do not eliminate the interference, please consult your dealer or an experienced radio/television technician for additional suggestions. Also, the Federal communications Commission has prepared a helpful booklet. "How To Identify and Resolve Radio/TV Interference Problems " This booklet is available from the U.S. Government Printing Office. Washington, D.C. 20402, Please specify stock number 004-)00-00345-4 when ordering copies.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

#### Licensing

Licensed under US Patent 6.427.009.

### Hearing Aid Compatibility (HAC)

This telephone system meets FCC standards for Hearing Aid Compatibility. US Number is located on the cabinet botto REN number is located on the cabinet bottom

### FCC RF Radiation Exposure Statement

This equipment complies with ECC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a mininum distance of 20 centimeters between the radiator and your body. This transmitte must not be co-located or operated in conjunction with any other antenna or transmitter."

# TABLE OF CONTENTS

Equipment Approval Information	
Interference Information	
Licensing	
Hearing Aid Compatibility (HAC)	
FCC RF Radiation Exposure Statement	
Introduction	4 Making an Intercom Call
Features	· · · · · · · · · · · · · · · · · · ·
Installation	
Telephone Jack Requirements	
Installation Guidelines	
General Product Care	
Handset Layout	
Base Layout	6 Two-Way Calling
Parts Checklist	7 Three-Way Calling
Packaging Contents	7 Transferring External Calls
Installing the Phone	
Installing the Handset Battery	
Connecting the AC (Electrical) Power	8 Storing a Name and Number in Memory
Wall Mounting	9 Storing the Last Number Dialed
Room Monitor	
Programming the Handset1	
Standby Screen1	0 Dialing a Number from Memory
Programming Functions1	0 Chain Dialing from Memory
Handset Setup1	
Language1	0 CID Error Codes
Handset Name 1	1 Call Waiting Caller ID
Ringer Tone 1	
Ringer Volume 1	1 Storing CID Records
VIP Melody 1	
Key Tone 1	3 Dialing a CID Number
Area Code1	
Tone/Pulse 1	4 To Replace a Stored CID Record
Registration1	4 Deleting a CID Record
De-Registration1	4 Deleting All CID Records
Global De-registration1	5 Changing the Battery
Default Setting1	
Phone Operation1	6 Handset Sound Signals
Visual Indicators1	
Making a Call1	
Answering Calls 1	6 Caller ID Solutions
Call Timer 1	6 Battery
Pre-Dialing1	
Auto Standby1	6 Service
Ringer HI/LOW/OFF 1	6
Flash 1	
Voice Mail 1	
Last Number Redial1	
Exit	8
Page	-

- Never install telephone wiring during a lightning storm. · Never install telephone jacks in wet locations unless the jack is specifically designed for wet location
- Never touch non-insulated telephone wiles or terminals, unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

### Telephone Jack Requirements

To use this phone, connect one end of the telephone line cord to the green Phone 1 port of your Vonage Phone Adapter; connect the other end to the base unit of your Vonage DECT 6.0 cordless phone system.

#### Installation Guidelines

• Install telephone base near both the Vonage Phone Adapter and an electrical power outlet.

• Avoid sources of noise, such as a window by a busy street, and electrical noise, such as motors, microwave ovens, and fluorescent lighting · Avoid heat sources, such as heating air ducts, heating appliances radiators, and direct sunlight

- · Avoid areas of excessive moisture or extremely low temperatures.
- Avoid dusty locations.
- Avoid other cordless telephones or personal computers.

#### General Product Care

To keep your unit working and looking good, follow these guidelines:

• Avoid dropping the handset, as well as other rough treatment to the phone. Clean the phone with a soft cloth.

• Never use strong cleaning agents, paint thinner, abrasive powder, alcohol,

or other chemical products to clean the unit. Doing so will damage the finish.

• Retain the original packaging in case you need to ship the phone at a later

• Periodically clean the charge contacts on the handset and base with a clean pencil eraser.

### Introduction

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the IMPORTANT SAFETY INSTRUCTIONS provided with this product and save them for future reference.

### Features:

- DECT 6.0 Digital-Interference Free Communication
- Multi-Handset Phone System
- Bright backlit keypad
- EZ Read Caller ID Amber Backlit Display
- Full Duplex handset Speakerphone
- Call-Waiting Caller ID Compatible
- Preset Voice Mail number for speed dialling
- Last number redial
- 50 Name and Number Phone Book
- 10-Ring Tones & 10-Polyphonic Ring Tones
- Supports up to four handsets
- 3-Way Conference/Call Transfer
- Room Monitoring
- Do Not Disturb ringer option
- Voice Mail/Charge/in use indicator on base

### Installation

**INSTALLATION NOTE:** Some cordless telephone operate at frequencies that may cause or receive interference with TVs microware Ovens and VCRs. To minimize or pervert such interference, the base of the cordless telephone should not be placed near or on top of a TV, microware ovens, or VCR. If such interference continues, more the cordless telephone farther away from these appliances. Certain Other communications devices may also use the 1.9GHz frequency for communication, and, if not properly set, these devices may interfere with each other and/or your new telephone. If you are concerned with interference, please refer to the owner's manual for these devices on how to properly set channels to avoid interference. Typical devices that may use the 1.9GHz frequency for communication include wireless audio/video senders, wireless computer networks, multi-handset cordless telephone system and some long-range cordless telephone system.

4

# Handset Lavout

Voice Mail Waiting– indicator (VMWI)/ Visual Ringer

CID/VOL UP or DOWN (button)

TALK (button)-

MENU (button)

\* EXIT (butto

MUTE/DE

OUND ENHANCED

PAUSE/Ringe

Do Not Disturb

Voice Mail

AGE (button)

Charge (indicator

AGE/INT



# Parts Checklist Belt Clip Wall Mount Battery Compart

6.0

### **Packaging Contents**

Charge Cradle

Model name:	MD6400	MD6430
Base station	1	1
Handset	1	3
Power plug	1	3
Telephone line	1	1
Belt clip	1	3
Battery	1	3
Wall mount	1	1
Charge cradle	0	2
Operating instruction	1	1

# **Installing the Phone**

Choose the best location to install your base and handset charge cradles. Your base and handset charge cradles should be placed on a level surface such as a desk or table top.


### Installing the Handset Battery

NOTE: You must connect the handset battery before use. 1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.

2. Locate the battery compartment on the back of the handset.

3. Plug the battery pack cord into the jack inside the compartment.

**NOTE:** It is important to maintain the polarity (black and red wires) to the jack inside the compartment. To ensure proper battery nstallation, the connector is keyed and can be inserted only one wav

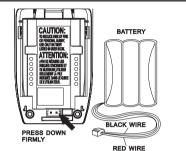

4. Insert the battery pack

5. Close the battery compartment by pushing the door up until it snaps into

6. Place the handset in the base cradle.

Connecting the AC (Electrical) Power


1. On the base, plug one end of the power adaptor cord into the power jack on the back of the base and the other end into an electrical outlet. **CAUTION:** Use only the MARKET DIRECT power adaptor that came with this unit. Using other power supplies may damage the unit 2. Plug the handset charge cradle into an electrical outlet.

**NOTE:** When the handset is placed in the cradle, the charge indicator on the base and the charge indicator on the handset charge cradle turns on to indicate the handset battery is charging. Connecting the Telephone Line On the base, plug the one end of the telephone line cord into the jack on the back

## of the base and the other end into a modular wall phone jack.

### Wall Mounting

If you want to mount the phone on a wall, slip the mounting holes (on the back of the base) over the wall plate posts, and slide the unit down into place. (Wall plate not included)

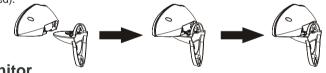

### **Room Monitor**

- 1. Make sure your phone is OFF (not in talk mode).
- 2. Press the MENU button to go to the main menu.
- 3. Press CID/VOL ( or -) button to scroll to ROOM MONITOR.
- 4. Press MENU button to enter ROOM MONITOR menu, ROOM MONITOR EXTENSION? shows in the display.
- 5. Use the touch tone pad to enter the handset name/number to be monitored, either 1 or 2.
- 6. The receiving handset will turn on the microphone and the originating handset will turn on the earpiece to monitor sound from the receiving handset. NOTE: For room monitoring mode to work, the originating handset must NOT be on the cradle. It will exit room monitor mode if it is on

the cradle NOTE: While in room monitoring mode, the handsets will emit an alert tone approximately every 5 seconds if there is an incoming call. You may press the TALK or SPK button to guit room monitor and answer the call.

NOTE: While in room monitoring mode, the originating handset can be switched to monitor by handset earpiece by pressing the TALK button once. Switch back to speakerphone by pressing the SPK button once.

NOTE: Press the \*exit button on the handset to exit room monitor mode

#### 7 Download from Www.Somanuals.com. All Manuals Search And Download.

# **Programming the Handset**

#### Standby Screen

The handset displays the handset number and user name.

# USER NAME

#### Programming Functions

The system uses a menu structure to give you access to all of the built-in features. You may program the following items in main menu: Room Monitor, Handset Setup.

HANDSET SETUP ROOM MONITOR

#### Handset Setup

- 1. Make sure your phone is **OFF** (not in talk mode).
- 2. Press the **MENU** button to go to the main menu.
- 3. Press the CID/VOL ( or ) button to scroll to HANDSET SETUP.
- 4. Press **MENU** button to confirm and you may program the following items: Set Language, Handset Name, Ringer Tone, Ringer Volume, VIP Melody, Key Tone, Area Code, Tone/Pulse, Registration, Deregistration and Default

### NOTE: During programming, you may press the \*exit button at any time to exit the menu and return to the sub-menu.

### Language

- From the Handset Setup Menu: 1. Press the CID/VOL ( - or -) button to scroll to the SET LANGUAGE sub-
- 2. Press MENU button to enter the menu. SET LANGUAGE 1ENG 2FRA 3ESP shows in the display.
- 3. Use the touch tone pad on the handset to select **1ENG**, **2FRA**, **3ESP**, or use the CID/VOL ( - or -) button to scroll to the desired language. English is the default setting.
- 4. Press **MENU** button to save your selection. You will hear a confirmation tone and the selected language shows in the display.

### Handset Name

#### From the Handset Setup Menu

- 1. Press the CID/VOL ( or -) button to scroll to the HANDSET NAME sub-
- 2. Press MENU button to enter the menu. HANDSET NAME shows in the display
- 3. Use the touch-tone pad to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter L Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M: press the 4 key 3 times for the letter I: press the 8 key for the letter T; press the 4 key twice for the letter H.
- NOTE: If you make a mistake, use the MUTE/DEL button to backspace and delete one character at a time.
- 4. Press the **MENU** button to save your name. You will hear a confirmation tone and the handset name shows in the display.


#### Ringer Tone

#### You may choose from ten different ringer tones and ten different melodies. From the Handset Setup Menu:

- I. Make sure the ringer is turned on. See Ringer On/Off section. 2. Press the CID/VOL ( - or -) button to scroll to the RINGER TONE sub-
- 3. Press MENU button to enter the menu. SET RINGER TONE 01 shows in the display. 01 is default setting.
- 4. Use the CID/VOL ( or -) button to scroll to the desired setting (1 through 20). You will hear a sample of the ringer tone/melody you select. 5. Press MENU button to save your selection. You will hear a confirmation

### **Ringer Volume**

- From the Handset Setup Menu: 1. Press the CID/VOL ( - or -) button to scroll to the RINGER VOLUME sub-menu.
- 2. Press MENU button to enter the menu. SET RINGER 1HI 2LO 30FF shows in the display
- 3. Use the touch tone pad on the handset to select 1, 2 or 3, or use the CID/ VOL ( or ) button to scroll to your selection. "1HI" is the default settina.

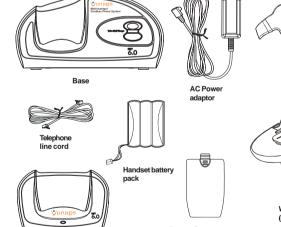

Base Layout

4. Press the **MENU** button to save your selection. You will hear a confirmation tone and the new volume setting shows in the display.

NOTE: If you turn the ringer OFF, the ringer off icon shows in the display

#### VIP Melody

This features allows you to assign a specific melody to someone you want to get your attention when the person calls. When a VIP melody is assigned and that person calls, the unit rings the normal ring for the first ring and then follows with VIP melody ring. You may choose from ten different polyphonic melodies and may store up to 10 VIP records.

NOTE: This feature ONLY works when the following conditions are

1. You have your Caller ID record previously transferred to the memory. (Refer to Storing CID Records in Internal Memory). "NO USER MEMORY" will show in the display to remind the user to do CID record transfer first.

#### Storing VIP Melody

#### From the Handset Setup Menu:

- 1. Press the CID/VOL ( or -) button to scroll to VIP MELODY sub-menu. 2. Press **MENU** button to select VIP melody feature and then display VIP 1 record
- If VIP1 does NOT contain any specific number/records, it will display FMPTY
- 3. Press the **CID/VOL** ( or -) button to select the specific VIP melody memory location (10 VIP locations) that does not contain any record. 4. Press MENU button to display SELECT MEMORY.
- NOTE: If the memory location does not contain any CID memory records and you are trying to mark a specific record as VIP MELODY, then SELECT MEMORY will not be displayed. Instead, NO
- USER MEMORY will display in prompt to alert the user. 5. Press the **CID/VOL** ( - or -) button to view the records from memory to be selected as VIP.
- 6. Press MENU button to confirm and then display VIP MELODY 01 to wait for the melody tone selection.
- 7. Press the CID/VOL ( or -) button to select from melody 01 to melody 10 (a testing tone is generated while making melody selection)
- 8. Press MENU button to confirm.

NOTE: If the desired number/record was previously stored in any one of the ten VIP melody records. DUPI ICATE NUMBER shows in the displa

#### **Changing a Stored VIP Melody Record**

Use the Storing VIP Melody procedure to change the number of a selected record and replace the old phone number with new phone number. When **REPLACE VIP# ?** shows in the display, you must press **MENU** button on the handset to confirm replacement

#### Reviewing And Deleting Stored VIP Melody Record

- From the Handset Setup Menu:
- 1. Press the **MENU** button to enter to **VIP MELODY** menu.
- 2. Use the CID/VOL ( or -) button to scroll to the desired VIP Melody
- 3. If you want to delete the information, press the MUTE/DEL button on the handset while the entry displays. The display show **DELETE VIP#**?
- 4. Press **MUTE/DEL** again to confirm. You will hear a confirmation tone and VIP# DFI FTFD shows in the display

#### Key Tone

- From the Handset Setup Menu:
- 1. Press the CID/VOL ( or -) button to scroll to the KEY TONE sub-menu. 2. Press MENU button to enter the menu. SET KEY TONE 10N 2 OFF shows in the display.
- 3. Use the touch tone pad on the handset to select 1 or 2, or use the CID/
- (- or -) button to scroll to your selection. *10N* is the default setting.
- 4. Press **MENU** button to confirm and the key tone setting shows in the display
- Area Code

#### From the Handset Setup Menu:

- 1. Press the CID/VOL ( or -) button to scroll to the AREA CODE submenu.
- 2. Press MENU button to enter the menu. SET AREA CODE - shows in the
- 3. Use the touch-tone pad to enter your 3-digit area code.
- 4. Press **MENU** button to confirm. You will hear a confirmation tone and the new area code shows in the display.
- NOTE: To restore the default setting to - -, press and release MUTE/DEL when SET AREA CODE shows in the display. 13

#### Tone/Pulse

#### From the Handset Setup Menu:

- 1. Press the CID/VOL ( ▲ or ) button to scroll to the TONE PULSE sub-
- 2. Press MENU button to enter the menu. TONE/PULSE 1TONE 2PULSE shows in the display. The default setting is "1 TONE"
- 3. Use the touch-tone pad or CID/VOL ( ▲ or ▼) to enter 1 TONE or 2
- 4. Press **MENU** button to confirm. You will hear a confirmation tone and your selection shows in the display.

#### Registration

This setting may be made with the handsets. Your handset is pre-registered and ready to use. It is not recommended that handset be registered again unless absolutely necessary

1. If necessary, press the MENU button to go to the REGISTRATION menu. The default is "2NO"

2. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the CID/ VOL ( - or -) button to scroll to 1YES or 2NO

3. If you select 1YES, press the MENU button to confirm your selection. HOLD BASE PAGE FOR 5 SECONDS. THEN PRESS HANDSET MENU shows in the

4. Press and hold the page button on the base unit you hear a long tone at the handset. HANDSET X REGISTERED shows in the handset display, where X is the handset name. You will hear a confirmation tone.

De-Registration

This setting may be made with the handsets. De-registration cancels registration. During the de-registration process, keep the handset near the

1. If necessary, press the **MENU** button to scroll to the DEREGISTRATION menu The

default is "2NO"

2. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the CID/ **VOL** ( $\checkmark$  or  $\checkmark$ ) button to scroll to 1YES or 2NO.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is reregistered

3. Select NO, if you do not want to de-register.

4. If you select 1YES, press the MENU button and MOVE NEAR TO BASE displays for 2 seconds, then CONFIRM? 1YES 2NO appears in the display.

14

5. Press the touch-tone pad to select 1YES or 2NO, or use the CID/VOL ( or 
) button to scroll to 1YES or 2NO

6. If you select YES, press the MENU button to confirm. You will hear a confirmation tone

Then HANDSET X DEREGISTERED shows in the display to confirm the handset is deregistered

**NOTE:** When you complete the de-registration process, "HANDSET NEEDS REGISTRATION" shows in the display. To use the handset, you must register the handset.

#### **Global De-registration**

If one or more handsets becomes lost, you should de-register all handsets to ensure proper system operation. Follow the steps below to de-register all handsets at the same time.

WARNING: It is not recommended that a handset be deregistered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

- 1. Press and hold the page button on the base until the Voice Mail/Charge indicator on the base flashes
- 2. Press and hold the page button on the base again until the Voice Mail/ Charge indicator on the base flashes rapidly.
- 3. Press and release the page button on the base once. All handsets are deregistered and HANDSET NEEDS REGISTRATION shows in the display.

#### Default Setting

As you become familiar with this system, you may prefer to use the system' s original settings. Follow the steps below to return to the factory default settinas.

#### From the Handset Setup Menu:

- 1. Press the CID/VOL ( or -) button to scroll to the DEFAULT SETTING sub-menu.
- 2. Press the **MENU** button to enter the menu. **DEFAULT SETTING 1YES 2NO** shows in the display. The default setting is "2NO"
- 3. Use the touch-tone pad to select **1YES** or **2NO**, or use the **CID/VOL** ( or •) button to move the cursor to **1YES** or **2NO**.

#### NOTE: If you choose YES all the settings in the programmable menu are returned to factory default setting 4. Press the **MENU** button to save your selection. You will hear a confirmation

### Phone Operation

#### Visual Indicators

The Voice Mail/Charge indicator on the base will flash to alert you to an incoming call, during paging, or if you have a message waiting from your service provider. The indicator will remain lit when a handset is in the base charging or when the line is in use.

#### Making a Call

1. Pick up the handset, and press the TALK button. Listen for a dial tone. 2. Dial the number you want to call, or dial the number first then press the TALK button

3. When finished, press the **TALK** button to hang up.

#### Answering Calls

1. When the phone rings, pick up the handset, and press the TALK button. 2. When finished, press TALK button to hang up.

NOTE: Adjust the handset volume by pressing the CID/VOL ( - or -) button during a call

#### Call Timer

After you press the **TALK** button on the handset, the built-in call timer shows on the display and counts the length of time of the call in minutes and

#### Pre-Dialing

1. Make sure the phone is OFF (not in talk mode).

- 2. Enter the telephone number you want to call. The telephone number shows in the handset display.
- 3. Press the TALK button on the handset, and the number automatically dials. **NOTE:** You may enter up to 32 pre-dial digits.

**NOTE:** If you want to delete the pre-dial number you entered, press the **DEL**/ **MUTE** button until all of the digits are erased.

#### Auto Standby

If you place the handset in the cradle while the handset is off the hook (during a call), the call is automatically disconnected.

#### Ringer HI/LOW/OFF

There are two ways to set the ringer to HI/LOW/OFF. One is the traditional way as described in the MEUN Functions; Handset Setup; Ringer Volume menus. The other one is this short cut to ringer menu.

1. Make sure the phone is OFF (not in talk mode).

2. Press the #PAUSE button to display 1HI 2LOW 3OFF.

3. Use the touch tone pad on the handset to select 1, 2 or 3, or use the CID/ **VOI** ( $\checkmark$  or  $\checkmark$ ) button to scroll to your selection "1HI" is the default setting 4. Press **#PAUSE** button again to save and display the new selection for a few seconds.

If you subscribe to the combined Call Waiting Caller ID service from your local telephone company, you will receive Caller ID information (if available) on Call Waiting calls. During a phone call, you will hear a beep to indicate another call is waiting on the line and Caller ID information for the waiting call shows on the handset display.

• To connect to the waiting call, press the FLASH/VOICEMAIL button on the handset, and your original call is put on hold

• To switch between the two calls, press the FLASH/VOICEMAIL button. TIP: Do not press the TALK button on the handset to activate a custom calling

service, such as call waiting, or call will disconnect. Voice Mail

#### The VoiceMail is preset as \*123.

In the standby mode, press the FLASH/VOICEMAIL button on handset to speed dialling the voice mail number and access the voice mail box immediately. The antenna LED and the base voice mail LED will flashing if there is voice mail for indication.

#### When finished, press the TALK button to hang up.

#### Last Number Redial

You may redial a number up to 32 digits long. To quickly redial the last number you dialed;

1. Press the TALK or SPK button.

#### 2. Press the redial button.

- 3. Press the redial button first, then use the CID/VOL ( or -) button to select the desired redial number
- Press the CID/VOL ( 
  ) to review the oldest call and scroll toward the most recent calls (higher numbers).
- Press the CID/VOL ( -) to review the newest call and scroll to older calls (lower numbers)

### NOTE: You may choose from three last dialed numbers.

4. Press the TALK or SPK button. The number dials automatically. If you get a busy signal and want to keep dialing the number, press the redial button to quickly redial the number.

Press the \*exit button to exit a menu function and return to the standby screen.

#### Page

The page feature helps you locate a misplaced handset. To send and receive pages, all handsets must be registered. If your handset is not registered. follow the instructions in the Registration section of this manual.

#### Handset to Handset Paging

- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Press and release the PAGE/INT button on a handset. PAGING **EXTENSION?** shows in the display.
- 3. Use the touch-tone pad to enter the handset number you want to page.
- 4. To cancel the page, press the \*EXIT, PAGE/INT, or TALK button on the originating handset, or press the \*EXIT button on the receiving handset.

#### Paging All Handsets from a Handset

- 1. Make sure the originating phone is **OFF** (not in talk mode).
- 2. Press and release the PAGE/INT button on a handset. **PAGING EXTENSION?** shows in the display.
- 3. Use the touch-tone pad to enter the handset number you want to page. (1= to page Handset 1, 2=to page handset 2, etc., and 5=to page all handsets)
- 4. To cancel the page, press the \*EXIT, PAGE/INT, or TALK button on the originating handset, or press the \*EXIT button on the receiving handset.

#### Paging from the Base/Group Page

Use the base-only to page all registered handsets at the same time.

- 1. Press the page button on the base. All handsets beep for two minutes, and PAGING FROM BASE shows on each handset' s display.
- 2. To cancel the page, press the page button on the base, or press the TALK button or the \*exit button on each handset.

To have a private, off-line conversation, use the MUTE feature. The party on the telephone line cannot hear you, but you can hear them.

- 1. Press the MUTE/DEL button. The handset display shows **MUTE ON**.
- 2. Press the MUTE/DEL button to cancel and return to your phone conversation

#### Volume control

When the handset is **ON** (in talk or speaker mode) you may adjust the receiver volume by pressing the CID/VOL ( - or -) button. There are four volume levels to choose from. When the maximum or minimum volume level is eached, the phone beeps twice. VOL 1 is minimum and VOL 4 is maximum.

#### Do Not Disturb (DND)

DND allows you to mute the ringer of the handset In the standby mode, press and hold the DO NOT DISTURB button on the base. The DND backlit indicator will light and DO NOT DISTURB shows in handset display. To cancel, press DO NOT DISTURB again.

### Handset Speakerphone Operation

**NOTE:** If you are using the speakerphone, remain close to handset so the party you are speaking to can hear you.

#### Answering a Call with the Handset

- 1. When the phone rings, press the **SPK** button on the handset.
- 2. When finished, press the **SPK** button again to hang up.
- Making a Call with the Handset
- 1. Make sure the phone is OFF (not in talk mode).

2. Dial the desired number, or Press the CID/VOL ( - or -) button to select the desired record, or Press MEM button and then use CID/VOL ( - or -) button to scroll to desired memory record.

**NOTE:** If you are using the handset and want to switch to the speakerphone press the SPK button, press SPK again to end conversation. If you are using the speakerphone and want to switch to the handset, press the TALK button, press TALK again to end conversation.

#### 3. Press SPK to dial number.

4. When finished, press the **SPK** button again to hang up.

#### Intercom Operation

The intercom feature allows you to have a conversation with another registered handset without tying up the telephone line, allowing you to still eceive incoming calls.

#### Making an Intercom Call

- 1. Make sure the handset is OFF (not in talk mode).
- 2. Press the PAGE/INT button on the handset.

3. Use the touch-tone pad to select the handset you want to page.

- NOTE: To cancel page, press the PAGE/INT button again or the \*exit button on the sending handset.
- 4. Wait for the person at the receiving handset to press the PAGE/INT button. 19

#### NOTE: If the receiving handset does not an the intercom call is automatically canceled. displays NO ANSWER.

### Receiving an Intercom Call

#### Advanced Intercom Features

#### Using Intercom with External Telephone Cal

### (Privately paging another handset during an

NOTE: If the receiving handset does not answer within two minutes, the intercom call is automatically canceled. The originating handset	last name. Press the 7 key 4 times for the letter S; press the 6 key once for the letter M; press the 4 key 3 times for the letter I; press the 8 key for the	The Number For	Memory Location
<ul><li>displays NO ANSWER.</li><li>5. When finished, press the *exit button or PAGE/INT button on either handset</li></ul>	letter T; press the 4 key twice for the letter H. NOTE: If you make a mistake press the MUTE/DEL button to	Long Distance Access Number Authorization Code	7 8
to deactivate the intercom.	backspace and erase the wrong character(s) or number(s).	Frequently called long distance numb	-
Receiving an Intercom Call When you receive an intercom call, your handset beeps. To answer the call	<ol><li>Press the MEM button to confirm and save the record. The display shows ENTER TEL NUMBR.</li></ol>		
press the PAGE/INT button or TALK button.	7. Use the touch-tone pad to enter the telephone number (up to 20 digits,	<ol> <li>Make sure the phone is <b>ON</b> (in talk button.</li> </ol>	mode, by pressing the TALK of SPK
Advanced Intercom Features	including pauses (press #pause/ringer button), and press the <b>MEM</b> button again to save the record. The unit beeps to confirm.	2. Press the <b>MEM</b> button, and then p	
Receiving an Incoming Call During an Intercom Call f you receive a telephone call during an intercom call, the intercom call is	NOTE: The system treats PAUSES as delays or spaces in the dialing	<ol> <li>When you hear the access tone, p 08.</li> </ol>	press the <b>MEM</b> button, and then press
mmediately terminated and both handsets ring. Either handset user may press he TALK or SPK button to answer the call.	<b>sequence.</b> 8. To enter another name and number in a different memory location, return to	4. At the next access tone, press the	MEM button and then 09.
Jsing Intercom with External Telephone Calls	step 2 and repeat the process.		
During a telephone call, you may use the intercom/paging function to page nother handset and have an off line, private (two-way) intercom	Storing the Last Number Dialed	Caller ID (CID)	
conversation. You may also have a three-way conversation between the	You may transfer all three redial numbers into internal user memory.	Caller ID (CID) is a service available to receives and displays CID information	from Vonage, this telephone system n transmitted by Vonage. This information
external caller and the handsets, or you may transfer the external telephone call to another handset.	<ol> <li>Make sure the phone in OFF (not in TALK mode).</li> <li>Press redial button to display the most recent redial number.</li> </ol>	may include the phone number, date a	and time; or the name, phone number, a
NOTE: Before you intercom/page another handset, you must decide	3. Use the CID/VOL ( - or -) button to scroll to desired redial number.	date and time.	Day
whether you want to create a two-way or a three-way conversation.	4. Press MEM button to display SELECT MEMORY 01 - 50.	Ringer Time	icon Caller ID Location
Two-Way Calling	<ol> <li>Use touch-tone pad to enter two digit desired memory location (01 through 50). Display will show ENTER NAME.</li> </ol>	0:20	~~ ᆺ(;),() (?) (PRICALL # []]8
(Privately paging another handset during an external call) 1. During an external call, press the PAGE/INT button, and use the touch-tone	6. Follow step 5 in the Storing a Name and Number in Memory section to	ļ ŞMĪ J	Caller ID Name
pad to enter the handset number you want to call.	entername. NOTE: If the memory location is occupied, REPLACE MEMO? is	1-12	(3-436-78900)
NOTE: The receiving handset presses the PAGE/INT button to answer the intercom call. Both intercom users may speak privately. The	displayed, and you must confirm replacement by pressing the	 Calle	er ID Phone Number
external caller will not hear the intercom conversation.	MEM button. 7. Press MEM button to save.	<b>CID Error Codes</b> Various Caller ID error messages ma	v appear in the display. Defer to the
<ol><li>When finished, press the *exit button or PAGE/INT button to end the intercom call, return to the talk mode, and resume your original telephone</li></ol>	<ol> <li>Press MEM button to save.</li> <li>To enter another name and number in a different memory location, return to</li> </ol>	Display Messages section of this Use	
conversation.	step 2 and repeat the process.	Call Waiting Caller ID	
Three-Way Calling (Paging another handset to join an external call)	NOTE: If the redial number has more than 20 digits, it cannot be stored in memory.	Provided you subscribe to Call Waitin company; if you receive an incoming	
I. During an external call, press the <b>PAGE/INT</b> key. LINE ON HOLD	Inserting a Pause in the Dialing Sequence (of a Stored Number)		cates the presence of a Call Waiting cal information will be displayed and store
EXTENSION? shows in the display. 2. Use the touch-tone pad to enter desired Handset number. You will hear a	Press the #pause button on the handset' s touch-tone pad to insert a delay in	in the history of all handsets in the sy	
paging tone and PAGING shows in the originating handset's display. <b>NOTE:</b> "PAGING FROM" shows in the display on the receiving handset, and	dialing sequence when a pause is needed to wait for a dial tone (for example, after you dial 9 for an outside line, or to wait for a computer access tone.)		
the receiving handset presses the PAGE/INT or TALK button to answer the	Each pause counts as one digit in the dialing sequence.		
intercom. 20	22		24
2. When the receiving handact connects, prove the EOPMAT/HOLD button on	Reviewing Records Stored in Memory	• When you beer the cell waiting bee	on in the handast receiver, prove the
3. When the receiving handset connects, press the <b>FORMAT/HOLD</b> button on the originating handset to conference with the receiving handset and the	1. Make sure the phone is <b>OFF</b> (not in talk mode).	<ul> <li>When you hear the call waiting bee FLASH/VOICEMAIL button to put the</li> </ul>	current call on hold and answer the
external caller. CONFERENCE shows in the display on the originating and receiving handsets.	2. Press the MEM button to display SELECT MEMORY 01-50.	incoming call. Press FLASH/VOICEM.	AIL button to return to the original call.
NOTE: A handset can enter conference mode directly by pressing TALK on	<ol> <li>Press the CID/VOL (</li></ol>	Receiving CID Records When you receive a call, the Caller IF	) information is transmitted between the
he second handset during a call.			
0		first and second ring. The Caller ID in	
Transferring External Calls to Other Handsets During an external call, you may transfer the external call to another handset.	Changing Records Stored in Memory Follow the procedure for Storing Names and Numbers in Memory, except	first and second ring. The Caller ID in the phone rings, giving you a chance	formation appears on the display while to monitor the information and decide
<b>Fransferring External Calls to Other Handsets</b> During an external call, you may transfer the external call to another handset. I. Press the <b>PAGE/INT</b> button on the originating handset to put an external call	<b>Changing Records Stored in Memory</b> Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.	first and second ring. The Caller ID ir the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Merr	to monitor the information and decide
<b>Transferring External Calls to Other Handsets</b> During an external call, you may transfer the external call to another handset. 1. Press the <b>PAGE/INT</b> button on the originating handset to put an external call on hold, and then page the receiving handset. 2. Use the touch-tone pad on the handset to enter desired Handset. You will	Changing Records Stored in Memory Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one. Deleting Records Stored in Memory	first and second ring. The Caller ID ir the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Merr If you are not at home or cannot answ	to monitor the information and decide nory) wer, your telephone' s Caller ID memor
<b>Transferring External Calls to Other Handsets</b> During an external call, you may transfer the external call to another handset. I. Press the <b>PAGE/INT</b> button on the originating handset to put an external call on hold, and then page the receiving handset. 2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and	<b>Changing Records Stored in Memory</b> Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. <b>Storing CID Records (In CID Mem</b> If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memor ht calls you received so you can see w hen the 41st call is received, the oldes
<b>Transferring External Calls to Other Handsets</b> During an external call, you may transfer the external call to another handset. 1. Press the <b>PAGE/INT</b> button on the originating handset to put an external call on hold, and then page the receiving handset. 2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and PAGING FROM shows on the receiving handset' s display. 3. When the receiving handset connects, press the <b>TALK</b> button on the	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  &lt; or  &lt;) button to scroll to the record you want to</li> </ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. <b>Storing CID Records (In CID Mem</b> If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memor ht calls you received so you can see w hen the 41st call is received, the oldes cally deleted.
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>1. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and PAGING FROM shows on the receiving handset' s display.</li> <li>3. When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>•OR-</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (   or   or   or  or  or  or  or  or  or</li></ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. <b>Storing CID Records (In CID Mem</b> If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memor ht calls you received so you can see w hen the 41st call is received, the oldes cally deleted. In at any time. Calls received since you
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>1. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and PAGING FROM shows on the receiving handset' s display.</li> <li>3. When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>•OR-</li> <li>4. Press the TALK button on the originating handset to transfer the call.</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  ) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows DELETE?</li> </ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Mem If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <b>NEW</b> in the disp reviewed but were received from the	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memor ht calls you received so you can see w hen the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previously
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>1. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and PAGING FROM shows on the receiving handset' s display.</li> <li>3. When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>•OR-</li> <li>4. Press the TALK button on the originating handset to transfer the call. If the receiving handset does not answer within 30 seconds, the originating handset does</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  ) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows DELETE?</li> <li>5. Press the MUTE/DEL button to delete the record. DELETED shows in the</li> </ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. <b>Storing CID Records (In CID Mem</b> If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <b>NEW</b> in the disp reviewed but were received from the <b>REPT</b> in the display.	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memory that calls you received so you can see with then the 41st call is received, the oldes cally deleted. In at any time. Calls received since your lay. Calls that have not been previousl
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>1. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset' s display, and PAGING FROM shows on the receiving handset' s display.</li> <li>3. When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>•OR-</li> <li>4. Press the TALK button on the originating handset to transfer the call. If the receiving handset does not answer within 30 seconds, the originating handset does</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  ) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows DELETE?</li> </ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Mem If you are not at home or cannot answ stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display. Reviewing CID Records	nory) wer, your telephone' s Caller ID memory nt calls you received so you can see w hen the 41st call is received, the oldes
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  or  or  or  or  or  or  or  or</li></ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Mem If you are not at home or cannot ansy stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display. <b>Reviewing CID Records</b> As calls are received and stored, the many calls have been received. To se	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memory it calls you received so you can see with hen the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previousl same number more than once show a chisplay is updated to let you know ho croll CID records:
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  orestart or  orestart) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows DELETE?</li> <li>5. Press the MUTE/DEL button to delete the record. DELETED shows in the display.</li> <li>NOTE: If you don't want to change or delete a record, simply</li> </ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Mem If you are not at home or cannot ansy stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display. Reviewing CID Records As calls are received and stored, the many calls have been received. To se 1. Make sure the phone is <b>OFF</b> (not in	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memory it calls you received so you can see with then the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previousl same number more than once show a display is updated to let you know ho croll CID records: talk mode).
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>1. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>3. When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>4. Press the TALK button on the originating handset to transfer the call. If the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> <li>Memory</li> <li>You may store fifty 15-character names and 20-digit telephone numbers in the handset memory.</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (</li></ul>	first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call. Storing CID Records (In CID Mem If you are not at home or cannot ansy stores the data for the 40 most recer called while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display. <b>Reviewing CID Records</b> As calls are received and stored, the many calls have been received. To se	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memory it calls you received so you can see with then the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previouslist same number more than once show a display is updated to let you know ho croll CID records: talk mode). to review the newest CID record.
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Wemory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory.	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (</li></ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answer stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To set 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memor int calls you received so you can see with then the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previously same number more than once show a display is updated to let you know how croll CID records: talk mode). to review the newest CID record. the oldest CID record first.
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will tear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset rings back and displays CALL BACK. If the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Wemory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory Make sure the phone is OFF (not in talk mode).	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (</li></ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answer stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To set 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in the display.</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memoin the calls you received so you can see with then the 41st call is received, the older cally deleted. In at any time. Calls received since you lay. Calls that have not been previous same number more than once show display is updated to let you know how croll CID records: talk mode). to review the newest CID record. TALK mode).
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Wemory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory. Boring a Name and Number in Memory Make sure the phone is OFF (not in talk mode). Press the MEM button to display SELECT MEMORY 01-50. Press the desired memory location button (01 through 50) or use the CID/	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (</li></ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answer stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To see 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → or ▲) button</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone's Caller ID memor nt calls you received so you can see when the 41st call is received, the oldes cally deleted. on at any time. Calls received since you lay. Calls that have not been previous same number more than once show display is updated to let you know how croll CID records: talk mode). o review the newest CID record. o review the oldest CID record first. a TALK mode). h to display the desired record.
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will the ear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset and displays CALL BACK. If the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Wemory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory. B. Press the MEM button to display SELECT MEMORY 01-50. B. Press the desired memory location button (01 through 50) or use the CID/ VOL ( < or	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  ) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows DELETE?</li> <li>5. Press the MUTE/DEL button to delete the record. DELETED shows in the display.</li> <li>NOTE: If you don't want to change or delete a record, simply press the *exit button, or wait for one minute to exit the review mode automatically.</li> <li>Dialing a Number from Memory</li> <li>1. Make sure the phone is ON (in talk mode) by pressing the TALK or SPK button.</li> <li>2. Press the MEM button to display MEMO #</li> <li>3. Use the touch tone pad to enter the memory location number. The number dials automaticallyOR-</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> </ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answer stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To see 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone's Caller ID memoint calls you received so you can see to hen the 41st call is received, the older cally deleted. In at any time. Calls received since you lay. Calls that have not been previous same number more than once show coll clD records: In talk mode). TALK mode).
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>I. Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>2. Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display.</li> <li>2. Use the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>4. Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> <li>Memory</li> <li>You may store fifty 15-character names and 20-digit telephone numbers in the handset memory.</li> <li>Storing a Name and Number in Memory</li> <li>Make sure the phone is OFF (not in talk mode).</li> <li>Press the MEM button to display SELECT MEMORY 01-50.</li> <li>Press the desired memory location button (01 through 50) or use the CID/VOL ( &lt; or  ) button to scroll to desired the memory location.</li> </ul>	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (</li></ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answers stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To see 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>MoTE: Depending on (a) how number is formatted when it</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone's Caller ID memo- then the 41st call is received, the olde cally deleted. In at any time. Calls received since yo- lay. Calls that have not been previous same number more than once show display is updated to let you know he croll CID records: a talk mode). a review the newest CID record. a review the oldest CID record first. TALK mode). a to display the desired record. a number dials automatically. <b>the incoming caller's phone is received, and (b) whether or</b>
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>OR-</li> <li>Press the TALK button on the originating handset to transfer the call.</li> <li>f the receiving handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Wemory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory. Storing a Name and Number in Memory . Make sure the phone is OFF (not in talk mode). Press the MEM button to display SELECT MEMORY 01-50. S. Press the desired memory location button (01 through 50) or use the CID/VOL ( < or <) button to scroll to desired the memory location. NOTE: If the memory location is occupied, the memory location had stored name and telephone number shows in the display. If the memory location is empty, EMPTY shows in the	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  or  or  ) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location.</li> <li>4. Press the MUTE/DEL button to mark the record for deletion. The display shows <i>DELETE?</i></li> <li>5. Press the MUTE/DEL button to delete the record. <i>DELETED</i> shows in the display.</li> <li>NOTE: If you don't want to change or delete a record, simply press the *exit button, or wait for one minute to exit the review mode automatically.</li> <li>Dialing a Number from Memory</li> <li>1. Make sure the phone is ON (in talk mode) by pressing the TALK or SPK button.</li> <li>2. Press the MEM button to display <i>MEMO #</i></li> <li>3. Use the touch tone pad to enter the memory location number. The number dials automaticallyOR-</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the memory location for the phone number you want to dial, or use the CID/VOL ( • or •) button to scroll to the number you want to dial.</li> </ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answers stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To set 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → or → ) button</li> <li>3. Press the TALK or SPK button. The NOTE: Depending on (a) how number is formatted when it not you previously pre-programe the set up menu, you may ne</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone's Caller ID memo- then the 41st call is received, the older cally deleted. In at any time. Calls received since you lay. Calls that have not been previous same number more than once show display is updated to let you know he croll CID records: a talk mode). TALK mod
<ul> <li>Transferring External Calls to Other Handsets</li> <li>During an external call, you may transfer the external call to another handset.</li> <li>Press the PAGE/INT button on the originating handset to put an external call on hold, and then page the receiving handset.</li> <li>Use the touch-tone pad on the handset to enter desired Handset. You will hear a paging tone. PAGING shows on the originating handset's display, and PAGING FROM shows on the receiving handset's display.</li> <li>When the receiving handset connects, press the TALK button on the originating handset to transfer the call.</li> <li>-OR-</li> <li>Press the TALK button on the originating handset to transfer the call. If the receiving handset does not answer within 30 seconds, the originating handset does not answer within 30 seconds, the originating handset does not answer within 20 seconds, the call is automatically dropped.</li> </ul> Memory You may store fifty 15-character names and 20-digit telephone numbers in the handset memory. Storing a Name and Number in Memory 1. Make sure the phone is OFF (not in talk mode). 2. Press the MEM button to display SELECT MEMORY 01-50. 3. Press the desired memory location button (01 through 50) or use the CID/ VOL ( < or  ) button to scroll to desired the memory location number and stored name and telephone number shows in the display. If the memory location is empty, EMPTY shows in the display. 4. Press the MEM button. The display shows ENTER NAME.	<ul> <li>Changing Records Stored in Memory</li> <li>Follow the procedure for Storing Names and Numbers in Memory, except replace a stored telephone number with a new one.</li> <li>Deleting Records Stored in Memory</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the CID/VOL (  &lt; or  <p>) button to scroll to the record you want to delete or use the touch-tone pad to enter the desired memory location. <li>4. Press the MUTE/DEL button to delete the record. DELETED shows in the display.</li> <li>S. Press the MUTE/DEL button to delete the record. DELETED shows in the display.</li> <li>NOTE: If you don't want to change or delete a record, simply press the *exit button, or wait for one minute to exit the review mode automatically.</li> <li>Dialing a Number from Memory</li> <li>1. Make sure the phone is ON (in talk mode) by pressing the TALK or SPK button.</li> <li>2. Press the MEM button to display MEMO #</li> <li>3. Use the touch tone pad to enter the memory location number. The number dials automaticallyOR-</li> <li>1. Make sure the phone is OFF (not in talk mode).</li> <li>2. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the MEM button to display SELECT MEMORY 01-50.</li> <li>3. Press the memory location for the phone number you want to dial, or use</li> </p></li></ul>	<ul> <li>first and second ring. The Caller ID in the phone rings, giving you a chance whether or not to answer the call.</li> <li>Storing CID Records (In CID Mem If you are not at home or cannot answers stores the data for the 40 most recercalled while you were unavailable. W Caller ID record (1st call) is automatic You may review the stored informatic last review show as <i>NEW</i> in the disp reviewed but were received from the <i>REPT</i> in the display.</li> <li>Reviewing CID Records</li> <li>As calls are received and stored, the many calls have been received. To set 1. Make sure the phone is OFF (not in 2. Press the CID/VOL ( → ) button to 3. Press the CID/VOL ( → ) button to Dialing a CID Number</li> <li>1. Make sure the phone is OFF (not in 2. Use the CID/VOL ( → ) button to 3. Press the CID/VOL ( → ) button to 7. Press the CID/VOL ( → ) button to 7. Press the CID/VOL ( → ) button to 7. Press the TALK or SPK button. The NOTE: Depending on (a) how number is formatted when it not you previously pre-prograthe set up menu, you may ne incoming caller's stored phone</li> </ul>	to monitor the information and decide <b>hory)</b> wer, your telephone' s Caller ID memory int calls you received so you can see with then the 41st call is received, the oldes cally deleted. In at any time. Calls received since you lay. Calls that have not been previouslist same number more than once show a display is updated to let you know ho croll CID records: I talk mode). To review the newest CID record. To review the oldest CID record first. TALK mode). TALK mode).

Use this feature to make calls from records stored in memory which require a sequence of numbers, such as a calling card number used for a frequently called long distance number. The following example shows how you can store each part of the dialing sequence and use chain dialing to make a call through a long distance service:

Download from Www.Somanuals.com. All Manuals Search And Download. 25

try again.

Available formats include:		
Number of digits	Explanation	Example
Eleven digits	long distance code "1"	1-317-888-8888
	+3-digit area code	
	+7-digit telephone number.	
Ten digits	3-digit area code +	317-888-8888
	7-digit telephone number.	
Seven digits	7-digit telephone number.	888-8888

Storing CID Records in Internal Memory

You may also store CID information in the phone' s internal memory. NOTE: It is important that you format CID records correctly BEFORE storing in internal memory as you cannot reformat

- CID records stored in memory
- 1. Make sure the phone is **OFF** (not in talk mode).
- 2. Use the **CID/VOL** ( or -) button to scroll to the desired CID record.
- 3. Press the MEM button to display **SELECT MEMORY 01-50**. 4. Use the touch-tone pad to enter a memory location to store the number in that memory location. You will hear a confirmation tone.
- NOTE: If the memory location is occupied, REPLACE MEMO? is displayed, and you must confirm replacement by pressing the MEM button.
- NOTE: Press the \*exit button once to keep the previous setting (making no changes) and return to the menu. NOTE: If the selected CID record contains any information that is non-numeric, the unit will not allow this record to transfer to the internal user memory. The handset will display UNABLE TO STORE.

#### To Replace a Stored CID Record

- 1. Repeat steps 1 through 3 in Storing CID Records in Internal Memory. After you enter the memory location, REPLACE MEMO? shows in the display.
- 2. Press the MEM button again, and the new CID record replaces the old memory in that location. You will hear a confirmation tone.

#### Deleting a CID Record

- 1. Make sure the phone is **OFF** (not in TALK mode). 2. Use the CID/VOL ( - or -) button to display the CID record you want to
- 3. Press the **MUTE/DEL** button. The display shows **DELETE CALL ID?**
- 4. Press the **MUTE/DEL** button to erase the record showing in the display. The display shows **DELETED**.

NOTE: Press the \*exit button to return to the standby mode without deleting any CID records.

#### Deleting All CID Records

- 1. Make sure the phone is OFF (not in TALK mode).
- 2. Use the **CID/VOL** ( or ) button to display any Caller ID record.
- 3. Press and hold the MUTE/DEL button until DELETE ALL? shows in the
- 4. Press **MUTE/DEL** button to erase all of the current CID records. The display shows **DELETED** followed by **NO CALLS**.

NOTE: Press the \*exit button to return to the standby mode without deleting any CID records.

### Changing the Battery

CAUTION: To reduce the risk of fire or personal injury, use only the battery that is compatible with this unit. 1. Make sure the telephone is **OFF** (not in TALK mode) before you replace the battery.

- 2. Remove the battery compartment door.
- 3. Disconnect the cord attached to the battery pack and remove the battery pack from
- the handset 4. Insert the new battery pack and connect the cord to the jack inside the battery
- 5. Put the battery compartment door back on
- 6. Place handset in the base or handset charge cradle to charge. Allow the handset battery to properly charge (for 16 hours) prior to first use or when you install a new battery pack. If you do not properly charge the phone, battery performance will be compromised

#### **Battery Safety Precautions**

• Do not burn, disassemble, mutilate or puncture. Like other batteries of this

- type, toxic mate rials could be released which can cause injury.
- · Keep batteries out of the reach of children
- · Remove batteries if storing over 30 days.

5. Use the touch-tone pad to enter a name (up to 15 characters). More than one letter is stored in each of the number keys. For example, to enter Bill Smith, press the 2 key twice for the letter B. Press the 4 key 3 times for the letter I. Press the 5 key 3 times for the letter L. Press the 5 key 3 times for the second letter L, and press the 1 key to insert a space between the first and

### Chain Dialing from Memory

### **Display Messages**

=		
The following messages shows the status of the phone, provides Caller ID information, and helps you set up and use your phone.		
INCOMPLETE DATA	CID information is interrupted during transmission or the phone line is excessively noisy.	
HANDSET NAME	Prompt telling you to enter the user name for the registered handset.	
ENTER NAME	Prompt telling you to enter a name in one of the 50 memory location.	
LINE IN USE ENTER TEL NUMBE	Displays on handset while the line is in use. <b>R</b> Prompt telling you to enter a telephone number in one of the 50 memory location.	
DELETE ALL?	Prompt asking if you want to erase all CID records.	
DELETE CALL ID?	Prompt asking if you want to erase the CID record showing on the	
	display.	
DELETE?	Prompt asking if you want to erase one of the 50 records stored	
	in the phone's memory.	
END OF LIST	Indicates that there is no additional information in CID memory.	
NEW		
	Indicates call or calls which have not been reviewed.	
UNKNOWN CALLER	Indicates incoming call is from an area not serviced by CID or	
	the CID information was not sent.	
NO BATTERY	Indicates the battery is not properly installed in the handset, or	
	the battery pack is not properly connected to the jack inside the	
	battery compartment.	
NO USER Memory	<b>NOTE:</b> If the memory location does not contain any CID memory	
NO USER Memory		
	records and you are trying mark a specific record as VIP MELODY,	
	then SELECT Memory will not be displayed. Instead, NO USER	
	MEMORY will be prompted to alert the user.	
DUPLICATE NUMBE	R	
	Under VIP melody feature, if the desired number/record was	
	selected in one of TEN/VIP melody records before, DUPLICATE	
	NUMBER shows in the display.	
HANDSET NEEDS RE		
HANDSET NEEDS KI		
	Indicates you must register a non-registered handset prior to use.	
SEARCHING	Indicates handset is searching for the base.	
OUT OF RANGE	Indicates handset is too far away from the base. Move closer to	
	the base.	
PAGING OR PAGING FROM		
	Someone pressed the page/int button on the base or handset.	
	Indicates the person is calling from a number which is blocked	
BLOCKED NOWBER		
	from transmission.	
REPT	Indicates a repeat call message. Indicates a new call from the	
	same number was received more than once.	
NO CALLS	Indicates there are no CID records in memory.	
NO DATA	Indicates no CID information was received, you are not subscribed	
	to CID service, or service is not working.	
	to ord service, or service is not working.	

28

NEW CALL XX XX represents the number of new CID records not reviewed. LOW BATTERY Indicates the battery needs to be charged LONG DISTANCE Indicates CID record is from a long distance call.

#### Hand

Unit beeps

Handset Sound Signals				
Signal	Meaning			
A long warbling tone (with ringer on) Three short beeps One short beep (every 7 seconds) <b>Troubleshooting Guide</b>	Signals an incoming call Page signal Low battery warning			
Telephone Solutions				
No dial tone				
<ul> <li>Check or repeat installation steps:</li> </ul>				
Make sure the base power cord is connected to a working electrical outlet. Make sure the telephone line cord is connected to the base and the VTA.				
• The handset may be out of range of the base. Mov	e closer to the base.			
<ul> <li>Make sure the battery is properly charged (for 16 hours).</li> </ul>				
<ul> <li>Make sure the battery pack (in the handset) is properly installed.</li> </ul>				
• The handset should beep when you press the TALK or SPK button, and the charge indicator on the base should be lit when the handset rests in the cradle. If not, the battery may need to be charged.				
• Place handset in charge cradle for at least 20 second	nds to reset the unit.			
Handset does not ring				
• Make sure the handset ringer software switch is set	to on.			
• The handset may be out of range of the base. Move closer to the base.				
• You may have too many extension phones on your extensions.	line. Try unplugging some			
You experience static, noise, or fading in and out				
• The handset may be out of range of the base. Move	e closer to base.			
• Make sure base is not plugged into an electrical outlappliance. If necessary, relocate the base.	et with another household			
<ul> <li>Charge the battery (for 16 hours).</li> </ul>				

• Clean the charging contacts on the cordless handset and base charge cradle with a soft cloth or an eraser.

See solutions for "No dial tone" on previous page

• Replace the battery.

Memory dialing doesn' t work

• Did you program the memory location keys correctly?

• Did you follow proper dialing sequence?

Unit locks up and no communication between the base and cordless handset

• Unplug the power adaptor from the electrical outlet and the back of the base. Remove the handset battery. Wait for 30 seconds and plug the power adaptor back into the base and electrical outlet. Reconnect the battery and charge for 16 hours.

#### Caller ID Solutions

No Display

• Charge the battery (for 16 hours). Or replace the battery.

 Make sure the unit is connected to a non-switched electrical outlet. Disconnect the power adaptor from the base and reconnect it. Caller ID Error Message

• The unit displays this message if it detects anything other than valid Caller ID information during the silent period after the first ring. This message indicates the

#### Batterv

If you experience any of the following problems, even after recharging the battery, you may need to replace the battery pack:

- Short talk time
- Poor sound quality
- Limited range
- Charge indicator fails to turn on

presence of noise on the line.

### Causes of Poor Reception

- Aluminum sidina.
- Foil backing on insulation.
- Heating ducts and other metal construction that can shield radio signals
- You ' re too close to appliances such as microwaves, stoves, computers, etc
- Atmospheric conditions, such as strong storms
- Base is installed in the basement or lower floor of the house.
- Base is plugged into AC outlet with other electronic devices.
- Baby monitor is using the same frequency.
- Handset battery is low.
- You' re out of range of the base.

### Service

s product is warranted to be free from manufacturing defects for a period of one year from the original date of consumer purchase. This warranty is limited to the repair or replacement of this product only and does not extend to consequential or incidental damage to other products that may be used with this unit. This warranty is in lieu of all other warranties expressed or implied. If the unit should be defective with the warranty period, please call Customer Service Department at 1-800-949-8590 Limited Warranty

#### What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating instructions and user controls. Any additional information, should be obtained from vou dealer
- Installation and setup service adjustments.
- Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage. Limitation of Warranty:
- The warranty stated above is the only warranty applicable to this product. All other warranties, express or implied (including all implied warranties of merchantability of fitness for a particular purpose) are hereby disclaimed. No verbal or written information given by Market Direct, it's agent, or employees shall create a guaranty
- or in any way increase the scope of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Market Direct shall not be liable for incidental or consequentia damages resulting for the use of this product or arising out of any breach of any express or implied warranty on this product. This disclaimer of warranties and limited warrant are governed by the laws of the State of Massachusetts. Except to the extent prohibited by applicable law, any implied warrant of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set

Market Direct, 143 York Road, Mansfield, MA02048, USA

DO NOT OPEN HE LIGHTNING VITION TO REDUCE THE POINT WITHIN T K OF ELECTRIC SHOCK HEAD WITHIN THE TRIANGLE IS A RIANGI EISA O NOT REMOVE COVER WARNING SIGN VARNING: TO PREVEN WARNING SIGN (OR BACK), NO USER FIRE OR ELECTRICAL SHOCK ALERTING YOU OF FRVICEABLE PARTS AZARD DO NOT EXPOSE INSIDE. REFER SERVICING INSTRUCTIONS DANGEROUS VOLTAGE" INSIDE TO QUALIFIED SERVICE THE PRODUCT PERSONNEL. THE PRODUCT

SEE MARKING ON BOTTOM/BACK OF PRODUCT

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com