

# Service Manual

## Dishwasher

### ADP 905/3 WH

<b>Model Version</b>		<b>Page</b>
	ADP 905/3 WH	
	8542 905 01410	
	Technical data	2 - 3
	Spare part list	4 - 5
	Exploded view	6 - 7
	Circuit diagram	8
	Program diagram	9
	Text/Legend	10 - 16
	Family	Global A5

This documentation is only intended for qualified technicians who are aware of the respective safety regulations.

Date: 12.07.1999

Document-No.: 4812 718 14342

Subject to modification

**Technical data**

**Dimension**

Height	85.0	cm
Width	59.5	cm
Depth	59.2	cm
Weight	58.3	kg

**Electronic boards**

Service boards	see spare part list
Serial boards	
UB	4619 720 80271
CB	096911
Dataset	096901

**Succession of programs**

Programs	see program diagram
Succession	1a-3b-4b-5a-6a

**Program information**

Start indicator

**Volume (normal program)**

Water	Volume	Level
Regeneration	0.3 l	15 mm
Back rinse 3x	1.0 l	68 mm
Prewash	4.8 l	122 mm
Main wash	4.5 l	121 mm
Intermediate rinse 1	4.0 l	120 mm
Intermediate rinse 2	4.0 l	120 mm
Clear rinse	4.0 l	120 mm
Safety / overflow	8.5 l	141 mm

**Measuring the level**

Remove the coarse sieve, put in a measuring meter into the sump, measure the height of the water level.

**Detergent max.**

Pre-wash	10	cm <sup>3</sup>
Main-wash	45	cm <sup>3</sup>
Rinse aid	125	cm <sup>3</sup>
6 Dosage steps	1 - 6	ml

**Water softener**

Saltcontainer	2	kg
Resin container	900	cm <sup>3</sup>
Regeneration dosage	300	cm <sup>3</sup>

**Water pressure**

Inlet pressure	0.3-10	bar
Spray pump pressure	0.4	bar

**Rotations**

Spray pump motor	2800	RPM
Drain pump motor	3000	RPM
Spray arm lower	20 - 40	RPM
Spray arm upper	25 - 35	RPM
Ceiling rotor	45 - 65	RPM

**Flow rates / Inlet volume**

Flow meter (at 0.3 bar = quantity 1.1 l/min)	208	Imp/l
Spray pump	~ 70	l/min
Drain pump	16	l/min
Pump height max.	1.1	m
Inlet valve	4.5	l/min
Spray arm lower	33	l/min
Sprayarm upper	27	l/min
Ceiling rotor	10	l/min

**Electrical data**

**Base data**

Voltage	220/230	V
Frequency	50	Hz
Total power	2.0-2.2	kW
Fuse	10	A

**Motor**

**Spray pump motor**

Voltage	220/230	V
Power consumption	160	W
HI	81	Ω
HA	44	Ω
Capacitor	4	μ F

## Technical data

### Drain pump motor

Voltage	220/240	V
Power consumption	30	W
Resistance	146	$\Omega$

### Heating

#### 1 Element system

Voltage	220/230	V
Power consumption	1.87/2.04	kW
Resistance	24.5	$\Omega$
Heating speed	~ 2.0	$^{\circ}\text{C}/\text{min}$
Temperature on surface	~ 115	$^{\circ}\text{C}$
Safety thermostat self reset	85	$^{\circ}\text{C}$

### Water valves

#### Single valve at inlet hose

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	3.76	$\text{k}\Omega$

#### Regenerating valve

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	3.13	$\text{k}\Omega$

#### Coil of dispenser

Voltage	220/240	V
Frequency	50/60	Hz
Resistance	1.5	$\text{k}\Omega$

### Reedcontact

flow meter

### NTC

15 $^{\circ}\text{C}$	75	$\text{k}\Omega$
20 $^{\circ}\text{C}$	62	$\text{k}\Omega$
30 $^{\circ}\text{C}$	43	$\text{k}\Omega$
40 $^{\circ}\text{C}$	28	$\text{k}\Omega$
50 $^{\circ}\text{C}$	19	$\text{k}\Omega$
60 $^{\circ}\text{C}$	13	$\text{k}\Omega$
70 $^{\circ}\text{C}$	9	$\text{k}\Omega$
80 $^{\circ}\text{C}$	6	$\text{k}\Omega$
85 $^{\circ}\text{C}$	5	$\text{k}\Omega$

### Regeneration

Volume	300	$\text{cm}^3$
Position 0 after wash cycles	10	
water hardness	0-60	$^{\circ}\text{dh}$
	0-10.7	$\text{mmol/l}$
	0-107	$^{\circ}\text{Fh}$
Salt consumption for regeneration	77	g
Number of cycles with 2 kg salt	26	

**Spare part list**

**Model** ADP 905/3 WH  
**Service No.** 854290501410  
**Version** 854290501410

Pos. No.	12NC Code	Description
003 0	<b>4812 440 19382</b>	Traverse
004 0	<b>4812 440 18952</b>	Drip tray assy
004 1	<b>4812 401 18402</b>	Holder
011 0	<b>4812 505 18357</b>	Foot short
022 0	<b>4812 440 18951</b>	Side panel left
022 1	<b>4812 440 18949</b>	Side panel right
022 2	<b>4812 440 18953</b>	Spacer
024 0	<b>4812 440 19463</b>	Panel, rear
030 0	<b>4812 310 18428</b>	Table top AMH4000WH
034 0	<b>4812 404 78237</b>	Spacer
034 1	<b>4812 404 78242</b>	Fastener table top
040 1	<b>4812 417 18774</b>	Hinge left
040 2	<b>4812 417 18773</b>	Hinge right
040 3	<b>4812 417 18784</b>	Protector f.door (set)
044 0	<b>4812 492 38358</b>	Spring f.door
044 1	<b>4812 492 38364</b>	Spring f.cap
047 0	<b>4812 404 48591</b>	Brake f.door
047 1	<b>4812 401 18397</b>	Band,brake
047 2	<b>4812 404 68023</b>	Hook
053 0	<b>4812 440 88887</b>	Plinth WH
103 0	<b>4812 440 18978</b>	Door outer
120 0	<b>4812 440 19456</b>	Door,inner
120 1	<b>4812 440 18969</b>	Batten
130 0	<b>4812 417 58361</b>	Tilt lock
131 0	<b>4812 401 18416</b>	Hook lock
191 0	<b>4812 466 68564</b>	Gasket door
192 0	<b>4812 466 68467</b>	Gasket, door lower
241 0	<b>4812 458 18913</b>	Basket upper/straight
241 1	<b>4812 458 18324</b>	Holder cups right white
241 3	<b>4812 528 88068</b>	Wheel,basket upper (set)
241 8	<b>4812 466 68553</b>	Spacer cap set
241 9	<b>4812 528 88075</b>	Wheel,basket basket upper
242 0	<b>4812 458 18919</b>	Basket lower cpl.
242 1	<b>4812 528 88069</b>	Wheel,basket lower
242 4	<b>4812 466 48059</b>	Fixation
243 0	<b>4812 458 18272</b>	Basket cutlery
261 0	<b>4819 462 38271</b>	Rail telescope, inner
261 1	<b>4819 404 48819</b>	Cap rail
261 2	<b>4812 462 78995</b>	Cap rail ahead
263 0	<b>4819 520 18013</b>	Ball cage cpl.
263 1	<b>4812 520 48001</b>	Ball Niro 8 D
301 0	<b>4812 453 79538</b>	Control panel WH
303 1	<b>4812 460 38055</b>	Plate,handle WH
305 0	<b>4812 440 18964</b>	Batten WH
322 0	<b>4812 453 70357</b>	Insert panel WH
331 0	<b>4812 413 58926</b>	Knob program cpl. WH
332 0	<b>4812 410 28564</b>	Push button cap WH
400 0	<b>4812 361 58126</b>	Motor + spraypump cpl.
405 0	<b>4812 360 18371</b>	Spray pump
405 1	<b>4819 515 28158</b>	Gasket
420 0	<b>4812 121 18132</b>	Capacitor
421 0	<b>4812 121 18161</b>	Interf.filter
430 0	<b>4812 360 18357</b>	Pump,draining
430 1	<b>4812 466 68506</b>	Shaft seal
450 0	<b>4812 259 28684</b>	Heating element

Pos. No.	12NC Code	Description
480 0	<b>4812 321 28386</b>	Cable harness set
480 1	<b>4812 321 28371</b>	Cable
480 3	<b>4812 401 18418</b>	Protector f.wiring
490 0	<b>4819 321 18136</b>	Cable,mains 2m
490 1	<b>4812 321 28367</b>	Strain relief
521 0	<b>4812 214 78253</b>	Control board (CB)
571 0	<b>4812 281 28379</b>	Valve inlet
575 0	<b>4812 281 28361</b>	Regen.valve
583 0	<b>4812 271 28355</b>	Switch diaphragm
620 0	<b>4812 218 38056</b>	User board (UB)
633 0	<b>4812 271 38355</b>	Microswitch door
680 0	<b>4812 418 68154</b>	Combidosage
680 1	<b>4812 466 68495</b>	Gasket
681 1	<b>4812 466 68497</b>	Gasket
681 2	<b>4812 440 18975</b>	Flap
682 0	<b>4812 466 68496</b>	Gasket
691 0	<b>4812 282 68012</b>	Feeler NTC
701 0	<b>4812 530 28081</b>	Hose, inlet 3/8Z cpl. 5m
701 0	<b>4812 530 28082</b>	Hose, inlet 3/8Z cpl. 3m
701 0	<b>4819 530 28928</b>	Hose, inlet
701 1	<b>4812 310 18302</b>	Yoke
701 2	<b>4822 480 50159</b>	Sieve inlet
710 0	<b>4812 418 68128</b>	Monoblock
710 2	<b>4819 310 38536</b>	Threaded ring
710 3	<b>4819 466 69562</b>	Gasket set
714 0	<b>4812 462 79643</b>	Threaded cap
714 2	<b>4812 440 18963</b>	Cabinet non-return flap
716 0	<b>4812 418 68147</b>	Reg.dosage
716 1	<b>4812 466 68475</b>	Gasket
716 2	<b>4812 462 78994</b>	Cover
721 1	<b>4812 360 68061</b>	Spray arm lower. cpl.
721 2	<b>4812 466 68491</b>	Gasket 25x2,3B
721 3	<b>4812 466 68558</b>	Gasket 30x3,0
721 4	<b>4812 440 19455</b>	Flange
722 0	<b>4812 360 68044</b>	Spray arm upper
722 2	<b>4812 360 68056</b>	Hub upper straight cpl.
723 0	<b>4812 360 68049</b>	Spray arm ceiling
723 1	<b>4812 466 68483</b>	Gasket
723 2	<b>4812 404 48597</b>	Clip,fix spray arm
723 3	<b>4812 505 18362</b>	Screwed joint
726 0	<b>4812 530 28786</b>	Tube
726 1	<b>4812 530 28787</b>	Tube
726 2	<b>4812 505 18358</b>	Nut
726 3	<b>4812 466 68512</b>	Gasket
726 4	<b>4812 462 79633</b>	Centering
743 1	<b>4812 530 28102</b>	Hose, inlet
751 0	<b>4812 418 18205</b>	Water collector
751 1	<b>4812 418 18203</b>	Water guide
751 2	<b>4812 440 19454</b>	Fastener frame
755 0	<b>4812 530 28849</b>	Bend
755 2	<b>4812 530 48148</b>	Tray,leak
761 0	<b>4812 480 58082</b>	Sieve fine
761 2	<b>4812 418 18204</b>	Cover sieve
762 0	<b>4812 480 58084</b>	Microfilter
763 0	<b>4812 480 58083</b>	Sieve coarse


## Spare part list

**Model** ADP 905/3 WH  
**Service No.** 854290501410  
**Version** 854290501410


---

<b>Pos. No.</b>	<b>12NC Code</b>	<b>Description</b>
781 0	<b>4812 530 28737</b>	Hose,draining
781 1	<b>4819 530 28286</b>	Sleeve hose
781 2	<b>4819 492 68405</b>	Clip f.non-return valve
781 3	<b>4812 281 28364</b>	Flap non-return
783 4	<b>4812 530 28793</b>	Hose 10x3x230
783 5	<b>4812 530 78028</b>	Distributor
783 6	<b>4812 530 28796</b>	Hose 10x3x180+10
791 0	<b>4812 532 68067</b>	Gasket
791 2	<b>4812 530 58093</b>	Gasket
791 4	<b>4812 466 68503</b>	Gasket
791 5	<b>4812 466 68504</b>	Gasket
794 1	<b>4819 530 58032</b>	Gasket 20x2,5
901 0	<b>4822 401 10492</b>	Clamp,hose 14-24 mm
901 1	<b>4812 401 18424</b>	Strap 050,0
901 2	<b>4812 401 18157</b>	Strap 32-50/9 C61
901 5	<b>4812 401 48573</b>	Strap 028,6
901 6	<b>4812 401 48574</b>	Strap 038,1
901 7	<b>4812 401 18427</b>	Strap 031,6
904 0	<b>4812 462 78998</b>	Threaded cap
904 2	<b>4812 462 79635</b>	Cover WH 3,5x5
904 4	<b>4812 462 79659</b>	Threaded cap
910 0	<b>4812 502 18384</b>	Screw 4x35-H
910 1	<b>4812 502 18394</b>	Screw 3,5x14-H
910 2	<b>4812 502 18363</b>	Screw 4,0x12-H
910 3	<b>4812 502 18389</b>	Screw NIRO A2
910 4	<b>4812 502 18386</b>	Screw 3,5x8-TORX T15
910 5	<b>4812 502 18393</b>	Screw 3,5x9-1 Tx15
910 7	<b>4812 502 18397</b>	Screw INOX A2 M 5X12
964 0	<b>4812 466 68536</b>	Gasket housing ri/le
964 1	<b>4812 466 68469</b>	Gasket housing upper
993 5	<b>4822 532 80216</b>	Funnel salt


**Exploded view**

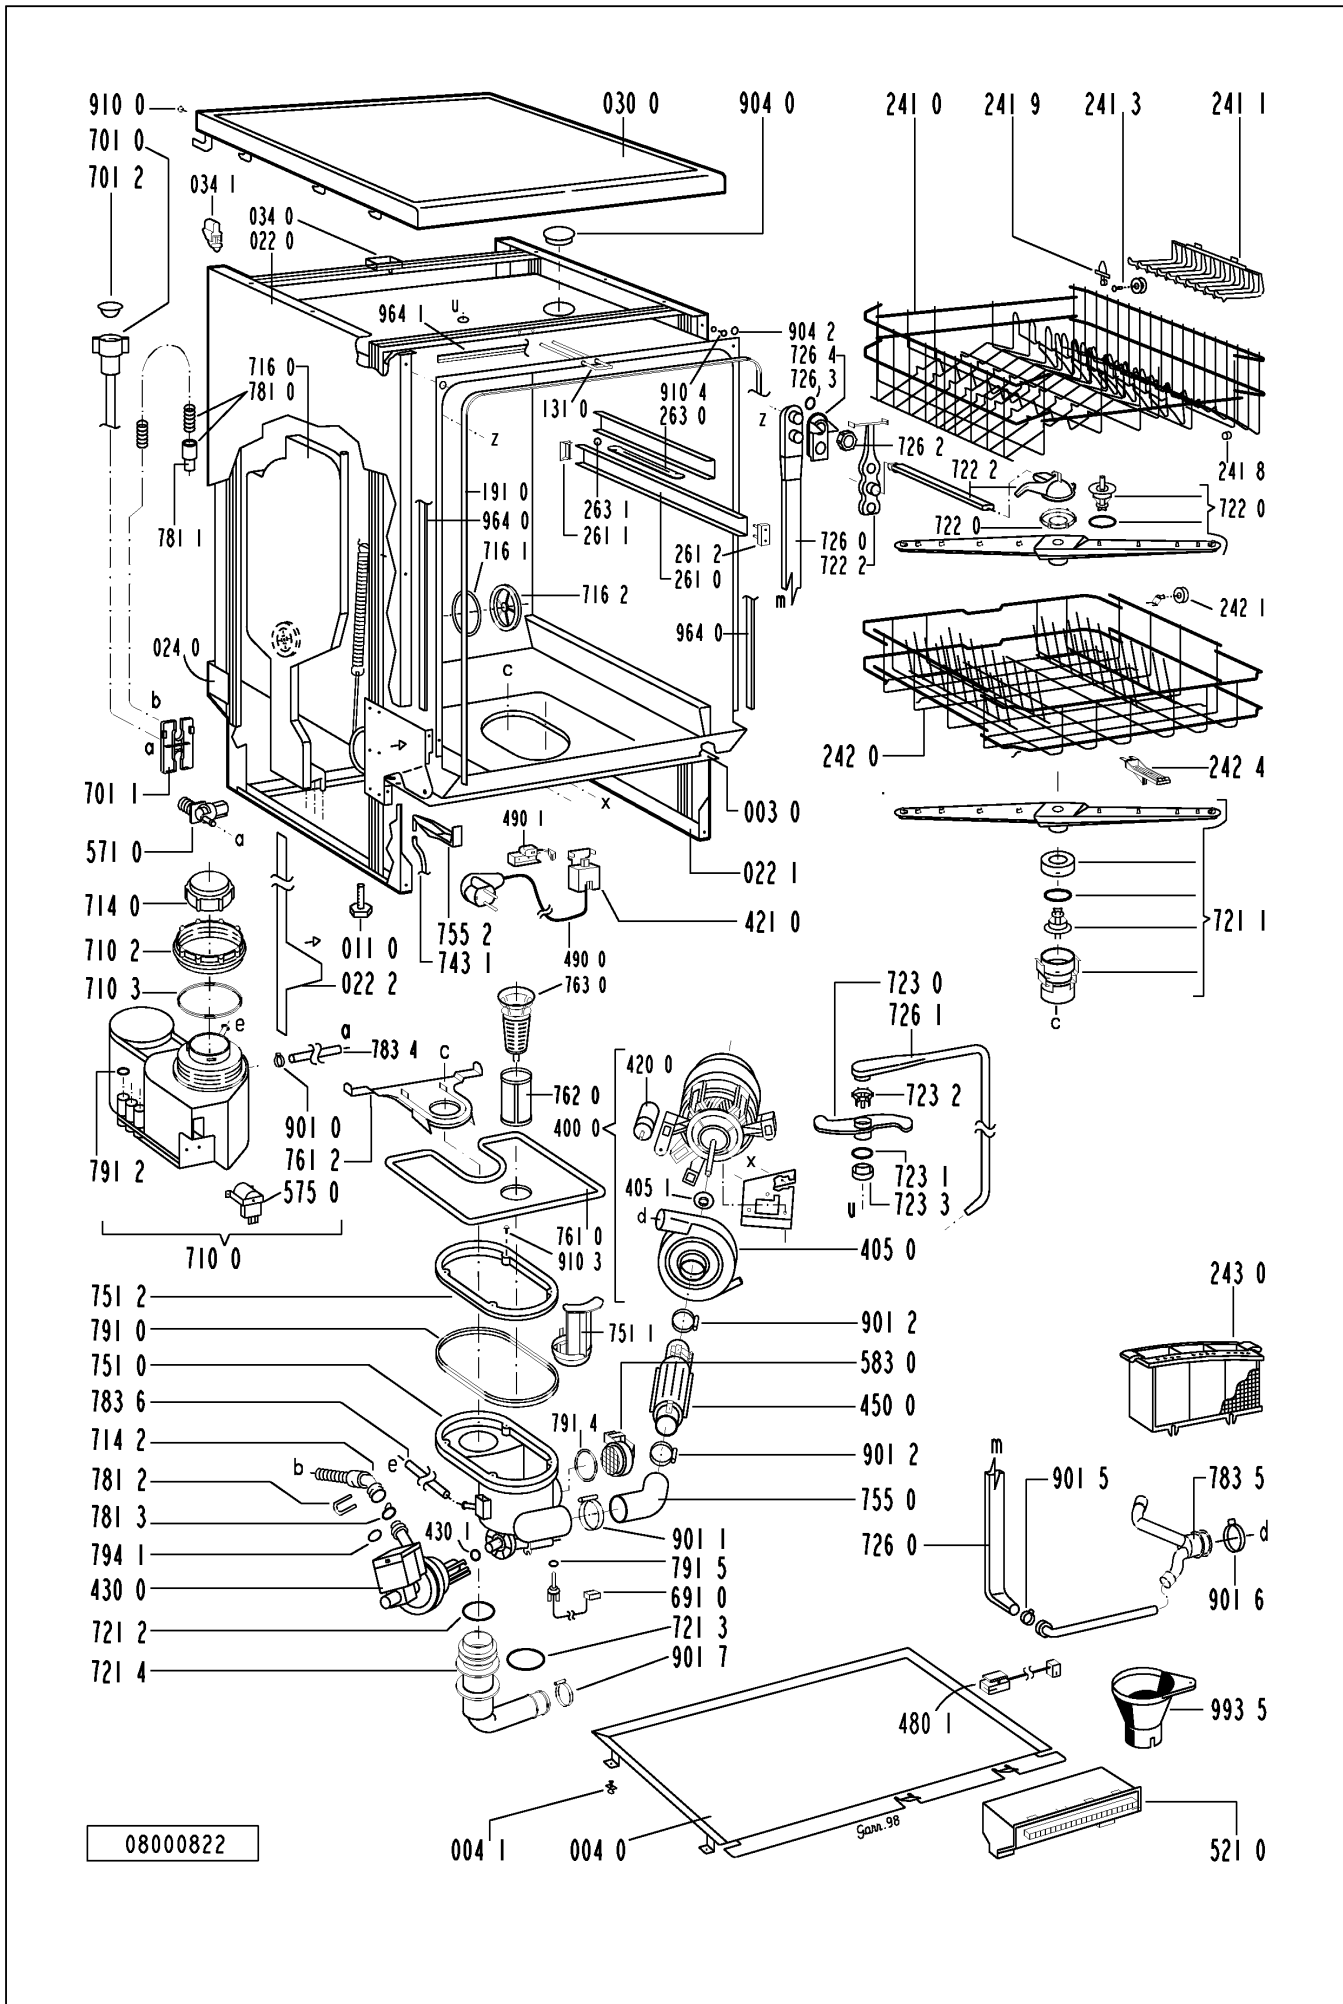

## Exploded view

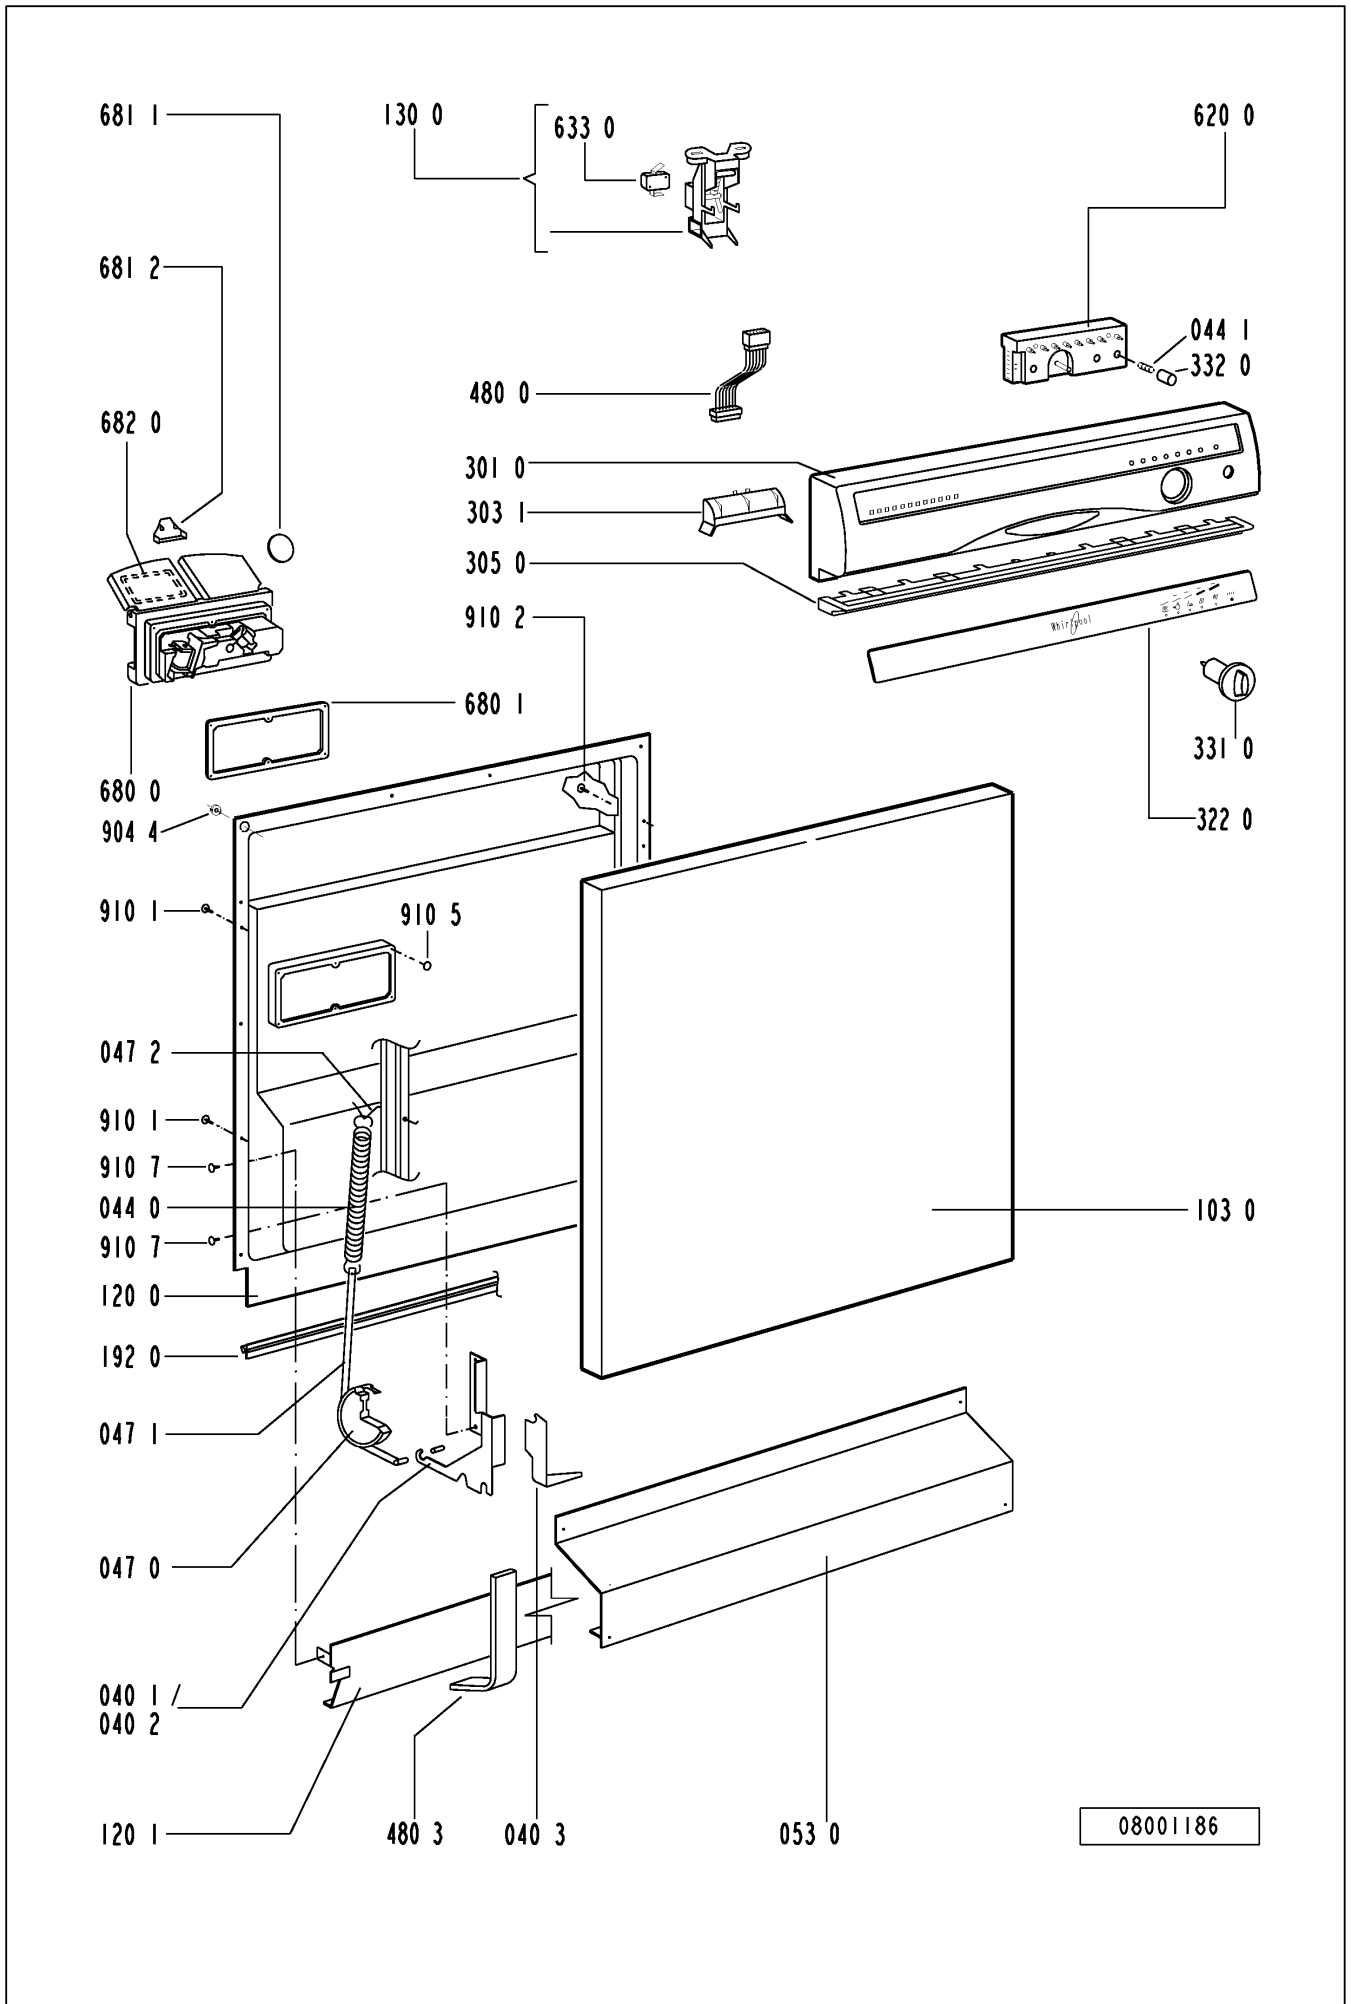

Circuit diagram

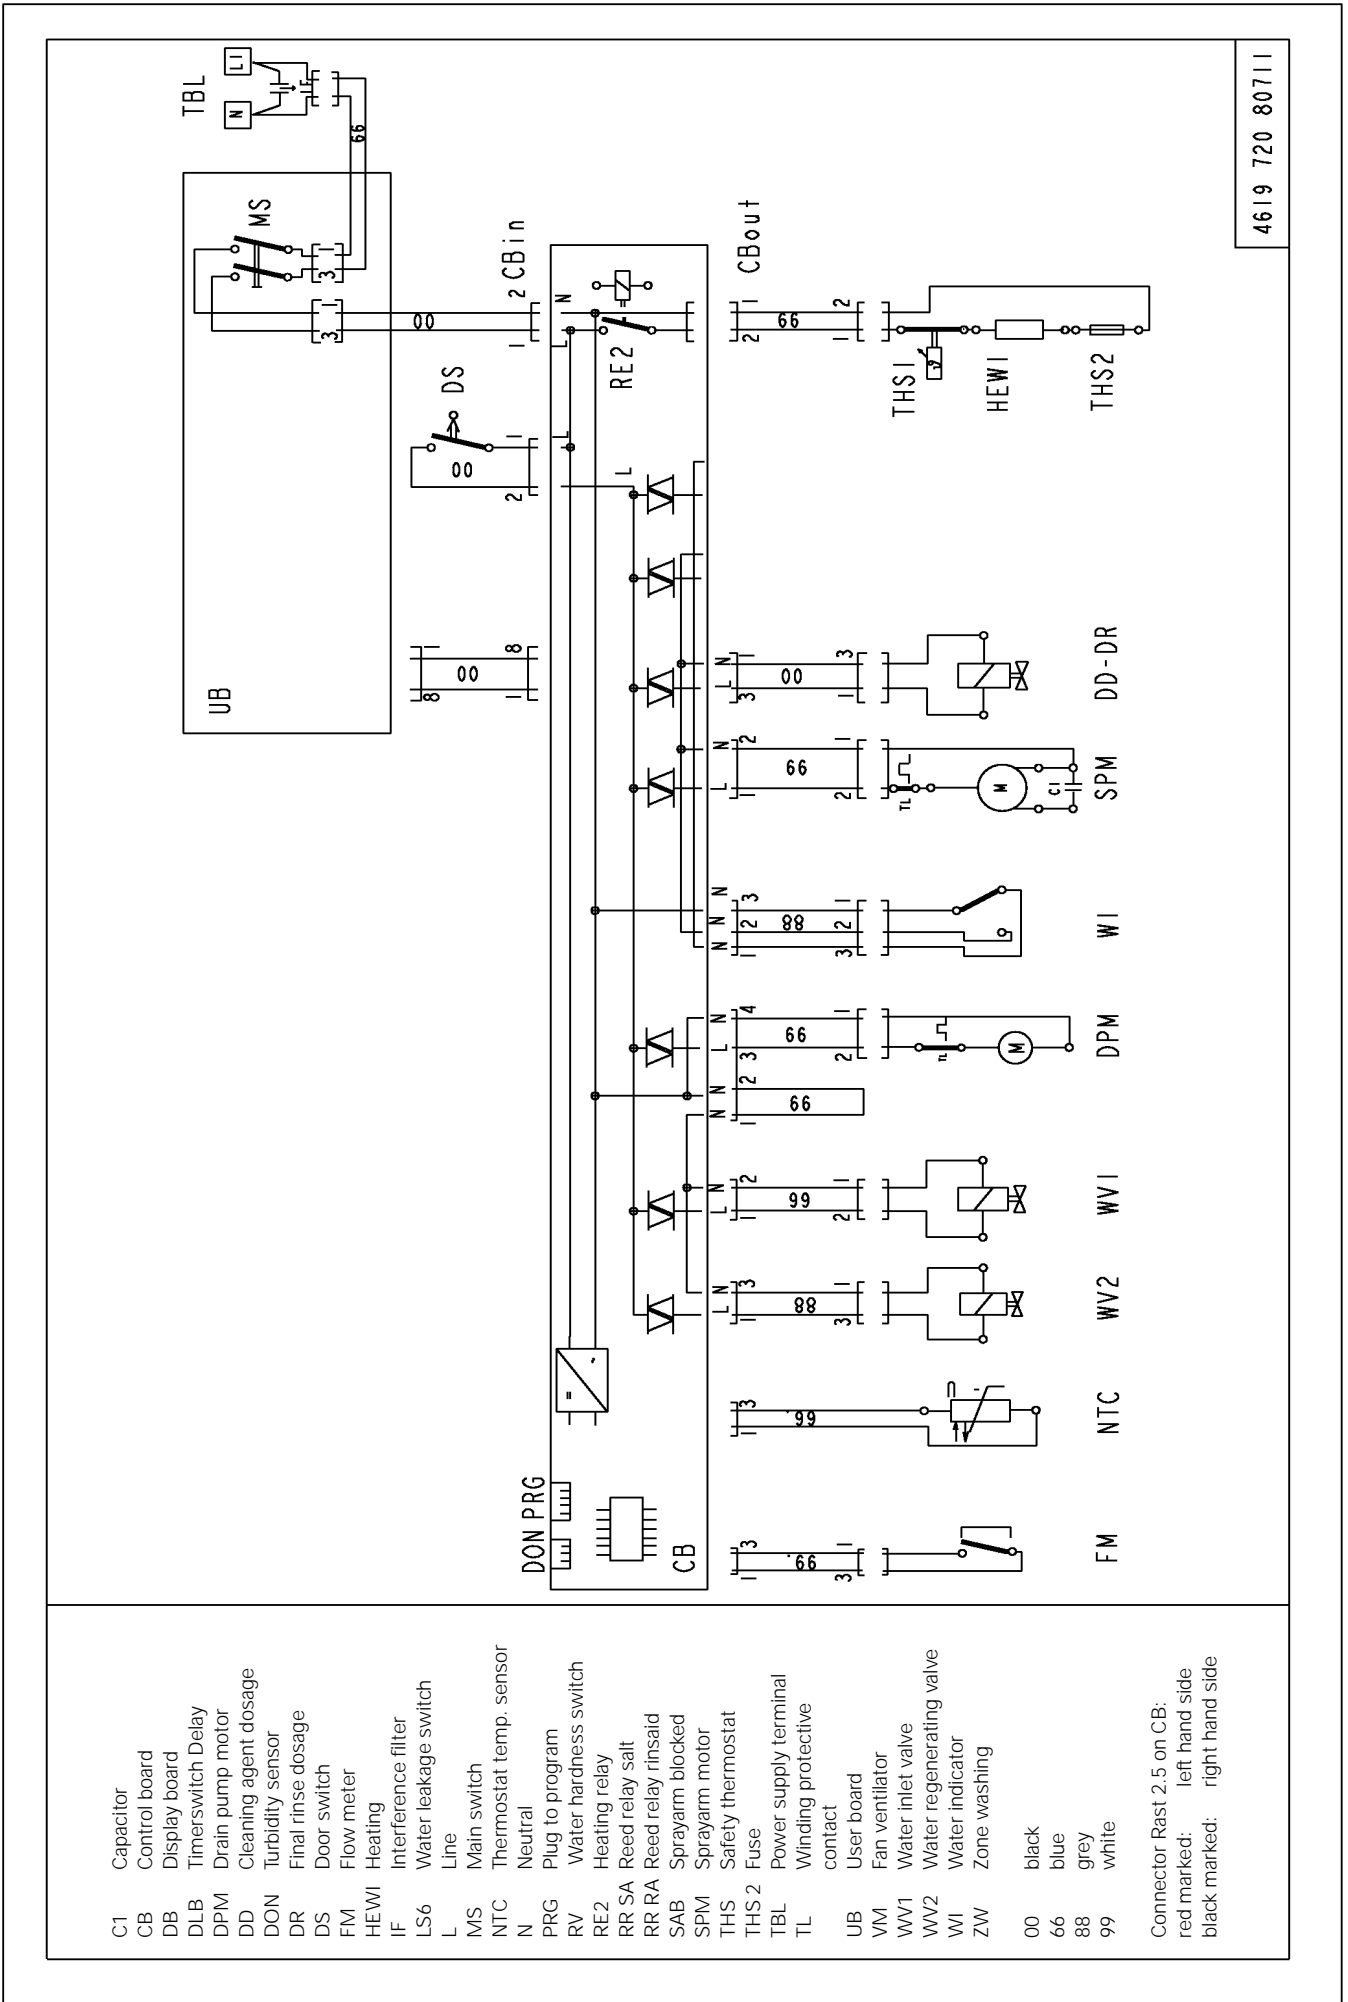

- |       |                            |
|-------|----------------------------|
| C1    | Capacitor                  |
| CB    | Control board              |
| DB    | Display board              |
| DLB   | Timerswitch Delay          |
| DPM   | Drain pump motor           |
| DD    | Cleaning agent dosage      |
| DON   | Turbidity sensor           |
| DR    | Final rinse dosage         |
| DS    | Door switch                |
| FM    | Flow meter                 |
| HEWI  | Heating                    |
| IF    | Interference filter        |
| LS6   | Water leakage switch       |
| L     | Line                       |
| MS    | Main switch                |
| NTC   | Thermostat temp. sensor    |
| N     | Neutral                    |
| PRG   | Plug to program            |
| RV    | Water hardness switch      |
| RE2   | Heating relay              |
| RR SA | Reed relay salt            |
| RR RA | Reed relay rinsaid         |
| SAB   | Sprayarm blocked           |
| SPM   | Sprayarm motor             |
| STS   | Safety thermostat          |
| THS 2 | Fuse                       |
| TBL   | Power supply terminal      |
| TL    | Winding protective contact |
| UB    | User board                 |
| VM    | Fan ventilator             |
| WV1   | Water inlet valve          |
| WV2   | Water regenerating valve   |
| WI    | Water indicator            |
| ZW    | Zone washing               |
| 00    | black                      |
| 66    | blue                       |
| 88    | grey                       |
| 99    | white                      |
- Connector Rast 2.5 on CB:  
red marked: left hand side  
black marked: right hand side





## Text/Legend

### **Test procedure for SERVICE-TEST-PROGRAM DOLPHIN dishwashers (Global)**

1. Start the passive test program.  
If there is a defective component indicated, open the plinth and take out the control board (CB).
2. Check the component.  
Unplug the indicated component from the control board (CB) and check it by using an Ohm-measure equipment.  
If the ohms are not correct, check the cables to the component and check the component itself.
3. Check the control board (CB).
4. Only if there is no reaction when pushing a push button or turning the rotary switch, then test the control board (CB) and the user board (UB) with the test points.
5. At the end of the repair start the appliance and delete the stored failure. After this, start the test program again to see that the failure is solved.

More details: s. following pages.

### **Attention:**

First unplug the appliance, then set the connection clamps of the volt measurement on the test points.

Danger for short circuit. Short circuits on components can damage the control board (CB).

If electronic boards are wet, do not switch the appliance on.

For check the appliance, plug in the appliance.

Failures, which occurred during the program will store and indicate by flashing start LED.

Then start the test program without erase the failure before. The failure will indicate.

To erase the failures, you must push the start button longer than 3 seconds.

The failures

- F1 NTC break
- F2 water leakage
- F9 continuous water inlet

are checked and indicated immediately after start of the program.

Therefore these failures have to be solved before starting the active test program.

When these failures are not solved, the active test program does not run.

The electrical components get their voltage via triac from the control board (CB). For testing the volume of voltage the volt meter must be parallel to the component (the component must be connected). If the component is disconnected, then the outcomed voltage from the control board (CB) is reduced.

For appliances with no program indicator or 7-segment-display you can use for testing a display board (DB) in addition. More details : see chapter active test program.

**After starting a program this program is locked. That means neither by unplugging/switching of the appliance nor by setting an other program, the first setted program can be changed. Changing of the program is only possible by pushing the start button again for longer than 3 sec.. The programs end with draining out. After that start again.**

**On appliances with separate On-Off button the last used program is stored. That means if the customer wants to use the same program again he has only to press the On-button and the Start-button.**

**Attention: On new service control boards the first service test program is without back rinsing. Dangerous for overfilling the appliance, in case the appliance is not empty. By running the test program a second time the back rinsing will be carried out as usual.**

4619 720 87721-1

## Text/Legend

### **Handling of failures**

#### F0 Sensor failure

Will not indicate for the customer. The programs will finish even there is a failure. The Failure is indicated only in the active test program after 10 – 30 second's. The active test program will finish as well, even there is a failure.

If the failure in a sensor program appear, the machine will always choose the highest consumption (best cleaning result).

- None or wrong output from the sensor
- Unlogical or unreal measurement results

Reason:

- Defective electronic of the sensor
- Optoelectronic parts in the sensor defect
- Case of the sensor is very dirty
- Connection between sensor and control board (CB) interrupted

Attention: The failure code will not store.

#### F1. NTC break

Temperature out of the normal value (-3°C till +85°C)

- temperature inside higher than +85°C
- NTC defective
- dishwasher is frozen, less than -3°C

Fill in the appliance a cup of warm water to warm it up before you start it, if the temperature is less than -3°C

#### F2. water leakage

- water is in the drip tray

floaters (LS6) switches off the WW1 and the electronic switches on the DPM till WI reports empty

#### F3. heating system defective

Indicated after app. 11 minutes (1. check after 5 min., after that follow 2 more checks, before the failure is indicate)

- too less heating speed (lower 1,5 °C in 3 min.)
- heating (HEW) defective
- relays (RE2) on control board (CB) is defective
- NTC - resistance fluctuation
- water indicator (WI) defective (is switched off) - spray pump (SPM) is not working

#### F4. draining failure

drain pump starts and after 4 min. the WI detects not empty

- drain pump (DPM) defective
- siphon closed
- control board (CB) defective
- water indicator (WI) defective (is switched on)

#### F5. spray arm blocked (leads not to stop the appliance)

SAB sensor sends less than 10 impulses/min.

- spray arm blocked or not fixed well
- spray pump (SPM) does not work well
- SAB sensor defective

## Text/Legend

- F6. water tap closed (only indicated after start of the active test program)  
water valve (WV1) is switched on but flow meter (FM) sends no impulses (less than 10 imp. in 10 sec.) and the water indicator (WI) is off (empty)
- water tap closed
  - water inlet hose blocked
  - water inlet valve (WV1) defective
  - flow meter (FM) defective (leads to FM failure)
- F7. flow meter failure  
water inlet valve (WV1) is switched on and the water indicator (WI) is on (full).
- flow meter (FM) sends to less impulses (less than 10 imp. in 10 sec.)
  - water tap closed
  - water inlet hose blocked
  - water inlet valve (WV1) defective
  - flow meter (FM) defective
- F8. water level failure  
failure monitored during spray pump is on and the water indicator switches back more than 20 times in 2 min.
- water indicator defective (should switch on after app. 1 litre)
  - sieve blocked
  - water strongly foams
  - pot has turned off and is filled with spray water
  - no stable spray pump (SPM) working
- F9. continuous water inlet  
water inlet valve (WV1) is switched off, water indicator (WI) on, flow meter (FM) sends impulses (more than 10 imp. in 10 sec.)
- water inlet valve (WV1) mechanically not closed
  - triac (CB) permanently switched on. (short circuit)

reaction: interval 30 sec. draining / 20 sec. tracing

For salt, rinse aid, zone wash valve, sieve valve failure see active test program.

## Text/Legend

### Appliances FAILURE AND ALARM DISPLAYING CODES

Alarm / Failure	Indication for customer		Indication whitin test program after a failure has occurred	
Sensor-break F 0	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ○		● ● ○ ○ PS1 PS2 PS3 PS4 START ○ (only indicated after start of the active t.p.)	
NTC-break F 1	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		● ○ ○ ○ PS1 PS2 PS3 PS4 START ○	
Water Leakage F 2	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ● ○ ○ PS1 PS2 PS3 PS4 START ○	
Heating System Failure F 3	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ○ ● ○ PS1 PS2 PS3 PS4 START ○	
Draining Failure F 4	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ○ ○ ● PS1 PS2 PS3 PS4 START ○	
Spray Arm Blocked F 5	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ○		● ○ ○ ● PS1 PS2 PS3 PS4 START ○	
Water Tap Closed F 6	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ● ○ ● PS1 PS2 PS3 PS4 START ○ (only indicated after start of the active t.p. Start LED flashed in passive t.p.)	
Flow Meter Failure F 7	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ○ ● ● PS1 PS2 PS3 PS4 START ○	
Water Level Failure F 8	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		○ ● ● ○ PS1 PS2 PS3 PS4 START ○	
Water Continuously On F 9	○ ○ ○ ○ PS1 PS2 PS3 PS4 START ●		● ○ ● ○ PS1 PS2 PS3 PS4 START ○	

- Led Flashing PS 1 till PS 4 : Program sequence LED  
 ○ Led OFF

## Text/Legend

With the passive test program, you can check all LED's and buttons. If there is no failure the passive test program runs normal.

**Attention:**


If you can't start the active test program (Start button don't flash), normally there is one of the following failures detected: F1, F2 or F9

When these failures are not solved before, the active test program will not run. After solving the failure you must "sign" (erase) the failure.

### Start procedure

#### Passive test program

The passive test program shows the stored failure. If there is no failure the passive test program runs normal.

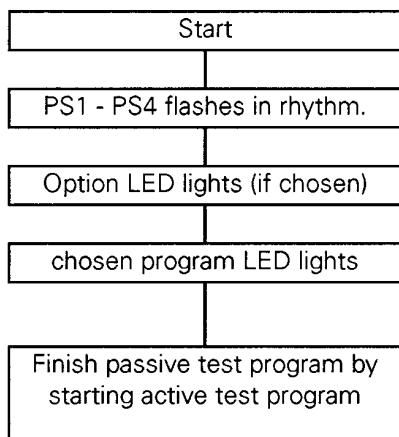

1. Switch off the appliance
2. Push start button and hold it.
3. Choose position 1 of the turning knob turning right side (program 1).
4. Finish pushing the start button when the start LED flashes.
5. Failure indication.
6. Repair the failure
7. Solve the failure by pushing the start button for longer than 3 sec.
8. Start the passive test program again. If there is no failure detected, test all LED's and after that choose program 1.
9. Finish the passive test program by pushing the start button for shorter than 3 sec.


#### **Active test program starts (see next page)**

#### Program sequence LED

PS1	1. LED	prewash	
PS2	2. LED	mainwash	
		intermediate rinse final rinse	
PS3	3. LED	drying (regeneration)	
PS4	4. LED	end	goes off if any button is pushed
			goes off after 30 min progr. is finished

## Text/Legend

### Active test program

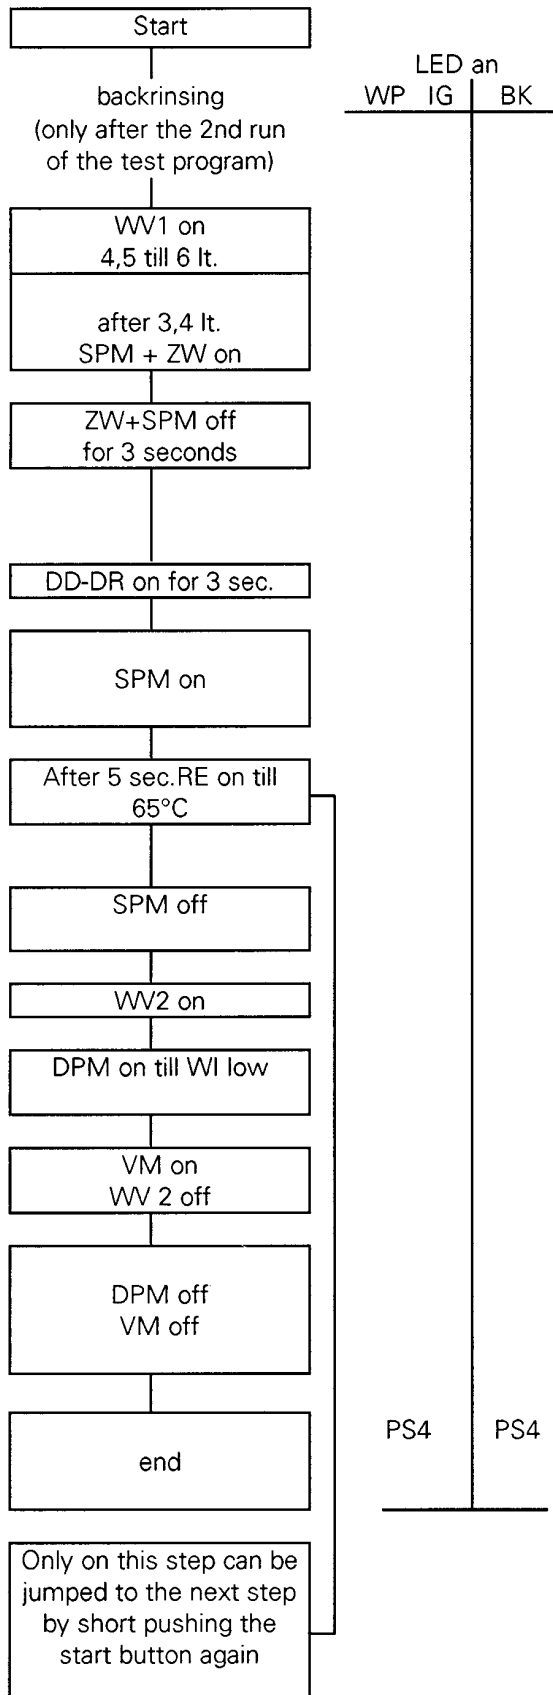

### Test procedure

1. Passive test program OK?  
no: repair failure, after that solve the failure and start the passive test program again.  
yes: push start button shorter than 3 second's
2. Active test program starts.

### Remarks

The active test program runs to the failure position and stops or, if there is no failure, to the end.

To leave the test program push the start button for longer than 3 second's.

Too less salt or too less rinse aid leads not to the stop of the appliance.

The function of the zone wash valve can only be checked optically.  
A defect leads to a not stable SPM pressure.

**Appliances which have no program sequence or no 7-segment-display can't exactly show the failure. On these appliances the failure can only be found by starting the test program and following this by using the program chart or by connecting an additional kit 4819 310 39782 on the user board (UB) (connector DISPL).**

When the failure position is reached the flashing start LED goes out.

### Attention:

If you can't start the active test program (Start button don't flash), normally there is one of the following failures detected: F1, F2 or F9

When these failures are not solved before, the active test program will not run. After solving the failure you must "sign" (erase) the failure.

### Remarks:

**ZW on:** zone wash valve on = no water on the upper sprayarm.

**ZW off:** zone wash valve off = water on the upper sprayarm.


**Text/Legend**

**Testpoints on the control board (CB)**

With these test points the function of the buttons and the rotary switch can be checked.  
 The test points are in the service window on the control board.  
 For the test fine clamps, cables and volt meter with high input resistance are necessary.

**Before setting the clamps on the test points, switch off the appliance.**

Testpoints: T0: common line T2: analogue value  
 T1: analogue value T3: digital signal

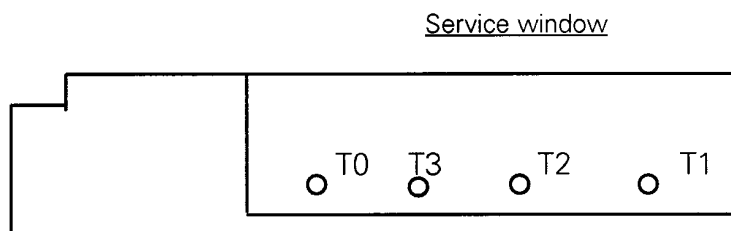

**Check: T0 to T1**

Communication between control board (CB) and display board (DB) measured over user board (UB)

pushed button	voltage	from	to
no button pushed	ca. - 5.24 V DC	Control board (CB)	Display board (DB)
ZW (1 or 2 LED)	ca. - 3.43 V DC	Display board (DB)	Control board (CB)
Delay	ca. - 2.88 V DC	Display board (DB)	Control board (CB)
ZW + Delay start	ca. - 2.88 V DC	Display board (DB)	Control board (CB)

**Check: T0 to T2**

Communication between Control board (CB), User board (UB)

	voltage	from	to
Programplace 1	ca. - 1.32 V DC	User board (UB)	Control board (CB)
Programplace 2	ca. - 1.75 V DC	User board (UB)	Control board (CB)
Programplace 3	ca. - 2.20 V DC	User board (UB)	Control board (CB)
Programplace 4	ca. - 2.90 V DC	User board (UB)	Control board (CB)
Programplace 5	ca. - 3.36 V DC	User board (UB)	Control board (CB)
Programplace 6	ca. - 3.80 V DC	User board (UB)	Control board (CB)
Programplace 7	ca. - 4.27 V DC	User board (UB)	Control board (CB)
start button	ca. - 0.00 V DC	User board (UB)	Control board (CB)

**Check: T0 to T3:**

Communication between Control board (CB) and User board (UB ). Check of the 'Start' function  
 Select any program.

before start ( start LED off )	- 5.24 V DC
after start ( start LED on )	- 3.87 V DC

How exact the data are, depends on the measure equipment.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>