




**General Mobile Radio Service (GMRS)
Model/Modèle: GMRS-1525**

**Owner's Manual
Manuel d'utilisation**

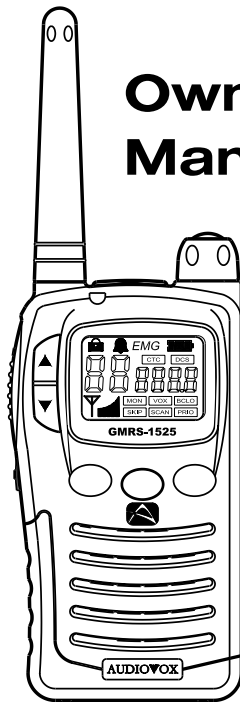

Customer Service/
Service à la clientèle
1-800-290-6650

**CAUTIONS**


NEVER ATTEMPT TO CHARGE ALKALINE OR DRY CELL BATTERIES. WHEN RECHARGING USE ONLY THE RECHARGEABLE BATTERIES SUPPLIED WITH YOUR TRANSCEIVER. USE OF OTHER BATTERIES WILL CAUSE DAMAGE TO YOUR GMRS-1525 RADIO TRANSCEIVER. OTHER TYPES OF BATTERIES MAY BURST CAUSING PERSONAL INJURY.

AVOID PLACING THE GMRS-1525 RADIO TRANSCEIVER FOR PROLONGED PERIODS OF TIME IN DIRECT SUNLIGHT OR TEMPERATURES BELOW -4° F (-20° C) OR ABOVE 140° F (60° C).

KEEP THE ANTENNA AT 1 INCH (2.5 cm) AWAY FROM YOUR HEAD AND BODY. DO NOT USE YOUR GMRS-1525 RADIO TRANSCEIVER WITH A DAMAGED ANTENNA.


PLACE THE RUBBER COVERS ON JACKS WHEN NOT IN USE

Model GMRS-1525 (FCC License Required)

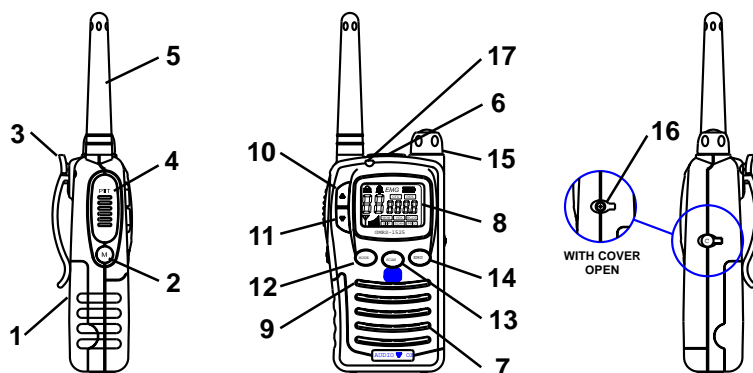

- | | |
|-------------------------------------|---|
| 1. Battery Door | 11. Down Channel Button |
| 2. Monitor/Lamp Button | 12. Mode Button |
| 3. Detachable Belt Clip | 13. SCAN/LOCK Button |
| 4. Push-To-Talk (PTT) Button | 14. Emergency (EMG) Call Button |
| 5. Antenna (Not Removable) | 15. Power On/Off and Volume Control |
| 6. External Speaker/Microphone Jack | 16. External DC In Jack |
| 7. Built-in Speaker | 17. Transmit Indicator (Red), Receive and Monitor Indicator (Green) |
| 8. Liquid Crystal Display (LCD) | |
| 9. Built-in Microphone | |
| 10. Up Channel Button | |

Model GMRS-1525 DISPLAY

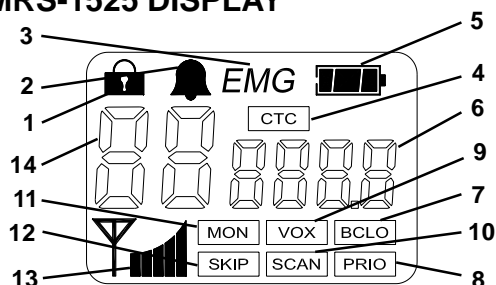

1. **Key Lock Indicator:** Icon appears in autolock selection mode when the key lock is activated. This function disables keys such as channel up/down keys.
2. **Beep Tone Indicator:** This icon blinks in the selection mode and is constant when selected. When a key is pressed a tone will sound.
3. **Emergency:** icon appears when the emergency button is pressed.
4. **Coded Tone Controlled Squelch System (CTCSS) Indicator:** Icon appears when the CTCSS tone function is active.
5. **Battery Level Indicator:** Icon indicates the battery charge level.
6. **Small Segment Display:** Displays the CTCSS tone option in the channel form(00-38) or frequency (Hz).
7. **Busy Channel Lock Out (BCL0) Indicator:** Icon appears in Busy Channel Lock selection mode. This function prevents transmissions on a channel while another transmission is occurring on the same channel.
8. **Priority Scan Indicator:** This function allows the user to designate a channel to be scanned every .5 second and play any signals recieved on that channel.
9. **Voice Activated Transmission (VOX) Indicator:** This function allows hands free conversation. The icon appears when the VOX mode is activated.

- 10. Scan Indicator:** Icon appears when a channel is in the list channels to be scanned.
- 11. Monitor Indicator:** Icon appears when the Monitor Button is pressed and the channel monitor function is activated.
- 12. Skip Indicator:** Icon appears when a channel is in the list channels to be skipped during scanning.
- 13. Received Signal Strength Indicator:** Icon appears when a signal is being received. The icon consists of five bars to indicate the received signal level.
- 14. Large Segment Display:** Indicates the channel number in use.

GMRS License:


Use of GMRS radios within the United States require a FCC GMRS license. An individual 18 years of age or older, who is not a representative of a foreign government, is eligible to apply for a GMRS system license. You will need two forms from the FCC, FCC Form 159 and FCC Form 605 Main Form and Schedule F. You can find the forms online at <http://www.fcc.gov/formpage.html>, or call 1-800-418-3676.

Powering the transceiver:

Your GMRS-1525 radio transceiver operates on four AAA batteries. You may operate your GMRS-1525 using the rechargeable batteries included or you may use alkaline batteries. Alkaline batteries will provide slightly better performance than the rechargeable batteries, but must never be recharged in the radio transceiver.

Installing the batteries:

To install batteries into the radio, it is convenient to remove the belt clip. To do this, release the spring clip securing the belt clip to radio and press the belt clip downward and away from the radio body. Next, using a fingernail press the battery cover latch down and open. Lift the bottom and slide the battery cover downward. Insert four AAA alkaline batteries (All four positive ends (+) toward the bottom of the transceiver) or the four rechargeable batteries provided. Replace the cover.

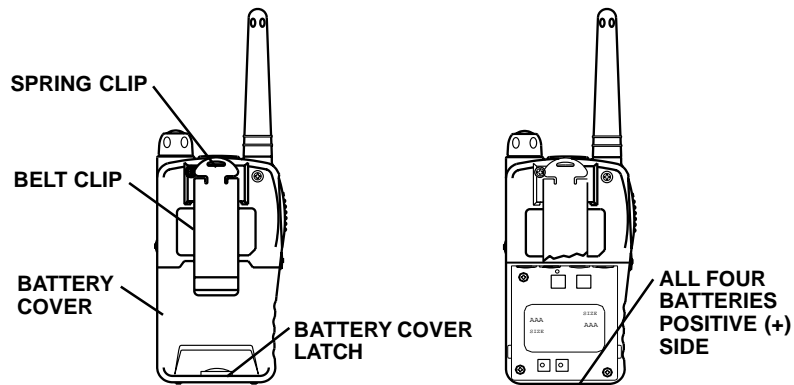

1. Using fingernail press battery cover latch down and open.
2. Lift the bottom of the cover and then slide the battery cover downward.
3. Insert four AAA batteries (all four positive ends (+) toward the bottom of the transceiver) or insert the rechargeable batteries.


The following guidelines will improve performance and provide longer operating times for the GMRS-1525:

1. Do not mix old and new batteries.
2. The use of alkaline-type batteries is recommended to provide the longest operating time.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (Ni-MH) batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and will void the warranty.

Charging the GMRS-1525:

Insert the charging transformer into a household electrical outlet and connect the power jack to the socket located on the side of the GMRS-1525. The red LED on the front of the charging transformer serves as a charge indicator. Approximately 12–16 hours are required to fully charge the batteries. Remember to turn your GMRS-1525 **OFF** before charging the batteries.

Caution: The charging transformer is intended for use with the supplied rechargeable Ni-MH batteries. Do not attempt to recharge any other type batteries. Avoid overcharging the batteries to extend the batteries lifetime.

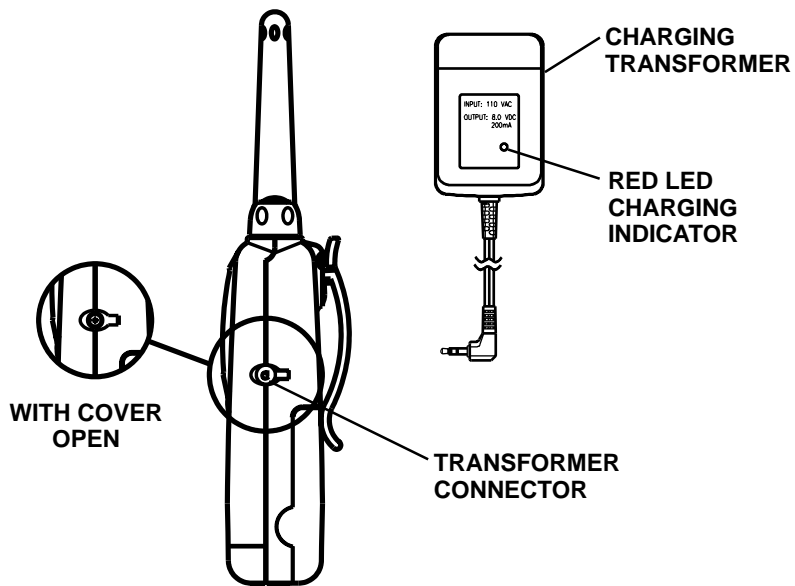

Controls:

Power On-Off/Volume (15):

Turn the On-Off/Volume knob clockwise. You will hear a confirming melody to indicate the unit is on. To turn the unit off, turn the On-Off/Volume knob counter-clockwise.

To Adjust Volume:

Hold the Monitor Button down to listen to audio level while rotating the On-Off/Volume knob. Clockwise to increase volume and counter-clockwise to decrease volume.

Monitor/Lamp Button (2):

This button is used to check activity on the current frequency before transmitting. Check activity by holding down Monitor Button longer than 2 seconds and (MON) will appear on the display. You will hear static if frequency is clear. ***Do not transmit if you hear conversation.*** Hold down the Monitor Button again longer than 2 seconds and (MON) will disappear from the display.

The monitor function will temporarily bypass the squelch setting and play all signals on a given channel. This useful when communicating with other parties at extreme range.

By pressing this button momentarily, the LCD backlight is turned on; press again and the LCD backlight is turned off.

The monitor function can be turned off by momentarily pressing the monitor/lamp button once.

Push To Talk (PTT) Button (4):

Pressing and holding this button will allow you to speak to any transceiver that is set to the same channel and privacy code setting as yours. Hold the transceiver approximately 1 to 2 inches from your face as you speak into the built in microphone (9). After you have finished speaking, release the PTT Button to allow the reception of incoming signals. It is not possible to transmit and receive at the same time. A red transmit LED (Transmit/Monitor Indicator)

located above the LCD Panel (8) will light while the PTT Button is pressed. Releasing the button allows the unit to revert to standby mode. When receiving an incoming signal, a green monitor LED indicator will light and the received signal strength indicator will display the relative strength of the signal. The PTT Button can also be used as a two-way call ringer. Pressing the button twice quickly will call another party on the same channel. You will hear a confirming melody.

Up Button (10):

In the standby mode, pressing this button briefly will change the frequency to the next higher channel. Holding button down will cycle through channels rapidly. (Channels 1-15)

Down Button (11):

In the standby mode, pressing this button briefly will change the frequency to the next lower channel. Holding button down will cycle through channels rapidly. (Channels 1-15)

Mode Button (12):

In the standby mode, pressing this button momentarily will enter the function edit mode. Subsequent presses will cycle to each mode.

- First Press: Coded Tone Controlled Squelch System (CTCSS)
- Second Press: Voice Activated Transmission (VOX) Level
- Third Press: Channel Scan/Skip List
- Fourth Press: Beep ON-OFF
- Fifth Press: Busy Channel Lock Out (BCLO) ON-OFF
- Sixth Press: Squelch Level
- Seventh Press: Priority Channel

Emergency Call Button (14):

Pressing this button will set the transceiver to the Emergency Channel (Channel 10, 462.6750 MHz). Usually, this channel is not monitored, but is to be used in emergency situations pertaining to the immediate safety of life or property.

External Microphone/Speaker (6):

This jack accepts an Audiovox headset/microphone for totally hands free operation.

Scan/Lock Mode (13):

Press this Button momentarily to enable or disable the scan. Press and hold Button for more than 1 second to lock or unlock keypad.

Operating Modes and Features**Operation**

- Rotate the volume control (15) clockwise to turn power ON. The transceiver will be in normal mode.
- Select the desired channel with the Up (10) and Down (11) Buttons. When receiving a call, the signal strength meter appears to indicate incoming received signal strength and the Receive-Monitor indicator (17) lights green.
- Push and hold PTT Button (4) to transmit, then speak in to the microphone clearly and slowly. The (red) Transmit indicator (17) lights.
- Release PTT Button (4) to receive.
- Communication can only be accomplished when the channel and CTCSS tone frequency of at least two parties are the same.
- During communication the CTCSS icon will be displayed on the LCD panel if the CTCSS tone frequency function is enabled.

Channel Selection

In order to communicate with other GMRS units, both transmitting and receiving party must be on the same frequency.

The GMRS-1525 has 15 channels (frequencies) (1-15) indicated by the large digits on the LCD display panel. Channels 1 through 7 are the same frequency as FRS channels 1 through 7. Communication with Audiovox

FRS and compatible units is possible on these seven channels. Before transmitting on the selected channel, press the Monitor Button (2) to check the activity on that channel. If there is activity on the selected channel, change to another channel that is clear.

To change the basic channel,

- In the standby mode, press the Up Button (10) briefly to move to the next higher main channel number.
- Press the Down Button (11) briefly to move to the next lower main channel number.

CTCSS Mode (Sub Channel Selection)

Coded Tone Controlled Squelch System (CTCSS) with 38 Sub-Frequencies.

This feature allows you to utilize the coded squelch tones (00 ~ 38) within a main channel. This enables you to communicate with another party on the same main channel using the same sub-code. This filters out unwanted transmissions (transmissions without the same coded squelch tone). There are 38 CTCSS Sub-channels for each main channel. A different subcode may be selected for each of the 15 channels.

To change the CTCSS Sub-channel,

- Press the Mode Button until the sub channel number or frequency is displayed. Once a value is entered the Icon (CTC) appears and flashes in the LCD panel.
- Press the Up Button or Down Button to choose the desired sub-channel to use.
- Press the PTT Button to confirm your selection.

NOTE: To communicate with other GMRS units, they must be switched to the same channel and CTCSS sub code. To communicate with other GMRS units that do not have sub codes, switch your unit to the same channel with the sub code set to 00 or 000.0 depending on the CTCSS mode display.

The CTCSS subcodes do not prevent others from hearing your

transmission. This will only allow you to ignore all traffic on a given channel not using the same subcode.

CTCSS Mode Display

This feature allows you to display the CTCSS tone in either a channel number or frequency.

To change the display of the CTCSS tone to either a channel number or frequency,

- Turn on the transceiver ON while pressing the Mode Button.
- Press the Mode Button until (tccode or tcfreq) appears.
- Press the Up Button or Down Button to select the code number display or the frequency number display.
- Press the PTT Button to confirm your selection.

VOX Selection Mode

This option enables you to have hands-free conversation. Your voice or the signal is detected and the radio transmits without the need to press the PTT button.

To set radio for VOX operation,

- Rotate the volume control counterclockwise to turn power OFF.
- Press and hold PTT Button.
- Rotate the volume control clockwise to turn power ON.

To set the VOX sensitivity level,

- Press the Mode Button until the VOX icon flashes and (Vo _ _) appears in LCD Panel.
- Press the Up Button or Down Button to select from 01 - 10 Voice Levels with 01 being the least sensitive and 10 being the most sensitive.
- The 01-10 Level setting determines VOX response sensitivity.
- Press the PTT Button to confirm your selection.

- To turn off the VOX feature, Rotate the volume control counterclockwise to turn power OFF and then turn power ON again.

The VOX sensitivity level setting is dependent on the ambient background noise and will need to be adjusted accordingly.

Auto Channel Scan List Selection Mode

This feature allows you to add or remove channels from the scan list.

To access the Auto Channel Scan/Skip List menu,

- Press the Mode Button until the Icon (SKIP) or (SCAN) flashes on the LCD panel.
- Press the Up Button to enter the channel in the SCAN List.
- Press the Down Button to enter the channel in the SKIP List.
- Press the PTT Button to confirm your selection(s).

NOTE: Pressing the Down button will enter a given channel to the skip list and then increment the display to the next channel number to be assigned to either the skip or scan lists.

Scan Operation

To enable the scan mode,

- Press Scan Button momentarily (SC on) will appear on the LCD panel.
- When in scan mode, the display will show each channel on the scan list as it is scanned. The unit will begin scanning for an active main channel.
- When unit doesn't find any signals and you want to transmit, press the PTT switch to return to home channel operation. The transceiver will automatically resume scanning 3 seconds after the communication is completed.
- If there is no activity and you want to leave the scan mode, press the Scan Button momentarily (SC off) will appear on the LCD panel and unit will return to normal operation and (Scan) indicator will disappear from LCD panel.

NOTE: If S[Err appears on the display when activating the scan mode this indicates that there are no channels on the scan list. Always verify that at least two channels are on the scan list before activating the scan function.

Key Tone

This feature allows the transceiver to sound a tone whenever the following keys are pressed: Monitor Button, Up Down Buttons, Mode Button, Scan Button, or the EMG Button.

To turn the key tones on or off access the Key Tone menu,

- Press the Mode Button until the Bell Icon flashes on the LCD panel.
- Press the Up or Down Button to toggle the key tone feature on or off.
- Press the PTT Button to confirm your selection.

The bell icon will display in standby mode whenever the beep tones are activated.

Busy Channel Lock Out (BCLO) Selection Mode

This feature inhibits transmission whenever the unit detects another conversation is on the same channel.

To access the Busy Channel Lock Out selection menu,

- Press the Mode Button until the (BCLO) icon flashes on the LCD panel.
- Press the Up or Down to toggle the (BCLO) function on or off.
- Press the PTT Button to confirm your selection.

Squelch Level

This feature determines the signal level that an incoming signal must have in order to be played by the transceiver's internal speaker or through a headset. Using the high (HI) setting, the stronger the signal must be in order for the transceiver to play it. If you desire to communicate with other transceivers in close proximity, the squelch should be set high (HI) to eliminate unwanted weak signals. If the transceiver is being used at

extreme range, the squelch should be set low to allow reception of weak signals. The squelch setting high (HI) or low (Lo) is applied to all channels.

To access the Squelch Level Scan menu,

- Press the Mode Button until the (S HI) or (S Lo) icon flashes on the LCD panel.
- Press the Up or Down Button to toggle the squelch from high to low setting.
- Press the PTT Button to confirm your selection.

Priority Scan Channel Selection Mode

This feature allows you monitor one particular channel while scanning other channels at the same time. If you pre-set any priority channel other than the current channel in use, the pre-set channel will be scanned every 0.5 second and any strong signals on that channel will be played.

To access the Priority Scan menu,

- Press the Mode Button until the (PRIO) icon flashes on the LCD panel.
- Press the Up Button or Down Button to select the desired channel number you wish to monitor. Only channels on the scan list will be available as a priority channel.
- Press the PTT Button for 2 seconds to toggle a channel's priority status on or off.

NOTE: If PrErr displays when entering the priority channel selection mode, this indicates that no channels have been selected to the scan list. Two or more channels must be selected to the scan list for proper operation of the priority channel feature.

Auto Key Lock Selection Mode

This feature prevents accidental channel change to the preferred settings of the unit. The Auto Key Lock function temporarily disables the Up, Down and Mode Buttons.

To access the Auto Key Lock selection menu,

- Press and hold the Scan Button for over 2 seconds to Lock or Unlock the Auto Key Function.

The PTT, EMG, Monitor Buttons and the On-Off/Volume switch are not affected.

Call Ringer Selection Mode

The transceiver provides 5 user selectable call ringer melodies to alert you of an incoming call.

To select your favorite call ringer melody,

- Press and hold Emergency Button then rotate the volume control clockwise to turn power ON. (C 01) appears on the LCD panel.
- Press the Up Button or Down Button to preview the 5 available melodies.
- Press the PTT Button to confirm your selection.
- To activate the Call Ringer, press PTT Button twice.

Time Out Timer (TOT) Selection Mode

This feature allows the user to limit continuous transmission times (pressing and holding the PTT button) to 30, 60, or 180 seconds.

To access the Time Out Timer selection menu,

- Press and hold Mode Button then rotate the volume control clockwise to turn power ON. (T OFF, 30, 60, or 180) appears on the LCD panel.
- Press the Up Button or Down Button to select the 30, 60, or 180 second time delays.
- The T OFF setting will disable the Time Out Timer function.
- Press the PTT Button to confirm your selection.

Emergency Channel Mode

The Emergency Channel can be used transmit and receive on a special emergency frequency (CH10: 462.6750 MHz).

The Emergency Channel can be selected quickly from any user mode.

To access the Emergency Channel mode,

- Press Emergency Button (EMG) and Channel 10 appears on the LCD panel.
- To turn off the Emergency Channel feature, press the Emergency Button once.

Additional Functions

When the Error or UL icon appears on the LCD panel, recharge unit or install fresh batteries. If this icon continues to appear on the LCD, please contact your authorized service center. Prior to contacting your authorized service center, please check the following:

1. Check the operating procedures.
2. Verify that the two radios are set to the same frequency.
3. Verify correct battery installation.
4. Change location to check if reception or transmission improve.

Battery Packs

There are two methods of powering the GMRS-1525:

1. Alkaline Batteries - (4 x AAA size)
2. Rechargeable Batteries - Rechargeable Ni-MH battery pack and wall charger (included). Normal charging time; 12-16 hours

To extend battery life, avoid overcharging the battery pack.

Troubleshooting

Problem	Possible cause	Correction
No transmission while pressing the PTT Button	Weak batteries	Charge or replace batteries
	Incorrect battery polarity	Install the batteries following the directions in paragraph Installing the Batteries.

Troubleshooting (Cont.)

Problem	Possible cause	Correction
Weak or no signal received	Weak batteries	Charge or replace batteries
	Channel and privacy code not set the same as target transceiver	Adjust the transceiver's settings to match those settings of the target transceiver
	Volume level too low PTT Button inadvertently depressed	Increase volume level Release PTT Button
	Excessive radio interference on a particular channel Obstruction of radio signal	Change to a different channel Avoid operating in or near large buildings or vehicles
Unit beeps, but will not function when turned on	Batteries extremely discharged	Charge or replace batteries
Reception of unwanted signals	CTCSS privacy mode not on	Turn on the CTCSS privacy mode and set code number to match the setting of the target transceiver.
	Interference from electronic devices such as computers or TVs	Turn the devices off or move farther away from them.
ScErr Displays when pressing scan	No channels selected on the scan list.	Select 2 or more channels to the scan list.
PrErr when accessing priority channel selection mode	No channels selected on the scan list.	Select 2 or more channels to the scan list.

Technical Specifications:

General

Frequency Range	462.5500 - 462.7250 MHz
Channels	15
Privacy Codes	38 for each main channel
Dimensions (W x H x D)	2.26 in x 6.94 in x 1.15 in 57.5 mm x 176.4 mm x 9.4mm

Power Supply

Power Source	Alkaline Batteries, AAA (4), 6 VDC Ni-MH rechargeable, AAA (4), 4.8 VDC
Operating Time	14 hours (Transmit: Receive: Standby) (5: 5: 90 ratio) (Based on alkaline batteries)

Receiver

Useable Sensitivity	>-119 dB
Maximum Audio Output Power	> 0.5 Watt (4 Ohm)
Modulation Distortion	< 5% (1 kHz 70%)

Transmitter

RF Output Power	2 Watts
Range	Up to 5 miles
Maximum Deviation	+/- 2.5 kHz
Modulation Distortion	< 5% (1 kHz 70%)

NOTES FOR GOOD COMMUNICATION

1. The GMRS-1525 15 channels are shared on a 'take turns' basis. This means other groups may be talking on any of the channels. A common code of ethics/courtesy is to switch to another vacant channel and not to attempt to talk over someone who is already using the channel you first selected.
2. The GMRS-1525 has been designed to maximize performance and improve transmission range in the field. To avoid interference, it is recommended that you do not use the units closer than 5 feet apart.
3. For best transmission results, always keep your mouth about 2-3 inches from the microphone (9) and speak slowly in a normal voice.

Warning

- Do not operate the transceiver unless you are licensed to do so.
- Remove the batteries from the transceiver if it is not expected to be used for long periods. This will eliminate the possibility of chemicals leaking from the batteries and corroding the transceiver.
- Avoid exposing the transceiver to water or extremes of temperature.
- Do not use this device in or near a mining facility, which uses remotely triggered explosives or in areas labeled "Blasting Area". Premature or accidental detonation may result.
- Do not attempt to modify or in any way increase the output of this transceiver. Its output is designed to meet the legal limits set by the FCC.
- Do not use this device or change its batteries in potentially explosive atmospheres as sparks in such areas could result in an explosion.
- Turn your transceiver off wherever posted notices restrict the use of radios or cellular telephones. Facilities such as hospitals may use equipment that is sensitive to RF energy.

- Turn your transceiver off on board aircraft when requested to do so.
- Do not place your radio in front of a vehicle's air-bag. If the air-bag deploys, it could propel the transceiver like a projectile causing bodily injury.

This transceiver complies with FCC regulations for use in the United States of America. Use in other countries may be prohibited or restricted by local regulation. Please check with the local regulating agency before using this device outside the United States of America.

Main Channel Frequencies:

Channel	Freq. MHz	Channel	Freq. MHz
1	462.5625	9	462.6250
2	462.5875	10	462.6750
3	462.6125	11	462.5500
4	462.6375	12	462.6000
5	462.6625	13	462.6500
6	462.6875	14	462.7000
7	462.7125	15	462.7250
8	462.5750		

NOTE: Channels 1 through 7 are shared with FRS radios.

**Continuous Tone Coded Squelch System Tone
Frequencies (in Hz)**

CTCSS	Freq. Hz	CTCSS	Freq. Hz
1	67.0	20	131.8
2	71.9	21	136.5
3	74.4	22	141.3
4	77.0	23	146.2
5	79.7	24	151.4
6	82.5	25	156.7
7	85.4	26	162.2
8	88.5	27	167.9
9	91.5	28	173.8
10	94.8	29	179.9
11	97.4	30	186.2
12	100.0	31	192.8
13	103.5	32	203.8
14	107.2	33	210.7
15	110.9	34	218.7
16	114.8	35	225.7
17	118.8	36	233.6
18	123.0	37	241.8
19	127.3	38	250.3

*00 = No Tone

90 DAY LIMITED WARRANTY

Applies to Audiovox Family Radio and General Mobile Service Products.

AUDIOVOX CORPORATION (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 90 days from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the warranty center at the address shown below.

The Company disclaims liability for communications range of this product.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 30 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state to state.

AUDIOVOX CORPORATION, 150 MARCUS BLVD., HAUPPAUGE, NEW YORK 11788

1-800-290-6650

128-5385A

© 2000 Audiovox Corporation, Hauppauge, N.Y. 11788

128-5750

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>