

BX SERIES MIXER AMPLIFIER


MODEL: BX-300 (30 watt), BX-600 (60 watt), BX-1200 (120 watt)

— INSTRUCTIONS —

The BX series Mixer Amplifiers, BX-300, -600, -1200 are designed for years of trouble-free use in diverse commercial and industrial applications. They incorporate the necessary features and functions needed for use in paging, announcing, intercommunication and background music systems in conjunction with Aiphone or other communication systems.

Overload protection circuitry prevents damage from either open or short speaker circuits with an attractive LED Peak Meter for visual output monitoring.

A switchable Manual/Automatic Music Muting Circuit offers an adjustable music muting level for background music systems.

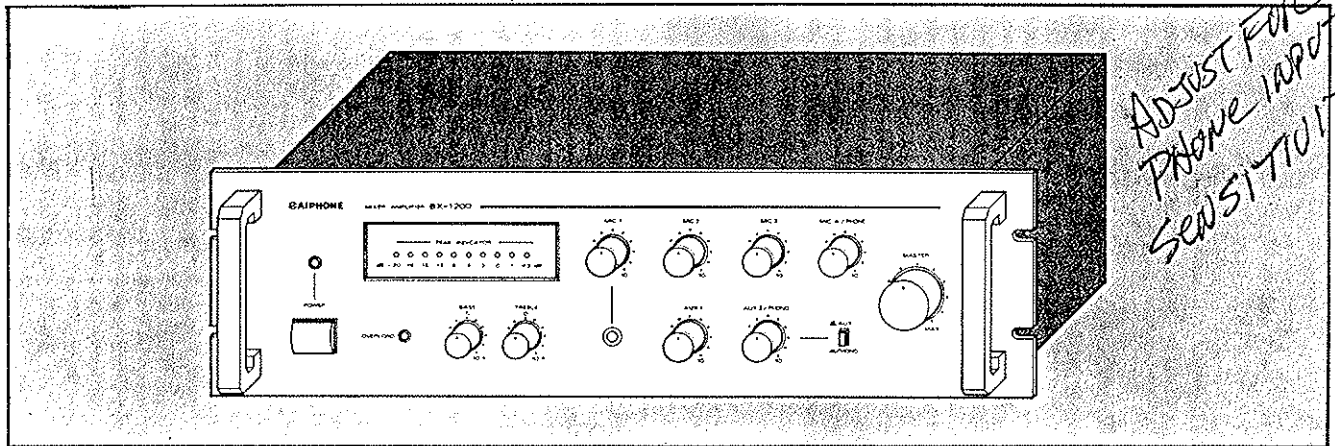

FEATURES

- * Output Overload Protection Circuitry.
- * Attractive LED Peak Meter.
- * Convenient volume controls including a Master volume control and individual volume controls.
- * Individual Bass and Treble tone controls.
- * Unique Automatic Music Muting circuit permits adjusting the muting level. (Switchable to manual muting).
- * 19" rack mountable with handles.
- * Frequency response: 50Hz — 15KHz \pm 1dB.
- * Low distortion: Less than 1% THD at rated output.
- * Professional appearance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

SPECIFICATIONS

Models and Output Power

BX-300	30 watt rms. at 1KHz, AC-120 volt
BX-600	60 watt rms. at 1KHz, AC-120 volt
BX-1200	120 watt rms. at 1KHz, AC-120 volt

Frequency Response: 50 – 15,000 Hz ± 1dB

Distortion: Less than 1% THD at 1KHz, rated output

Inputs:

BX-300 Six inputs, Four Channels

	Sensitivity	Impedance	
Mic-1	3mV (-50dB)	20K ohm (unbal.)	
Mic-2	0.5mV (-66dB)	600 ohm (balanced)	
Mic-3	0.5mV (-66dB)	600 ohm (balanced)	} Selective inputs
Phone	138mV (-17dB)	600 ohm (unbal.)	
AUX	100mV (-20dB)	250K ohm (unbal.)	} Selective inputs
Phono	2.5mV (-52dB)	50K ohm (unbal.)	

BX-600, -1200 Eight inputs, Six Channels

	Sensitivity	Impedance	
Mic-1	3mV (-50dB)	20K ohm (unbal.)	
Mic-2	0.5mV (-66dB)	600 ohm (balanced)	
Mic-3	0.5mV (-66dB)	600 ohm (balanced)	
Mic-4	0.5mV (-66dB)	600 ohm (balanced)	} Selective inputs
Phone	138mV (-17dB)	600 ohm (unbal.)	
AUX-1	100mV (-20dB)	250K ohm (unbal.)	
AUX-2	100mV (-20dB)	250K ohm (unbal.)	} Selective inputs
Phono	2.5mV (-52dB)	50K ohm (unbal.)	

Outputs: 4, 8, 16 ohms, 25,70.7 volts balanced
Line output (1v/600 ohm)

Noise Level:

Master volume control at "0"80dB below rated output
Microphone60dB below rated output
Auxiliary74dB below rated output

Tone Controls:

Bass ± 10dB at 100Hz
Treble ± 10dB at 10KHz

Indicators:

1-Power Lamp (LED), 1-Overload Lamp (LED)
1-Peak indicator (10 LEDs -20, -18, -15, -12, -9, -6, -3, 0, +1, +3dB)

Protection:

AC line fuse (Primary AC circuit)
Overload protection circuitry (Built-in)

Music Muting Level:

-3 to -40dB adjustable

Connections:

Inputs:

Mic-1 Phone jack (front panel)
Mic-2 Canon XLR (or Switchcraft C3F) (only BX-600, -1200)
Mic-3, 4 Screw terminals
Aux, Aux-1, 2 RCA Phono jacks
Phone Screw terminals
Phono RCA Phono jack

Outputs:

4, 8, 16 ohm Screw terminals
25, 70.7 volt Screw terminals
Line output RCA Phono jack

Others:

Manual Muting Screw terminals
DC 13.2 volt input Screw terminals (only BX-300)
AC 120 volt output 2 prong AC outlet (unswitched, 100 watt)

Power Supply:

110 – 120V AC, 50/60Hz
13.2V/6.6A DC (only BX-300)

Power Consumption:

	No signal	Rated output
BX-300	18W	155W
BX-600	26W	190W
BX-1200	32W	370W

Ambient Temperature Range:

14° F to 140° F (-10° C to 60° C)

Dimensions (W x H x D):

BX-300 19" x 3½" x 10-9/16" (482m/m x 88m/m x 268m/m)

BX-600 19" x 5-4/16" x 10-9/16" (482m/m x 132m/m x 268m/m)

BX-1200 19" x 5-4/16" x 10-9/16" (482m/m x 132m/m x 268m/m)

Weight:

BX-300 17.8lbs (8.1 kg)

BX-600 25.5lbs(11.6 kg)



BX-1200 31.9lbs (14.5 kg)

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE.

NAMES/FUNCTIONS



BX-300:

- 1) Power Switch
- 2) Power Indicator (LED)
- 3) Overload Indicator (LED)
- 4) MIC-1 Input Phone Jack
- 5) Bass Tone Control
- 6) Treble Tone Control
- 7) AUX/PHONO Select Switch
- 8) Peak Indicator (LED)
- 9) MIC-1 Volume Control
- 10) MIC-2 Volume Control
- 11) MIC-3/PHONE Volume Control
- 12) AUX/PHONO Volume Control
- 13) MASTER Volume Control
- 14) GROUND Terminal
- 15) MIC-3 Input Terminals
- 16) MIC-2 Input Terminals
- 17) AUTO/MANUAL Muting Control Select Switch
- 18) Muting Level Control
- 19) Low Impedance Output Terminals
- 20) AC Fuse (2A)
- 21) AC Outlet (Max. 100W, unswitched)
- 22) AC Power Supply Cord
- 23) PHONO Input Jacks
- 24) AUX Input Jacks
- 25) MIC-3/PHONE Select Switch
- 26) PHONE Input Terminals
- 27) Manual Muting Control Terminals
- 28) Constant Voltage Output Terminals (25, 70.7V)
- 29) Line Output Jack
- 30) DC 13.2V Power Input Terminals

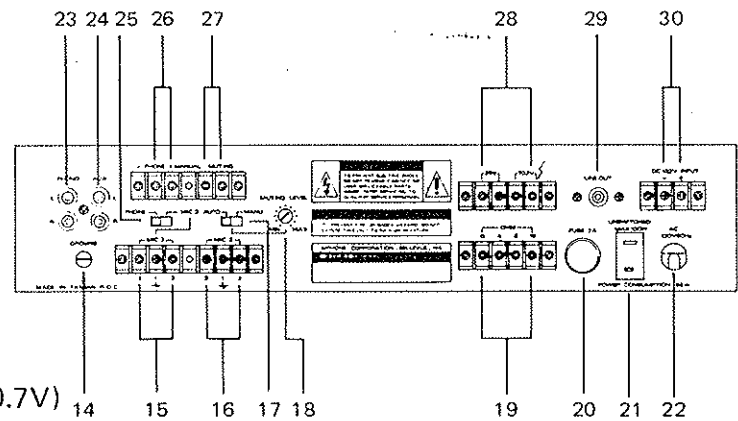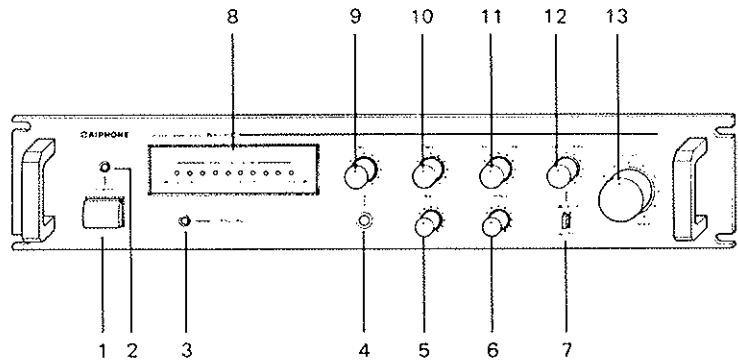

BX-600, -1200:

- 1) Power Switch
- 2) Power Indicator (LED)
- 3) Overload Indicator (LED)
- 4) BASS Tone Control
- 5) TREBLE Tone Control
- 6) MIC-1 Input Phone Jack
- 7) AUX-1 Volume Control
- 8) AUX-2/PHONO Volume Control
- 9) AUX-2/PHONO Select Switch
- 10) PEAK Indicator (LED)
- 11) MIC-1 Volume Control
- 12) MIC-2 Volume Control
- 13) MIC-3 Volume Control
- 14) MIC-4/PHONE Volume Control
- 15) MASTER Volume Control
- 16) GROUND Terminal
- 17) MIC-2 Input XLR Receptacle
- 18) MIC-4 Input Terminals
- 19) MIC-3 Input Terminals
- 20) MIC-4/PHONE Select Switch
- 21) PHONE Input Terminals
- 22) AC Fuse (2.5A for BX-600, 5A for BX-1200)
- 23) AC Outlet (Max. 100W, unswitched)
- 24) AC Power Supply Cord
- 25) PHONO Input Jacks
- 26) AUX-2 Input Jacks
- 27) AUX-1 Input Jacks
- 28) AUTO/MANUAL Muting Control Select Switch
- 29) Manual Muting Control Terminals
- 30) Muting Level Control
- 31) Line Output Jack
- 32) Low Impedance Output Terminals
- 33) Constant Voltage Output Terminals

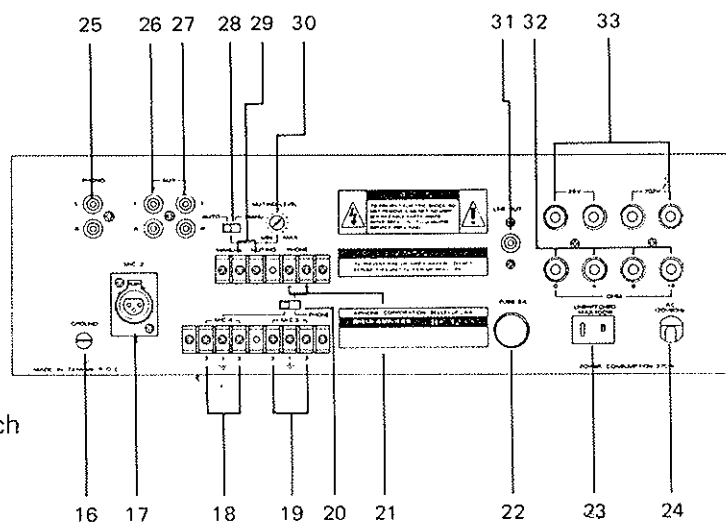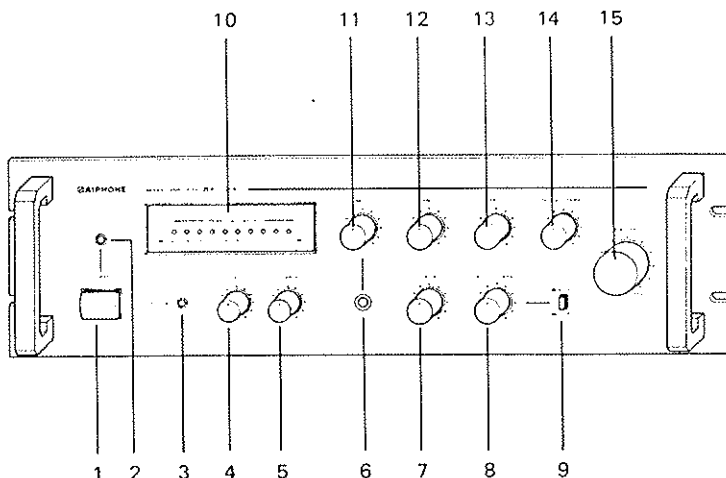

INSTALLATION

Unpacking:

Upon receiving unit(s), please inspect for any damage incurred in transit. If damage is found, please notify your Aiphone Distributor or representative immediately.

Connections:

An AM/FM tuner, cassette player, remote microphone, chime or other high level signal source may be connected to high impedance inputs with a single-conductor low capacitance shielded cable.

A high impedance microphone with a single conductor shielded cable of 30' to 60' (10 to 20m) length can be plugged into the MIC-1 input on the front panel.

Make certain that all input cables are kept away from speaker cables, power cables and power transformers.

Speaker cables must also be kept away from power cables.

Grounding the Unit:

The chassis of the unit must be grounded by using the GROUND terminal located on the back.

The amplifier must be connected to an earth ground such as a cold water pipe or a substitution of the ground. If additional equipment is installed along with the amplifier, make sure that the additional chassis are also grounded.

DC Power Connection (only BX-300):

The unit may also be powered by an external 12 volt battery or other direct current source with negative (-) as ground.

Power connection is made at the DC terminal strip on the back panel.

Ventilation:

In order to offset the heat generated by the unit, it is necessary to provide ample ventilation around the unit.

Avoid blocking or impeding the ventilation holes and slits on the unit.

Locate the unit where it is free from direct sunlight, humidity, dust circulation or vibrations to prevent any unnecessary problems.

INPUT CONNECTIONS

Microphones:

Three microphone inputs on the BX-300 and four microphone inputs on the BX-600 and BX-1200 are provided.

They may be used with balanced or unbalanced high impedance (20K ohm) or low impedance (200 ohm) microphones. An unbalanced microphone with 30' to 60' (10 to 20m) of cable may be used, but results will depend on the microphone and its characteristics.


MIC-1, MIC-2, MIC-3 and MIC-4:

The MIC-1 input is unbalanced high impedance and is provided with a 1/4" phone jack located on the front panel.

MIC-2, -3, -4 inputs are balanced low impedance and all are located on the back panel.

Unbalanced High Impedance Microphone:

Use with single conductor shielded cable.





Unbalanced microphone

Single pole phone plug



Balanced Low Impedance Microphone:

Use with two conductor shielded cable.

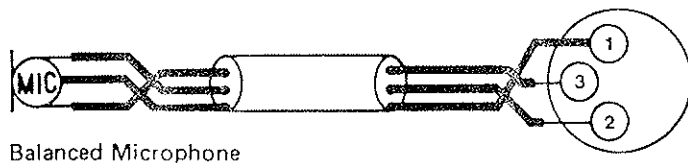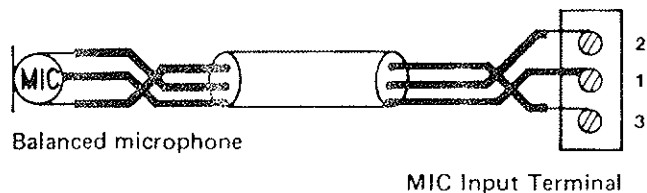

Unbalanced Low Impedance Microphone:


Use with single conductor shielded cable.

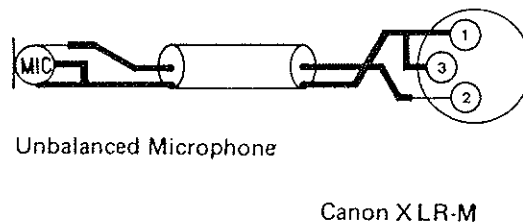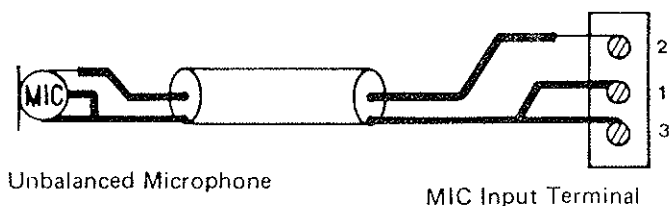

Phonograph:

A magnetic phonograph cartridge may be connected to PHONO input.

A ceramic or crystal cartridge pick-up may be connected to AUX, AUX-1 or AUX-2 input. Use a single conductor or two conductor shielded cable, and ground the separate ground wire from the player to GROUND terminal on the back panel.

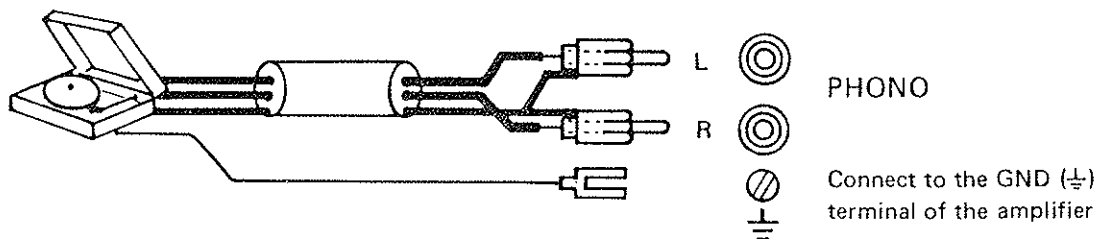


*There are two PHONO jacks (R and L) provided for the connection with stereo player. The R and L channels will be mixed automatically.

Auxiliary (AUX, AUX-1 & AUX-2):

An AM/FM tuner, tape player, remote microphone, chime, mixer preamplifier or other high level signal sources may be connected to the AUX, AUX-1 or AUX-2 input.

Use single or two conductor shielded cable.

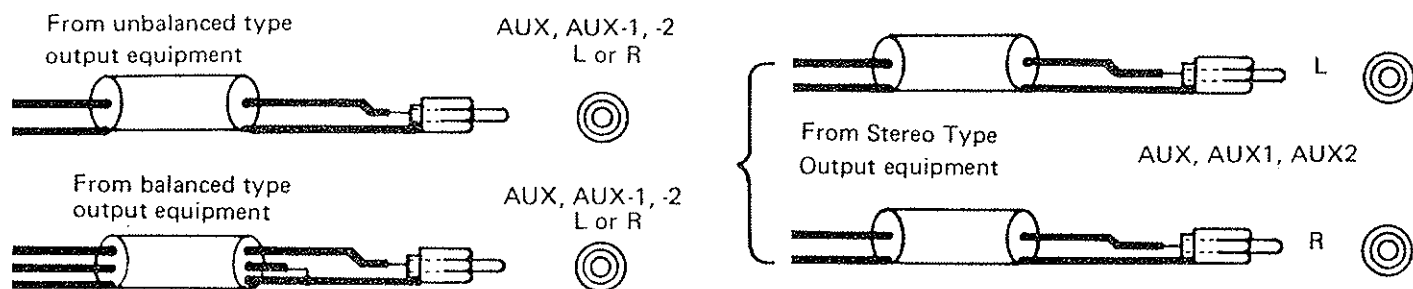

* There are two jacks (R and L) provided for connection with any stereo signal source. The R and L channels will be mixed automatically.

Telephone:

A voice signal from the telephone system (600 ohm, unbalanced) may be connected to the PHONE input. Use single or two conductor shielded cable.




NOTE:

The following combination of two inputs cannot be used at the same time. They are selectable using the select switches located on the front and back panel.

BX-300 – Either MIC-3 or PHONE, and AUX or PHONO.



BX-600, -1200 – Either MIC-4 or PHONE, and AUX-2 or PHONO.

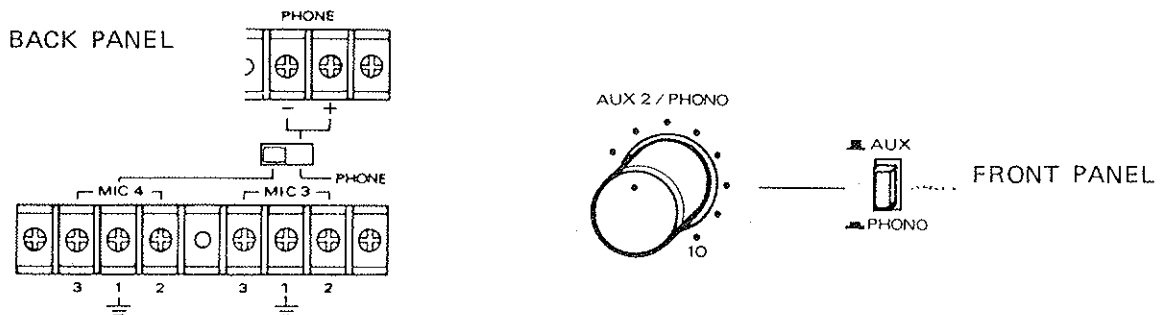

OUTPUT CONNECTIONS

Speaker Output


The amplifier may be used in conjunction with a speaker rated at 4, 8 and 16 ohms or with balanced 25 volt or 70.7 volt constant voltage speaker systems.

Low Impedance Output (4, 8 and 16 ohm):

The 4, 8 and 16 ohm output terminals are provided for the connection of a few large-output speakers. This applies when a constant voltage speaker system is unnecessary or in case the distance between the amplifier and the speakers is less than 200' or 60m.

It is requested that the total speaker load impedance be correctly matched to the output impedance of the amplifier for the most efficient transfer of power.

Be sure that total impedance of speakers is above 4, 8 or 16 ohms. However, do not use a speaker rated at less power than the amplifier is capable of producing, otherwise the speaker will be damaged.

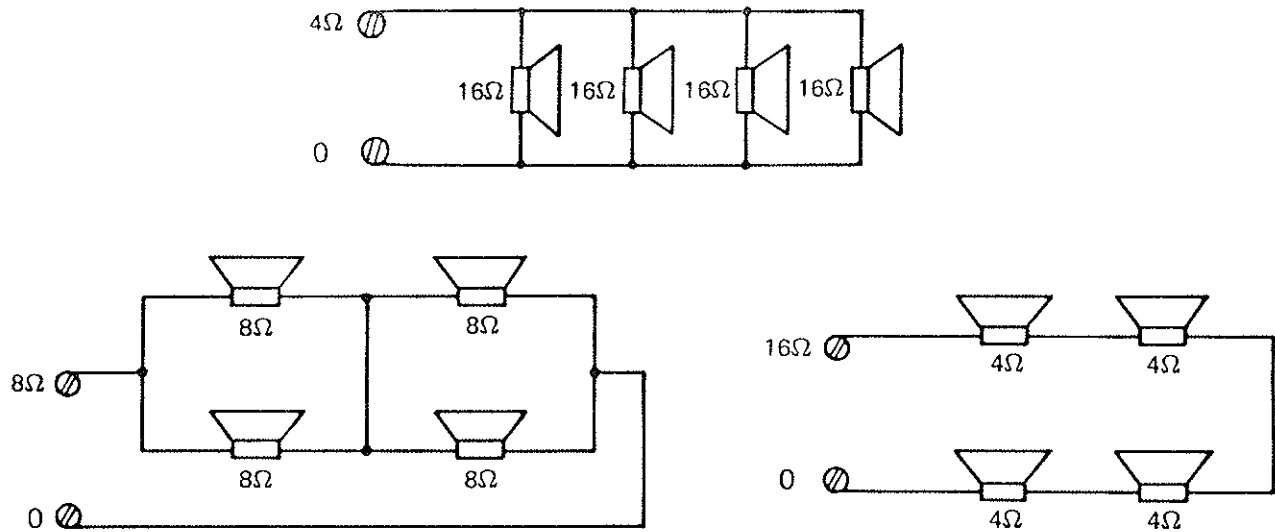


25 volts and 70.7 volts Output:

When it is desired to operate the speaker from a distance of over 200' (60m) from the amplifier and/or the system requires more than four speakers, it is recommended that line matching transformers be used for the speakers to prevent excessive line losses.

This method of load matching is known as the constant voltage distribution system, and eliminates the calculation of load impedance and series-parallel speaker arrangements. In this method, all speakers are connected in parallel.

These constant voltage outputs are most convenient for distribution of power when a number of speakers are installed. Each speaker must have 25 volt or 70.7 volt line transformer with a tap that gives the power desired for that speaker. The total number of power settings for all speakers should be equal to the amplifier power rating or less.

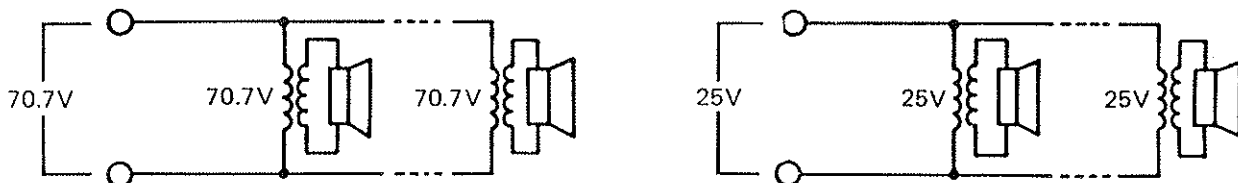


Line Output:

To operate a booster amplifier or tape recorder, use single conductor shielded cable with an RCA phono plug from the LINE OUT to the input of the booster amplifier or tape recorder.

This output is subject to all settings of each input gains, master gains and tone controls.

LINE OUT



OPERATIONS:

Volume Control Setting:

For an average input signal, the MASTER volume control should be set to the middle. Relative to the other input levels, it is recommended that the gains or losses be equally divided between individual controls and the master control.

Tone Controls:


The separate tone controls provide boost and alternation of bass and treble response. The flattest response is obtained when knobs are set to zero "0".

Turn BASS control knob or TREBLE control knob clockwise to raise the appropriate tone level by approximately + 10dB, turn counter-clockwise to lower tone level by approximately - 10dB.

Peak Indicator:

Each of the LEDs of the PEAK INDICATOR Panel indicates output level.

When voice or music is amplified, set the volume control knob at the position where the maximum output level is below zero "0".

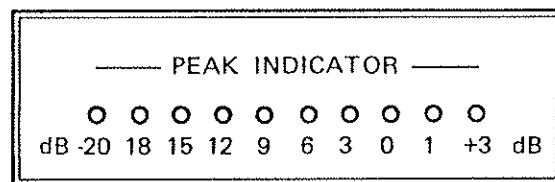

Overload:

If the external load exceeds the rated power, a protection circuit will respond and protect the amplifier immediately (even if the load is short-circuited). The protective circuit will be activated by loading 1.5 times over the rated output power.

When the OVERLOAD indicator is lit, turn off the POWER and check the output circuit. When proper operating conditions have been secured, turn the POWER on, and make sure OVERLOAD indicator is off, otherwise recheck the output circuit.

Music Muting Control:


The voice activated microphone precedence control circuitry offers smooth and natural voice announcement with reduced soft music in the background.

When announcements are made through microphones (MIC-1, MIC-2, MIC-3, MIC-4, PHONE), the electronic precedence control circuit automatically alternates the level of the background music AM/FM radio broadcast, music tape, or other sources, allowing you to make announcements which are clear and more attractive.

The level of the music source is automatically returned to normal when the announcements is finished.

The muting level is adjustable within a range from -3 to -40 dB with MUTING LEVEL control located on the back panel.

The precedence control circuit can also be activated by an external dry contact. The AUTOMATIC and MANUAL control mode switch is also located on the back panel.

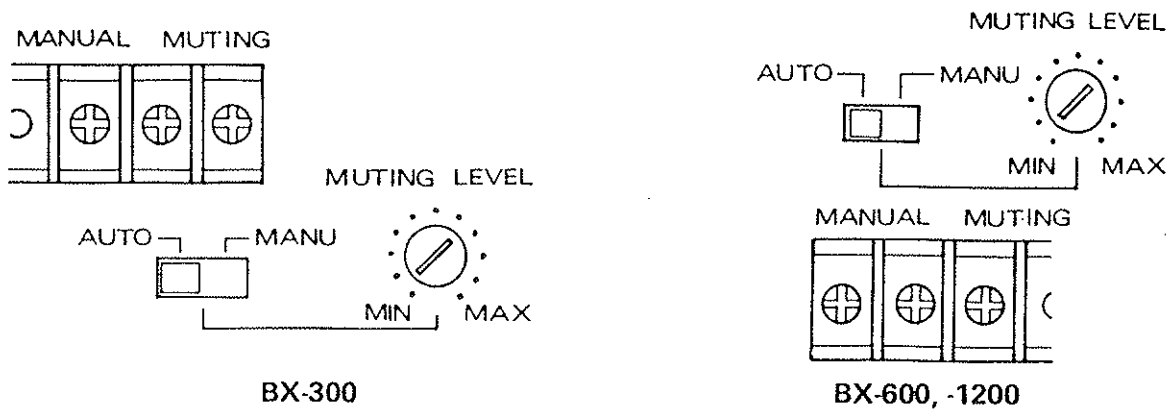

**CAUTION: TO PREVENT ELECTRIC SHOCK. DO NOT REMOVE CABINET.
NO USER SERVICEABLE PARTS INSIDE.
REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

We at AIPHONE are proud of our products. Our designers and engineers strive to bring you the finest in sound equipment. Each item has been carefully tested and inspected before leaving our factory. Properly installed and used, your Aiphone sound system should give years of troublefree service.

We are pleased to offer the following warranty:

WARRANTY

Aiphone warrants its products to be free from defects of material and workmanship under normal use and service for a period of one year after delivery to the ultimate user and will repair free of charge or replace at no charge, should it become defective upon which examination shall disclose to be defective and under warranty. Aiphone reserve unto itself the sole right to make the final decision whether there is a defect in materials and/or workmanship; and whether or not the product is within the warranty.

This warranty shall not apply to any Aiphone product which has been subject to misuse, neglect, accident, or to use in violation of instructions furnished, nor extended to units which have been repaired or altered outside of the factory.

This warranty does not cover batteries or damage caused by batteries used in connection with the product.

This warranty covers bench repairs only, and any repairs must be made at the shop or place designated in writing by Aiphone. Aiphone will not be responsible for any costs incurred involving on site service calls.

Aiphone Corporation, Bellevue, Washington 98005

BX-NOO-I 0186



Printed in Taiwan

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>