

Washer Extractors

WF150, WF185, WF235, WF305, WF400

for corresponding “CWF” and “IWF”
models, see page 6 for complete model
list

Technical specifications
Installation instructions
Maintenance



Instruction manual

Part No. D0908R7
Code: 249/00383/10
January 2011

Contents

1 Model Numbers	6
2 Safety and Environmental Informations	8
Safety	8
Environmental	9
Explanation of Safety Messages	10
Important Safety Instructions	11
Operator Safety	13
3 Technical data and dimensions	14
Technical data WF150, IWF150, IWF033, CWF033	14
Dimensions WF150, IWF150, IWF033, CWF033	15
Technical data WF185, IWF185, IWF040, CWF185, CWF040	16
Dimensions WF185, IWF185, IWF040, CWF185, CWF040	17
Technical data WF235, IWF235, IWF055, CWF235, CWF055	18
Dimensions WF235, IWF235, IWF055, CWF235, CWF055	19
Technical data WF305, IWF305, IWF075, CWF305, CWF075	20
Dimensions WF305, IWF305, IWF075, CWF305, CWF075	21
Technical data WF400, IWF400, IWF090	22
Dimensions WF400, IWF400, IWF090	23
4 Installation and Connection Instructions	24
Surface	24
Anchoring on a metal base	24
Directly on the ground	24
Mounting Bolt Hole Locations for machines, WF150, IWF150, IWF033, CWF033	25
Mounting Bolt Hole Locations for machines, WF185, IWF185, IWF040, CWF185, CWF040	26
Mounting Bolt Hole Locations for machines, WF235, IWF235, IWF055, CWF235, CWF055	27
Mounting Bolt Hole Locations for machines, WF305, IWF305, IWF075, CWF305, CWF075	28
Mounting Bolt Hole Locations for machines, WF400, IWF400, IWF090	29
Water connection	30
Water drain	31
Electrical Installation	32
Main power connection	34
Electrical Specifications WF150, IWF150, IWF033, CWF033	36
Electrical Specifications WF185, IWF185, IWF040, CWF185, CWF040	37
Electrical Specifications WF235, IWF235, IWF055, CWF235, CWF055	38
Electrical Specifications WF305, IWF305, IWF075, CWF305, CWF075	39
Electrical Specifications WF400, IWF400, IWF090	40
Liquid soap connection (option)	41
Connection of a central operating panel for coin machines (option)	43

5 Steam connection	44
6 Technical remarks	45
<i>Internal connections of the electrical heating</i>	45
7 Maintenance instruction of the machine	46
<i>End of day</i>	46
<i>General maintenance</i>	46
<i>Periodical maintenance</i>	46
<i>Annual maintenance</i>	47
8 Contact Information	48
<i>Nameplate</i>	48
9 Repair and after-sales service	50

Model Numbers

Build-up

xWF150yy2yyyyyy
xWF185yy2yyyyyy
WF150
WF185
xWF033yy2yyyyyy
xWF040yy2yyyyyy
xWF235yy2yyyyyy
xWF305yy2yyyyyy

WF235
WF305
xWF055yy2yyyyyy
xWF075yy2yyyyyy
xWF090yy2yyyyyy
xWF400yy2yyyyyy
WF400

Model numbers

IWF033AN2
IWF033MN2
IWF033MC2
IWF033MD2
IWF033ME2
IWF033ML2
IWF033MX2
IWF033MY2
IWF033SC2
IWF033SD2
IWF033SE2
IWF033SR2
IWF033SL2
IWF033SX2
IWF033SY2
IWF040AN2
IWF040MN2
IWF040MC2
IWF040MD2
IWF040ME2
IWF040ML2
IWF040MX2
IWF040MY2
IWF040SC2
IWF040SD2
IWF040SE2
IWF040SR2
IWF040SL2

IWF040SX2
IWF040SY2
IWF055AN2
IWF055MN2
IWF055MC2
IWF055MD2
IWF055ME2
IWF055ML2
IWF055MX2
IWF055MY2
IWF055SC2
IWF055SD2
IWF055SE2
IWF055SR2
IWF055SL2
IWF055SX2
IWF055SY2
IWF075AN2
IWF075MN2
IWF075MC2
IWF075MD2
IWF075ME2
IWF075ML2
IWF075MX2
IWF075MY2
IWF075SC2
IWF075SD2

IWF075SE2
IWF075SR2
IWF075SL2
IWF075SX2
IWF075SY2
IWF150AN2
IWF150MN2
IWF150MC2
IWF150MD2
IWF150ME2
IWF150ML2
IWF150MX2
IWF150MY2
IWF150SC2
IWF150SD2
IWF150SE2
IWF150SR2
IWF150SL2
IWF150SX2
IWF150SY2
IWF150ZN2
IWF150ZC2
IWF150ZD2
IWF150ZE2
IWF150ZL2
IWF150ZX2
IWF150ZY2

IWF185AN2
IWF185MN2
IWF185MC2
IWF185MD2
IWF185ME2
IWF185ML2
IWF185MX2
IWF185MY2
IWF185SC2
IWF185SD2
IWF185SE2
IWF185SR2
IWF185SL2
IWF185SX2
IWF185SY2
IWF185ZN2
IWF185ZC2
IWF185ZD2
IWF185ZE2
IWF185ZL2
IWF185ZX2
IWF185ZY2
IWF235AN2
IWF235MN2
IWF235MC2
IWF235MD2
IWF235ME2
IWF235ML2
IWF235MX2
IWF235MY2
IWF235SC2
IWF235SD2
IWF235SE2
IWF235SR2
IWF235SL2
IWF235SX2
IWF235SY2
IWF235ZN2
IWF235ZC2
IWF235ZD2
IWF235ZE2
IWF235ZL2
IWF235ZX2
IWF235ZY2

IWF305AN2
IWF305MN2
IWF305MC2
IWF305MD2
IWF305ME2
IWF305ML2
IWF305MX2
IWF305MY2
IWF305SC2
IWF305SD2
IWF305SE2
IWF305SR2
IWF305SL2
IWF305SX2
IWF305SY2
IWF305ZN2
IWF305ZC2
IWF305ZD2
IWF305ZE2
IWF305ZL2
IWF305ZX2
IWF305ZY2
CWF033AN2
CWF033MN2
CWF033MC2
CWF033MD2
CWF033ME2
CWF033ML2
CWF033MX2
CWF033MY2
CWF040AN2
CWF040MN2
CWF040MC2
CWF040MD2
CWF040ME2
CWF040ML2
CWF040MX2
CWF040MY2
CWF055AN2
CWF055MN2
CWF055MC2
CWF055MD2
CWF055ME2

CWF055ML2
CWF055MX2
CWF055MY2
CWF075AN2
CWF075MN2
CWF075MC2
CWF075MD2
CWF075ME2
CWF075ML2
CWF075MX2
CWF075MY2
CWF150AN2
CWF150MN2
CWF150MC2
CWF150MD2
CWF150ME2
CWF150ML2
CWF150MX2
CWF150MY2
CWF185AN2
CWF185MN2
CWF185MC2
CWF185MD2
CWF185ME2
CWF185ML2
CWF185MX2
CWF185MY2
CWF235AN2
CWF235MN2
CWF235MC2
CWF235MD2
CWF235ME2
CWF235ML2
CWF235MX2
CWF235MY2
CWF305AN2
CWF305MN2
CWF305MC2
CWF305MD2
CWF305ME2
CWF305ML2
CWF305MX2
CWF305MY2

Safety and Environmental Informations

Safety

CAUTION LABELS

Please familiarize yourself with the following standard warning symbols. They are used throughout this manual and on the equipment to alert you to possible hazards. Anyone operating or servicing this equipment must understand these symbols and must follow all safety rules in this manual.



ELECTRICAL HAZARD

This symbol alerts you to the presence of a dangerous voltage, which could cause a serious shock resulting in personal injury or death.



CONSULT MANUAL

This symbol warns you to consult the manual for important instructions concerning the machine and possible hazards.



MOVING PARTS HAZARD

This symbol alerts you to the presence of possible dangerous moving parts within the machine. Guards should always be in place when the machine is in operation. Be very careful when servicing the drive system.



PINCHING HAZARD

This warning symbol indicates the presence of a pinch point on the machine. This is a place where your hand might be pinched or crushed, resulting in a severe injury. Make sure you understand these hazards and keep all body parts clear of them.



HOT SURFACE HAZARD

This symbol indicates the presence of a potentially hot surface. Some machine surfaces and parts may become extremely hot during normal operation and should not be touched.



ATTENTION


This symbol identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss.

Environmental

Disposal of Unit




This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

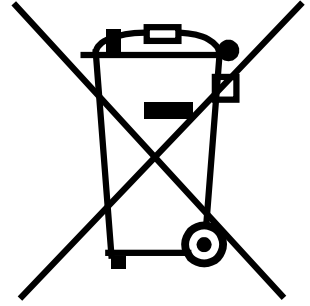This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local distributor resources.



Explanation of Safety Messages

Throughout this manual and on machine decals, you will find precautionary statements (“DANGER,” “WARNING,” and “CAUTION”) followed by specific instructions. These precautions are intended for the personal safety of the operator, user, servicer, and those maintaining the machine.

	DANGER
Indicates an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.	
	WARNING
Indicates a hazardous situation that, if not avoided, could cause severe personal injury or death.	
	CAUTION
Indicates a hazardous situation that, if not avoided, may cause minor or moderate personal injury or property damage.	

Safety Decals

Safety decals appear at crucial locations on the machine. Failure to maintain legible safety decals could result in injury to the operator or service technician.

To provide personal safety and keep the machine in proper working order, follow all maintenance and safety procedures presented in this manual. If questions regarding safety arise, contact the manufacturer immediately.


Use manufacturer-authorized spare parts to avoid safety hazards.

Additional precautionary statements (“IMPORTANT” and “NOTE”) are followed by specific instructions.

IMPORTANT: The word “IMPORTANT” is used to inform the reader of specific procedures where minor machine damage will occur if the procedure is not followed.

NOTE: The word “NOTE” is used to communicate installation, operation, maintenance or servicing information that is important but not hazard related.

Important Safety Instructions

	WARNING
<p>To reduce the risk of fire, electric shock, serious injury or death to persons when using your washer, follow these basic precautions:</p>	

1. Read all instructions before using the washer.
2. Refer to the GROUNDING INSTRUCTIONS in the installation Manual for the proper grounding of the washer.
3. Do not wash textiles that have been previously cleaned, washed, soaked, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances as they give off vapors that could ignite or explode.
4. Do not add gasoline, dry-cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
5. Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If the hot water system has not been used for such a period, before using a washing machine or combination washer-dryer, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. The gas is flammable, do not smoke or use an open flame during this time.
6. Do not allow children to play on or in the washer. This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.
7. Before the washer is removed from service or discarded, remove the door to the washing compartment.
8. Do not reach into the washer if the wash drum is moving. This is an imminently hazardous situation that, if not avoided, will cause severe personal injury or death.
9. Do not install or store the washer where it will be exposed to water and/or weather.
10. Do not tamper with the controls.
11. Do not repair or replace any part of the washer, or attempt any servicing unless specifically recommended in the user-maintenance instructions or in published user-repair instructions that the user understands and has the skills to carry out.
12. To reduce the risk of an electric shock or fire, DO NOT use an extension cord or an adapter to connect the washer to an electrical power source.
13. Use a washer only for its intended purpose, washing textiles.
14. ALWAYS disconnect the washer from the electrical supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.
15. Install the washer according to the INSTALLATION INSTRUCTIONS. All connections for water, drain, electrical power and grounding must comply with local codes and be made by licensed personnel when required.
16. To reduce the risk of fire, textiles which have traces of any flammable substances such as vegetable oil, cooking oil, machine oil, flammable chemicals, thinner, etc., or anything containing wax or chemicals such as in mops and cleaning cloths, must not be put into the washer. These flammable substances may cause the fabric to catch on fire.
17. Do not use fabric softeners or products to eliminate static unless recommended by the manufacturer of the fabric softener or product.
18. Keep washer in good condition. Bumping or dropping the washer can damage safety features. If this occurs, have washer checked by a qualified service person.
19. Replace worn power cords and/or loose plugs.
20. Be sure water connections have a shut-off valve and that fill hose connections are tight. CLOSE the shut-off valves at the end of each wash day.


21. Loading door **MUST BE CLOSED** any time the washer is to fill, tumble, or spin. **DO NOT** bypass the loading door switch by permitting the washer to operate with the loading door open.
22. Always read and follow manufacturer's instructions on packages of laundry and cleaning aids. Heed all warnings or precautions. To reduce the risk of poisoning or chemical burns, keep them out of the reach of children at all times (preferably in a locked cabinet).
23. Always follow the fabric care instructions supplied by the textile manufacturer.
24. Never operate the washer with any guards and/or panels removed.
25. **DO NOT** operate the washer with missing or broken parts.
26. **DO NOT** bypass any safety devices.
27. Failure to install, maintain, and/or operate this washer according to the manufacturer's instructions may result in conditions which can produce bodily injury and/or property damage.
28. It is recommended that the machine be installed by qualified technicians.
29. Before starting repairs or maintenance, shut off all power and water supplies.
30. To prevent fire and explosion:
Keep the area around the machine free from inflammable or combustible products.

NOTE: The WARNINGS and IMPORTANT SAFETY INSTRUCTIONS appearing in this manual are not meant to cover all possible conditions and situations that may occur. Common sense, caution, and care must be exercised when installing, maintaining, or operating the washer.

Any problems or conditions not understood should be reported to the dealer, distributor, service agent, or the manufacturer.

SAVE THESE INSTRUCTIONS

Operator Safety

	WARNING
NEVER insert hands or objects into basket until it has completely stopped. Doing so could result in serious injury.	


To ensure the safety of machine operators, the following maintenance checks must be performed daily:

1. Prior to operating the machine, verify that all warning signs are present and legible. Missing or illegible signs must be replaced immediately. Make certain that spares are available.
2. Check door interlock before starting operation of the machine:
 - a. Attempt to start the machine with the door open. The machine should not start with the door open.
 - b. Close and lock the door and start a cycle. Attempt to open the door while the cycle is in progress. The door should not open.

If the door lock and interlock are not functioning properly, call a service technician.

3. Do not attempt to operate the machine if any of the following conditions are present:
 - a. The door does not remain securely locked during the entire cycle.
 - b. Excessively high water level is evident.
 - c. Machine is not connected to a properly grounded circuit.

Do not bypass any safety devices in the machine.

	WARNING
Never operate the machine with a bypassed or disconnected balance system. Operating the machine with severe out-of-balance loads could result in personal injury and serious equipment damage.	

SAVE THESE INSTRUCTIONS




Technical data and dimensions

Technical data WF150, IWF150, IWF033, CWF033

	METRIC	US
Capacity (dry weight) Ratio [kg/Lit]		
1:11	13,1 kg	28.88 lb.
1:10	14,5 kg	31.96 lb.
1:9	16,1 kg	35.49 lb.
Cylinder		
Diameter	680 mm	26.77 inch
Depth	400 mm	17.74 inch
Volume	145 Lit	5.12 ft ³ .
Cabinet		
Height	1204 mm	47.40 inch
Width	780 mm	30.70 inch
Depth	842 mm	33.14 inch
Front loading		
Diameter door opening	400 mm	15.74 inch
Door height	390 mm	15.35 inch
To center	590 mm	23.22 inch
Speed		
Wash	10 - 50 tr/min - RPM	
Distribution	85 tr/min - RPM	
Spin	100 - 465 tr/min - RPM	
G-factor		
Spin	82	
Motor (3-phase)		
4p. 1470 tr./min	1,1kW / 1,47HP	
Drain valve		
	2"	
Water supply		
Hard, soft, warm water	3/4"	
Steam connection		
Steam connection	3/8"	
Heating		
Electrical 230/400 V	12 kW - 15 kW - 18 kW	
Electrical 400V	21 kW - 24 kW	
Steam	X	
Warm water (without additional heating)	X	
Warm water (with additional heating)	X	
Packing dimensions		
(H x W x D) mm - inch	1340x848x920 mm - 52.75x33.38x36.22 inch	
Weight		
Net	306 kg	674.61 lb.
Gross	328 kg	723.11 lb.

Dimensions WF150, IWF150, IWF033, CWF033

Legend: metric mm [inches]

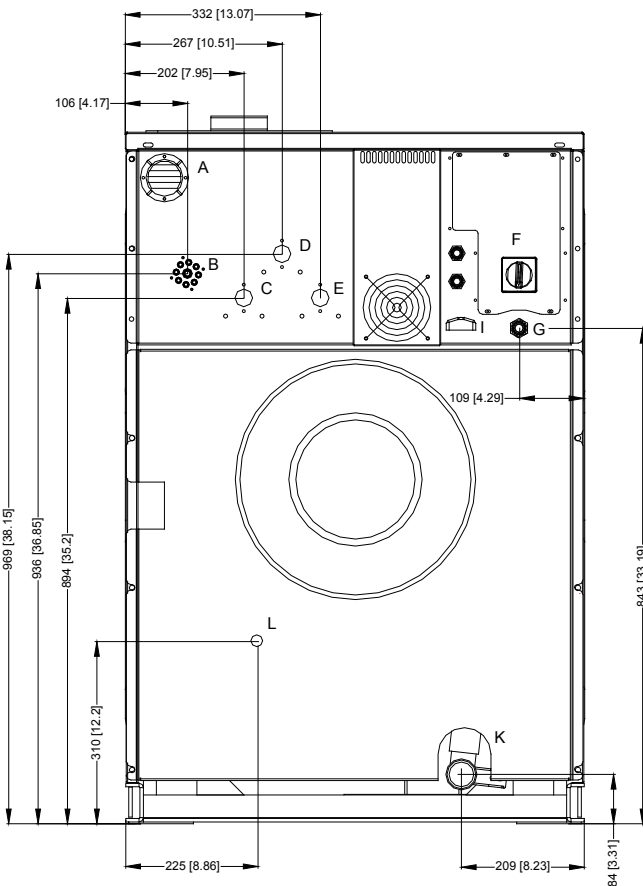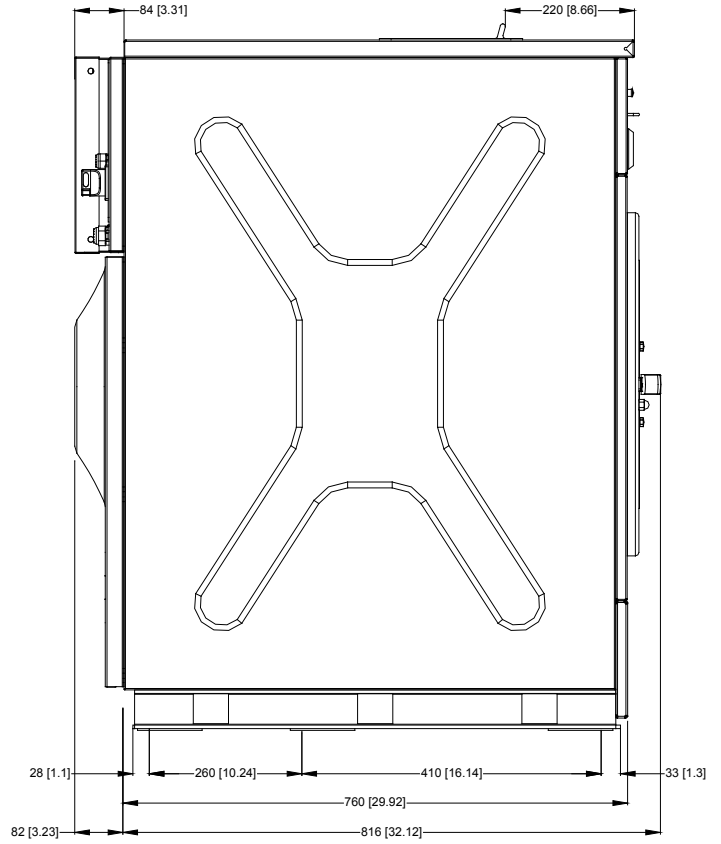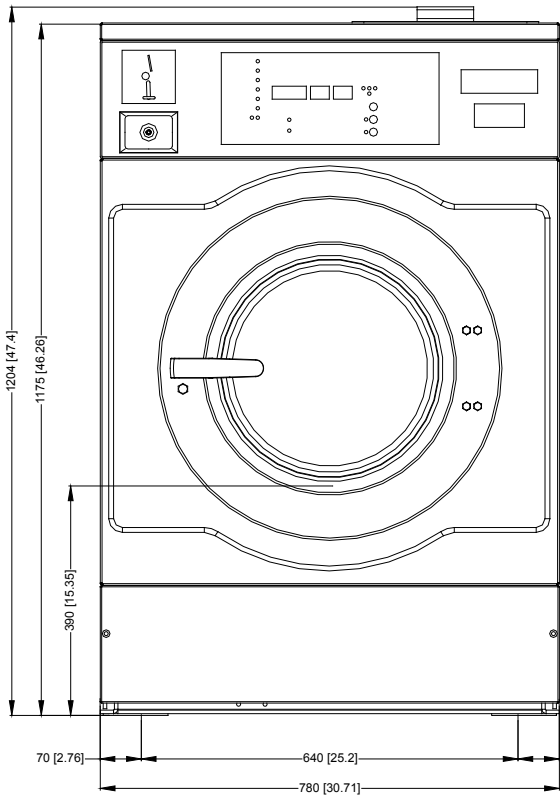




- A. Ventilation soap dispenser
- B. Liquid soap connections
- C. Hard water connections 3/4"
- D. Warm water connections 3/4"
- E. Soft water connections 3/4"
- F. Main switch
- G. Electrical connections
- I. Ventilation tub
- K. Drain valve
- L. Steam connections

Technical data WF185, IWF185, IWF040, CWF185, CWF040

	METRIC	US
Capacity (dry weight) Ratio [kg/Lit]		
1:11	16,4 kg	36.15 lb.
1:10	18,1 kg	39.90 lb.
1:9	20,1 kg	44.31 lb.
Cylinder		
Diameter	680 mm	26.77 inch
Depth	500 mm	19.68 inch
Volume	181 Lit	6.39 ft ³
Cabinet		
Height	1204 mm	47.40 inch
Width	780 mm	30.70 inch
Depth	942 mm	37.08 inch
Front loading		
Diameter door opening	400 mm	15.74 inch
Door height	390 mm	15.35 inch
To center	590 mm	23.22 inch
Speed		
Wash	10 - 50 tr/min - RPM	
Distribution	85 tr/min - RPM	
Spin	100 - 465 tr/min - RPM	
G-factor		
Spin	82	
Motor (3-phase)		
4p. 1470 tr./min	1,1kW / 1,47HP	
Drain valve		
	2" or 3" (option)	
Water supply		
Hard, soft, warm water	3/4"	
Steam connection		
Steam connection	3/8"	
Heating		
Electrical 230/400 V	12 kW - 15 kW - 18 kW	
Electrical 400V	21 kW -24 kW	
Steam	X	
Warm water (without additional heating)	X	
Warm water (with additional heating)	X	
Packing dimensions		
(H x W x D) mm - inch	1340x848x1020 mm- 52.75x33.38x40.15 inch	
Weight		
Net	321 kg	707.68 lb.
Gross	344 kg	758.39 lb.

Dimensions WF185, IWF185, IWF040, CWF185, CWF040

Legend: metric mm [inches]

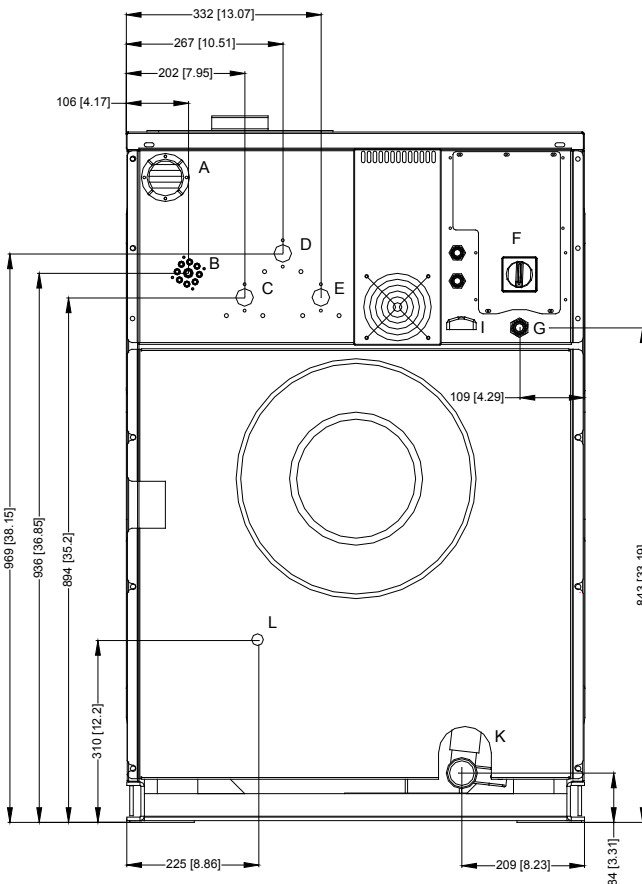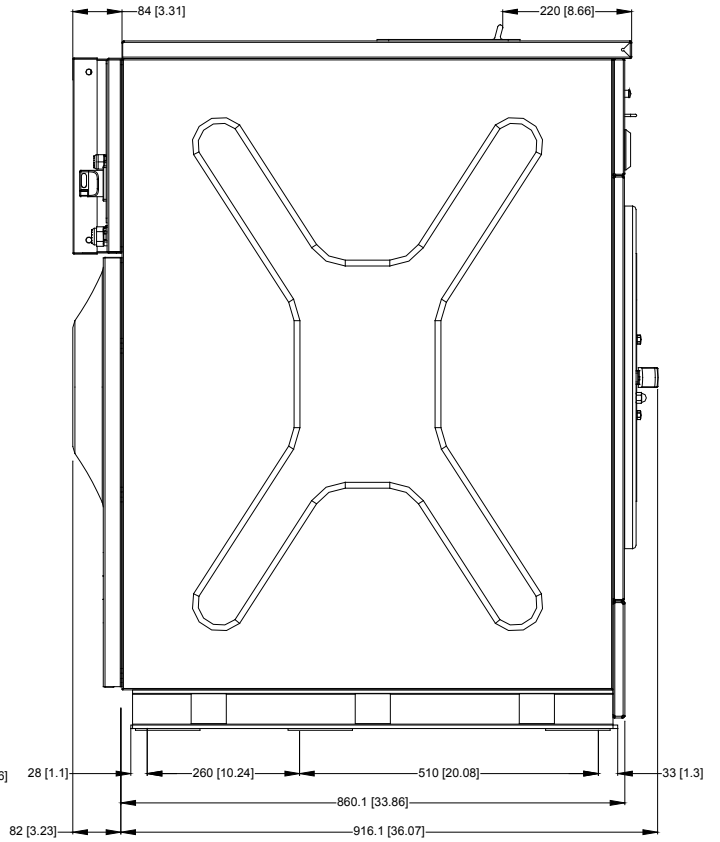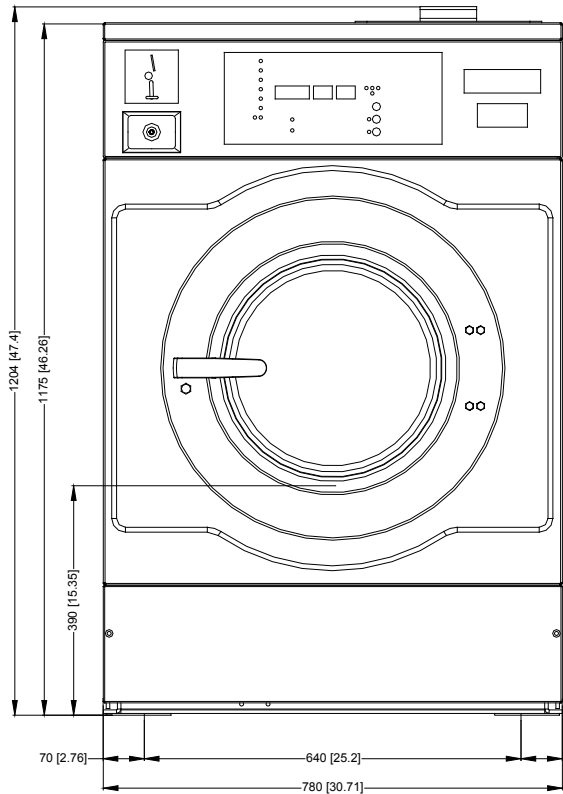


- A. Ventilation soap dispenser
- B. Liquid soap connections
- C. Hard water connections 3/4"
- D. Warm water connections 3/4"
- E. Soft water connections 3/4"
- F. Main switch
- G. Electrical connections
- I. Ventilation tub
- K. Drain valve
- L. Steam connections

Technical data WF235, IWF235, IWF055, CWF235, CWF055

	METRIC	US
Capacity (dry weight) Ratio [kg/Lit]		
1:11	21,3 kg	46.95 lb.
1:10	23,4 kg	51.58 lb.
1:9	26 kg	57.32 lb.
Cylinder		
Diameter	750 mm	29.52 inch
Depth	530 mm	20.86 inch
Volume	234 Lit	8.26 ft ³ .
Cabinet		
Height	1376 mm	54.17 inch
Width	860 mm	33.85 inch
Depth	1048 mm	41.25 inch
Front loading		
Diameter door opening	400 mm	15.74 inch
Door height	500 mm	19.68 inch
To center	700 mm	27.55 inch
Speed		
Wash	10 - 50 tr/min - RPM	
Distribution	85 tr/min - RPM	
Spin	100 - 445 tr/min - RPM	
G-factor		
Spin	82	
Motor (3-phase)		
4p. 1470 tr./min	1,5 kW / 2HP	
Drain valve		
	3"	
Water supply		
Hard, soft, warm water	3/4"	
Steam connection		
Steam connection	1/2"	
Heating		
Electrical 230/400 V	12 kW - 15 kW - 18 kW	
Electrical 400V	21 kW - 24 kW	
Steam	X	
Warm water (without additional heating)	X	
Warm water (with additional heating)	X	
Packing dimensions		
(H x W x D) mm - inch	1560x980x1140mm - 61.41x 38.58x 44.88 inch	
Weight		
Net	383 kg	844.37 lb.
Gross	433 kg	954.60 lb.

Dimensions WF235, IWF235, IWF055, CWF235, CWF055

Legend: metric mm [inches]


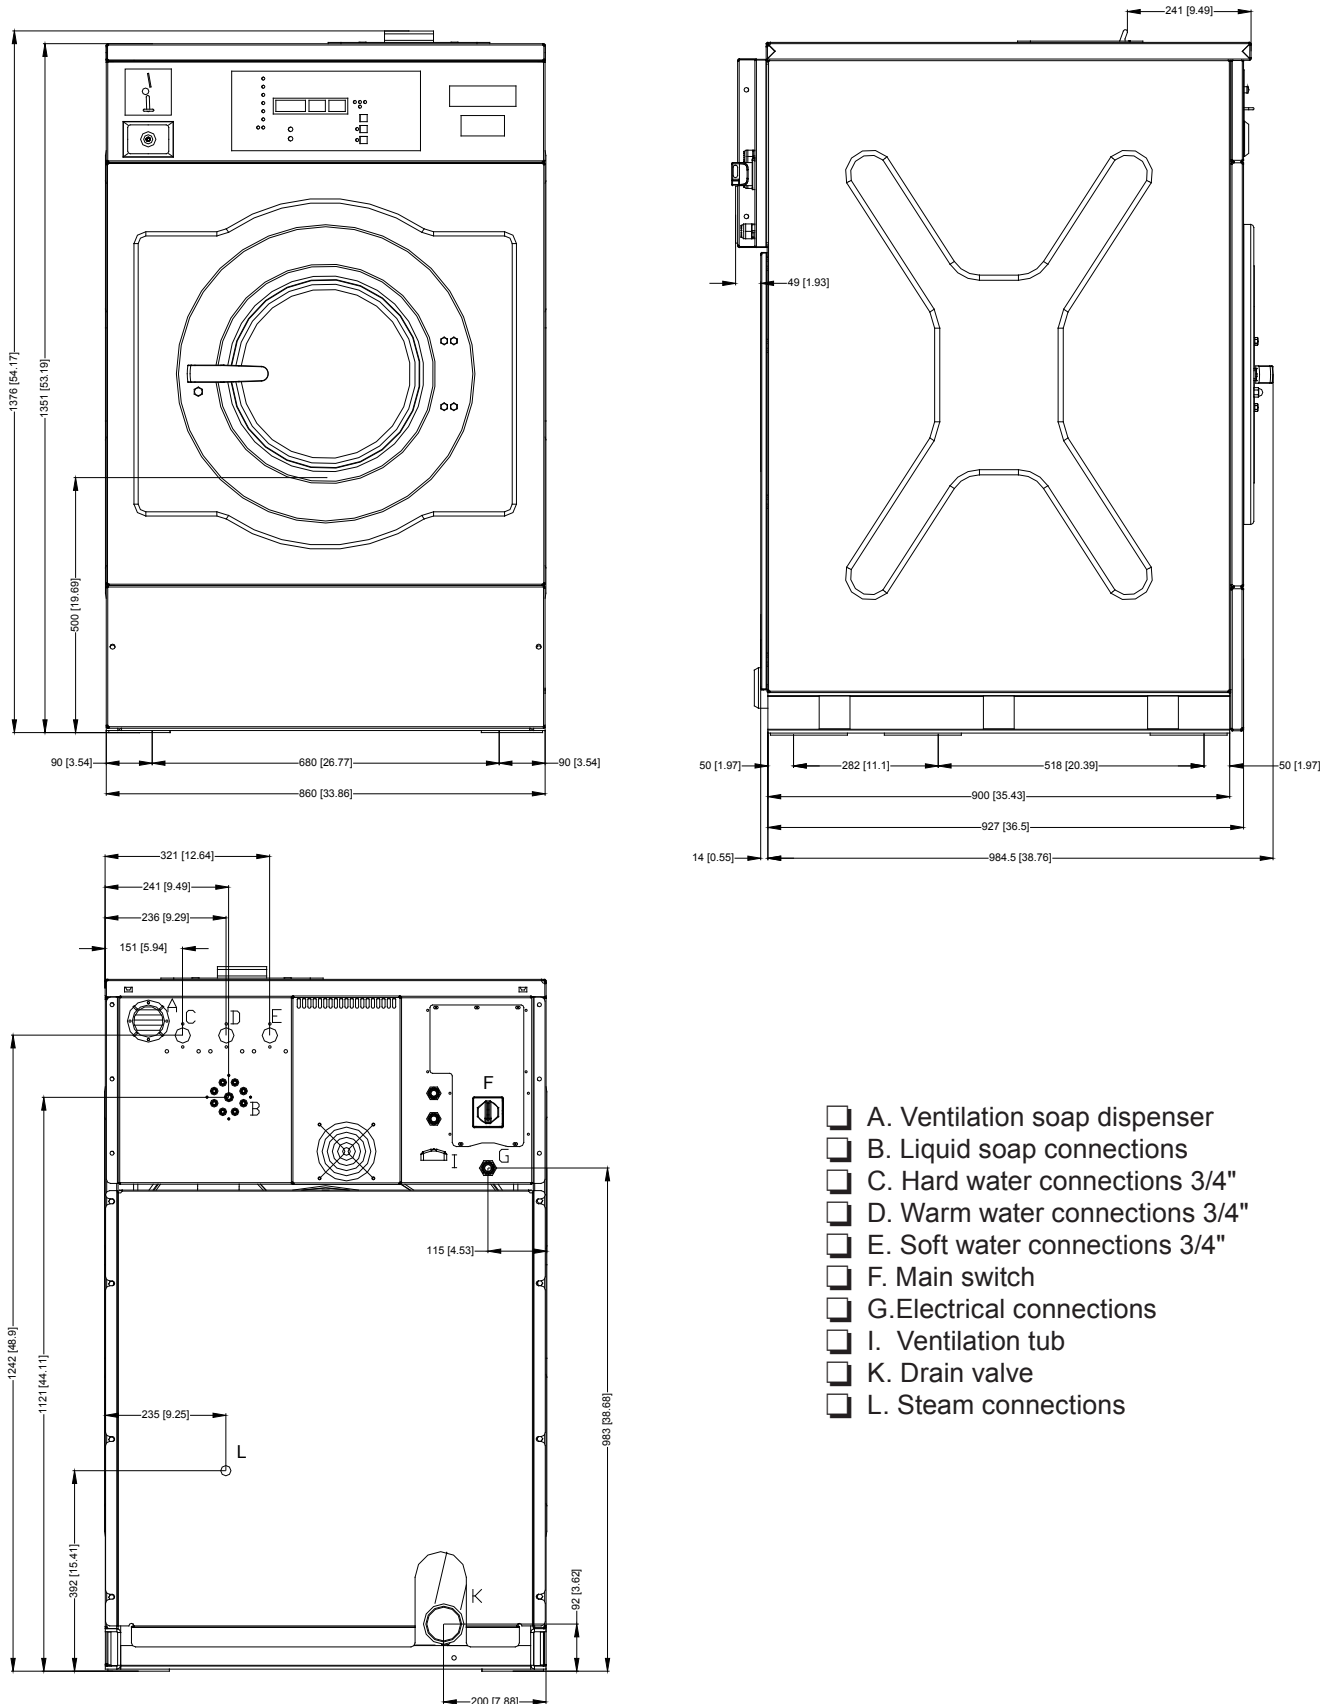


Technical data WF305, IWF305, IWF075, CWF305, CWF075

	METRIC	US
Capacity (dry weight) Ratio [kg/Lit]		
1:11	28 kg	61.72 lb.
1:10	30,4 kg	67.02 lb.
1:9	33,3 kg	73.41 lb.
Cylinder		
Diameter	850 mm	33.46 inch
Depth	537 mm	21.14 inch
Volume	304 Lit	10.73 ft ³ .
Cabinet		
Height	1412 mm	55.57 inch
Width	990 mm	38.98 inch
Depth	1190 mm	46.85 inch
Front loading		
Diameter door opening	400 mm	15.74 inch
Door height	500 mm	19.68 inch
To center	700 mm	27.55 inch
Speed		
Wash	10 - 50 tr/min - RPM	
Distribution	85 tr/min - RPM	
Spin	100 - 415 tr/min - RPM	
G-factor		
Spin	82	
Motor (3-phase)		
4p. 1470 tr./min	2,2kW / 2,94HP	
Drain valve		
	3"	
Water supply		
Hard, soft, warm water	3/4"	
Steam connection		
Steam connection	1/2"	
Heating		
Electrical 230/400 V	18 kW	
Electrical 400V	18 kW - 21 kW - 24 kW	
Steam	X	
Warm water (without additional heating)	X	
Warm water (with additional heating)	X	
Packing dimensions		
(H x W x D) mm - inch	1560x1120x1300mm - 61.41x 44.09x 51.18 inch	
Weight		
Net	534 kg	1177.26 lb.
Gross	584 kg	1287.49 lb.

Dimensions WF305, IWF305, IWF075, CWF305, CWF075

Legend: metric mm [inches]

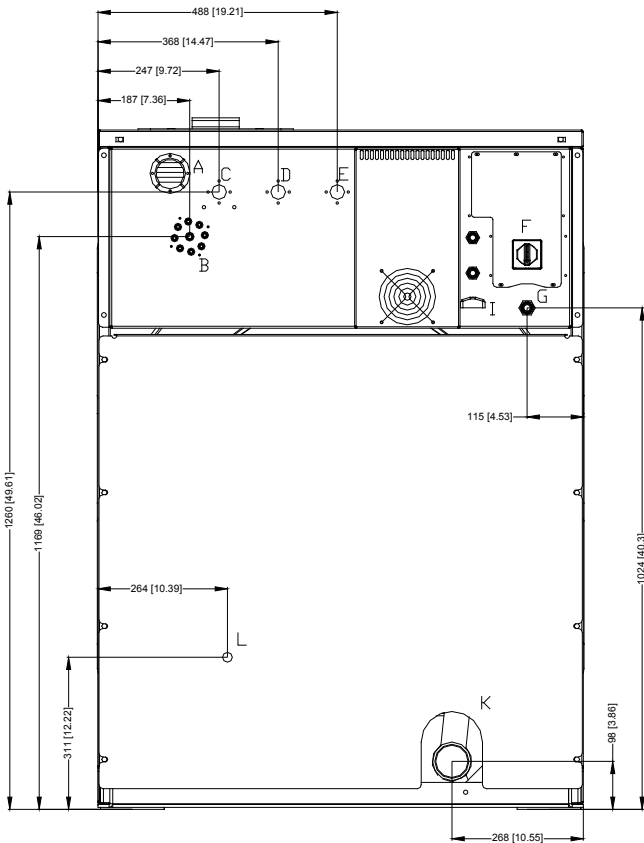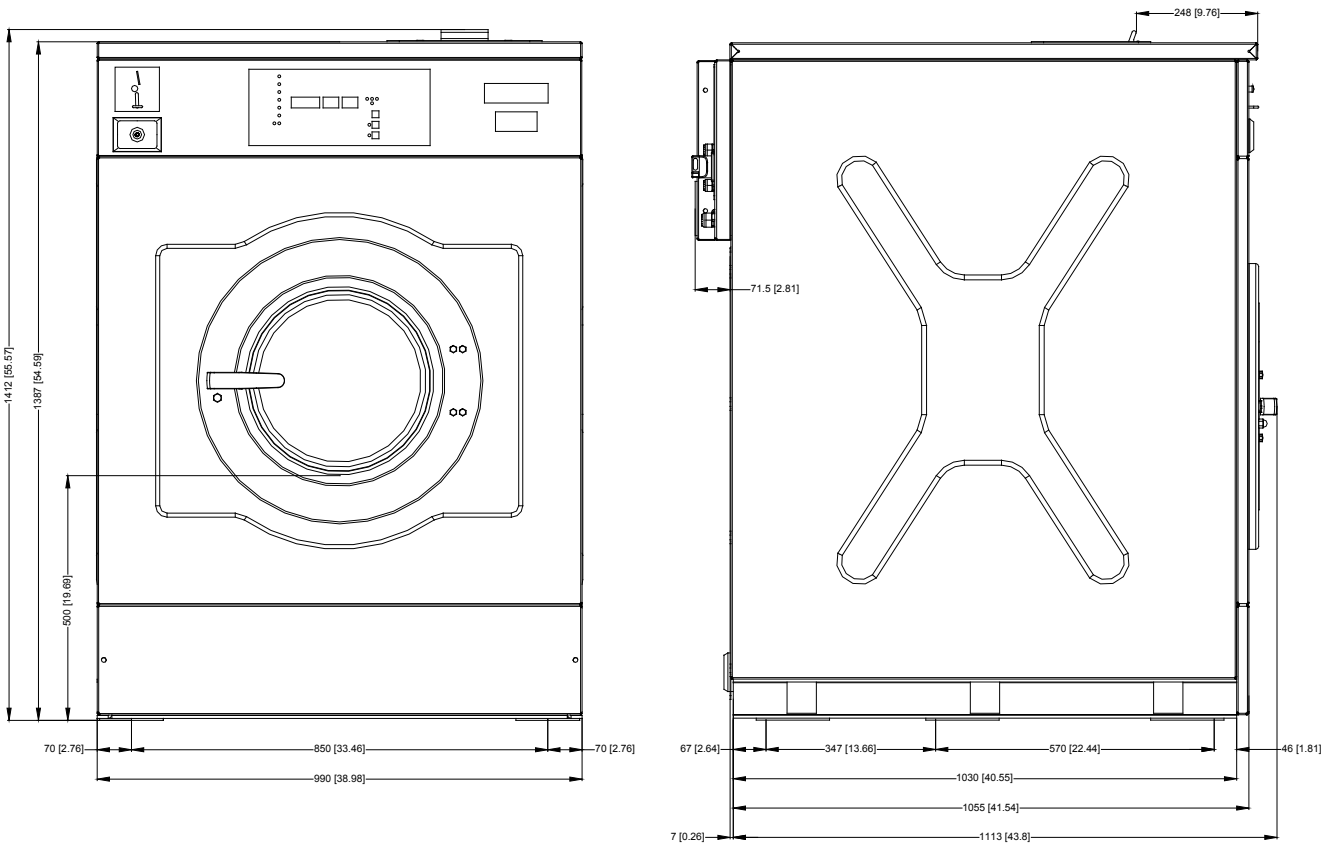



- A. Ventilation soap dispenser
- B. Liquid soap connections
- C. Hard water connections 3/4"
- D. Warm water connections 3/4"
- E. Soft water connections 3/4"
- F. Main switch
- G. Electrical connections
- I. Ventilation tub
- K. Drain valve
- L. Steam connections

Technical data WF400, IWF400, IWF090

	METRIC	US
Capacity (dry weight) Ratio [kg/Lit]		
1:11	36,9 kg	81.35 lb.
1:10	40,1 kg	88.41 lb.
1:9	43,9 kg	96.78 lb.
Cylinder		
Diameter	850 mm	33.46 inch
Depth	707 mm	27.83 inch
Volume	400 Lit	14.13 ft ³ .
Cabinet		
Height	1412 mm	55.57 inch
Width	990 mm	38.98 inch
Depth	1360 mm	53.54 inch
Front loading		
Diameter door opening	400 mm	15.74 inch
Door height	500 mm	19.68 inch
To center	700 mm	27.55 inch
Speed		
Wash	10 - 50 tr/min - RPM	
Distribution	85 tr/min - RPM	
Spin	100 - 415 tr/min - RPM	
G-factor		
Spin	82	
Motor (3-phase)		
4p. 1470 tr./min	3 kW / 4,02 HP	
Drain valve		
	3"	
Water supply		
Hard, soft, warm water	3/4"	
Steam connection		
Steam connection	1/2"	
Heating		
Electrical 230/400 V	18 kW	
Electrical 400V	18 kW - 21 kW - 24 kW	
Steam	X	
Warm water (without additional heating)	X	
Warm water (with additional heating)	X	
Packing dimensions		
(H x W x D) mm - inch	1560x1120x1470 mm - 61.41x 44.09x 57.87 inch	
Weight		
Net	560 kg	1234.59 lb.
Gross	605 kg	1333.80 lb.


Dimensions WF400, IWF400, IWF090

Legend: metric mm [inches]

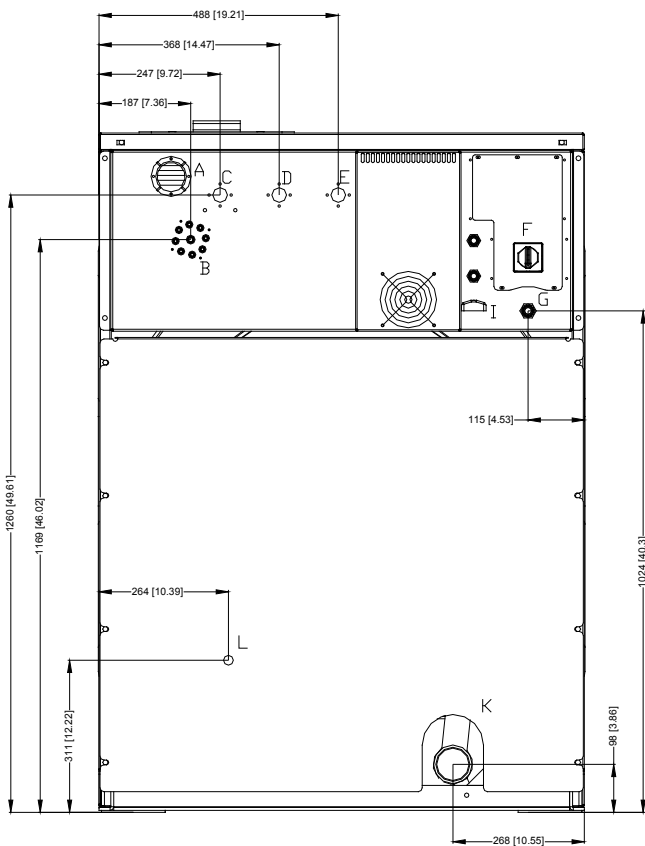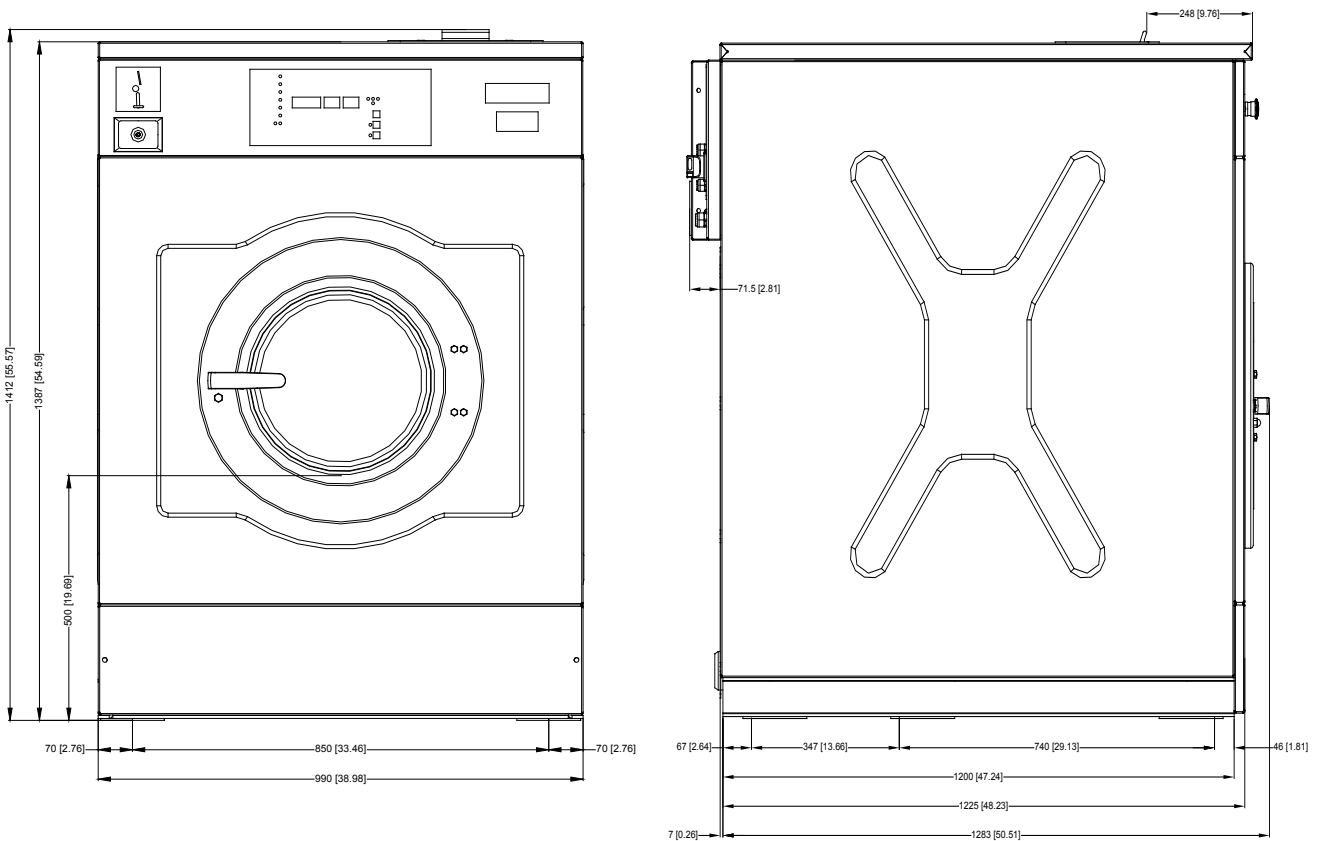

- A. Ventilation soap dispenser
- B. Liquid soap connections
- C. Hard water connections 3/4"
- D. Warm water connections 3/4"
- E. Soft water connections 3/4"
- F. Main switch
- G. Electrical connections
- I. Ventilation tub
- K. Drain valve
- L. Steam connections

Installation and Connection Instructions

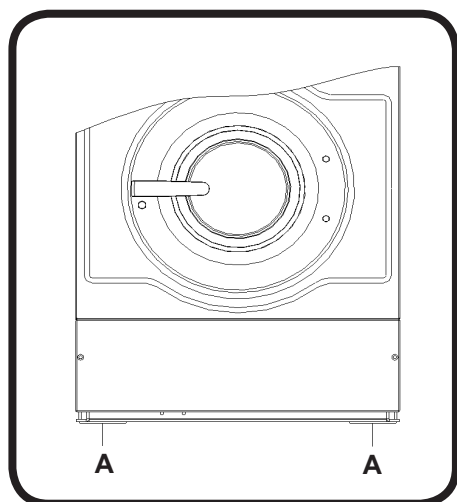

Label 1

CAUTION

Ensure that the machine is installed on a level floor of sufficient strength and that the recommended clearances for inspection and maintenance are provided. Never allow the inspection and maintenance space to be blocked.

Surface


The machine must be securely fixed on a **flat surface** (metal base, concrete or solid ground). The anchoring is to be done on the **4 provided places (A)** (See **Label 1**) in the holes on the corner of the base. (See Mounting Bolt Hole Locations)

The machine must be placed entirely level. For easy maintenance it is recommended to keep a minimal distance of 600 mm - 23.62 inch between the wall and the back of the machine.

If several machines are placed next to each another, there should be a minimal distance of 30 mm - 1.18 inch between each machine.

Anchoring on a metal base

The machines must be fixed on a metal base which is securely anchored on a concrete base. See **Label 2**.

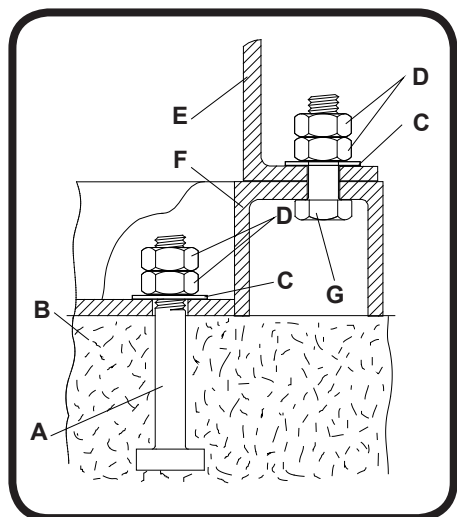


Label 2

WF150 = WF150, IWF150, IWF033, CWF033
 WF185 = WF185, IWF185, IWF040, CWF185, CWF040
 WF235 = WF235, IWF235, IWF055, CWF235, CWF055
 WF305 = WF305, IWF305, IWF075, CWF305, CWF075
 WF400 = WF400, IWF400, IWF090

- A:** Bolt M16 (5/8") (WF150/185/235), M24 (WF305/400) (type J)
B: Concrete base (**WF150/185: 40 cm- 15.74 inch, WF235: 55 cm- 21.65 inch, WF305/400: 90 cm- 35.43 inch**)
 Strength concrete: minimum C25/30
C: Washer 40x17x4 (1.57x0.60x0.15)
D: Nut M16 (5/8") (WF150/185/235), M24 (WF305/400)
E: Base of the machine
F: Metal base
G: Bolt M16x60 (5/8" x 2 1/2")

Directly on the ground

The machine must be anchored directly on a concrete base. See **Label 3**.

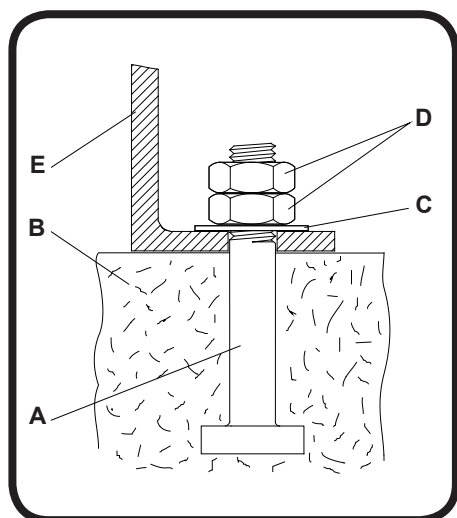


Label 3

- A:** Bolt M16 (5/8") (WF150/185/235), M24 (WF305/400) (type J)
B: Concrete base (**WF150/185: 40 cm- 15.74 inch, WF235: 55 cm- 21.65 inch, WF305/400: 90 cm- 35.43 inch**)
 Strength concrete: minimum C25/30
C: Washer 40x17x4 (1.57x0.60x0.15)
D: Nut M16 (5/8") (WF150/185/235), M24 (WF305/400)
E: Base of the machine

IMPORTANT: Machine bolts should be re-checked on a quarterly basis.


Mounting Bolt Hole Locations for machines, WF150, IWF150, IWF033, CWF033

Legend: metric mm [inches]

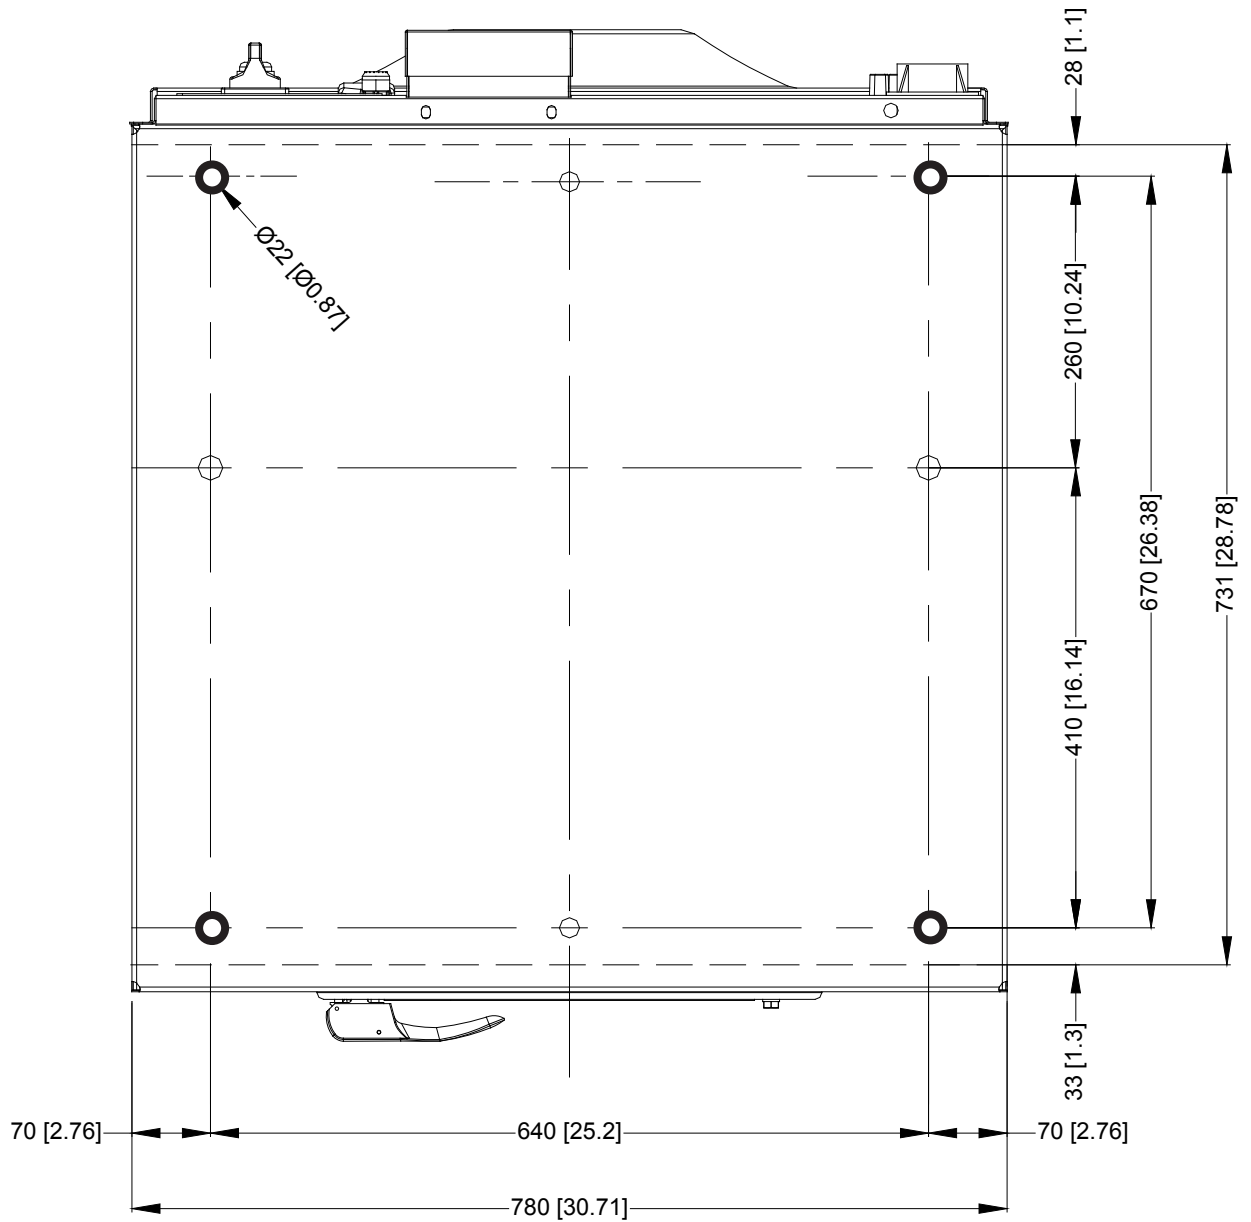


Mounting Bolt Hole Locations for machines, WF185, IWF185, IWF040, CWF185, CWF040

Legend: metric mm [inches]

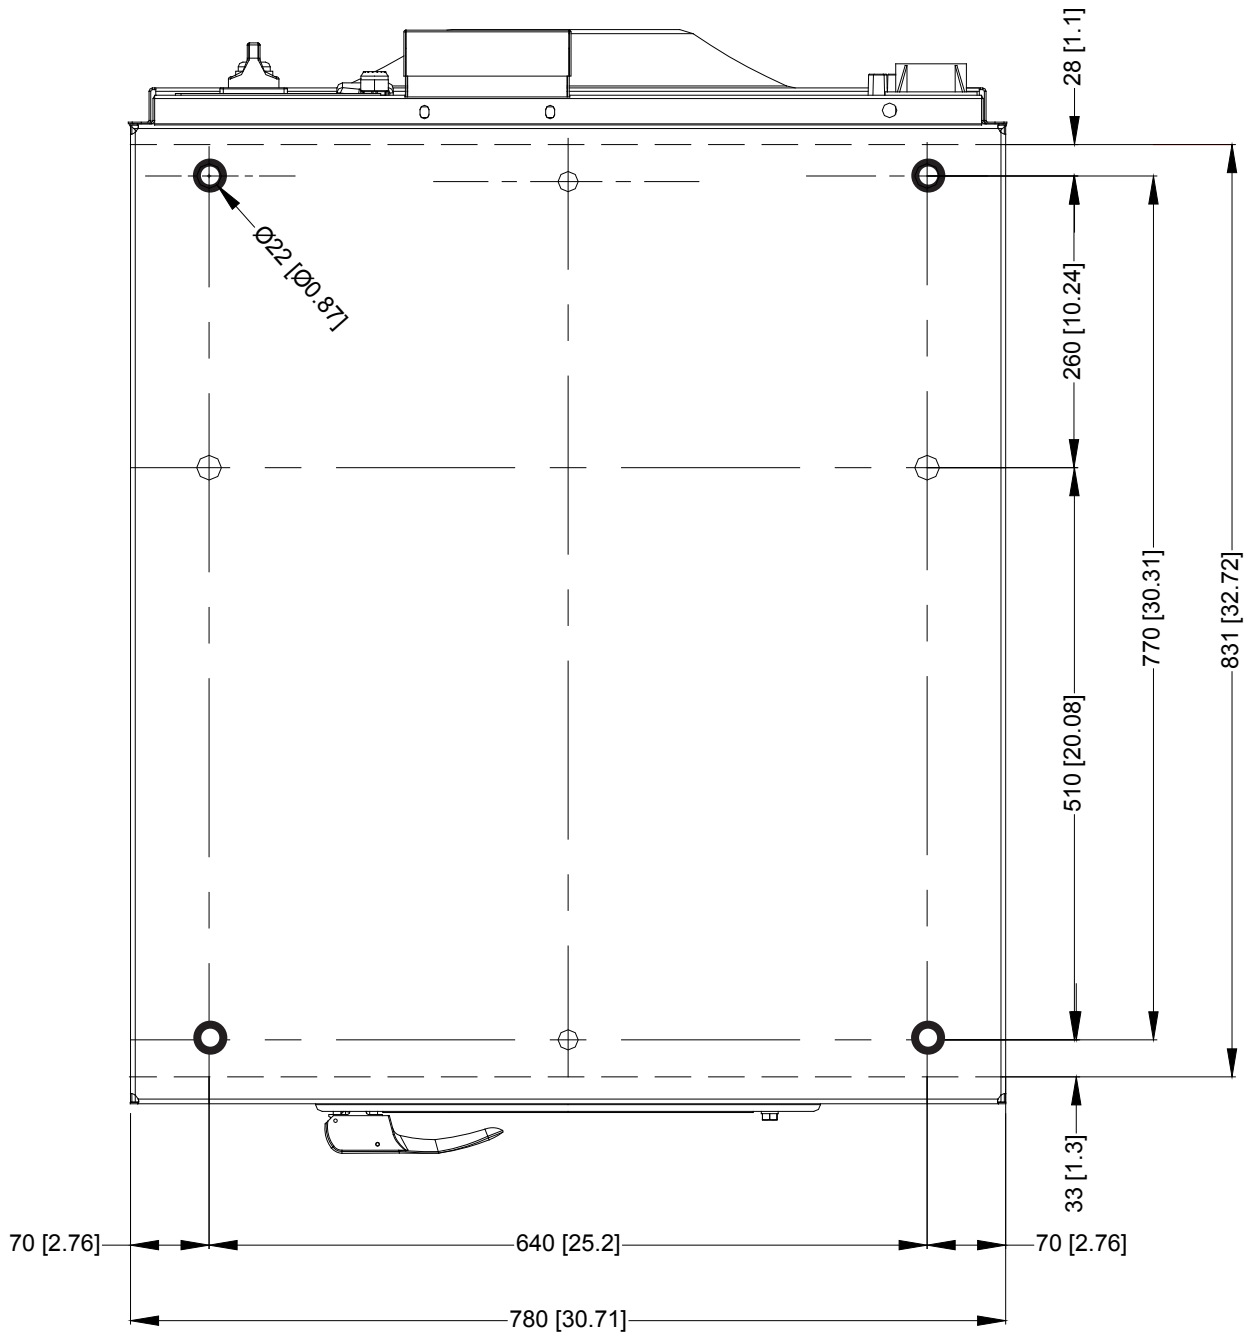


Mounting Bolt Hole Locations for machines, WF235, IWF235, IWF055, CWF235, CWF055

Legend: metric mm [inches]

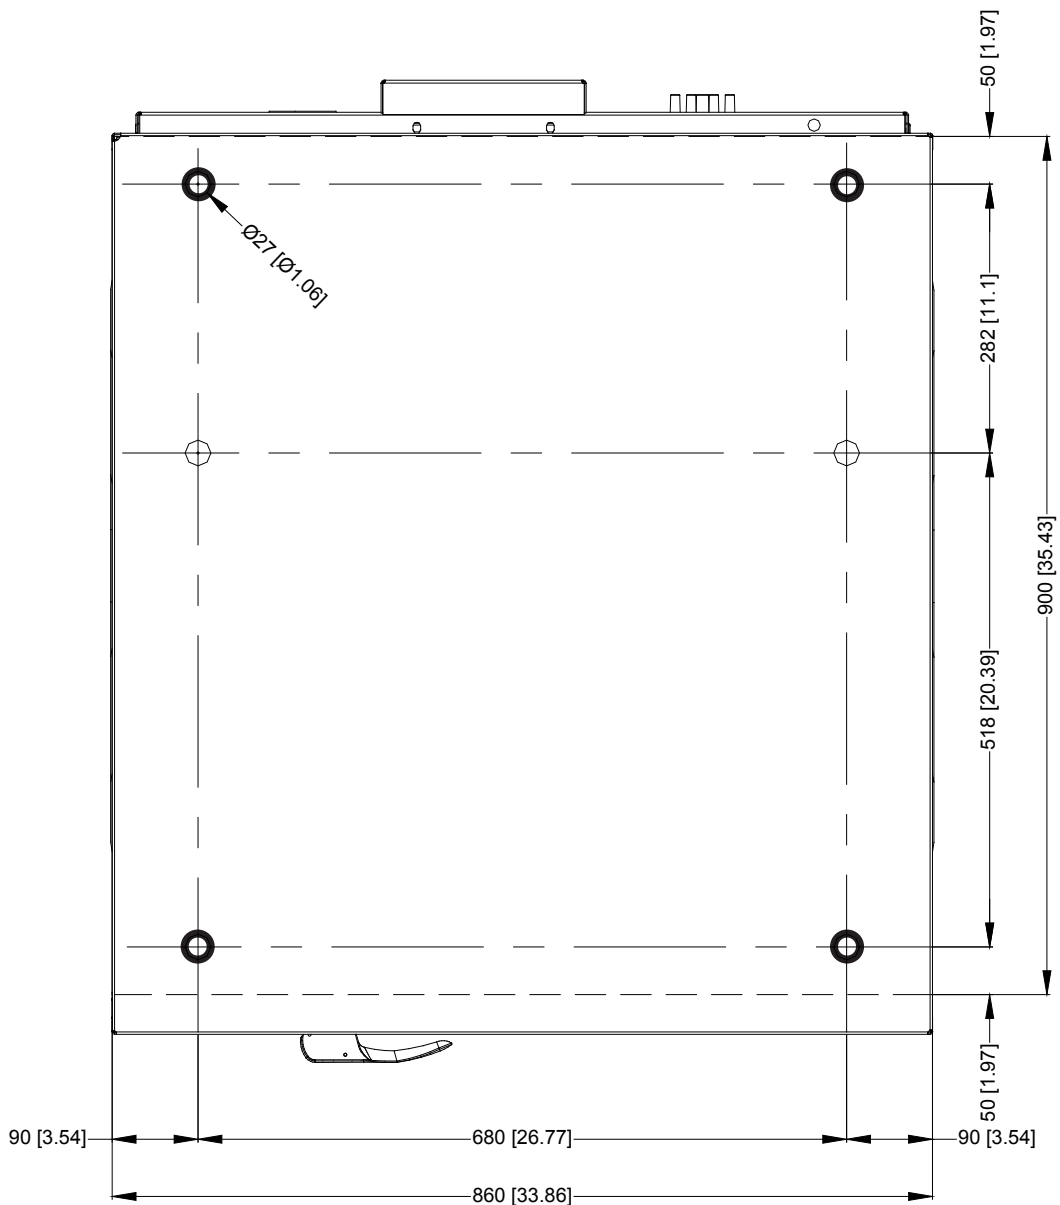


Mounting Bolt Hole Locations for machines, WF305, IWF305, IWF075, CWF305, CWF075

Legend: metric mm [inches]

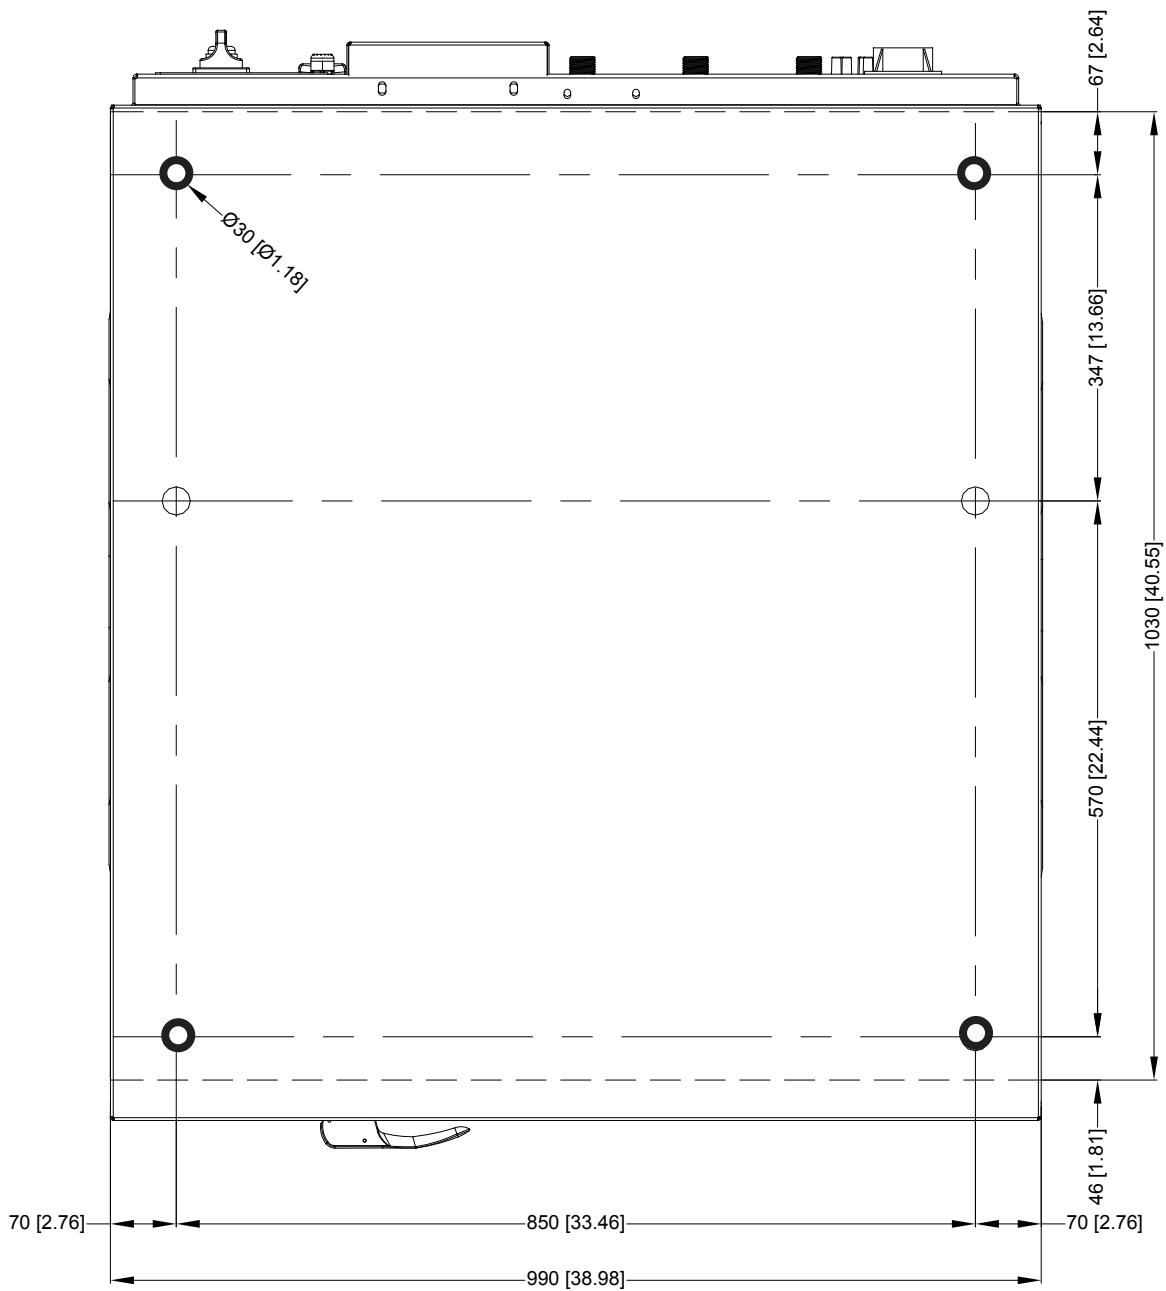

Mounting Bolt Hole Locations for machines, WF400, IWF400, IWF090

Legend: metric mm [inches]

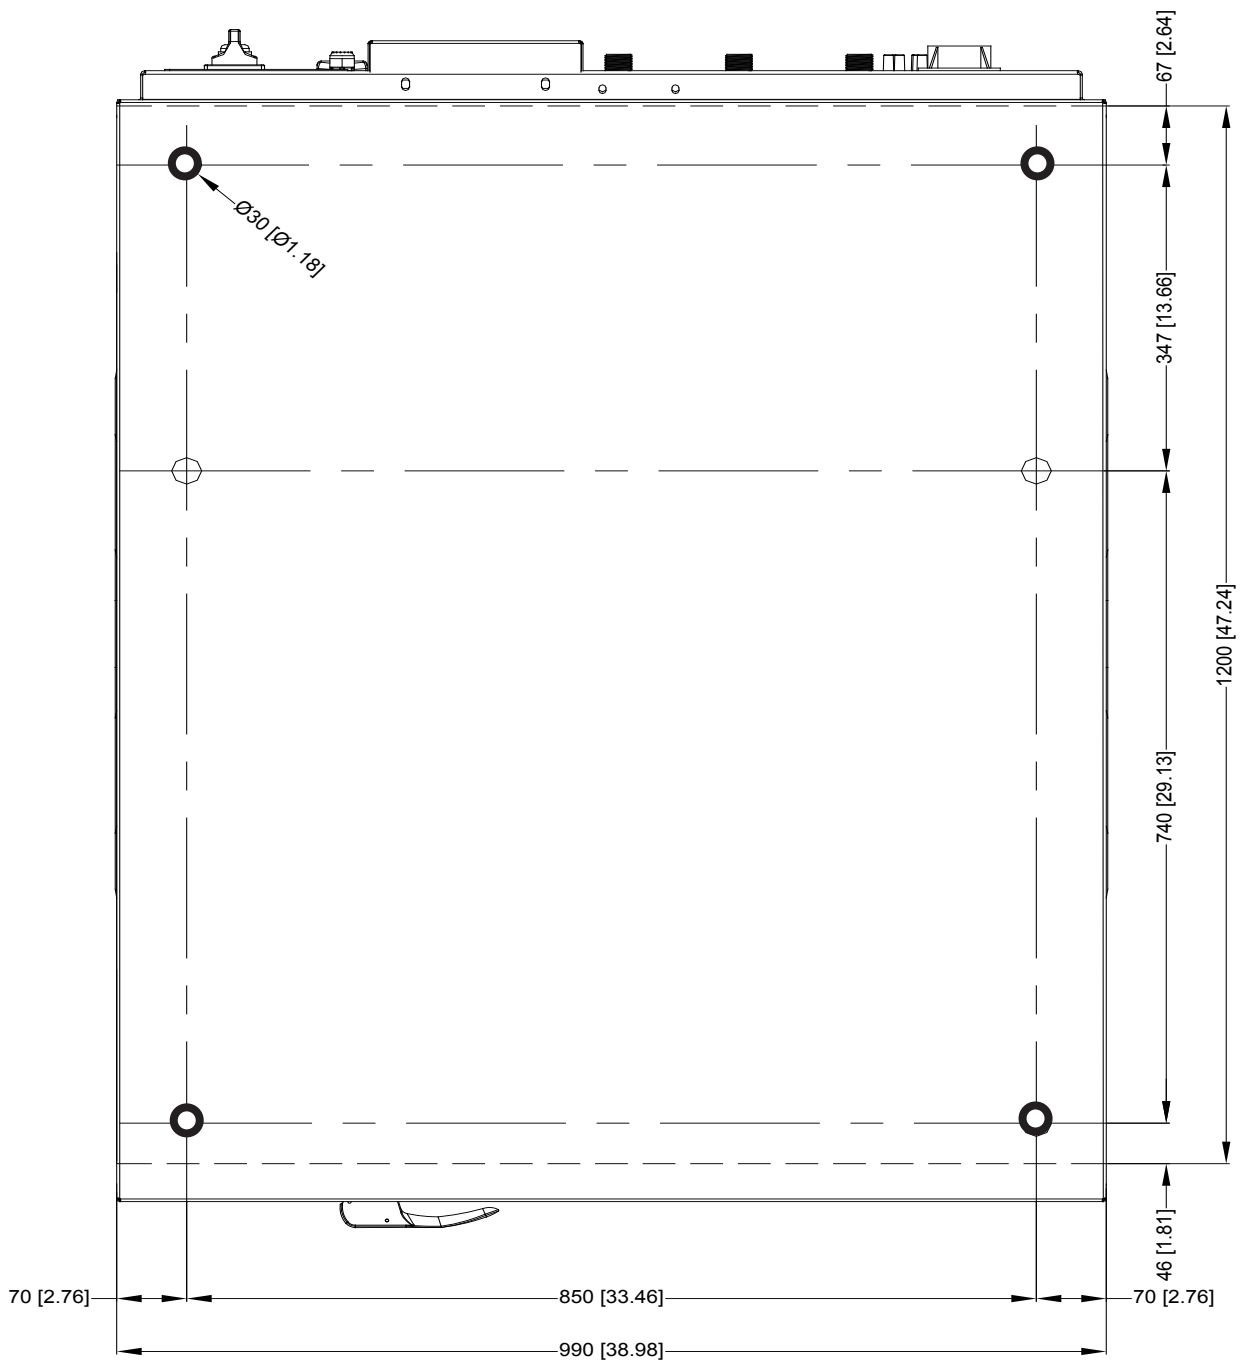

Water connection

The machine is delivered with hoses with 3/4" connections. These hoses fit the water inlet valves of the machine and the main water inlet taps. All the inlet valves have to be connected. To ensure the optimal functioning of the water inlet valves, the water pressure on the inlet should be between 3 and 5 bar (40 and 80 psi). If the pressure is too low, the cycle time will increase considerably.

In case of boiler fed machines, a minimum of hot water of 90°C - 194°F should be available per unit. (See Table 1)

MODEL	Min Contents Boiler	
	METRIC	US
For the WF150 = WF150, IWF150, IWF033, CWF033	116 l.	4.09 ft ³
For the WF185 = WF185, IWF185, IWF040, CWF185, CWF040	145 l.	5.12 ft ³
For the WF235 = WF235, IWF235, IWF055, CWF235, CWF055	150 l.	5.29 ft ³
For the WF305 = WF305, IWF305, IWF075, CWF305, CWF075	180 l.	6.35 ft ³
For the WF400 = WF400, IWF400, IWF090	240 l.	8.48 ft ³

Table 1

MODEL	Inlet flow capacity per minute (Gallons / Liters)	
	INTERNATIONAL	US
For the WF150, 185	4.23 / 16	5.28 / 20
For the WF235, 305, 400	7.93 + 13.2 / 30 + 50	7.93 + 13.2 / 30 + 50

Table 2

To comply with the WRAS water regulations: an 'approved' single check valve or some other no less effective backflow prevention device shall be fitted at the point of connection(s) between the supply and the fitting (IRN R150).



Water drain

WF150 = WF150, IWF150, IWF033, CWF033

WF185 = WF185, IWF185, IWF040, CWF185, CWF040 (if drain valve: 2")

The machine is equipped with a drain valve with 2" outer diameter (50 mm). This drain valve should be connected to the drain by means of the drain elbow which is delivered with the machine.

- The diameter of the main drain should be adapted to the water flow and the number of machines. It should be sufficient to handle at least 80 l/min - 21.13 gal./min per machine.
- It is necessary to connect the main drain at least on one side to an open air-brake to allow ventilation.

WF185 = WF185, IWF185, IWF040, CWF185, CWF040 (if drain valve: 3")

WF235 = WF235, IWF235, IWF055, CWF235, CWF055

WF305 = WF305, IWF305, IWF075, CWF305, CWF075

WF400 = WF400, IWF400, IWF090


The machine is equipped with a drain valve with 3" outer diameter (80 mm). This drain valve should be connected to the drain by means of the drain elbow which is delivered with the machine.


- The diameter of the main drain should be adapted to the water flow and the number of machines. It should be sufficient to handle at least 160 l/min - 42.26 gal./min per machine.
- It is necessary to connect the main drain at least on one side to an open air-brake to allow ventilation.

Electrical Installation

Important

Electrical ratings are subject to changes. Refer to serial plate decal for electrical ratings information specific to your machine.

	WARNING
<p>Hazardous Voltage. Can cause shock, burn or cause death. Allow machine power to remain off for two minutes prior to working in and around AC inverter drive.</p>	

	WARNING
<p>Hazardous Voltage. Can cause shock, burn or death. Verify that a ground wire from a proven earth ground is connected to the lug near the input power block on this machine.</p>	

The AC inverter drive requires a clean power supply free from voltage spikes and surges. If a transformer or generator is connected to the building's power supply, always install line reactors before the terminal block connections to the machine. A voltage monitor should be used to check incoming power. The customer's local power company may provide such a monitor.

If input voltage measures above 240V for a 220V drive or above 480V for a 400V drive, ask the power company to lower the voltage. As an alternative, a step-down transformer kit is available from the distributor.

The AC drive provides overload protection for the drive motor. However, a separate single or three-phase circuit breaker must be installed for complete electrical overload protection. This prevents damage to the motor by disconnecting all legs if one should be lost accidentally. Check the data plate on the back of the washer-extractor or consult Table 3 through 7 for circuit breaker requirements.

IMPORTANT: Do NOT use fuses in place of a circuit breaker.

For installation in the United States or Canada, branch circuit protection must be provided according to National and Local Codes. The branch circuit breaker must be of the inverse time or instantaneous trip type at the values given in the technical specifications for each machine. Use a circuit breaker of the minimal type of 10kA interrupt current.

CAUTION
<p>Do not use a voltage or phase converter on any variable speed machine.</p>

The washer-extractor should be connected to an individual branch circuit not shared with lighting or another electrical device.

- In accordance with legal regulations, every machine must be protected with an earth leakage circuit breaker of 30mA.
- The earth leakage circuit breaker, which one uses, must be of the type SI.
- For countries outside the European Community, the usual safety instructions must be observed.

The connection should be shielded in a liquid tight or approved flexible conduit with proper conductors of correct size installed in accordance with the National Electric Code or other applicable codes. The connection must be made by a qualified electrician using the wiring diagram provided with the washer-extractor, or according to accepted European standards for CE-approved equipment.

Use wire sizes indicated in Table 3 through 7 for runs up to 50 feet.

Use next larger size for runs of 50 to 100 feet. Use two sizes larger for runs greater than 100 feet.


For personal safety and proper operation, the washer-extractor must be grounded in accordance with state and local standards. If such standards are not available, grounding must conform to the National Electric Code, article 250-95. The ground connection must be made to a proven earth ground, not to a water pipe, gas pipe, or another metal pipe. Provide the necessary equipotential connections according to the local electrical prescriptions.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.

IMPORTANT: Alliance Laundry Systems Warranty does not cover components that fail as a result of improper input voltage.

Main power connection

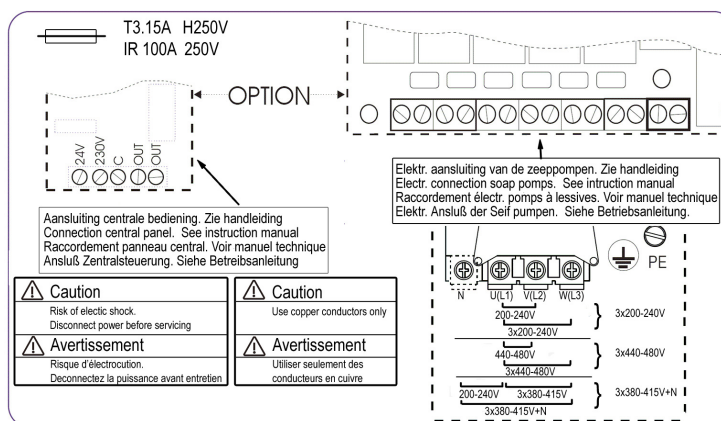

Label 4

Connection label:

Machine power connections are made at the back of the machine. Three or four conductor power cable is the recommended method (See chapter electrical specs for minimum cable requirements, if local electrical codes exceed these requirements, follow local codes). The number of conductors in this cable and the proper connection points for the cable wires shall be determined by the machine and power requirements. All machines must have a ground wire and be properly grounded. The ground wire must be insulated with a green/yellow color. This wire is normally within the power cable but can also be a separate wire run along side the power cable if properly sized.

Never run a machine that does not have a ground wire. This ground wire must be connected to the machine grounding lug found near the main switch. This lug is identified with the international "protective earth" symbol and the letters "PE". Failure to connect this ground wire can lead to an unsafe machine condition leading to machine damage and/or operator injury or death. This wire must be connected to earth ground at far end.

Machine Power Cable Connections:

Remove main switch cover plate at back of machine (see chapter dimensions part (F)). Run power cable through the cabinet knock-out located directly below the cover plate. Before installing, obtain and install a cord-grip to hold the cable in place. Never rely upon the electrical connections to hold cable in place. Allow some slack in this cable outside of the machine to form a drip-loop between the supply power circuit breaker and the machine knock-out. Connect power cable wires as directed below. Always connect the ground wire first and remove last.

Wiring based on the supply power and machine design (voltage/frequency):

440-480 Volts, 3-Phase, 3-wire or 4-wire + PE, 50 or 60 Hertz Configuration (Named: N-Voltage):

With supply power of: 440-480 Volts, 3-phase, 3-wire, after connecting the green/yellow PE ground wire, connect one wire to each of the bottom terminals of the power contactor switch marked: "L1,L2,L3". When this supply power has four wires, connect this 4th wire, identified as a neutral wire, to the bottom terminal of the auxiliary contactor on the power contactor switch marked: "N". Connect the remaining power wires as first noted.

380-415 Volts, 3-Phase, 4-wire + PE, 50 or 60 Hertz Configuration (Named: P-Voltage):

With supply power of: 380-415 Volts, 3-phase, 4-wire, after connecting the green/yellow PE ground wire, follow the directions of the four wire system for 440-480 Volt configuration.

200-240 Volts, 3-Phase, 3-wire + PE, 50 or 60 Hertz Configuration (Named: Q-Voltage or 3-phase X-Voltage):

With supply power of: 200-240 Volts, 3-phase, 3-wire, after connecting the green/yellow PE ground wire, connect one power wire to each of the terminals at the bottom of the power contactor switch marked: "L1,L2,L3".


200-240 volts, 1-Phase, 2-wire + PE, 50 Hertz (called 1-phase, 50 Hz X-voltage):

With supply power of: 200-240 Volts, 1-phase, 2-wire, 50Hz, after connecting the green/yellow PE ground wire, connect the power wire to the "L1" bottom terminal of the power contactor switch and the other wire, identified as the neutral wire, to the bottom terminal of the auxiliary contactor on the power contactor switch marked: "N".

200-240 volts, 1-Phase, 2-wire + PE, 60 Hertz (called 1-phase, 60 Hz X-voltage):

With supply power of: 200-240 Volts, 1-phase, 2-wire, 60Hz, after connecting the green/yellow PE ground wire, connect one power wire to the "L1" and power wire to the "L2" of the bottom terminals of the power contactor switch.


- After connection, check the **spin direction**. The cylinder must spin in the **clockwise direction**.
A wrong spin direction can damage the motor and can also cause water to spurt from the soap dispenser.
- In case of **wrong spin direction**: switch the terminal clamps of the motor circuit "R" and "S" of the connecting cable or change the connection at the terminal block switching the L1 and L2 wires.

	WARNING
The washer-extractor should be connected to an individual branch circuit not shared with lighting or other equipment.	

Electrical Specifications WF150, IWF150, IWF033, CWF033

150 liters / 33 pounds													
					Boiler Fed/Steam Heat				Electric Heat				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²	kW Standard Heating Elements	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²
						US	NON-US				US	NON-US	
N	440-480	50/60	3	3+PE	4	10	10	14/2.5	6x3 kW	30	40	40	8/10.0
P	380-415	50/60	3	3+N+PE	12	15	16	14/2.5		38	50	50	8/10.0
Q	200-240	50/60	3	3+PE	12	15	16	14/2.5		57	70	70	4/25.0
X	200-240	50/60	1/3	2/3+PE	12	15	16	14/2.5		N/A	N/A	N/A	N/A
									Alternative Electric Heat Options				
N	440-480	50/60	3	3+PE					3x3 kW + 3x2 kW	26	30	30	10/6.0
P	380-415	50/60	3	3+N+PE		34	40	40		8/10.0			
Q	200-240	50/60	3	3+PE		50	60	60		6/16.0			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					3x3 kW + 3x4 kW	34	40	40	8/10.0
P	380-415	50/60	3	3+N+PE		53	60	60		6/16.0			
Q	200-240	50/60	3	3+PE		N/A	N/A	N/A		N/A			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					6x2 kW	21	30	30	10/6.0
P	380-415	50/60	3	3+N+PE		30	40	40		8/10.0			
Q	200-240	50/60	3	3+PE		42	50	50		8/10.0			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					6x4 kW	39	50	50	8/10.0
P	380-415	50/60	3	3+N+PE		47	60	60		6/16.0			
Q	200-240	50/60	3	3+PE		N/A	N/A	N/A		N/A			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			


Table 3

	WARNING
The washer-extractor should be connected to an individual branch circuit not shared with lighting or other equipment.	

Electrical Specifications WF185, IWF185, IWF040, CWF185, CWF040

185 liters / 40 pounds													
						Boiler Fed/Steam Heat			Electric Heat				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²	kW Standard Heating Elements	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²
						US	NON-US				US	NON-US	
N	440-480	50/60	3	3+PE	4	10	10	14/2.5	6x3 kW	30	40	40	8/10.0
P	380-415	50/60	3	3+N+PE	12	15	16	14/2.5		38	50	50	8/10.0
Q	200-240	50/60	3	3+PE	12	15	16	14/2.5		57	70	70	4/25.0
X	200-240	50/60	1/3	2/3+PE	12	15	16	14/2.5		N/A	N/A	N/A	N/A
									Alternative Electric Heat Options				
N	440-480	50/60	3	3+PE					3x3 kW + 3x2 kW	26	30	30	10/6.0
P	380-415	50/60	3	3+N+PE						34	40	40	8/10.0
Q	200-240	50/60	3	3+PE						50	60	60	6/16.0
X	200-240	50/60	1/3	2/3+PE						50	60	60	6/16.0
N	440-480	50/60	3	3+PE					3x3 kW + 3x4 kW	34	40	40	8/10.0
P	380-415	50/60	3	3+N+PE						53	60	60	6/16.0
Q	200-240	50/60	3	3+PE						N/A	N/A	N/A	N/A
X	200-240	50/60	1/3	2/3+PE						N/A	N/A	N/A	N/A
N	440-480	50/60	3	3+PE					6x2 kW	21	30	30	10/6.0
P	380-415	50/60	3	3+N+PE						30	40	40	8/10.0
Q	200-240	50/60	3	3+PE						42	50	50	8/10.0
X	200-240	50/60	1/3	2/3+PE						N/A	N/A	N/A	N/A
N	440-480	50/60	3	3+PE					6x4 kW	39	50	50	8/10.0
P	380-415	50/60	3	3+N+PE						47	60	60	6/16.0
Q	200-240	50/60	3	3+PE						N/A	N/A	N/A	N/A
X	200-240	50/60	1/3	2/3+PE						N/A	N/A	N/A	N/A


Table 4

	WARNING
The washer-extractor should be connected to an individual branch circuit not shared with lighting or other equipment.	

Electrical Specifications WF235, IWF235, IWF055, CWF235, CWF055

235 liters / 55 pounds													
						Boiler Fed/Steam Heat			Electric Heat				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²	kW Standard Heating Elements	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²
						US	NON-US				US	NON-US	
N	440-480	50/60	3	3+PE	6	15	10	14/2.5	6x3 kW	32	40	40	8/10.0
P	380-415	50/60	3	3+N+PE	16	20	20	12/4.0		43	50	50	8/10.0
Q	200-240	50/60	3	3+PE	16	20	20	12/4.0		62	70	70	4/25.0
X	200-240	50/60	1/3	2/3+PE	16	20	20	12/4.0		N/A	N/A	N/A	N/A
									Alternative Electric Heat Options				
N	440-480	50/60	3	3+PE					3x3 kW + 3x2 kW	27	30	32	10/6.0
P	380-415	50/60	3	3+N+PE		40	50	50		8/10.0			
Q	200-240	50/60	3	3+PE		56	60	60		6/16.0			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					3x3 kW + 3x4 kW	36	40	40	8/10.0
P	380-415	50/60	3	3+N+PE		48	50	50		8/10.0			
Q	200-240	50/60	3	3+PE		N/A	N/A	N/A		N/A			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					6x2 kW	23	30	25	10/6.0
P	380-415	50/60	3	3+N+PE		35	40	40		8/10.0			
Q	200-240	50/60	3	3+PE		48	50	50		8/10.0			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			
N	440-480	50/60	3	3+PE					6x4 kW	40	50	50	8/10.0
P	380-415	50/60	3	3+N+PE		53	60	60		8/10.0			
Q	200-240	50/60	3	3+PE		N/A	N/A	N/A		N/A			
X	200-240	50/60	1/3	2/3+PE		N/A	N/A	N/A		N/A			


Table 5

	WARNING
The washer-extractor should be connected to an individual branch circuit not shared with lighting or other equipment.	

Electrical Specifications WF305, IWF305, IWF075, CWF305, CWF075

305 liters / 75 pounds													
						Boiler Fed/Steam Heat			Electric Heat				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²	KW Standard Heating Elements	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²
						US	NON-US				US	NON-US	
N	440-480	50/60	3	3+PE	6	15	10	14/2.5	6x4 kW	32	50	50	8/10.0
P	380-415	50/60	3	3+N+PE	16	20	20	12/4.0		43	70	70	4/25.0
Q	200-240	50/60	3	3+PE	16	20	20	12/4.0	6x3 kW	60	70	70	4/25.0
X	200-240	50/60	1/3	2/3+PE	16	20	20	12/4.0		N/A	N/A	N/A	N/A
									Alternative Electric Heat Options				
N	440-480	50/60	3	3+PE				3x3 kW + 3x4 kW	36	50	50	8/10.0	
P	380-415	50/60	3	3+N+PE					48	70	70	4/25.0	
Q	200-240	50/60	3	3+PE					N/A	N/A	N/A	N/A	
X	200-240	50/60	1/3	2/3+PE					N/A	N/A	N/A	N/A	

Table 6

	WARNING
The washer-extractor should be connected to an individual branch circuit not shared with lighting or other equipment.	


Electrical Specifications WF400, IWF400, IWF090

400 liters / 90 pounds													
						Boiler Fed/Steam Heat			Electric Heat				
Code	Voltage	Cycle	Phase	Wire	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²	kW Standard Heating Elements	Full Load Amps	Recommended Circuit Breaker (US-market)		AWG/mm ²
						US	NON-US				US	NON-US	
N	440-480	50/60	3	3+PE	8	15	16	14/2.5	6x4 kW	42	50	50	8/10.0
P	380-415	50/60	3	3+N+PE	25	30	32	10/6.0		60	70	70	4/25.0
Q	200-240	50/60	3	3+PE	25	30	32	10/6.0	6x3 kW	70	80	80	4/25.0
X	200-240	50/60	1/3	2/3+PE	25	30	32	10/6.0		N/A	N/A	N/A	N/A
									Alternative Electric Heat Options				
N	440-480	50/60	3	3+PE				3x3 kW + 3x4 kW	38	50	50	8/10.0	
P	380-415	50/60	3	3+N+PE					55	60	60	6/16.0	
Q	200-240	50/60	3	3+PE					N/A	N/A	N/A	N/A	
X	200-240	50/60	1/3	2/3+PE					N/A	N/A	N/A	N/A	

Table 7

Liquid soap connection (option)

Connection of the liquid soap hoses

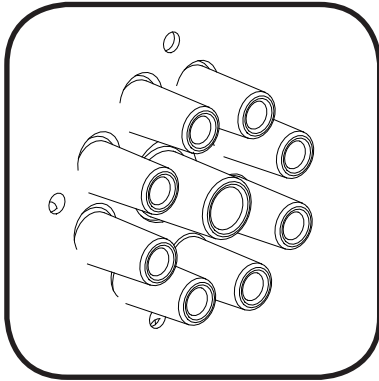

Label 5

The liquid soap connection consists of **8 connections for liquid soap** (See Label 5).

The central opening is used for ventilation.



WARNING

Dangerous Chemicals. May damage eyes and skin. Wear eye and hand protection when handling chemicals; always avoid direct contact with raw chemicals. Read the manufacturer's directions for accidental contact before handling chemicals. Ensure an eye-rinse facility and an emergency shower are within easy reach. Check at regular intervals for chemical leaks.


CAUTION

Drill out plugs and nipples before making supply hose connection. Failure to do so can cause buildup of pressure and risk a tubing rupture.

Electrical connection of the liquid soap pumps


On machines equipped with a liquid soap connection, connect the wires **directly on the print board** next to the ground wire connection (option). Connect as indicated on the wiring diagram.

The two connectors on the right give a tension of 220V ~ (max. 4A) which can be applied to drive 220V ~ soap pumps. If more than **4A** is required, **an external tension** will have to be used. **6** connections have been provided, of which one (**S6**) can be used to drive a waterproofing pump (e.g. for rain coats, etc.). (See Label 6)

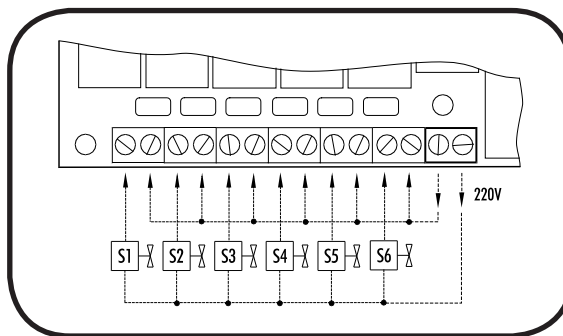


Label 6

The 220V can be transformed to other values to drive other type soap pumps.
 Example: pumps 24V ~. (See Label 7)

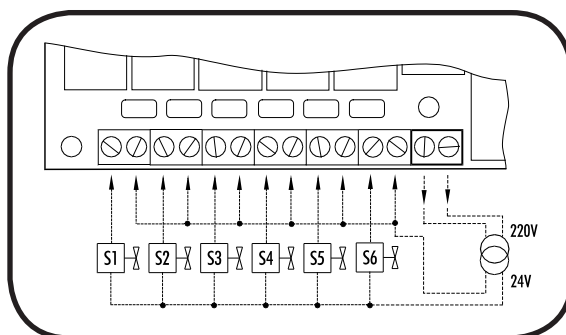


Label 7

Also, pumps with different operating tension can be combined.
 Example: 5 pumps 220V ~ and 1 pump 24V ~. (See Label 8)

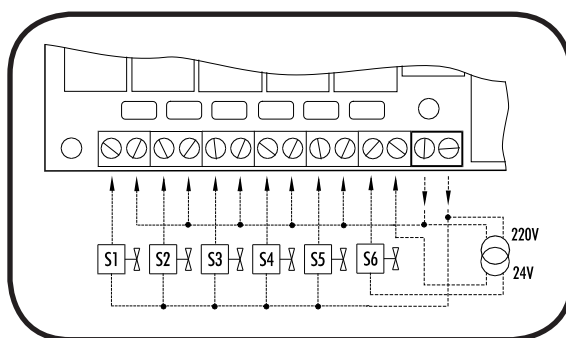

Label 8

With an external tension 24V DC (See Label 9)

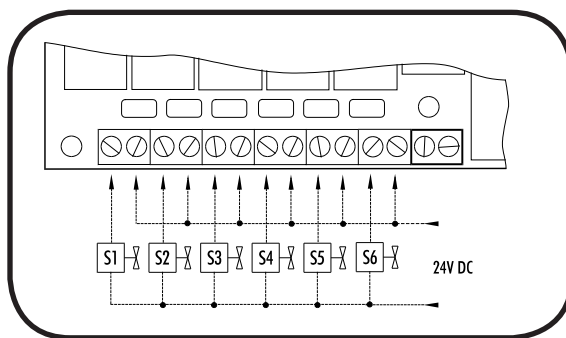

Label 9

Connection of a central operating panel for coin machines (option)



WARNING


To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect this appliance from the power supply.

At the backside above the main connectors, you find a printboard, to which the central operating panel for coin machines can be connected.


The right connectors form a potential free output contact as a result of which the operating panel detects when the machine is activated or not.

The left connectors receive the signal, by means of which a machine is chosen through the operating panel.


There are 3 different variations possible according to the output voltage of the operating panel. (See Labels 10, 11 and 12)

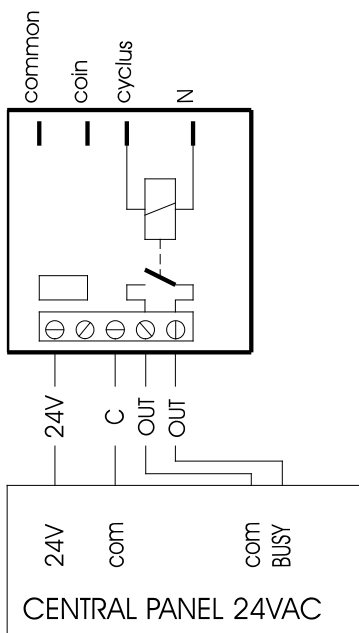


Label 10

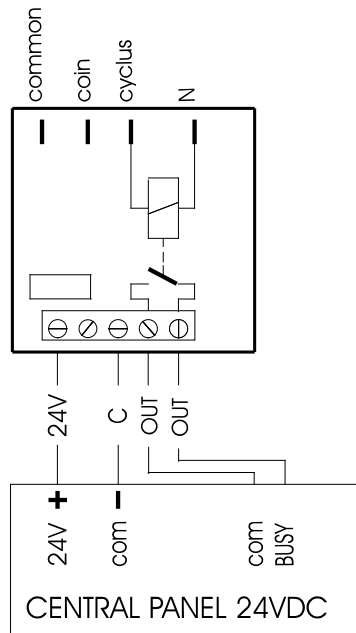

Label 11

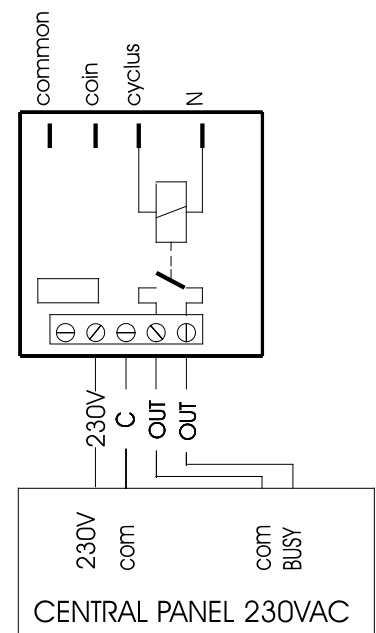

Label 12

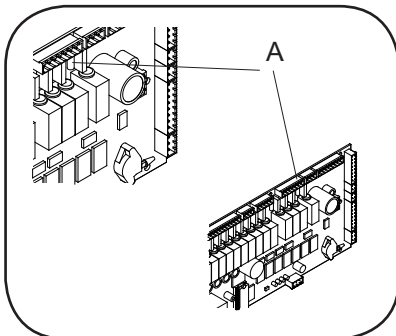


Label 13

IMPORTANT:


If a machine is equipped with this kind of printboard or if a printboard has been built in, the **resistance of the cycle contact (A) may no longer be present** on the main printboard. (See Label 13)

When this resistance is present, it has to be cut out of the main printboard.

Steam connection

	WARNING
<p>Never touch internal or external steam pipes, connections, or components. These surfaces can be extremely hot and will cause severe burns. The steam must be turned off and the pipe, connections, and components allowed to cool before the pipe can be touched.</p>	

Machines with steam heating must have a steam valve between the steam installation and the machine.

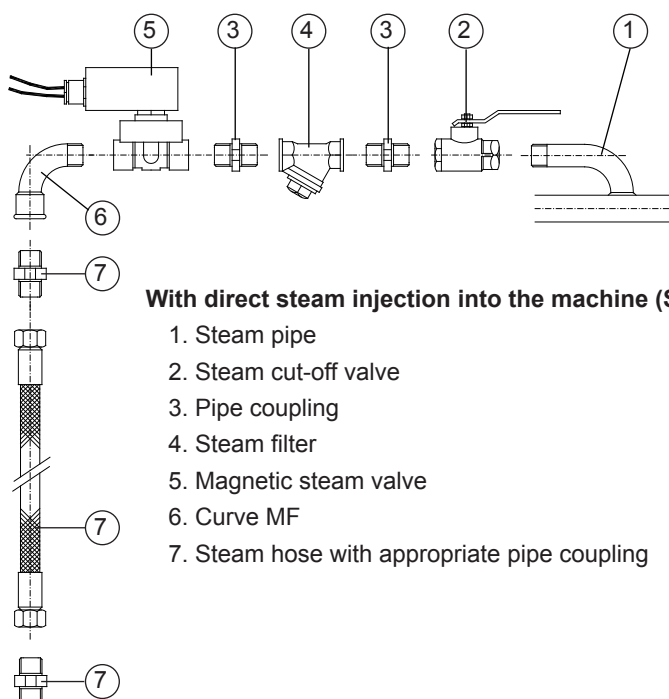

Steam Supply Information							
MODEL	Steam inlet connection, inch	Number of steam inlets	Recommended pressure, bar	Recommended pressure, psi	Maximum pressure, bar	Maximum pressure, psi	
For the WF150 = WF150, IWF150, IWF033, CWF033	3/8	1	2.0 - 5.5	30 - 80	5.5	80	
For the WF185 = WF185, IWF185, IWF040, CWF185, CWF040	3/8	1	2.0 - 5.5	30 - 80	5.5	80	
For the WF235 = WF235, IWF235, IWF055, CWF235, CWF055	1/2	1	2.0 - 5.5	30 - 80	5.5	80	
For the WF305 = WF305, IWF305, IWF075, CWF305, CWF075	1/2	1	2.0 - 5.5	30 - 80	5.5	80	
For the WF400 = WF400, IWF400, IWF090	1/2	1	2.0 - 5.5	30 - 80	5.5	80	

Table 8

Technical remarks

Internal connections of the electrical heating

1 AC


Heating	R5
3kw	LC1D0901

Table 9


3 AC

Heating		3x230V	R5	3x400V	R5
12kw	3x2kw 3x2kw	See label 14 See label 14	LC1D1810 LC1D1810	See label 15	LC1D0901
15kw	3x2kw 3x3kw	See label 14 See label 14	LC1D1810 LC1D1810	See label 15	LC1D1810
18kw	3x3kw 3x3kw	See label 14 See label 14	LC1D1810 LC1D1810	See label 15	LC1D1810
21kw	3x3kw 3x4kw	-----	-----	See label 16 See label 16	LC1D1810 LC1D1810
24kw	3x4kw 3x4kw	-----	-----	See label 16 See label 16	LC1D1810 LC1D1810


Table 10

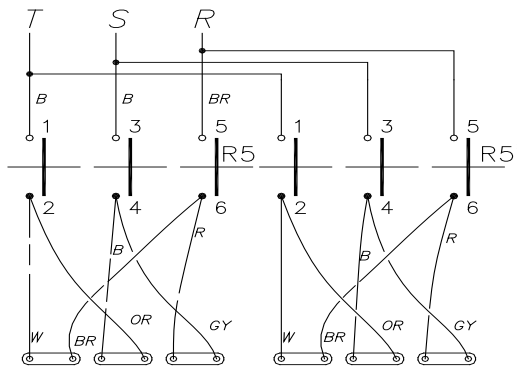

Label 14

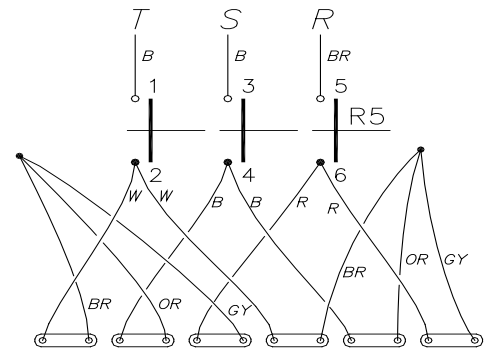

Label 15

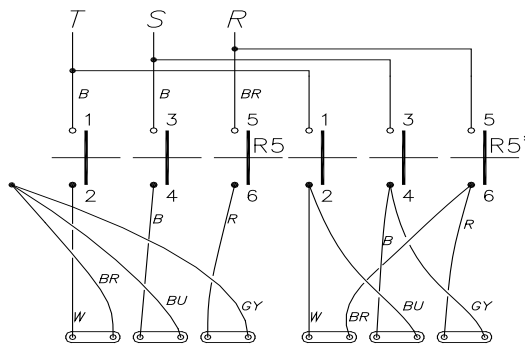

3 X 3000W/220V + 3 X 400W/380V


Label 16

B = Black Br = Brown
Gy = Grey Or = Orange
R = Red W = White

NOTE:

Other executions are available as options.

Maintenance instruction of the machine

	WARNING
<p>To reduce the risk of electric shock, disconnect this appliance from the power supply before attempting any user maintenance. Turning the controls to the OFF position does not disconnect this appliance from the power supply.</p> <p>Before starting wiring or inspection, power must be switched OFF, check to make sure that the operation panel indicator is off. Any person who is involved in wiring or inspection shall wait for at least 10 minutes after the power supply has been switched OFF and check that there is no residual voltage using a tester or the like. The capacitor of the inverter or the EMC filter is charged with a high voltage for some time after power OFF, and it is dangerous.</p>	

End of day

- Clean AC drive filter:
 - a. Snap off external plastic cover which contains filter.
 - b. Remove foam filter from cover.
 - c. Wash filter with warm water and allow to air dry. Filter can be vacuumed clean.

General maintenance

- Clean the entire cabinet of the machine regularly and remove all traces of soap, etc....
- Remove all detergent residue in the soap dispenser with hot water.
- Clean the door gasket and remove all detergents and other products.
- Shut off the main water, steam, and power connections at the end of each day. Do not change the setting of the water inlet taps on boiler fed machines once these have been installed.
- It is recommended to leave the door and soap dispenser open after use, to ventilate the machine.
- Check for proper door lock operation on a daily basis.

Periodical maintenance


- The V-belts of the motors should be retightened after two to three months when first used. This is necessary because these belts are subject to a one-time stretching when first used. **If this is not done**, the belt starts to slip after a few months and will break shortly afterwards.
- Check the water inlet filters to make sure they are not blocked by calcification.
- Check the drain valve for obstructions.
- If a machine frequently skips the final spin, check whether the probe of the out of balance switch is still in the appropriate position, that is horizontally centered and vertically 1/3 from the bottom inside the window. (When the drum is empty).
- Lubricate the bearings after every 200 hours of operation or replace the automatic lubricator annually.

Annual maintenance

Belt tension:

- Verify that the belts are running in the middle of the basket pulley.
- Verify the belt tension according to the table below. Belt tension measurements should be taken as close as possible to the center of the belt span (see figure).

Belt tension testing table								
Model	Belt	Frequency (Hz)		Tension force (N)		Deflection (mm)		Deflection force MAX
		MIN	MAX	MIN	MAX	at MIN tension	at MAX tension	
WF150	PJ10 1600	90	95	515	575	8,2	7	40
WF185	PJ10 1600	90	95	515	575	8,2	7	40
WF235	PK8 2050	60	65	633	748	12	10,8	60
WF305	PK8 2050	65	70	748	873	10,8	9,5	60
WF400	PK8 2050	65	70	748	873	10,8	9,5	60

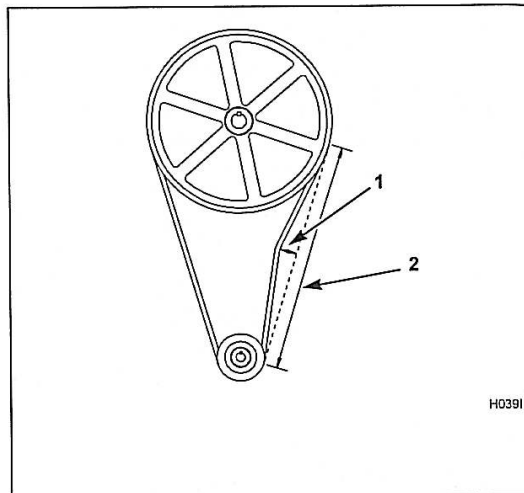




- 1 Deflection
- 2 Span length

Contact Information

Nameplate

Nameplate Location

The nameplate is located at the rear of the machine. Always provide the machine's serial number and model number when ordering parts or when seeking technical assistance. See labels 17 and 18.


Type:	WF185	Nr:	07060IW0001
Spanning:	3 ~ 380V 50Hz	Gewicht:	307 kg
Motor:	1.5 kW 10 A	Capaciteit:	181 L
Verwarming:	18 kW 30 A	Dry load:	18,1 kg
Totaal:	19.50 kW	Trommel:	680 mm
Kinetische energie:	1543 Nm	Snelheid:	465 rpm
Fabrikatiedatum:	2007		
Water pressure:	min. 2,07 max. 5,86 Kg/cm ² min. 20,7 max. 58,6 N/cm ²	IPX4	
sfc: 735259			
 Alliance International BVBA Nieuwstraat 146 8560 Wevelgem Belgium Tel: +32 56 41 20 54 Fax: +32 56 41 86 74 www.ipsobelgium.be			
			

Label 17

Model No:	IWF040MN2X10U02	Serial No:	0710FW0123
Volts Hertz:	208-240 50/60	Type:	WF185
Phase:	1-3	Capacity:	40/18 lbs/kg
Amps:	6 amps	Water Pressure:	30-85 psi 2.07-5.86 bar
Recommended Circuit Breaker:	15 amps	Max Speed:	1000 rpm
Interrupt Current:	10 kA	Net Weight:	677 lbs 307 kg
Motor:	1 hp 0.75 kW	IPX4	
Elec Heat:	N/A kW		
Steam heat:	N/A psi N/A bar		
Alliance International BVBA Made in Belgium  TEL 1-920-748-3121 www.comlaundry.com		 INTERTEK LISTED 100740 CONFORMS TO ANSI/UL STD 2157 CERTIFIED TO CAN/CSA STD C22.2 NO.169-94	

Label 18

Position of the Serialplate

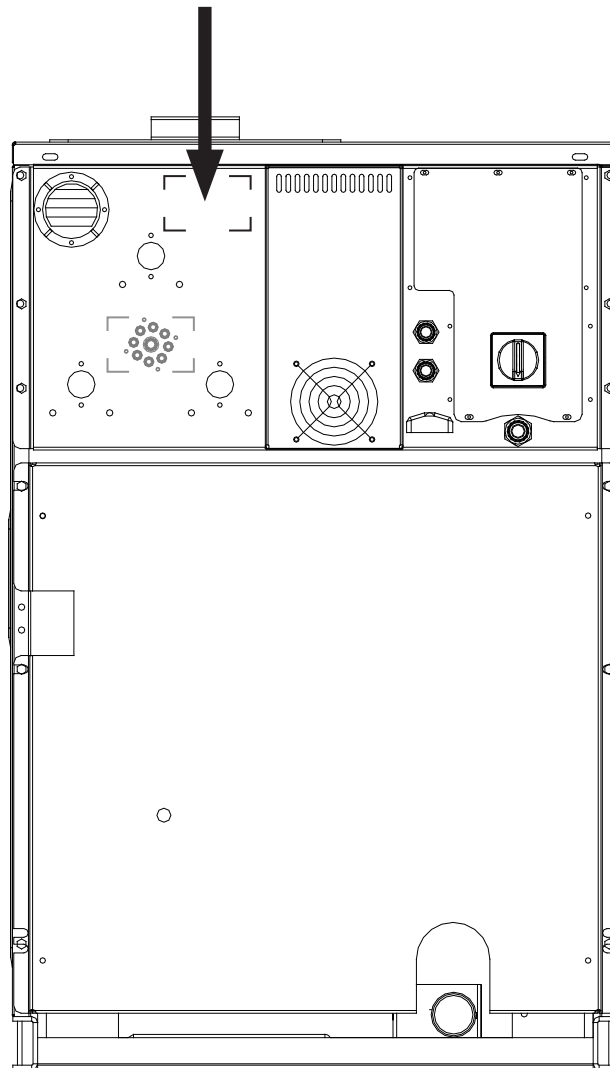

Replacement Parts

If literature or replacement parts are required, contact the source from which the machine was purchased or contact the phone numbers or websites shown on the nameplate.

Repair and after-sales service

- In case of important malfunctions and deficiencies, which you cannot resolve yourself, contact your distributor.

Distributor : Name:.....

Address:

Tel.:.....

Machine : Type:.....

Program:.....

Date of installation:

Installed by:

Serial number:

Operation voltage and frequency:

Alliance Laundry Systems
 Shephard Street, PO BOX 990
 Ripon, WI 54971-0990
 United States
 Tel: 001 920 748 3121 - Fax: 001 920 748 1645
 www.comlaundry.com

Alliance International bvba
 Nieuwstraat 146 - B-8560 Wevelgem (Belgium)
 Tel. +32 56 41 20 54 - Fax +32 56 41 86 74
 info@alliancels.eu - www.alliancels.eu

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>