

USER'S MANUAL

Smoke Alarms



AC Powered Ionization Smoke Alarm with Silence and Latching Features

Model 9120
Input: 120V AC ~, 60 Hz, 0.04A

AC Powered Ionization Smoke Alarm with Battery Back-up, Silence and Latching Features

Model 9120B
Input: 120V AC ~, 60 Hz, 0.04A

Printed in Mexico
M08-0134-004 K1 08/08

Models 9120 LISTED TO UL 217 STANDARD

IMPORTANT! PLEASE READ CAREFULLY AND SAVE
This user's manual contains important information about your Smoke Alarm's operation. If you are installing the Smoke Alarm for use by others, you must leave this manual—or a copy of it—with the end user.

INTRODUCTION

Thank you for choosing BRK Brands, Inc. for your Smoke Alarm needs. You have purchased a state-of-the-art Smoke Alarm designed to provide you with early warning of a fire.

Key features include:

- **Smart Technology** designed to help reduce unwanted or nuisance alarms.
- **Single Button Test/Silence** eliminates confusion. Depending on what mode the alarm is in, pushing the button performs different functions such as testing the alarm, silencing the alarm, re-testing the alarm when in silence and clearing the Latching feature.

Latching Alarm Indicator easily identifies initiating alarm even after the alarm condition has subsided.

Perfect Mount System includes a gasketless base for easy installation and a new mounting bracket that keeps the alarm secure over a wide rotation range to allow for perfect alignment.

Dust Cover is included to keep the alarm clean during construction.

Easy Installation/Maintenance features include a large opening in the mounting bracket for easy access to wiring. A battery pull tab keeps the battery fresh until the home is occupied. A Side Load Battery Drawer allows for easy battery replacement without removing the alarm from the ceiling or wall (Model 9120B only).

Improved UV Resistance keeps the alarm from discoloring over time.

© 2008 BRK Brands, Inc. All rights reserved. Distributed by BRK Brands, Inc., 3901 Liberty Street Road, Aurora, IL 60504-8122
Customer Affairs: (800) 323-9005
www.brkelectronics.com • www.firstalert.com

All First Alert and BRK® Smoke Alarms conform to regulatory requirements, including UL217 and are designed to detect particles of combustion. Smoke particles of varying number and size are produced in all fires.

Ionization technology is generally more sensitive than photoelectric technology at detecting small particles, which tend to be produced in greater amounts by flaming fires, which consume combustible materials rapidly and spread quickly. Sources of these fires may include paper burning in a wastebasket, or a grass fire in the kitchen.

Photoelectric technology is generally more sensitive than ionization technology at detecting large particles, which tend to be produced in greater amounts by smoldering fires, which may smolder for hours before bursting into flame. Sources of these fires may include cigarettes burning in couches or bedding.

For maximum protection, use both types of Smoke Alarms on each level and in every bedroom of your home.

FIRE SAFETY TIPS

Follow safety rules and prevent hazardous situations: 1) Use smoking materials properly. Never smoke in bed. 2) Keep matches or lighters away from children. 3) Store flammable materials in proper containers. 4) Keep electrical appliances in good condition and don't overload electrical circuits. 5) Keep stoves, barbecue grills, furnaces and chimneys grease- and debris-free. 6) Never leave anything cooking on the stove unattended. 7) Keep portable fire extinguishers on every floor, and in the kitchen. Have fire escape ladders and other reliable means of escape from an upper floor in case stairs are blocked.

BEFORE YOU INSTALL THIS SMOKE ALARM

Important! Read "Recommended Locations for Smoke Alarms" and "Locations to Avoid for Smoke Alarms" before beginning. This unit monitors the air around the alarm, not its sensing chamber. It alarms. It can give you more time to escape before fire spreads. This unit can ONLY give an early warning of developing fires if it is installed, maintained and located where smoke can reach it, and where all residents can hear it, as described in this manual. This unit will not sense gas, heat, or flame. It cannot prevent or extinguish fires.

Understand The Different Type of Smoke Alarms
Battery powered or electrical? Different Smoke Alarms provide different types of protection. See "About Smoke Alarms" for details.

Know Where To Install Your Smoke Alarms
Fire safety professionals recommend at least one Smoke Alarm on every level of your home, in every bedroom, and in every bedroom hallway or separate sleeping area. See "Recommended Locations For Smoke Alarms" and "Locations To Avoid For Smoke Alarms" for details.

Know What Smoke Alarms Can and Can't Do
Smoke Alarm can help alert you to fire, giving you precious time to escape. It can only sound an alarm once smoke reaches the sensor. See "Limitations of Smoke Alarms" for details.

Check Your Local Building Codes
This Smoke Alarm is designed to be used in a typical single-family home. It alone will not meet requirements for boarding houses, apartment buildings, hotels or motels. See "Special Compliance Considerations" for details.

ADANGER!
ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock, injury or death.

WARNING!

- This unit will not alert hearing impaired residents. It is recommended that you install special units which use devices like flashing strobe lights to alert hearing impaired residents.
- Installation of this unit must conform to the electrical codes in your area; Articles 210 and 300.3 (B) of NFPA 70 (NEC), NFPA 72, NFPA 101; ICC; SBC (SBC/C); UBC (IBC/C); NBC (BOCA); OTFDC (CABO), and any other local or building codes that may apply. Wiring and installation must be performed by a licensed electrician. Failure to follow these guidelines may result in injury or property damage.
- This unit must be powered by a 24-hour, 120V AC pure sine wave 60 Hz circuit. Be sure the circuit cannot be turned off by a switch, dimmer, ground fault circuit interrupter. Failure to connect this unit to a 24-hour circuit may prevent it from providing constant protection. Unit may be connected to an arc fault circuit interrupter.
- This Smoke Alarm must have AC or battery power to operate. If the AC power fails, battery back-up will allow the alarm to sound for at least 4 hours. If AC power fails and the alarm is weak, protection should last for up to 7 days. If AC power fails and the battery is dead or missing, the alarm cannot operate.
- Never disconnect the power from an AC powered unit to stop an unwanted alarm and test the alarm. Doing so will disable the unit and remove your protection. In the case of a true unwanted alarm open a window or fan the smoke away from the unit. The alarm will reset automatically when it returns to normal operation. Never remove the batteries from a battery operated unit to stop an unwanted alarm (caused by cooking smoke, etc.). Instead open a window or fan the smoke away from the unit. The alarm will reset automatically.

ADANGER!
ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock, injury or death.

WARNING!

- This unit will not alert hearing impaired residents. It is recommended that you install special units which use devices like flashing strobe lights to alert hearing impaired residents.
- Installation of this unit must conform to the electrical codes in your area; Articles 210 and 300.3 (B) of NFPA 70 (NEC), NFPA 72, NFPA 101; ICC; SBC (SBC/C); UBC (IBC/C); NBC (BOCA); OTFDC (CABO), and any other local or building codes that may apply. Wiring and installation must be performed by a licensed electrician. Failure to follow these guidelines may result in injury or property damage.
- This unit must be powered by a 24-hour, 120V AC pure sine wave 60 Hz circuit. Be sure the circuit cannot be turned off by a switch, dimmer, ground fault circuit interrupter. Failure to connect this unit to a 24-hour circuit may prevent it from providing constant protection. Unit may be connected to an arc fault circuit interrupter.
- This Smoke Alarm must have AC or battery power to operate. If the AC power fails, battery back-up will allow the alarm to sound for at least 4 hours. If AC power fails and the alarm is weak, protection should last for up to 7 days. If AC power fails and the battery is dead or missing, the alarm cannot operate.
- Never disconnect the power from an AC powered unit to stop an unwanted alarm and test the alarm. Doing so will disable the unit and remove your protection. In the case of a true unwanted alarm open a window or fan the smoke away from the unit. The alarm will reset automatically when it returns to normal operation. Never remove the batteries from a battery operated unit to stop an unwanted alarm (caused by cooking smoke, etc.). Instead open a window or fan the smoke away from the unit. The alarm will reset automatically.

ADANGER!
ELECTRICAL SHOCK HAZARD. Turn off the power to the area where the Smoke Alarm is installed before removing it from the mounting bracket. Failure to turn off the power first may result in serious electrical shock, injury or death.

WARNING!

- Connect this unit ONLY to other compatible units. See "How To Install This Smoke Alarm" for details. Do not connect it to any other type of alarm or fire detection device. Connecting anything else to this unit may damage it or prevent it from operating properly.
- The battery compartment resists closing unless a battery is installed. This means you the unit will not operate under DC power without a battery.
- Do not paint over the unit. Paint may clog the openings to the sensing chamber and prevent the unit from operating properly.

HOW TO INSTALL THIS SMOKE ALARM

This Smoke Alarm is designed to be mounted on any standard wiring junction box to a 4-inch (10 cm) size, on either the ceiling or wall. Read "Recommended Locations For Smoke Alarms" and "Locations to Avoid For Smoke Alarms" before you begin installation. Tools you will need: • Needle-nose pliers or utility knife • Standard Flathead screwdriver.

ADANGER!
ELECTRICAL SHOCK HAZARD. Turn off power to the area where you will install this unit at the circuit breaker or fuse box before beginning installation. Failure to turn off the power before installation may result in serious electrical shock, injury or death.


The Mounting Bracket:

To remove the mounting bracket from the Smoke Alarm base, hold the Smoke Alarm base firm and twist the mounting bracket counterclockwise. The mounting bracket installs onto the junction box. It has a variety of screw slots to fit most boxes.

The Power Connector:
The power connector plugs into a power input block on the Smoke Alarm. It supplies the unit with AC power.

- The black wire is "hot."
- The white wire is neutral.
- The orange wire is used for interconnect.

If you need to remove the power connector, insert a flat screwdriver blade between the power connector and the security tab inside the power input block. Gently pry back the tab and pull the connector free.

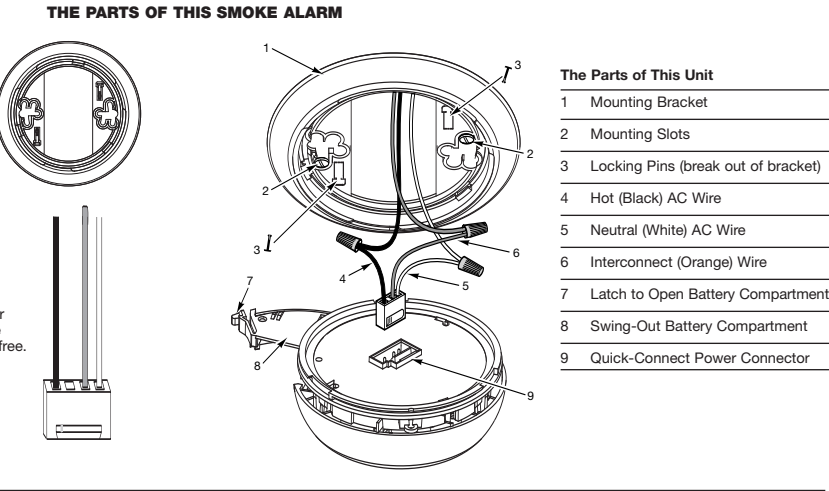

- The Parts of This Unit**
- 1 Mounting Bracket
 - 2 Mounting Slots
 - 3 Locking Pins (break out of bracket)
 - 4 Hot (Black) AC Wire
 - 5 Neutral (White) AC Wire
 - 6 Interconnect (Orange) Wire
 - 7 Latch to Open Battery Compartment
 - 8 Swing-Out Battery Compartment
 - 9 Quick-Connect Power Connector

FOLLOW THESE INSTALLATION STEPS

The basic installation of this Smoke Alarm is similar whether you want to install one Smoke Alarm, or interconnect more than one Smoke Alarm. If you are interconnecting more than one Smoke Alarm, you MUST read "Special Requirements For Interconnected Smoke Alarms" before you begin installation.

ADANGER!

ELECTRICAL SHOCK HAZARD. Turn off power to the area where you will install this unit at the circuit breaker or fuse box before beginning installation. Failure to turn off the power before installation may result in serious electrical shock, injury or death.

1. Using wire nuts, connect the power connector to the household wiring.

ADANGER!

Important! Never connect the power connector or the wiring leading to the power connector will cause damage to the Alarm and may lead to a non-functioning Alarm.

2. Remove the mounting bracket from the base, and attach it to the junction box.

STAND-ALONE ALARM ONLY:

- Connect the white wire on the power connector to the neutral wire in the junction box.
- Connect the black wire on the power connector to the hot wire in the junction box.
- Tuck the orange wire inside the junction box. It is used for interconnect only.

INTERCONNECTED UNITS ONLY:

Strip off about 1/2" (12 mm) of the plastic coating on the orange wire on the power connector.

- Connect the white wire on the power connector to the neutral wire in the junction box.
- Connect the black wire on the power connector to the hot wire in the junction box.
- Connect the orange wire on the power connector to the interconnect wire in the junction box. Repeat for each unit you are interconnecting. Never connect the hot or neutral wires in the junction box to the orange interconnect wire. Never cross hot and neutral wires between Alarms.

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!

Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

UNDERSTANDING THE INDICATOR LIGHTS AND ALARM HORN PATTERNS

Condition	LED (Red or Green Lights)	Horn
Normal Operation (AC Power)	Green LED ON; flashing Red LED once/minute	No Audible Alarm
Normal Operation (DC Power – 9120B only)	Green LED OFF; Red LED flashes once/minute	No Audible Alarm
DURING TESTING	Red LED flashes once every second	Horn pattern: 3 beeps, pause, 3 beeps, pause
LOW OR MISSING BATTERY (9120B only)	Red LED flashes once/minute	Horn "chirps" once/minute
ALARM CONDITION Smoke Initiating Device	Red LED flashes rapidly on the unit that triggered the Alarm	Horn pattern: 3 beeps, pause, 3 beeps, pause repeating on all Alarms
ALARM CONDITION Interconnect Alarm	Red LED on the other Alarms in an interconnected series will be OFF.	Horn pattern: 3 beeps, pause, 3 beeps, pause repeating on all Alarms
IN SILENCE MODE	Red LED flashes on for 2 seconds/OFF for 2 seconds repeatedly until reset, on initiating unit(s).	Horn remains silent for up to 10 minutes. Horn will sound if smoke levels increase.
"LATCHING" ALARM INDICATOR	Green LED ON for 2 seconds/OFF for 2 seconds repeatedly until reset, on initiating unit(s).	Horn remains silent

WEEKLY TESTING

ADANGER!
NEVER use an open flame of any kind to test this unit. You might accidentally damage or set fire to the unit or your home. The built-in test switch accurately tests the unit's operation as required by Underwriters Laboratories, Inc. (UL).

ADANGER!
DO NOT stand close to the Alarm when the horn is sounding. Exposure at close range may be harmful to your hearing. When testing, step away when horn starts sounding. It is important to test this unit every week to make sure it is working properly. Using the test button is the recommended way to test this Smoke Alarm. Press and hold the test button on the cover of the unit until the alarm sounds (the unit may continue to alarm for a few seconds after you release the button). If it does not alarm, make sure the unit is receiving power and test it again. If it still does not alarm, replace it immediately. During testing, you will hear a loud, repeating horn pattern: 3 beeps, pause, 3 beeps, pause. When testing a series of interconnected units you must test each unit individually. Make sure all units alarm when each one is tested.

ADANGER!
Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

IMPORTANT!
Interconnect units within a single family residence only. Otherwise all households will experience unwanted alarms without warning. This warning should last 7 days, but you should replace the battery immediately to continue your protection.

WARNING! Failure to meet any of the above requirements could damage the units and cause them to malfunction, removing your protection.

- AC and AC/DC Smoke Alarms can be interconnected. Under AC power, all units will alarm when one senses smoke. When power is interrupted, only the AC/DC units will alarm. The series will continue to send and receive signals. AC powered Smoke Alarms will not operate.

Interconnected units can provide earlier warning of fire than stand-alone units, especially if a fire starts in a remote area of the dwelling. If any unit in the series senses smoke, all units will alarm. To determine which Smoke Alarm initiated an alarm, see table:

During an Alarm:

- On Initiating Alarm(s) Red LED(s) flashes (flash) rapidly
- On All Other Alarms Red LED is Off

After an Alarm (Latching):

- On Initiating Alarm(s) Green LED(s) On for 2 seconds/Off for 2 seconds
- On All Other Alarms Green LED(s) On, Red LED(s) is Off

Compatible Interconnected Units

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>