

CLIFFORD

World-Class Auto Security™

intelliguard
700-IQ

Owner's Manual

CLIFFORD

World-Class Auto Security™

*All IntelliGuard-IQ Series systems are covered by
one or more of the following Clifford Electronics patents:
4,158,874; 4,233,642; 4,327,444; 4,383,242; 4,430,685; 4,845,464;
4,887,064; 4,890,108; 4,922,224; 4,997,053; 5,081,667; 5,146,215;
5,157,375 and other patents*

Table of Contents

<i>Standard Features of the IntelliGuard 700-IQ</i>	3
<i>Welcome</i>	8
<i>Your 4-button/12-channel remote controls</i>	9
<i>How to use your keychain remote control</i>	9
<i>To Transmit channel 1, 2, 3 or 4</i>	9
<i>To Transmit channel 5, 6, 7 or 8</i>	9
<i>To Transmit channel 9, 10, 11 or 12</i>	9
<i>What each button/channel does</i>	10
<i>How to interpret the chirps and parking light flashes</i>	11
<i>AntiScan™</i>	12
<i>Anti-CodeGrabbing™ (ACG) with Random Code Encryption</i>	12
<i>Enhanced AutoArming™</i>	12
<i>AutoArming enable/disable</i>	12
<i>Visual acknowledgment</i>	12
<i>User-selectable entry delay</i>	12
<i>AutoArm & Lock</i>	12
<i>Instant AutoArming bypass</i>	12
<i>UltraSecure™ valet mode</i>	13
<i>Your secret valet code</i>	13
<i>Definitions</i>	13
<i>Digit</i>	13
<i>Valet code</i>	13
<i>PlainView switch</i>	13
<i>Entering a digit</i>	13
<i>Entering a code</i>	13
<i>To enable valet mode</i>	13
<i>To exit valet mode</i>	14
<i>Setting your own secret valet code</i>	14
<i>Remote controlled valet mode entry and exit</i>	14
<i>Keyless entry in valet mode</i>	14
<i>Remotely adjustable Dual-Zone Piezo Sensor</i>	15

Table of Contents (cont.)

<i>Remote controlled sensor adjustments</i>	15
<i>Remote controlled override of optional sensor #2</i>	15
<i>FACT — False Alarm Control and Test</i>	15
<i>Selectable starter/ignition interrupt</i>	16
<i>Headlight Reminder</i>	16
<i>AutoLock and AutoUnLock™</i>	16
<i>How to interpret the LED status indicator</i>	16
<i>Automatic Battery-Saving Mode</i>	16
<i>Smart AutoTesting™</i>	17
<i>Specific malfunction identification</i>	17
<i>Automatic malfunction bypass</i>	17
<i>Multiple-event TotalRecall™</i>	17
<i>Smart prior intrusion attempt alert</i>	18
<i>High-output MultiSound Medallion™ Siren</i>	18
<i>Personalized Siren Sounds</i>	18
<i>QuietChirps™ (muffled chirp sound level)</i>	18
<i>Long-term chirp silencing</i>	18
<i>Remote controlled chirp muting</i>	18
<i>Siren duration</i>	18
<i>Smart trunk release option</i>	19
<i>SmartPowerUp™ II</i>	19
<i>User-selectable features</i>	20
<i>Step-by-step programming instructions</i>	20
<i>EXAMPLE 1: Turn off siren sound number 2</i>	21
<i>EXAMPLE 2: Turn off siren sound numbers 4 and 6, then turn on QuietChirps</i>	21
<i>Adding new remote controls</i>	22
<i>How to erase the codes of lost or stolen remote controls</i>	22
<i>Table of user-selectable features</i>	23-24

Standard Features of the IntelliGuard 700-IQ

- ☑ ***Limited Lifetime Warranty***— For as long as you own the vehicle, Clifford Electronics will repair or replace the control unit and remote controls free of charge (see the warranty card for full details).
- ☑ ***FACT™ — False Alarm Control and Test***— One of many patented Clifford innovations, FACT *absolutely, positively* eliminates recurring false alarms.
- ☑ ***A Pair of 4-Button/12-Channel Remote Controls***— Fingertip command from a typical range of 100 feet. One of the remote controls has a gun-metal gray finish, the other has a gorgeous laminated burlwood case.
- ☑ ***AntiScan™***— Some car thieves still use “scanners” that transmit one digital code after another until they hit the one code that disarms the alarm. AntiScan blocks scanners to prevent disarming by anyone other than you.
- ☑ ***Anti-CodeGrabbing™ (ACG™) with Random Code Encryption***— A code-grabber is a new device that lets a thief record and capture off the air from a distance the digital code transmitted by your remote control whenever you arm your car. When you leave, the thief replays the code to disarm the alarm and unlock your car’s doors. ACG with Random Code Encryption makes thieves’ code-grabbers completely useless, because each time you press the button on your remote control ***a different random code*** is transmitted, yet the system will flawlessly recognize and respond to your transmitter’s new code and ignore all others.
- ☑ ***Full-Time Remote Panic with Automatic Door Locking and Unlocking***— If you feel threatened, you can, with just a fingertip touch on your remote control, sound the siren, flash the parking lights and unlock your vehicle’s power door locks for quick entry into your car without fumbling with your keys. If you press the panic button while driving, the siren will sound, the lights will flash and the doors will lock to shield you from the assailant (some vehicles require optional relays to control the power locks).
- ☑ ***UltraSecure Coded Valet Mode™***— Ensures that no thief can turn off your IntelliGuard 700-IQ like they can all other alarm brands.
 - ***Remote Controlled Valet Mode*** — Enable or disable valet mode from 100 feet away! The parking lights and the system LED confirm valet mode entry and exit.

Standard Features of the IntelliGuard 700-IQ (cont.)

- ☑ ***Remotely Adjustable Dual-Zone Piezo Sensor™***— With just a touch on the remote, you may, at any time or place, adjust and test the sensitivity of this microprocessor-controlled solid-state sensor. The two sensor zones provide full perimeter protection: If someone bumps into your car, the system will sound a distinctive warning tone; if forced entry is detected, the full alarm will sound.
 - ***Tonal Confirmation of Sensor Adjustments*** — As you remotely increase sensitivity, the confirming chirps rise in pitch. Conversely, as you lower each zone's sensitivity, the confirmation chirps become lower and lower in pitch.
 - ***Unprecedented Reliability*** — No moving mechanical parts to wear out and the entire electronic circuitry resides in the passenger compartment, not in the engine well where it would be exposed to temperature extremes, water, vibration and dirt.
 - ***Adjust and Test Unobtrusively*** — No repeated arming and disarming, and no siren wailing. You set and test sensitivity without activating the alarm!
- ☑ ***Remote Override of Optional Sensor #2***— A press of a button on your remote control will override optional sensor #2 for those times when you need to leave a passenger or pet in your vehicle.
- ☑ ***Remote Headlight Activation Capability***— Remotely turn on the headlights to illuminate your way to and from your car (requires an optional relay).
- ☑ ***Remote Window/Sunroof Closure Capability***— On several models of BMW, Volkswagen, Mercedes Benz and Jaguar, the IntelliGuard 700-IQ's integrated timer and an optional relay can be set to remotely close all the power windows and sunroof every time you remotely arm the system without the need for any optional modules.
- ☑ ***Remote Controlled Door Lock/Unlock Outputs***— A single press of remote control button 1 simultaneously arms your IntelliGuard 700-IQ *and* locks all the doors, another press disarms *and* unlocks (some vehicles require optional relays).
 - ***User-Selectable AutoLock™*** — Automatically locks the doors the doors the instant you turn on the ignition to start the engine.
 - ***User-Selectable AutoUnLock*** — Automatically unlocks the doors when you turn off the engine.
 - ***Deluxe Remote Keyless Entry in Valet Mode*** — Remote door locking/unlocking with parking light confirmations and interior light illumination even in valet mode.

Standard Features of the IntelliGuard 700-IQ (cont.)

- ☑ ***Remote Courtesy Lighting***— Automatically turns on your vehicle's interior light(s) when you remotely disarm, and keeps them on for 30 seconds or until you start the engine, whichever occurs first.
- ☑ ***Built-In Parking Light Flasher***— The parking lights will visually confirm alarm and doorlock status from a distance.
- ☑ ***User-Programmable MultiSound Medallion™ Siren***— Designed entirely by Clifford engineers, this unique siren is far superior in performance, features, reliability and even aesthetics to all other look-alike, sound-alike sirens.
 - ***Personalized Siren Sounds™*** — Up to 64 different siren sound combinations.
 - ***Ultra-Reliability*** — All electronics of the MultiSound Medallion Siren are built into the control unit, sheltering them from the harsh underhood environment.
 - ***User-Selectable 30/60-Second Siren Duration***
 - ***Patented Automatic Noise Abatement*** — Automatically limits siren sounding to no more than 5 minutes even if a door is left open in the wake of an intrusion attempt.
- ☑ ***User-Selectable Headlight Reminder***— Warns you if you forget to turn off the headlights after you park your vehicle. If your vehicle already has this feature, you may turn off IntelliGuard 700-IQ's Headlight Reminder.
- ☑ ***Enhanced AutoArming™***— Automatically (passively) arms itself if you forget. Qualifies you for a significant insurance discount (ask your insurance company).
 - ***AutoArming Enable/Disable*** — Enable or disable the Enhanced AutoArming features any time you wish.
 - ***AutoArm & Lock*** — Select whether or not the doors will lock when the system automatically arms itself.
 - ***15-Second Entry Delay*** — If you ever temporarily lose the use of your remote controls, an entry delay allows you to enter the vehicle and disarm the system without sounding the siren.
 - ***Visual Confirmation*** — Two parking light flashes signal the AutoArming countdown.
 - ***Instant AutoArming Bypass™*** — A quick turn of the ignition switch will bypass AutoArming for one cycle.

Standard Features of the IntelliGuard 700-IQ (cont.)

- ☑ ***Smart Trunk Release Capability***— An electronic interlock ensures that the optional remote trunk release can be activated only when the system is disarmed. To further prevent unintentional opening of the trunk, the interlock also makes sure that the trunk release cannot be remotely activated while driving.
- ☑ ***Dual-Mode Chirp Silencing***— Your choice of either long-term chirp silencing or remote controlled chirp muting whenever you wish.
- ☑ ***QuietChirps™*** — You may select soft or full volume arm and disarm chirp confirmations.
- ☑ ***Patented Smart AutoTesting™***— Automatically tests all sensors and triggers every time you remotely arm the system and specifically identifies any malfunction, virtually eliminating trouble-shooting time.
- ☑ ***Patented Malfunction AutoBypass™***— Automatically bypasses any trigger or sensor malfunction, then arms all other points to continue to provide the utmost possible protection. If you simply left the hood, trunk or a door open when you armed, just close it and the system will again monitor that point.
- ☑ ***Eight-Event TotalRecall™*** — Stores the identities of the last eight triggers and/or sensors activated. This provides an invaluable diagnostic means.
- ☑ ***Patented Smart Prior Intrusion Attempt Alert***— Warns you from a distance if an intrusion attempt was foiled while you were away. And IntelliGuard 700-IQ will specifically identify which sensor or trigger was activated.
- ☑ ***Patented Remote Control Code Learning***— Just a few flicks of a switch lets you match to the system up to 4 different Clifford 12-channel remote controls. Just as easily, a lost or stolen remote control can be deleted.
- ☑ ***Multiple-Car Control***— You may use the same remote to control up to seven different vehicles.
- ☑ ***Control Unit with 4 Channels***— For remote system operation and accessories.

Standard Features of the IntelliGuard 700-IQ (cont.)

- ☑ ***User-Selectable Starter/Ignition Interrupt***— You may choose either a fault-proof mode, which lets you start the engine even in the unlikely event of a system failure, or ultra-secure mode that ensures a thief won't be able to start the vehicle even if he finds the system control unit and disconnects it!

- ☑ ***High-Luminescence LED with Automatic Battery-Saving Mode***— Adds visual deterrence and identifies system status. To conserve vehicle battery power (the LED draws more current than the entire control unit) the LED flash rate will automatically be slowed to half its normal rate after the system has remained armed for 48 hours, and a quarter its normal rate after 96 hours.

- ☑ ***SmartPowerUp™ II***— When power to the system is disconnected, the system's non-volatile memory always remembers the last state (armed, disarmed or valet mode) and returns to that state when power is restored. So if a thief disconnects the power and then restores it in an attempt to start the car, the system will re-arm and instantly sound the siren while immobilizing the vehicle.

- ☑ ***Multiple Trigger/Sensor Inputs***— For precise identification of the exact trigger or sensor tripped in a prior intrusion attempt.

- ☑ ***Full-Time Programming Access***— You can easily change the status of more than 20 different user-selectable features at any time, even while driving.

***Welcome to the world of high-technology
vehicle security and convenience***

Congratulations on the purchase of your IntelliGuard 700-IQ vehicle security/convenience system. Clifford Electronics has long been recognized as the world's leading manufacturer of high-technology vehicle security systems and accessories. In fact, Clifford Electronics holds more patents than all other vehicle security manufacturers combined. Buying Clifford has always meant buying the best, and nowhere is our commitment to technological innovation, reliability and quality more evident than in the astounding IntelliGuard 700-IQ.

Your IntelliGuard 700-IQ is loaded with protective features and lifestyle convenience benefits that other car alarm companies don't even have on their wish lists, let alone their alarms. Features like Anti-CodeGrabbing™ that fights off the latest and most onerous threat from high-tech thieves. A thief equipped with a code-grabber can record with total impunity the codes of your car alarm's remote control from up to several hundred feet away. How? The thief simply waits for you to arm or disarm your alarm with your remote control. The thief's portable, pocket-sized code-grabber will automatically pick and record the transmitted code off the air. As soon as you walk away, he simply plays it back, instantly disarming your alarm and unlocking the doors. It's like giving the thief your car keys. Code-grabbing will instantly defeat all other brands of remote controlled car alarms, regardless of whether they are equipped with anti-scanning or trillions of digital codes.

IntelliGuard 700-IQ's unique PlainView Coded Valet Switch ensures that no thief or joy-rider can turn off your IntelliGuard 700-IQ like they can with all other car alarm brands. For total freedom from incorrectly adjusted sensors, there's remote controlled adjustment of the system's dual-zone Piezo Sensor that allows you to set the desired sensitivity levels any time or place with just a touch of a button on your remote control. Plus there's remote controlled valet mode, remote controlled override of an optional sensor, an electronic interlock to prevent accidental activation of the optional remote trunk release, optional headlight activation, user-programmable MultiSound Medallion™ Siren with 64 distinctly different siren sound combinations sets your alarm apart from all others, smart automatic locking/unlocking if you ever "panic" the system, full-time programming access (even while driving), and much, much more.


Yet despite all the sophistication, the IntelliGuard 700-IQ is amazingly easy to use: never more difficult than a few flicks of a switch or a press of a button on one of your miniature keychain remote controls.

Your 4-button/12-channel remote controls

The 4-button/12-channel remote controls (one with a gun-metal gray case, the other with a laminated burlwood finish) are ultra-sophisticated miniature radio transmitters powered by a tiny 12-volt battery. Range is up to 100 feet. A weak remote control battery will reduce range. Electrical interference and even sunspots can interrupt the signal from your remote to the system. If this happens, repeatedly press the button (this works better than holding the button down). The 4-button/12-channel remote control is the key to your IntelliGuard 700-IQ. It incorporates Clifford's Anti-CodeGrabbing™ (ACG) technology for the ultimate protection against "code-grabbing" devices (see page 12). You will use your remote control to arm and disarm the system, lock and unlock the doors, activate the panic feature, adjust sensor sensitivity, enable/exit valet mode, override an optional sensor and command options such as a remote trunk release, headlight activation, power window operation, electric garage door interface and even remote starting of the engine and heater or air conditioner, among other options.

How to use your keychain remote control

Your remote control can individually command up to 12 different system functions and options. It's like having a TV with 12 channels. You change channels (functions) with your keychain remote control. But instead of putting 12 buttons on the remote control, we made it easy: First, the button you use the most — button 1 to arm, disarm, lock and unlock — is larger than the others. Buttons 2, 3 and 4 are the smaller buttons to the right, below and left of button 1. The *LevelShift* button on the side of the remote control allows you to select channels 5–12:

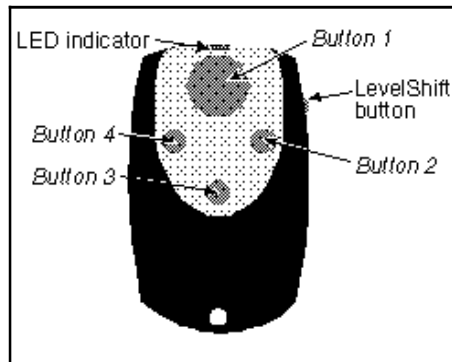

- ***To transmit either channel 1, 2, 3 or 4:*** Just press either button 1, 2, 3 or 4. For instance, to transmit channel 3, press button 3. While you transmit, the LED indicator will blink once every second: this indicates **level 1**.
- ***To transmit either channel 5, 6, 7 or 8:*** Press the LevelShift button once. This shifts buttons 1–4 to level 2 (channels 5–8). Then press the desired button *within the next 7 seconds*. For instance, to transmit channel 5, press the LevelShift button once, then press button 1. While you transmit, you'll notice that the LED indicator blinks twice, pauses, blinks twice, etc.: this indicates **level 2**.
- ***To transmit channel 9, 10, 11 or 12:*** Press the LevelShift button twice. This shifts buttons 1–4 to level 3 (channels 9–12). Then press the corresponding button within the next 7 seconds. For instance, to transmit channel 10, press the LevelShift button twice, then press button 2. While you transmit, you'll notice that the LED blinks three times, pauses, blinks three times, etc.: this indicates **level 3**.

NOTE: One second after you stop transmitting level 2 or level 3 (channels 5–12), the remote control automatically returns to level 1 (channels 1–4).

What each button/channel does

Your IntelliGuard 700-IQ remote controls come pre-programmed so that certain channels command certain functions. If you wish, you can actually assign any channel except 9 through 12 to any function (see pages 20-24). The following chart indicates what each remote control channel number does, and how to transmit each channel number.

Factory settings of the 12 remote control channels				
Transmitting channel number:	Causes the system to:	Press the LevelShift button?	How many times?	Press button number
1	arm or disarm and lock or unlock the doors	no	—	1
2	pop the trunk* (if the system is <i>disarmed</i>)	no	—	2
3	<i>silently</i> arm or disarm	no	—	3
4	activate optional accessory function #1	no	—	4
5	activate optional accessory function #2	yes	once	1
6	activate optional accessory function #3	yes	once	2
7	activate optional accessory function #4	yes	once	3
8	activate optional accessory function #5	yes	once	4
9	remotely enter or exit valet mode (see pages 14)	yes	twice	1
10	remotely override optional sensor #2 (see page 15)	yes	twice	2
11	remotely adjust sensitivity of the Piezo Sensor's primary zone (see page 15)	yes	twice	3
12	remotely adjust sensitivity of the Piezo Sensor's warning zone (see page 15)	yes	twice	4

TO ARM Press button 1 (channel 1) once. You will hear **two chirps** and the parking lights will flash twice. The dashboard LED will flash repeatedly and the car doors will automatically lock.*
THE SYSTEM

TO DISARM Press button 1 (channel 1) again. **One chirp** and one parking light flash confirms disarming. In addition, the doors will automatically unlock* and the interior lights will turn on and stay on for 30 seconds or until you start the engine, whichever occurs first.
THE SYSTEM

TO SILENTLY Press button 3 (channel 3). Your IntelliGuard 700-IQ system will arm or disarm with all the indications noted above *except* for the chirp acknowledgments.
ARM OR DISARM
THE SYSTEM

* Some vehicles require optional relays and wiring.

TO ACTIVATE THE PANIC FEATURE Press button 1 for 3 seconds. The lights will flash repeatedly and the siren will blare for 30 or 60 seconds (user-selectable), or until you press button 1 again to turn it off. If the ignition is on (indicating you are in the car), the doors will automatically lock to prevent an assailant from entering. If the ignition is off, the doors will unlock, allowing you to enter without fumbling with your keys.

TO REMOTELY OPEN THE TRUNK . . . Button 2 (channel 2) can control another function when the system is *disarmed*, such as an optional remote trunk release. Pressing button 2 while the alarm is *disarmed* will activate the optional remote trunk release.

TO ACTIVATE OTHER OPTIONS REGARDLESS OF ALARM STATE Button 4 (channel 4) and channels 5–8 (see *How to use your keychain remote control* on page 9) can activate accessories such as remote headlight activation, the IntelliStart remote engine starter, remote power window control, electric garage door and entry gate opener(s), IntelliGuard IQ systems on your other vehicles, etc.

What about channels 9 – 12? . . . Channels 9 through 12 control remote valet mode entry/exit (see page 14) , remote override of optional sensor #2 (see page 15), and remote adjustment of each of the two Piezo Sensor zones (see page 15).

How to interpret the chirps and parking light flashes

When you use the remote control, the system responds with chirps (unless the chirp muting feature is turned on) and parking light flashes. ***These chirp/flash acknowledgments mean:***

Chirps and flashes	Meaning
1	Your system is disarmed <i>or</i> you have remotely exited valet mode (see page 14)
2	Your system is armed <i>or</i> you have remotely engaged valet mode (see page 14)
2 and then 4	Armed but there is a door open (if there was a 5-sec. delay) or the sensor is malfunctioning (if there was a 10-sec. delay) (see <i>Smart AutoTesting</i> on page 17)
3	Disarmed but there was an intrusion attempt while you were away (see <i>Smart prior intrusion attempt</i> on page 18)
4	Armed but the hood or trunk is ajar (see <i>Smart AutoTesting</i> on page 17)

AntiScan™

Thieves can disarm some other brands of car alarms with a “*scanner*” that rapidly transmits one remote control code after another. Clifford’s AntiScan will detect any scanner and block the codes it generates.

Anti-CodeGrabbing™ (ACG) with Random Code Encryption

A Clifford exclusive that protects you and your automobile from the most effective and onerous car stealing device ever used by car thieves — a code-grabber. Code-grabbers are far more effective and efficient than scanning. Unlike scanners that sequentially transmit one digital code after another until they hit the correct code to disarm the alarm (a process that may take minutes to years depending on the system’s total number of codes), code-grabbers literally record, from hundreds of feet away, the code sent by your car alarm remote control. Then the thief simply plays back the code when you’re gone, instantly disarming the alarm and unlocking the doors. It’s like giving the thief your car keys. Non-Clifford alarms can be defeated that easily. In contrast, IntelliGuard IQ Series systems use complex digital signal processing and unbreachable encryption to randomly change the digital code every time you use the remote control. Your remote will **never** transmit the same code twice, and the control unit will **never** accept the same code twice. Thus the code recorded and played back by the thief’s code-grabber will never be accepted by your IntelliGuard 700-IQ. *Only ACG can make a car alarm impervious to code-grabbing, and only Clifford systems have ACG with Random Code Encryption.*

Enhanced AutoArming™

If this feature is enabled and you forget to remotely arm, the system will automatically arm itself 30 seconds after the vehicle doors are closed. For your convenience, if you re-open any door(s) within the 30-second countdown, AutoArming will restart from the beginning once all doors are closed. IntelliGuard 700-IQ has these additional AutoArming features:

- **AutoArming enable/disable:** If you prefer, you may deactivate or reactivate the AutoArming feature. See *User-selectable features* on pages 20-24.
- **Visual acknowledgment:** Five seconds after you exit the vehicle and close all the doors, the parking lights will flash twice to confirm that the AutoArming countdown is progressing. Then, 25 seconds later, the system will AutoArm.
- **AutoArm & Lock:** To ensure you can’t accidentally lock your keys inside the car, the system is factory-set *not* to lock the doors upon AutoArming. To change this setting, see *User-selectable features* on pages 20-24.
- **User-selectable entry delay:** If you temporarily lose the use of your remote controls, you may turn on the 15-second entry delay feature. This allows you to enter the car and silently disarm the system by turning on the ignition within 15 seconds of opening the door. See *User-selectable features* on pages 20-24.
- **Instant AutoArming bypass:** Prevents AutoArming when fueling the vehicle and other times when you wish to temporarily bypass AutoArming. To activate Instant AutoArming Bypass, rapidly turn the ignition switch to “ON” then “OFF.” You will hear a single siren chirp to confirm that the system will not AutoArm. The system reverts to its normal operating mode when you next start the engine.

UltraSecure™ Coded Valet Mode

Your secret valet code

In seconds, thieves can disable all other alarm brands by hotwiring the ignition and flicking an easy to find “*hidden*” valet switch. Your IntelliGuard 700 has safeguards that absolutely ensure that a thief cannot enable the valet mode as a way of “turning off” your system. How? To enable valet mode, the driver must first enter a secret valet code on the PlainView switch. Your code will be a 1-to-3-digit number of your choosing. Each digit can be any number from 1 to 9, (i.e. the code can be any number between 1 and 999, except those that contain a zero). Whenever the system is put in valet mode, it overrides the AutoArming feature (see page 12) and all the security features are turned off. At various times, you will need to switch the system off. For instance, when having your car serviced, washed or parked by a valet.

Your factory-set valet code is the single digit “2.”

NOTE: If you temporarily lose the use of your remote controls, you can disarm the system by enabling valet mode.

Definitions

- **Digit:** A digit is defined as any number from 1 to 9, inclusive.
- **Valet code:** A valet code may be 1 to 3 digits:
 - A one-digit code=X=any number between 1-9
 - A two-digit code=XY=any number between 11-99 (excluding numbers with zeros)
 - A three-digit code=XYZ=any number between 111-999 (excluding numbers with zeros)

Remember, no code can have a zero.

- **PlainView switch:** A rocker switch mounted on the dashboard or console. The switch has three positions: 1.) **Latched** 2.) **Center** 3.) **Spring-loaded momentary**. When you press the latched side, the switch remains in its pressed position. When you press the momentary side, the switch bounces back to the center position.
- **Entering a digit:** To enter a digit, you tap (press and release) on the momentary side of the PlainView switch the number of times corresponding to the numeral of the digit to be entered, followed by pressing to the latched side, then returning the switch to its center position.
- **Entering a code:** If your code has only one digit, enter the code as described in “Entering a digit.” If your code has more than one digit, just repeat the above for each digit of your code.

To enable valet mode

1. Turn the ignition switch to its “ON” position or start the engine.
2. Enter your secret valet code on the PlainView switch, then return the switch to its center position.
3. You now have 5 seconds to press the latched position to enter valet mode. The system’s LED will glow continually for on-going visual confirmation of valet mode.

To exit valet mode

1. Turn the ignition switch to its "ON" position or start the engine.
2. Flick the switch back to its center position. The LED will turn off to confirm that the system is now in its normal operating mode.

Setting your own secret valet code

Since all IntelliGuard IQ systems have the same factory-set code, it is highly advisable that you set your own valet code. You may choose any 1-, 2-, or 3-digit code that does not have any zeros. You can also change your valet code whenever you want. Simply write down the 1-to-3 digit code you wish to use (remember, no zeros in the code), then refer to the User-selectable features section on pages 20-24.

Example

Let's say you want to set your valet code to 31. To do so, you would do the following:

1. From the Table of User-Selectable Features on pages 23 and 24, you would note that the "set a new secret valet code" feature is in column 4, row 6.
2. Enter program mode by turning on the ignition, entering your current valet code, then pressing the PlainView switch to its momentary side for 3 seconds until you hear a chirp.
3. Select column 4 by moving the switch between latched and center 4 times, i.e.: latched, center, latched, center, latched, center, latched, center. After a brief pause, you will hear 4 chirps to confirm that you have selected feature column 4.
4. Select row 6 by pressing and releasing the momentary side of the switch 6 times. To help you count, you will hear a chirp each time you press the momentary side.
5. Immediately flip the switch to the latched position.
6. Enter your new code. To enter 31 as your new code, you would press the switch in this manner: momentary, momentary, momentary, latched (you'll hear 3 chirps to confirm the first digit), momentary, latched (1 chirp to confirm the second digit), center.
7. Wait 3 seconds until you hear 2 chirps, indicating the new code has been accepted.
8. Turn off the ignition to exit program mode (you'll hear a 3-chirp confirmation).
9. **VERY IMPORTANT: You must immediately test your new secret valet code:** Turn on the ignition, enter your new code, then flip the switch to its latched position. The LED will illuminate. If it does not, the new code you programmed and the one you just entered do not match. *In such a case, the system will revert to the previous code.*

Remote controlled valet mode entry and exit

You can even enable or exit valet mode with your remote control simply by transmitting channel 9 (LevelShift twice, then button 1). In addition to the above indications, two parking light flashes will confirm that you have remotely enabled valet mode, while a single flash confirms exiting of valet mode.

Keyless entry in valet mode

Even if valet mode is enabled, you can still remotely control the convenience features. For instance, simply press button 1 (channel 1) as if you were disarming and the doors will unlock (indicated by one parking light flash) and the interior lights will turn on. Press button 1 again and the doors lock (confirmed by two flashes). You can also use the other channels to activate options such as a remote trunk release or remote engine starting.

Remote controlled sensor adjustments

Due to ever-changing conditions, all alarms require periodic fine-tuning of their sensors. An improperly adjusted sensor is the most common cause of false alarms. With other alarms, this requires repeated trips back to the dealer. Not so with IntelliGuard 700-IQ. You can adjust sensitivity electronically without tools and without even knowing where the sensor is mounted! If the setting(s) of the Piezo Sensor is either too sensitive or not sensitive enough, you may individually test and adjust the settings of each zone. To adjust the Piezo Sensor, just use the following procedure:

1. **Disarm** the system, then select the sensor zone you wish to adjust:
 - a. **Primary zone:** Transmit **channel 11** (LevelShift twice, then button 3).
 - b. **Warning zone:** Transmit **channel 12** (LevelShift twice, then button 4).
2. To **test** the current sensitivity setting:
 - a. **Primary zone:** Firmly **“thump”** the window pillar with the side of your fist. You will hear a chirp to confirm activation of the primary zone.
 - b. **Warning zone:** **“Thump”** the window pillar with somewhat less force. A chirp will confirm activation of the warning zone.
3. If you are not satisfied with the detection level and wish to **increase** sensitivity, press **button 2** on your remote control. To **decrease** it, press **button 4**. Each time you increase sensitivity, the siren will chirp in higher and higher pitched tones to confirm the higher sensitivity setting. Conversely, lower and lower tones confirm each sensitivity decrease. Two normal tone chirps indicate minimum and maximum settings. There are 16 sensitivity levels for each of the two sensing zones.
4. Repeat steps 2 and 3 until you are satisfied with the sensitivity, then press **button 1** to record the new sensitivity setting and exit the sensor test/adjust mode (you’ll hear three chirps to confirm exit). You may now either repeat steps 1–4 for the other sensor zone, or press button 1 again to arm the system.

Sound complicated? It really isn’t, there’s just a lot of explanation of what’s happening with each step. All you really have to do is the actions noted in **bold type**. Give it a try.

Remote controlled override of optional sensor #2

If you have an optional sensor, transmitting channel 10 within 10 seconds after arming the system will override the optional sensor. For instance, if you have an optional Proximity Sensor that picks up any movement inside the passenger compartment, you may use channel 10 to turn it off for those times when you must leave your pet or a passenger in the vehicle. Remote override of the optional sensor #2 is confirmed with four flashes of the parking lights.

FACT™— False Alarm Control and Test

With FACT, you’ll never experience repeated false alarms. If the MultiSound Medallion Siren goes off, DO NOT remotely disarm the system; allow it to run for the full siren duration. Before sounding the siren a second time, the system automatically checks for another activated trigger to verify that an intrusion is in progress. Should the siren sound again, you will know for sure that someone is tampering with your vehicle. (To disable FACT, see *User-selectable features* on pages 20-24.)

Selectable starter/ignition interrupt

At the time of installation, you can select whether your IntelliGuard 700-IQ interrupts the starter line or the ignition line. To verify which line is electronically interrupted, enter the vehicle, close the doors, arm the system while inside the vehicle, then try to start the engine. If the engine cranks but does not start, the ignition is bypassed. If it does not crank at all, the starter is disabled.

In addition, the starter/ignition interrupt will be set in either Fault-Proof mode, which lets you start the engine even in the unlikely event of a complete system failure, or Super-Security mode that ensures a thief won't be able to start the engine even if he cuts all the wires or finds the system control unit and disconnects it.

Changing the mode requires a minor relay wiring change and installer-only programming. Your local Authorized Clifford Dealer can make the changes for you.

Headlight Reminder

If you turn the ignition off and open the driver's door to exit the car without having turned off the headlights, you will be reminded to turn them off with a distinctive warning tone. If your vehicle already has a similar warning feature, you may turn off the IntelliGuard 700-IQ Headlight Reminder feature. See *User-selectable features* on pages 20-24.

AutoLock and AutoUnLock™

For your safety and that of your passengers, the doors automatically lock when you turn on the ignition to start the engine, and unlock when you turn the ignition off. To suit your preferences, you may turn off *either or both* the AutoLock and/or AutoUnLock features. There are four possibilities: AutoLock “on” while AutoUnLock is “off”, or vice-versa. The other two combinations are both AutoLock and AutoUnLock “on” or both “off.”

How to interpret the LED status indicator

The LED on your car's dashboard or console will inform you of the system status:

LED Condition	Meaning
Off	System is disarmed and in normal operating mode (i.e., valet mode is off)
On	Valet mode is on, the vehicle can be driven or serviced without having to disarm
Flashing	System is armed and protecting your vehicle
Pause between flashes	Either a malfunction (see page 17) or an intrusion was attempted (see page 18)

Automatic Battery-Saving Mode

To conserve vehicle battery power (the LED draws more current than the entire control unit), if the system has remained continuously armed for 48 hours, the flash rate will automatically slow to half the normal rate. After 96 hours, it slows to one-quarter.

Smart AutoTesting™

Each time you remotely arm the system, it tests all triggers and sensors. If the **hood or trunk** is open when you remotely arm, the system will **immediately** alert you of the problem by sounding **4 chirps** and **4 parking light flashes** instead of the usual 2 and 2. If a **door** is ajar, you will receive the usual 2 chirps and flashes, then, **5 seconds later**, there will be **4 chirps** and **4 flashes**. (This door ajar warning will not work on vehicles that have factory-delayed courtesy lights). If a **sensor** is malfunctioning, you will receive the usual 2 chirps and 2 flashes, then, **10 seconds later**, there will be **4 chirps** and **4 flashes**.

NOTE: Since this is a warning indication, you will hear the 4 chirps even if you have the chirp muting feature turned on.

■ **Specific malfunction identification:** The system can also indicate the **specific** trigger or sensor that is malfunctioning. If you get the 4-chirp/4-flash signal upon arming, perform the following to identify the malfunctioning trigger or sensor:

1. Remotely disarm, then turn on the ignition. The LED status indicator inside your vehicle will be flashing, pause, then repeat.
2. Count the number of blinks in one cycle between pauses (for your convenience, the

Number of LED blinks between pauses	Sensor/trigger indication
1 blink	Piezo Sensor
2 blinks	Optional sensor
3 blinks*	Door trigger*
4 blinks	Trunk trigger
5 blinks	Hood trigger

* If your vehicle has a factory-installed feature that turns off or dims the interior courtesy lights several seconds after you exit the vehicle, the system cannot provide this indication.

blink cycle repeats a total of 5 times) and refer to the chart below:

Automatic malfunction bypass

To provide the utmost protection even if a system component malfunctions, the system will automatically bypass any faulty point and arm all **other** triggers and sensors to provide the utmost possible protection until you can have the system serviced by your local Authorized Clifford Dealer. If you accidentally armed with the hood, trunk or a door open, just close the open point and the system will again monitor that point.

Multiple-event TotalRecall™

The system's memory records the identity of the last eight activated or malfunctioning triggers and sensors, which allows your installer to instantly track down malfunctions. To identify the triggers and sensors held in the system's memory, use the following procedure:

1. With the ignition OFF, flick the PlainView valet switch to its latched side.
2. Press button 1 to "arm" the system, then again to "disarm."

3. The LED will blink 1–5 times to indicate the most recently activated point, pause, blink 1–5 times to indicate the next most recently activated point, and so on.
4. Write down the number of blinks between pauses and refer to the chart above.

Smart prior intrusion attempt alert

Number of LED blinks between pauses	Sensor/trigger indication
1 blink	Piezo Sensor
2 blinks	Optional sensor
3 blinks	Door trigger
4 blinks	Trunk trigger
5 blinks	Hood trigger

If you hear three chirps when you remotely disarm, it means that a trigger or sensor was activated in your absence. When you enter the vehicle and turn on the ignition (or start the engine), the LED will blink 1–5 times, pause, then repeat the blink cycle 4 more times. Count the number of blinks in one cycle and refer to the chart below:

High-output MultiSound Medallion™ Siren

All the siren electronics are in the system control unit rather than the siren itself. This protects them from heat, dirt and exposure to the elements (other alarm companies' sirens are far more susceptible to failure). Your IntelliGuard 700-IQ also provides these additional features:

- **Personalized Siren Sounds:** Most alarm sirens have a single “warble” tone. A few offer “six-tone” sirens that either cannot be adjusted or require the physical destruction of certain circuit wires in order to change the sounds (the change is permanent and cannot be changed again). Your MultiSound Medallion Siren is different. As shipped from the factory, the siren sounds six different alarm sound patterns. However, you may turn any of the six alarm sounds on or off to create a different combination of sound patterns. In all, there are 64 different combinations you may select. If you set your own Personalized Siren Sounds and later hear a siren at a distance, *you will know for sure* whether it is your car or someone else's. See *User-selectable features* on pages 20-24.
- **QuietChirps™:** You can control the volume of the normal arm and disarm chirps. As shipped from the factory, your system issues full-volume chirp acknowledgments. If you prefer, you may reduce the chirp volume to a level that is clearly audible, yet less obtrusive. See the *User-selectable features* section on pages 20-24.
- **Long-term chirp silencing:** Whenever you wish, you may silence your IntelliGuard 700-IQ's arm and disarm chirps until you decide to restore them. The parking light flashes will continue to provide visual confirmation of remote controlled arming and disarming. See *User-selectable features* on pages 20-24.

- **Remote controlled chirp muting:** Remote controlled chirp muting capabilities are especially valuable when parking late at night in a quiet residential area or any other time when you want to arm or disarm silently. To arm or disarm silently, simply press button 3 (channel 3) on your remote control instead of the usual button 1 (channel 1).
- **Siren duration:** When the system detects an intrusion attempt, the alarm is set to sound for 30 seconds. However, if you prefer, you may change it to 60 seconds. See the *User-selectable features* section on pages 20-24.

Smart trunk release option

If the remote trunk release feature was installed, you may use the remote control's button 2 to remotely pop the trunk. Your IntelliGuard 700-IQ has a built-in electronic interlock to prevent unintentional activation of the remote trunk release when you drive, or when the system is armed.

SmartPowerUp™ II

If power to the system is ever removed, SmartPowerUp II ensures the system will automatically restore itself to its previous state when power is restored. So if a thief disconnects the power and then restores it in an attempt to start the car, the system will re-arm and instantly sound the siren while immobilizing the vehicle. If your vehicle is to be serviced by a mechanic, just put the system in valet mode via the remote control (see *Remote controlled valet mode entry and exit* on page 14). If the mechanic needs to interrupt power, your system will automatically return to its valet mode state when power is restored; there will be no alarm activation and no need to provide your mechanic with your remote control and instructions on how to use it.

User-selectable features

Your IntelliGuard 700-IQ allows you to set many of its features to your own personal preferences. Although the system's programming capabilities are very extensive, we have made the programming procedures very simple: to make a change, you just flick the PlainView switch a few times. Once you've changed a few settings, you'll find that programming IntelliGuard 700-IQ is so easy that you can even do it while driving! The system comes with all of its features pre-programmed as noted by the bold type in the *Table of user-selectable features* on pages 23-24. To change any of the settings, use the steps noted below. To restore the feature to its factory setting, just repeat the procedure:

How to change a user-selectable feature:

Briefly, here's how it will work:

- You will pick a feature from the Table on pages 23-24, noting the feature's column and row numbers.
- First you'll need to get into program mode by entering your valet code (see pages 13-14). After you have entered your valet code, press the momentary side of the PlainView switch until you hear a chirp. You're now in the "Feature Select" position.
- Next you'll press the latched side of the switch a number of times identical to the column number. Lastly, you will press the momentary side of the switch a number of times corresponding to the row number.

That's all there is to it! After you enter the feature's column and row numbers, you'll hear either **one chirp** to indicate that the feature has been **turned off**, or **two chirps** if **turned on**. It's easy once you've done it. Try the examples on page 21 to get the hang of it.

Step-by-step programming instructions

1. Refer to the *Table of user-selectable features* and make note of the column (across) number and the row (down) number of the feature(s) you wish to program.
2. *Turn on the ignition, or start the engine (skip this step if the engine is running).*
3. *Enter your valet code (see page 13), then press the PlainView switch to its momentary side for about 3 seconds until you hear a siren chirp (the system LED will also turn on to indicate program mode.) You are now in the "Feature Select" position.*
4. *Select the feature column: Toggle the switch in and out of the latched position the same number of times as the column number of the selected feature (NOTE: each latched-to-center motion is counted as one). Pause.* You will hear the same number of chirps as the column number you have selected, audibly confirming your selection.
5. *Select the feature row: Press and release the momentary side the same number of times as the feature's row number.* You'll will hear a chirp each time you press.
6. If there is a **NOTE** for the selected feature, perform the actions noted.
7. Pause. You will hear either one or two chirps: Two chirps = ON, one chirp = OFF.
8. You may select another feature, or you may exit program mode:
 - a. To select another feature in that column, repeat step 5 within the next 10 seconds (after 10 seconds, 3 chirps mean you are now back in the "Feature Select" position).
 - b. To select a different feature column, go to step 4.
 - c. To exit program mode, turn the ignition off (you'll hear 3 chirps and the LED will turn off to indicate exit of program mode). If driving, just wait 60 seconds and the system will automatically exit program mode.

EXAMPLE 1: Turn off siren sound number 2:

You can turn each of the siren's six different sound patterns on and off as you wish to create your own custom sound (see the *Personalized Siren Sounds* section on page 18 for more information). To turn off "Sound 2" you'll note that "Sound 2" is in column 1, row 2 of the Table (on pages 23-24). The "on" in bold type indicates the factory setting. The following example will turn that one sound off:

1. To enter program mode, turn on the ignition, enter your valet code (as noted on pages 13-14), then **hold** the switch in its *momentary* position until you hear a chirp.
2. Select column 1 by pressing *latched* and then back to *center* (wait for the one chirp to confirm column 1). To select row 2, press *momentary twice* (you'll hear a chirp each time you press the momentary side).
3. After a brief pause, you'll hear *one* chirp to confirm that sound #2 is now *off*.
4. Turn the ignition off. You'll hear 3 chirps, confirming automatic exit from the program mode, and you're done!

If you make an error, just turn off the ignition and start again. To turn siren sound 2 back on, just repeat steps 1-4. In step 3, you'll hear *two* chirps to confirm that siren sound 2 has been turned back *on*. Remember, one chirp = off, two chirps = on.

NOTE: You have 10 seconds to enter the row number after selecting the column number. If you wait too long, the system jumps back to the "Feature Select" position (this is indicated with 3 chirps). If you wait another 60 seconds, the system will exit program mode.

In *Example 2* below, you'll learn how easy it is to change the settings of several different features in just one session, without having to repeatedly turn the ignition on and off:

EXAMPLE 2: Turn off siren sound numbers 4 and 6, then turn on QuietChirps:

This time, we will change the settings of three different features in just one programming session: We will turn off sounds 4 and 6 and turn on the QuietChirps feature (see page 18). Here's all you have to do:

1. **Enter program mode** as previously noted (ignition on, enter your valet code, press the momentary side until you hear a chirp).
2. Since sound 4 is in column 1, row 4 of the Table, you will have to enter the latched side once and the momentary side four times. Therefore, move the switch to the latched position and back to center. Wait for a single chirp to confirm the selection of column 1. Within 10 seconds, press and release the momentary side of the switch 4 successive times. You will hear a chirp after each single press. These chirps will help you count the number of presses. After a brief pause, you'll hear 1 chirp to confirm that sound 4 is now off.
3. Since sound 6 is in column 1, row 6 and is in the same column as you just entered for sound 4, there is no need in this case to again select column 1. Therefore, you can go right away to the row selection (momentary side of the switch). Now, within 10 seconds, press the *momentary side six times* to jump to **row 6**. After a brief pause, you'll hear 1 chirp to confirm that sound 6 is now off.
4. Now look up the location of QuietChirps. Note that it's in **column 3, row 5** (latched, center, latched, center, latched, center, wait for the 3-chirp/column 3 confirmation, then 5 momentary presses). After a brief pause, you'll hear two

continued . . .

chirps to confirm that the QuietChirps feature is now on.

5. To exit the program mode, turn the **ignition off**. You'll hear 3 chirps to confirm program mode exit.

You just made three programming changes in only five steps. Easy, isn't it? Notice again that in step 3 on the previous page you did not have to re-select column 1. If you don't touch the switch, the system *stays* in the column for 10 seconds to allow you to select any other feature(s) in the same column without having to re-enter the column number. Of course, you can select a new column at any time.

If you wait more than 10 seconds, the system automatically jumps back to the "Feature Select" position. This is the "stand-by" position: ready for entry of a new programming selection. If no action is taken for the next 60 seconds, the system automatically exits program mode, perfect if you program while driving or if you forget to turn off the ignition.

Adding new remote controls

For other drivers in your family, or if you wish to control IntelliGuard IQ systems on your other cars with the same remote control, you can buy additional remote controls from *any* Clifford Dealer (or call our Customer Service Department at 800-824-3208) and program them into the system yourself. Each IntelliGuard 700-IQ will respond to as many as four 12-channel remote controls. To add a new remote control to the system, use the procedures noted in the *User-selectable features* section on pages 20-24.

How to erase the codes of lost or stolen remote controls

If one of your remote controls is ever lost or stolen, you can erase its digital codes from the system memory to make sure that the missing remote control can never be used to disarm your system. To do so, use the "Erase all channels" feature (feature column 2, row 6 on the *Table of user-selectable features* on pages 23-24). This will clear all remote control codes from the system memory. Then simply program each remaining and/or replacement remote control as noted in the *Adding new remote controls* section above.

Table of user-selectable features: 1 chirp = OFF, two chirps = ON.

Feature Select	Column 1 1st latched	Column 2 2nd latched	Column 3 3rd latched	Column 4 4th latched
Row 1 1st momentary	Sound 1: on/off info on page 18	Add new remote to channel 1 info on page 10 NOTE 1	AutoLock on/off info on page 16	AutoArming: on/off info on page 12
Row 2 2nd momentary	Sound 2: on/off info on page 18	Add new remote to channel 2 info on page 10 NOTE 2	AutoUnLock on/off info on page 16	AutoArm & Lock: on/off info on page 12
Row 3 3rd momentary	Sound 3: on/off info on page 18	Add new remote to channel 3 info on page 10 NOTE 3	FACT: on/off info on page 15	15-second entry delay: on/off info on page 11
Row 4 4th momentary	Sound 4: on/off info on page 18	Add new remote to channel 4 info on page 10 NOTE 4	AutoActivate timed accessory upon remote arming: on/off this feature is for installers only	★ Set headlight duration 1sec - 2min (30sec) info on page 10 NOTE 6
Row 5 5th momentary	Sound 5: on/off info on page 18	Erase all channels info on page 22 NOTE 5	QuietChirps: on/off info on page 18	Siren duration: 60/30 seconds (1/2 chirps) info on page 18
Row 6 6th momentary	Sound 6: on/off info on page 18	Headlight Reminder: on/off info on page 16	Long-term chirp silencing: on/off info on page 18	Set a new secret valet code info on page 14 NOTE 7

★ **WARNING:** If you have remote window and sunroof closure,

DO NOT CHANGE THIS SETTING: it requires installer-only adjustment. Changing the duration may cause damage.

Please Note: There is a column 5 that contains installer-only features; do not change any of these settings. If you accidentally select column 5, turn off the ignition.

- **NOTE 1:** Transmit channel 1 (or other channel of your choosing) of the new remote control. You will hear one chirp to confirm programming of channel 1.
- **NOTE 2:** Transmit channel 2 (or other channel of your choosing) of the new remote control. You will hear two chirps to confirm programming of channel 2.
- **NOTE 3:** Transmit channel 3 (or other channel of your choosing) of the new remote control. You will hear three chirps to confirm programming of channel 3.
- **NOTE 4:** Transmit channel 4 (or other channel of your choosing) of the new remote control. You will hear four chirps to confirm programming of channel 4.
- **NOTE 5:** When you hear one chirp, all remotes will have been erased from the system memory. You must now add the new and/or existing remote controls to the system (i.e., program channels 1–4 of each remote that will be used with your IntelliGuard 700-IQ).
- **NOTE 6:** The headlight timer starts as soon as you select this feature. When the duration you wish has been reached, press button 1 on the remote control. You will hear two chirps to confirm the new headlight timer duration.

- **NOTE 7: Immediately flip the switch to its latched position, then:**
 - a. Enter the new code you wish to use. The system will sound the same number of chirps as the digit you choose when you move the switch to the latched side (e.g., if the first digit is 4, you'll hear four chirps when you press the latched side).
 - b. Make sure to return the switch to its center position when complete.
 - c. **Wait 3 seconds until you hear 2 chirps**, indicating the new code has been accepted.
 - d. Turn the ignition off. You'll hear 3 chirps to confirm program mode exit and the LED will turn off.
 - e. **VERY IMPORTANT: You must immediately test your new secret valet code:** Turn the ignition on, enter your new code, then flip the switch to its latched position. The LED will illuminate. If it does not, the new code you programmed and the one you just entered do not match. **The system has reverted to the previous code.**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>