

Cuisinart®

INSTRUCTION AND
RECIPE BOOKLET



Pro Custom 11™ Food Processor

DLC-8S Series

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

IMPORTANT SAFEGUARDS

Always follow these safety precautions when using this appliance.

Getting Ready

1. Read all instructions.
2. Blades are sharp. Handle them carefully.
3. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. To unplug, grasp plug and pull from electrical outlet. Never pull cord.
4. Do not use outdoors.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate any appliance with damaged cord or plug, or after appliance has been dropped or damaged in any way. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.

Operation

1. Do not use pusher assembly if sleeve becomes detached from pusher.
2. Keep hands as well as spatulas and other utensils away from moving blades or discs while processing food, to prevent possibility of severe personal injury or damage to food processor. A plastic scraper may be used but must be used only when food processor motor is stopped.
3. Avoid contact with moving parts. Never push food down by hand when slicing or shredding. Always use pusher.

4. Make sure motor has completely stopped before removing cover. (If machine does not stop within 4 seconds when you turn cover, call 1-800-726-0190 for assistance. Do not use machine).

5. Never store any blade or disc on motor shaft. To reduce the risk of injury, no blade or disc should be placed on the shaft except when the bowl is properly locked in place and the processor is in use. Store blades and discs, as you would sharp knives, out of reach of children.
6. Be sure cover is securely locked in place before operating food processor.
7. Do not try to override cover interlock mechanism.

Cleaning

To protect against risk of electrical shock, do not put base in water or other liquid.

General

1. Close supervision is necessary when any appliance is used by or near children.
2. Do not operate this, or any other motor-driven appliance, while under the influence of alcohol or other substances that affect your reaction time or perception.
3. The food processor is UL listed for household use. Use it only for food preparation as described in the accompanying recipe and technique book.
4. The use of attachments not recommended or sold by Cuisinart, may cause fire, electrical shock, personal injury or damage to your food processor.
5. To avoid possible malfunction of work bowl switch, never store processor with pusher assembly

in locked position.

6. Maximum rating of 5.2 amperes is based on attachment that draws greatest current. Other recommended attachments may draw significantly less current.

SAVE THESE INSTRUCTIONS

NOTICE

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Compact Cover

1. Do not use the Compact Cover when mixing hot, thin liquids such as soups or sauces. If you do, it is possible that hot liquid may splash and injure you.
2. DO NOT use any slicing, shredding, julienne, French fry-cut or fine grater discs with the Compact Cover. Doing so may expose the user to injury.
3. Although the Cuisinart® Compact Cover may seem compatible with machines from other manufacturers, using the cover with other machines may be dangerous and may expose the user to injury. We specifically caution you not to use the Compact Cover with other brand machines.

FOR HOUSEHOLD USE ONLY


CONTENTS

1

IMPORTANT SAFEGUARDS		PROBLEMS & SOLUTIONS FOR MAKING DOUGH	14
THE PARTS	2	PREPARING FOOD FOR SLICING AND SHREDDING	16
PRACTICING WITH FOOD	4	ROUND FRUITS AND VEGETABLES	16
REMOVING PROCESSED FOOD	5	WHOLE PEPPERS	16
CHOPPING, PURÉEING & MIXING WITH METAL BLADE	6	LARGE FRUITS LIKE PINEAPPLE, CANTALOUPE	16
TO CHOP RAW FRUITS AND VEGETABLES	6	CABBAGE AND ICEBERG LETTUCE	16
TO PURÉE FRUIT AND COOKED VEGETABLES	6	FOOD DOESN'T FIT FEED TUBE	17
TO CHOP HARD FOOD LIKE GARLIC, HARD CHEESE	7	PRACTICING SLICING AND SHREDDING	18
TO CHOP PARSLEY, OTHER FRESH HERBS	7	REMOVING SLICED OR SHREDDED FOODS	19
TO CHOP PEEL FROM CITRUS FRUIT	7	SLICING AND SHREDDING TECHNIQUES	20
TO CHOP STICKY FRUIT LIKE DATES	7	FRUITS AND VEGETABLES	20
TO CHOP MEAT, POULTRY AND FISH	8	SMALL AMOUNTS OF FOOD	20
TO PURÉE MEAT, POULTRY AND FISH	8	FRENCH-CUT GREEN BEANS	21
TO CHOP NUTS	9	MATCHSTICKS OR JULIENNE STRIPS	21
TO MAKE PEANUT BUTTER	9	SLICING COOKED MEAT AND POULTRY	22
TO MAKE FLAVORED BUTTERS, SPREADS AND DIPS	9	SLICING UNCOOKED MEAT AND POULTRY	22
TO MAKE MAYONNAISE	10	SLICING FRANKFURTERS, SALAMI AND OTHER SAUSAGES	22
TO BEAT EGG WHITES	10	SLICING AND SHREDDING CHEESE	23
TO WHIP CREAM	10	IF YOU HAVE A PROBLEM	24
TO MAKE CRUMBS AND CRUMB CRUSTS	11	CLEANING AND STORING	24
TO MAKE PASTRY	11	FOR YOUR SAFETY	25
TO MAKE QUICK BREADS AND CAKES	11	SOME TECHNICAL DATA	25
TO MAKE CAKE MIX	11	RECIPES	26
KNEADING YEAST DOUGH WITH DOUGH BLADE	12	BOWL CAPACITY	26
TYPICAL DOUGH	12	WARRANTY	46
MACHINE CAPACITY	12		
USING THE RIGHT BLADE	12		
MEASURING THE FLOUR	12		
PROOFING THE YEAST	12		
PROCESSING DRY INGREDIENTS	13		
ADDING LIQUIDS	13		
KNEADING DOUGH	13		
RISING	13		
SHAPING, FINISHING AND BAKING	13		
MAKING CONSECUTIVE BATCHES	13		

THE PARTS

2

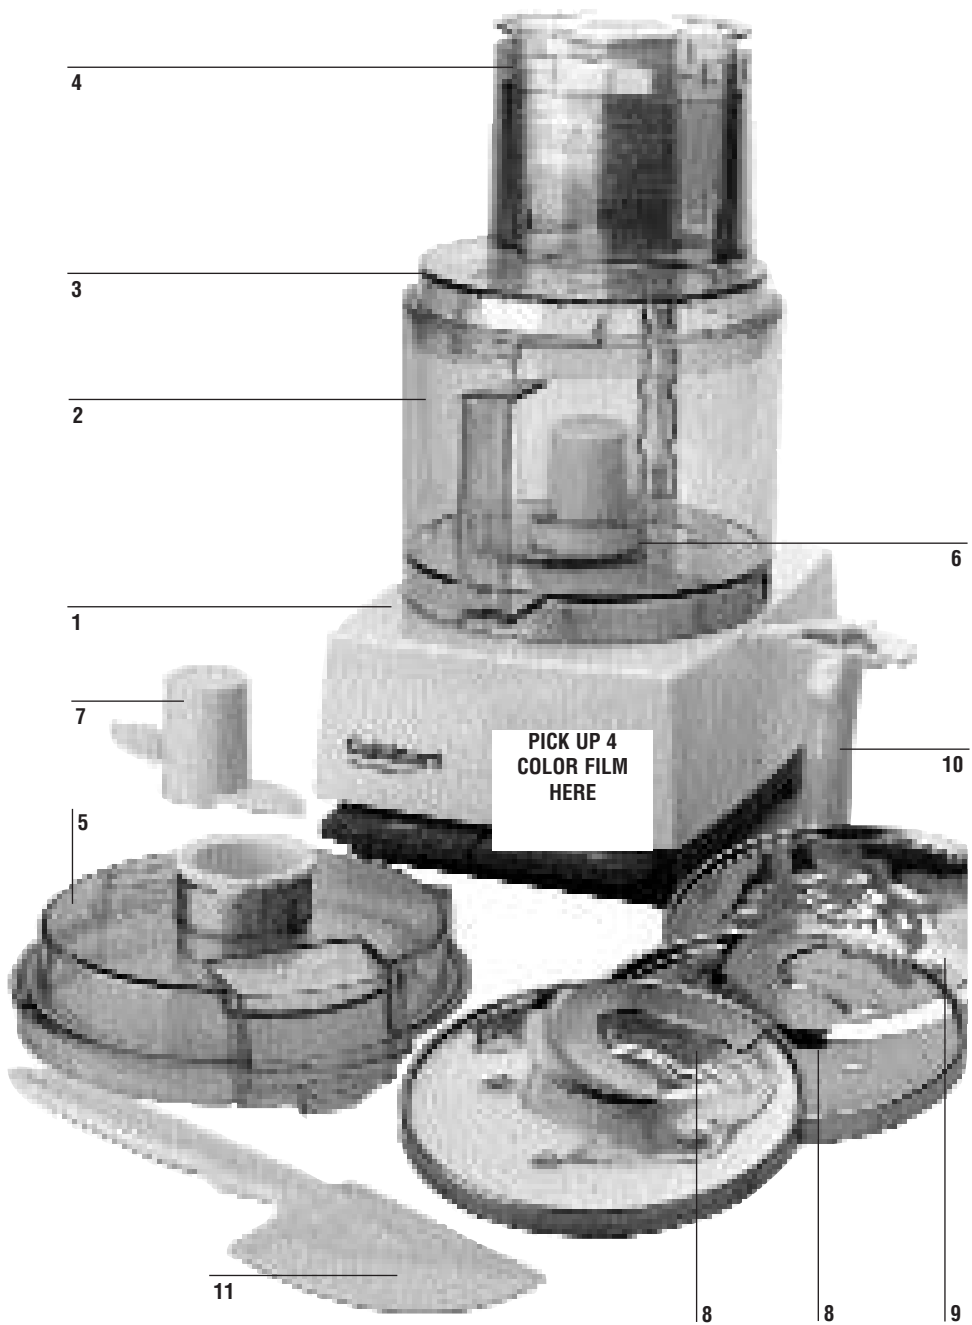

Your Cuisinart® Pro Custom 11™ Food Processor is a compact and versatile appliance that chops, minces, shreds, grates, slices, blends, purées, emulsifies, mixes and kneads - all with great efficiency and speed. The large feed tube allows you to make whole slices of large fruits and vegetables like potatoes, tomatoes and apples.

The machine includes:

1. Motor base with a vertically projecting shaft and two large control levers.
2. Work bowl.
3. Cover with a large feed tube.
4. Pusher assembly that slides over the feed tube.
5. Compact cover with cap for chopping/baking.
6. Sharp metal chopping/mixing blade.
7. Plastic dough blade.
8. Two serrated slicing discs: 1 medium and 1 thin.
9. Shredding disc.
10. Detachable stem that fits all discs.
11. Plastic spatula.

The **metal blade** chops raw and cooked fruits, vegetables, meat, fish and cheese to the exact consistency you want - from coarse to fine, even to a purée. You control the texture. It chops nuts, makes nut butters, mayonnaise and sauces, and mixes tender, flaky pastry. The metal blade also mixes cakes, frosting, cookies, quick breads, muffins and biscuits.

The **dough blade** mixes and kneads more efficiently than the metal blade *when your recipe calls for more than 3-1/2 cups (875 mL) of flour*. A locking device prevents heavy dough from driving the blade up on the shaft.

The **standard slicing disc** makes beautiful whole slices. It slices whole fruits and vegetables, cooked meat, semi-frozen raw meat and thin loaves of bread.

The **thin slicing disc** is perfect for slicing cabbage, onions, radishes, mushrooms, celery, potatoes and cucumbers.

The **medium shredding disc** processes most firm and hard cheese into long, attractive shreds. It also shreds vegetables like potatoes, carrots and zucchini, and processes nuts and chocolate to a grated texture.

The **detachable stem** fits all discs, making storage easy in limited space.

The **pusher assembly** has 3 parts.



1. The small removable white pusher fits into the small feed tube. This tube is for narrow food like carrots, for adding liquid, and for continuous feeding of small hard food like garlic.

2. The large pusher is permanently attached to the sleeve, but moves freely within it - except when the slide lock on the sleeve is locked in place over the large feed tube.

3. The bottom sleeve has two descending tabs. One locks the sleeve to the work bowl (white lock); the other pushes down an activating rod at the back of the bowl, permitting the motor to start.

PRACTICING WITH FOOD

4

PICK UP 4 COLOR PHOTOS
FROM FILM

PICK UP 4 COLOR PHOTOS
FROM FILM

PICK UP 4 COLOR PHOTOS
FROM FILM

Try chopping some practice foods before you process food to eat. A zucchini or potato is a good choice. First cut into 1-inch pieces.

Insert the metal blade and put the pieces in the work bowl. Put on the cover; press the pusher assembly down to lock it into place. Press and release the OFF/PULSE lever two or three times and see what happens. Each time the blade stops, let the pieces drop to the bottom of the bowl before you pulse again. That puts them in the path of the blade each time the motor starts.

Using the pulse/chopping technique, you can get an even chop without danger of over-processing. Check the texture frequently by looking through the cover of the work bowl. If you want a finer chop, press and release the OFF/PULSE lever until you achieve the desired texture. Onions and other food with a high water content will quickly end up as a purée unless examined through the work bowl after each pulse to make sure they are not overprocessed.

Try chopping other food, like meat for hamburger or sausage. Then make mayonnaise, pastry or bread, as described in the recipes in this book. To obtain consistent results:

► Be sure all the pieces you add to the bowl are about the **same size**.

► Be sure the **amount you process** is no larger than recommended. (See page 26).

REMOVING PROCESSED FOOD

5

Before you do anything, wait for the blade to stop spinning.


Once it does, remove the cover first. You can remove the cover and pusher assembly in one operation. Hold the pusher assembly with your fingers **away** from the descending tabs and turn it clockwise. Lift it off, and the cover will come with it.

Never try to remove the cover and the work bowl together; this may damage the work bowl.

Always remove the bowl from the base of the machine before removing the blade, as the blade creates a seal to prevent food from leaking. Turn the bowl clockwise to unlock it from the base, and lift it straight up to remove.

To prevent the blade from falling out of the work bowl onto your hand, use one of the three methods shown.

Be sure your hands are dry. Remove the metal blade before tilting the bowl (1.), using a spatula to scrape off any food. Or insert your finger through the hole in the bottom of the work bowl, gripping the blade from the bottom, and grip the outside of the work bowl with your thumb (2.). Or hold the blade in place with your finger or a spatula while pouring out processed food (3.).

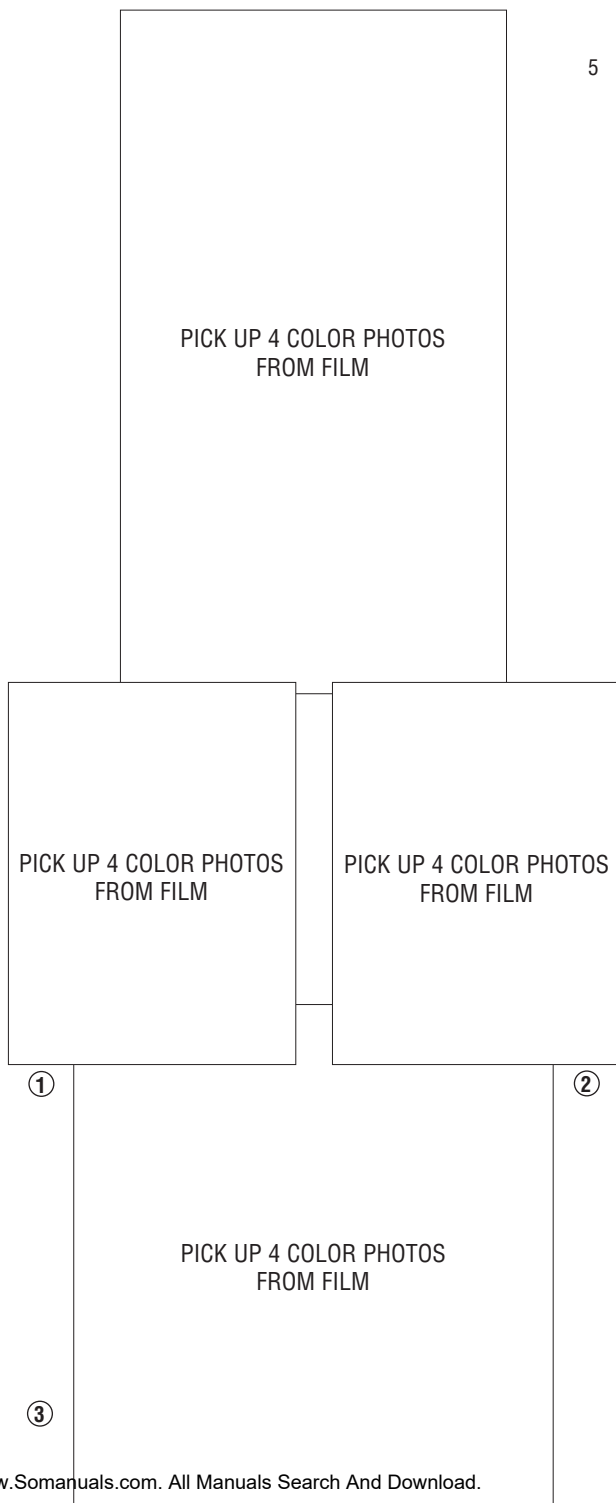

CHOPPING AND PURÉEING WITH THE METAL BLADE

6

To chop raw fruits and vegetables


Cut the food into 1-inch pieces. You get a more even chop when all pieces are about the same size.

Put no more than the recommended amount of food into the work bowl. (See page 26). Lock the cover in place. Press the OFF/PULSE lever at the rate of 1 second on, 1 second off until the food is coarsely chopped. Then hold down the OFF/PULSE lever, letting the machine run continuously until the food is chopped. Check frequently to avoid overprocessing. Use the spatula to scrape down any pieces that stick to the sides.


To purée fruit and cooked vegetables

Cut the food into 1-inch pieces. You get a smoother purée faster when all pieces are about equal in size. Put no more than the recommended amount of food in the work bowl. (See page 26). Lock the cover in place. Pulse to chop coarsely, then press the ON lever and process continuously until the food is puréed. (NOTE: Cooked potatoes are an exception to this procedure. They develop a gluey texture when processed with the metal blade. See the recipe for mashed potatoes at the end of the book.)

► When making soup, you will want to purée vegetables that have cooked in liquid. *Don't add the liquid to the work bowl* - just the cooked vegetables;

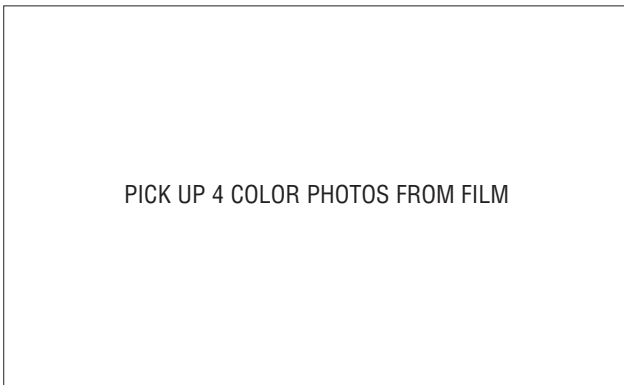

PICK UP 4 COLOR PHOTOS FROM FILM

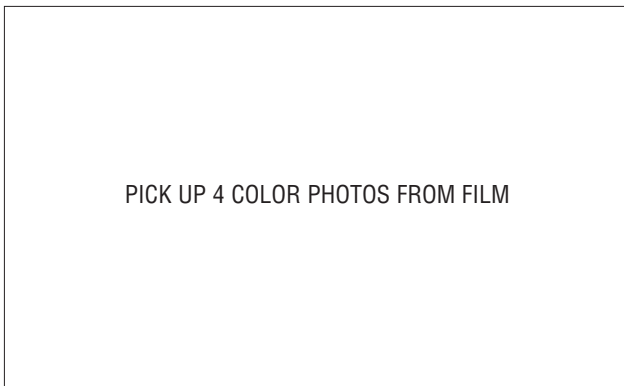

PICK UP 4 COLOR PHOTOS FROM FILM

remove them with a slotted spoon. They will purée faster and smoother without liquid. Then add just enough liquid to make the purée pourable, return it to the soup liquid and stir to combine.

► Occasionally, a piece of food may become wedged between the blade and the work bowl. If this happens, remove the cover, lift the blade out carefully and

remove the wedged piece. Empty the bowl, reinsert the blade and lock the cover into place, first removing the small pusher. Press the ON lever and drop the food pieces through the small feed tube while the machine is running. After adding a cupful this way, add the remaining food to the bowl and process in the usual way.

To chop hard food like garlic, hard cheese

Small foods like garlic can be dropped in whole. Larger foods like hard cheese should be cut into 1-inch pieces. Remove the small pusher, press the ON lever and drop the food through the small feed tube while the machine is running.

This method of processing minces garlic, shallots and onions. Hard cheese and coconut will have the same texture as if they had been hand grated.

IMPORTANT: Never try to process cheese that is too hard to cut with a knife. You may damage the blade or the machine.

To chop parsley and other fresh herbs

The herbs, the work bowl and the metal blade must all be thoroughly clean and dry. Remove stems from herbs. Add leaves to bowl and process until they are chopped as fine as you want. The more herbs you chop at a time, the finer chop you can obtain. If completely dry when chopped, parsley and other herbs will keep for at least 10 days, stored in an airtight bag in the refrigerator. They may be frozen for months, stored in an airtight container or bag.

To chop peel from citrus fruit (zest) or to chop sticky fruit like dates or raisins

For citrus, remove only the peel (zest) with a vegetable peeler. Do not remove the white pith, which is bitter tasting. Cut the peel into lengths of 2 inches or less and process with 1/2 cup of granulated sugar from the recipe until finely chopped. This may take 2 minutes or longer.

For sticky fruit like dates, raisins, prunes and candied fruit, first freeze the fruit for about 10 minutes. Add to it some of the flour called for in the recipe. Use no more than 1 cup of flour for each cup of fruit.

COMPACT FLAT COVER

Use the Compact Cover for added convenience when your recipe calls for chopping, mixing, puréeing and kneading. It is particularly useful when you are preparing baked goods such as cakes, cookies, pies and breads.



To assemble the Compact Cover

Begin with the work bowl and the metal blade or dough blade in place. Place the Compact Cover on the work bowl so that the *Cuisinart logo written on the cover* is face up and readable. Then turn cover **COUNTER-CLOCKWISE** to lock into place.

Make sure the small cap is in place before using.

To disassemble the Compact Cover:

Place one hand near the Cuisinart logo and one hand on opposite end of cover; turn cover **CLOCKWISE**. Lift cover up and off work bowl. Do not use the Compact Cover with any of the slicing or shredding discs.

CHOPPING AND PURÉEING WITH THE METAL BLADE

8

To chop meat, poultry, fish and seafood

The food should be very cold, but not frozen. Cut it into 1-inch pieces to ensure an even chop. Process no more than the recommended amount at a time. (See page 26). Press the OFF/PULSE lever 3 or 4 times at a rate of 1 second on, 1 second off. If the food is not chopped fine enough, let the processor run continuously for a few seconds. Check the texture often to avoid overprocessing. Use a spatula to scrape food from the sides of the bowl as necessary.

To purée meat, poultry, fish and seafood

Prepare the food as described above. Pulse until it is evenly chopped, then process continuously to the desired texture. Scrape the bowl with a spatula as needed.

Leave the purée in the work bowl and add eggs, cream and seasonings as called for by the recipe. Process to combine thoroughly.

Remember **you** control texture by the length of time you process.

PICK UP 4 COLOR PHOTOS FROM FILM

PICK UP 4 COLOR PHOTOS FROM FILM

To chop nuts

Chop no more than the recommended amount at one time. (See page 26). Press and release the OFF/PULSE lever and check frequently to avoid letting powdered nuts clump together in a nut butter.

When a recipe calls for flour or sugar, add some to the nuts before you chop them— about 1/2 cup for each cup of nuts. This allows you to chop the nuts as fine as you want without turning them into a nut butter.

You can also chop nuts with a shredding disc. The optional Fine Shredding Disc is particularly good.

To make peanut butter and other nut butters

Process up to the recommended amount of nuts. (See page 26). Let the machine run continuously. After 2 or 3 minutes, the ground nuts will form a ball that will gradually smooth out. Scrape the sides of the bowl and continue processing until drops of oil are visible. Taste for consistency. The longer you process, the softer the butter will be. For chunk style, add a handful of nuts just after the ball of nut butter begins to smooth out. To make cashew butter, add a little bland vegetable oil. Processor nut butters contain no preservatives. Store in the refrigerator to keep them from separating.

To make flavored butter, spreads and dips

Cut room-temperature butter into tablespoon size pieces and reserve. Process flavoring ingredients first—anchovies, cheese, herbs, etc.—chopping them fine. Be sure the work bowl is clean and dry. Then add small hard ingredients like garlic and hard cheese through the feed tube while the machine is running. Next, add the butter pieces and process until smooth. Add any liquid ingredients last, while the processor is running, and process just long enough to blend. Process ingredients for spreads and dips in the same way. All ingredients should be at room temperature and cut into 1-inch cubes, or added by tablespoonfuls.

PICK UP 4 COLOR PHOTOS
FROM FILM

PICK UP 4 COLOR PHOTOS
FROM FILM

PICK UP 4 COLOR PHOTOS
FROM FILM

TECHNIQUES FOR CHOPPING AND PURÉEING WITH THE METAL BLADE

To make mayonnaise

You can make foolproof home-made mayonnaise with your Pro Custom 11™. The work bowl and metal blade must be clean and dry.

Foods prepared with raw eggs may contain salmonella or other potentially harmful bacteria. Because egg yolks are a fine growth medium for bacteria, we recommend that you cook them for use in mayonnaise, Hollandaise sauce, Caesar salad dressing, chilled soufflés, chilled chiffons, mousses and other recipes calling for raw egg yolks. For mayonnaise, we recommend using either the “cooked egg” mayonnaise on page 38, or using the following method with pasteurized liquid eggs.

For a “one egg” batch of basic mayonnaise made with pasteurized liquid eggs, place 1/4 cup pasteurized liquid eggs, 2 tablespoons wine vinegar or lemon juice, 1 teaspoon dry mustard, 1/2 teaspoon kosher salt and a pinch of ground white pepper in the work bowl. With the machine running, add 1/2 cup of vegetable oil to the small pusher and allow to slowly drip into the mixture while processing. After all the oil has dripped through, add another 1/2 cup of vegetable oil to the small pusher and allow to drip through. The mixture will form a thick emulsion. For variation, you may experiment with using flavored vinegars, adding chopped fresh herbs, dry herbs, or roasted garlic to taste. To make your mayonnaise a little lighter, add some well-drained plain fat-free yogurt to taste.

To beat egg whites

The work bowl and metal blade must be absolutely clean.

Add 3 or more egg whites and press the ON lever. Add about 1 teaspoon of lemon juice or vinegar for every egg white. Vinegar makes stiffer whites; its flavor is hardly detectable in cakes or soufflés. Continue processing until the egg whites hold their shape - about 1-1/2 to 2-1/2 minutes.

Egg whites may be folded into batters and baked. We do not recommend serving uncooked egg whites.

PICK UP 4 COLOR PHOTOS FROM FILM

To whip cream

Processor whipped cream holds its shape very well. It is good for decoration or as a topping for gingerbread, berries and other desserts.

Chill the cream well before starting. Using the Metal blade process continuously until it begins to thicken; add sugar as desired and continue processing. Watch carefully until the cream reaches the desired consistency. For consistently reliable results, add 2 tablespoons of non-fat dried milk for every cup of cream, before whipping.

Processor whipped cream does not whip to the light, fluffy consistency obtained by methods that beat in more air. Use the optional Whisk Attachment for the fluffiest whipped cream.

To make bread, cracker and cookie crumbs and crumb crusts

Cut or break bread, crackers or cookies into 1-inch pieces and put them in the work bowl. Process continuously until they reach the desired texture. For seasoned crumbs, chop parsley or other fresh herbs with the crumbs. For buttered crumbs, process until the dry crumbs are of the desired texture, then dribble melted butter through the small feed tube while the machine is running.

For crumb crusts, process crackers or cookies as described above. Add sugar, spices and butter, cut into 1-inch pieces, as specified by your recipe. Process until well combined.

To make pastry

This describes the general

procedure. A recipe giving exact proportions is on page 39.

Combine unbleached all-purpose flour, salt and 1-inch pieces of very cold butter in the work bowl. Process to the consistency of cornmeal. While the machine is running, pour ice water through the feed tube. Stop processing as soon as the dough begins to form a ball, to ensure tender, flaky pastry. Use the dough immediately or form it into a round disc about 1 inch thick. Wrap it in plastic wrap and refrigerate or freeze for later use.

To make quick breads, and cakes that use baking powder and/or soda.

The most important rule for success is not to overmix after the flour is added. The ingredients for these soft doughs should be cold. If the recipe calls for chopped ingredients like lemon peel or nuts, chop them first while the work bowl is clean and dry. Then set them aside until needed. (Always use sugar when chopping lemon peel; see page 7.)

Put dry ingredients like flour, salt and leavening in the work bowl and process with the metal blade for 5 seconds to mix them. Remove and reserve the dry ingredients.

Add the eggs and sugar to the work bowl and process to mix, letting the machine run about 1 minute. Next, add 1-inch pieces of butter, at room temperature. Let the machine run continuously for a minute, until the butter is thoroughly mixed with the sugar and eggs. Then add flavoring and

liquid – vanilla, spices, cocoa, etc. Process until mixed. Add the dry ingredients to the work bowl.

Process by pulsing, inspecting after each pulse. Stop pulsing as soon as the dry ingredients have almost disappeared into the batter. Overprocessing will cause quick breads and cakes to be tough. (If your recipe calls for ingredients that are to be coarsely chopped - like raisins or nuts - add them last with the mixed dry ingredients.)

To make cake mix

Your food processor work bowl is large enough for the preparation of an 18.5-ounce packaged cake mix.

Insert the metal blade and add the cake mix to the work bowl. While the machine is running, add the eggs and liquid through the small feed tube and process for 5 seconds. Scrape down the side of the work bowl and process again for 1 minute for maximum volume. Remove the work bowl from the base but do not remove the metal blade. Insert your finger into the underside of the blade from the bottom of the work bowl to hold the blade in place while emptying the batter.

Tip:

After emptying cake batter or puréed soup from the work bowl, replace the bowl on the motor base. Insert the metal blade and pulse once. Centrifugal force will spin the batter off the blade onto the side of the work bowl. Remove the blade, and use the spatula to scrape any remaining batter from the bowl.

TECHNIQUES FOR KNEADING YEAST DOUGH WITH THE DOUGH BLADE

12


The Pro Custom 11™ Food Processor can mix and knead dough in a fraction of the time it takes to do it by hand. You will get perfect results every time if you follow these directions. NEVER TRY TO PROCESS DOUGH THAT IS TOO STIFF TO KNEAD COMFORTABLY BY HAND.

There are two general types of yeast dough.

1. Typical bread dough is made with a flour mix that contains at least 50% white flour. It is uniformly soft, pliable and slightly sticky when properly kneaded. It always cleans the inside of the work bowl completely when properly kneaded.



2. Typical sweet dough contains a higher proportion of sugar, butter and/or eggs than typical bread dough. It is rich and sticky, and it does not clean the inside of the work bowl. It requires less kneading after the ingredients are mixed. Although 30 seconds is usually sufficient, 60 to 90 seconds gives better results if the machine does not slow down. Except for kneading, described below, the processing procedures are the same for both types of dough.

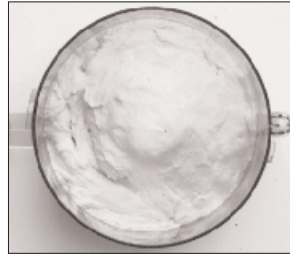

Machine capacity

Typical bread dough:

5 cups all-purpose flour
3 cups whole-grain flour

Typical sweet dough:

3 1/2 cups all-purpose flour

If a bread dough recipe calls for more than the recommended amount of flour, mix and knead it in equal batches.

Using the right blade

Use the plastic dough blade when the recipe calls for more than 3-1/2 cups of flour. Use the metal blade when a recipe calls for less than 3-1/2 cups of flour. Because the dough blade does not extend to the outside rim of the work bowl, it cannot pick up all the flour when small amounts are processed.

Whichever blade you use, always push it down as far as it will go on the motor shaft.

Measuring the flour


It's best to weigh it. If you don't have a scale, or the recipe doesn't specify weight, measure by the "stir, scoop and sweep" method. Use a standard, graduated dry measure, not a cup for liquid ingredients.

With a spoon or fork, *stir* the flour in its container. With the dry measure, *scoop* up the flour so it overflows. With a spatula, knife or chopstick—being careful not to press down—*sweep* excess flour back into the container so the top of the measure is level.



Proofing the yeast

The expiration date is marked on the packages. To be sure your yeast is active, dissolve it in a small amount of warm liquid (about 1/3 cup for one package of dry yeast). The temperature of liquids used to dissolve and activate yeast must be between 105°F and 120°F. Yeast cells are not activated at temperatures lower than this, and they die when exposed to temperatures higher than 130°F. If the recipe includes a sweetener like sugar or honey, add a tablespoon with the yeast. If no sweetener is called for, add a pinch. *The yeast won't foam without it.* Let the mixture stand until it foams—up to 10 minutes.

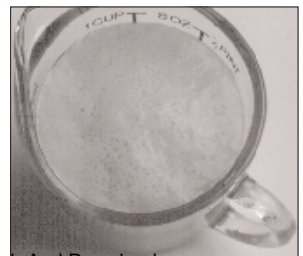

Processing dry ingredients

Put the flour and other dry ingredients in the work bowl. If the recipe calls for herbs, oil or solid fats like butter, add them with the flour. Turn the machine on, and let it run for about 20 seconds.

Adding liquids

All liquid should be added through the feed tube while the machine is running. Add liquid in a slow, steady stream, only as fast as dry ingredients absorb it. If liquid sloshes or splatters, stop adding it but do not turn off machine. Wait until ingredients in bowl have mixed, then add remaining liquid slowly. Pour liquid onto dough as it passes under feed tube opening. Do not pour liquid directly onto bottom of bowl.

Follow the recipe carefully. It is important to add enough liquid to make the dough soft enough to knead. Kneading dough that is too stiff can strain the machine.

All liquid *except* that used to activate yeast should be cold, to minimize the possibility of overheating the dough. You must never knead a yeast dough to a temperature higher than 100°F. Doing so will slow or even prevent the action of the yeast.

Kneading bread dough

Do not try to use the machine to knead dough that is too stiff to knead comfortably by hand. Doing so can strain the machine.

Kneading typical bread dough

After the dough starts to clean the inside of the work bowl completely and forms a ball, process it for 60 seconds to knead it. Stop the machine and test the dough to be sure it's properly kneaded. Typical bread dough should have a soft, pliable texture and it should feel slightly sticky. Stretch the dough with your hands to test it. If it feels hard, lumpy or uneven, continue processing until it feels uniformly soft and pliable. Make sure that the blade is firmly pressed back into place after removing the dough to test it.

Kneading typical sweet dough

Process dough for at least 30 seconds after all the ingredients are incorporated. It will not clean the inside of the work bowl. If necessary, scrape the bowl and process for 5 more seconds.

Adding other ingredients

Cheese, nuts and raisins may be added with the dry ingredients or during the final kneading. To leave them almost whole, add them through the feed tube 5 seconds before you stop kneading. For a finer texture, add them with the dry ingredients.

Rising

Put the dough in a large, lightly floured plastic food storage bag. Squeeze out all the air and close the bag, allowing space for the dough to rise. Or put the ball of dough in a large bowl coated with soft butter or vegetable oil. Roll the dough around to coat its entire surface. Cover it with a

damp towel or a piece of oiled plastic wrap.

Let it rise in a warm, draft-free place — about 80°F. The rising time is usually about 1-1/2 hours but will vary from 45 minutes to several hours, depending on the type of flour and the humidity of the air. To test if the dough has risen enough, stick your finger in it. An indentation should remain. If it doesn't, let the dough rise more and test again. When it has risen enough, punch the dough down. It is now ready to shape.

Shaping, finishing and baking

If you shape the dough in loaf pans, coat them with vegetable oil cooking spray and fill them only half full. Let rise until dough is just slightly above the top of the pan. If shaping free-form loaves, let them rise on an oiled baking sheet until at least doubled in bulk.

Making consecutive batches

You can make several batches of bread dough in a row.

The motor in the Pro Custom 11™ Food Processor is extremely efficient. Follow the recipe for White Bread, pg. 41.

TECHNIQUES FOR KNEADING YEAST DOUGH WITH THE DOUGH BLADE

Problems and Solutions with Bread Doughs

Blade doesn't incorporate ingredients

Always start processor before adding liquid. Add liquid in slow, steady stream, only as fast as dry ingredients absorb it. If you hear liquid sloshing, stop adding it but do not turn off machine. Instead, wait until ingredients in work bowl have mixed, then add remaining liquid slowly. Pour liquid onto dough as it passes under feed tube; do not pour liquid directly onto bottom of work bowl.

Blade doesn't incorporate ingredients

Butter or margarine, if not melted, must be cut into tablespoon-size pieces before being added to work bowl.

Blade rises in work bowl

Blade may not have been pushed down as far as it will go before processing started. Machine may be overloaded. Stop it, remove half the dough and process in 2

batches. Excessively sticky dough can cause blade to rise even though it cleans inside of work bowl. If dough feels very sticky, reinsert blade and immediately add 2 tablespoons flour through feed tube while machine is running.

Dough doesn't clean inside of work bowl

- Amount of dough may exceed maximum capacity of your food processor. Remove half and process in 2 batches. See page 12 for machine capacity.
- Dough may be too dry.

If it feels crumbly, add water - 1 tablespoon at a time - while machine is running, until dough becomes moist and cleans inside of work bowl. Wait 10 seconds between additions of water.

- Dough may be too wet.

While machine is running, add 1 tablespoon of flour. If necessary, add more - 1 tablespoon at a time - until dough cleans inside of work bowl and forms a ball.

- Plastic dough blade is intended only for recipes calling for at least 3-1/2 cups of flour. If your recipe

calls for less flour, remove plastic dough blade and insert metal blade. Always use metal blade for recipes calling for less than 3-1/2 cups of flour, such as pizza dough.

Nub of dough forms on top of blade and does not become uniformly kneaded

Stop machine, carefully remove dough, divide it into 3 pieces and redistribute them evenly in work bowl. Make sure that blade is firmly pressed back into place after removing the dough. Continue processing until dough is uniformly soft and pliable.

Dough feels tough after kneading

Divide dough into 2 or 3 pieces and redistribute evenly in bowl. Process 10 seconds or until uniformly soft and pliable.

Soft dough or liquid leaks onto base of food processor


Always start processor before adding liquid and add liquid only as fast as dry ingredients absorb it.



Nub of dough forms.



Dough is too dry.

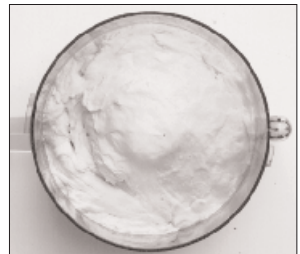

Dough is too wet and sticky.

Motor stops

- If using large feed tube cover, the pusher assembly may have come unlocked. Push down pusher sleeve to lock it into place and continue processing.
- Cover may have come unlocked. Lock cover and continue processing.
- Power cord may be unplugged.
- Excessive strain may have caused motor to overheat and stop. Wait for the motor to cool, 5-10 minutes. A safety protector in the motor protects it against excessive overheating. If the motor stops, turn the machine off. After 5-10 minutes, divide dough into 2 batches and complete processing. Pinch dough to make sure it is not too stiff to knead comfortably by hand. If it is, add liquid - 1 teaspoon at a time - until dough is sufficiently moist to clean bowl.

Dough doesn't rise

We recommend that you always test activity of yeast before using it. See instructions for proofing yeast on page 12. Do not use dry yeast after expiration date on package.

Avoid killing yeast cells by dissolving yeast in water that is too warm. Dissolve yeast in about 1/3 cup of warm liquid at 105°-120°F. All other liquid should be cold.

Don't knead so long that dough becomes overheated. The ideal temperature for kneaded dough is 80°F; it should never exceed 110°F.

Let dough rise in draft-free

environment of about 80°-90°F.

Dough containing whole grain flour will take longer to rise than dough made of white flour only.

Baked bread too heavy

Next time, feel dough to be sure it is uniformly soft, pliable and slightly sticky before setting it aside to rise. Let dough fully double in bulk in bowl or bag, punch it down, then let it double again after it is shaped.

PROBLEMS AND SOLUTIONS WITH TYPICAL SWEET DOUGHS**Motor slows down**

- Amount of dough may exceed maximum capacity of your food processor. Remove half and process in 2 batches.
- Don't process too long after all the ingredients have been incorporated. These rich doughs will give you good results after only 30 seconds of kneading.

PREPARING FOOD FOR SLICING AND SHREDDING

16

Round fruits and vegetables

Before processing onions, apples and other large, round fruits and vegetables, trim them with a knife. Cut the bottom ends flat, to make the food lie stable on the disc.

Place the food in the feed tube, flat side down. Position it as far left as possible, to prevent it from tilting when being processed.

Choose fruits that are firm and not too ripe. Always remove large hard pits and seeds from fruits before processing. Seeds from citrus fruits need not be removed. You may remove the rind before slicing or shredding, or leave the rind on.

Whole peppers are an exception

Remove the stem and cut the stem end flat. Remove the core and scoop out the seeds. Leave the end opposite the stem whole, to keep the structure stiff. This ensures round, even slices.

Large fruits like pineapple and cantaloupe

Cut them in half and remove the seeds or core. If necessary, cut the halves into smaller pieces to fit the feed tube. Remember to cut the ends flat.

Cabbage and iceberg lettuce

Turn the head on its side and slice off the top and bottom, leaving a center section about 3 inches deep. Remove the core and cut the center section into wedges to fit the feed tube. Remove the core from the bottom piece and cut it and

PICK UP 4 COLOR PHOTOS FROM FILM

the top piece into wedges to fit the feed tube. The 2mm Slicing Disc or the optional 1mm Slicing Disc is excellent for slicing cabbage for coleslaw.

If the fruit or vegetable doesn't fit

Try inserting it from the bottom of the feed tube. The opening there is slightly larger. Do not force any food into the feed tube.

Pack the feed tube for desired results

For long slices or shreds, cut the food into feed tube widths and pack the pieces horizontally.

For small, round slices or short shreds from carrots, zucchini and other long vegetables, cut them into feed tube heights and pack them tightly upright.


Food should fit snugly, but not so tight that it prevents the pusher from moving.

When slicing or shredding food, always use the pusher. **Never put your fingers or a spatula into the feed tube.**

Never push down hard on the pusher. Use *light* pressure for soft fruits and vegetables like bananas, mushrooms, strawberries and tomatoes, and for all cheeses. Use *medium* pressure for most food - apples, celery, citrus fruit, potatoes and zucchini. Use *firm* pressure for really hard vegetables like carrots and yams.

PICK UP 4 COLOR PHOTOS FROM FILM

PRACTICING SLICING AND SHREDDING


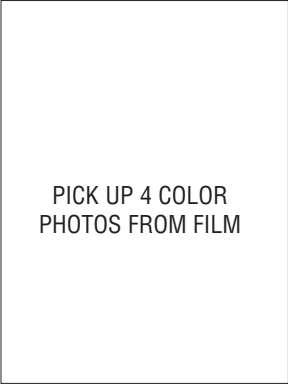


1. Insert a slicing or shredding disc, put the cover with large feed tube on the work bowl and insert the prepared food in the feed tube.



2. Prepare the pusher assembly. Lock the small pusher in place and unlock the slide lock on the sleeve, so the pusher can move up and down freely.

3. Slide the pusher assembly over the feed tube and push the sleeve down to lock it into place. Apply pressure to the pusher while pressing down the OFF/PULSE lever. Release the lever as soon as the food is sliced or shredded.

4. You can load the feed tube repeatedly without removing the work bowl cover. Simply grasp the pusher assembly with your fingers on the wide locking tab at the back of the sleeve. Press firmly on the tab and lift up. The pusher assembly will come off easily, leaving the cover and feed tube in place. Your other hand is free to reload the feed tube.

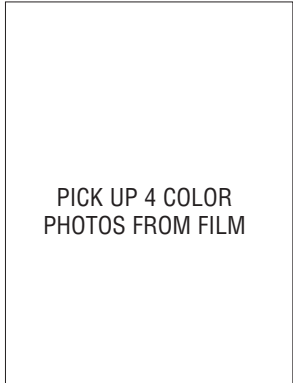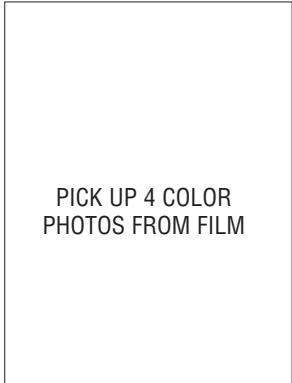


REMOVING SLICED OR SHREDED FOOD

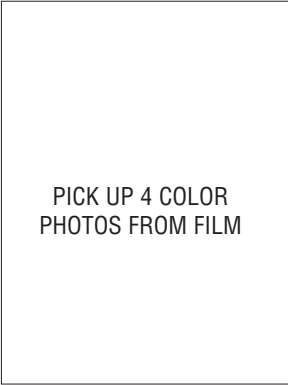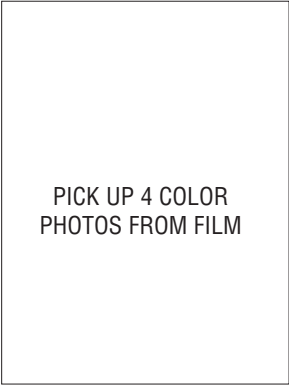

Before you do anything, wait for the disc to stop spinning

When it does, remove the cover first. Hold the pusher assembly with your fingers *away* from the locking tabs on back and turn it clockwise. Lift, and the pusher assembly and cover will come off together.

Remove the slicing or shredding disc before removing the work bowl. Place two fingers under each side of the disc and lift it straight up. Then turn the bowl clockwise to unlock it from the base, and lift it straight up to remove it.

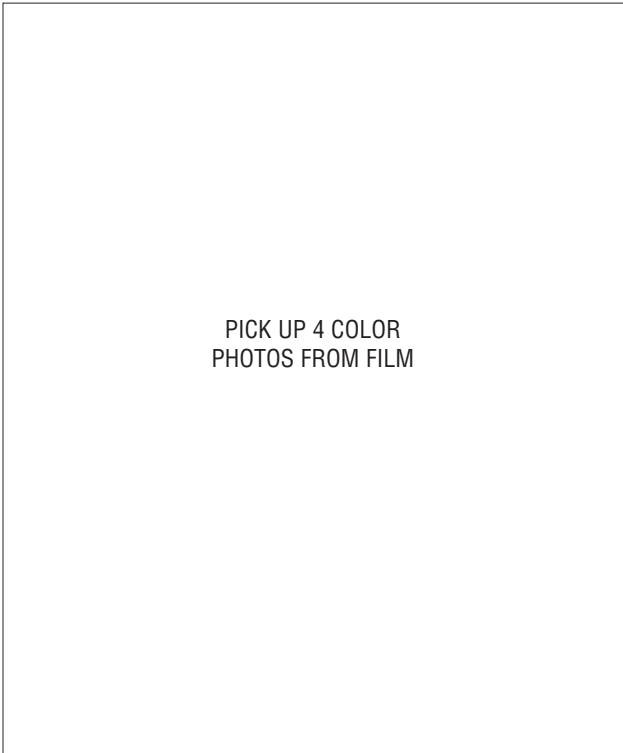

You can place the disc on top of the inverted work bowl cover, to minimize drips and spills.

SLICING AND SHREDDING TECHNIQUES

20

Small, round fruits and vegetables

For large berries, radishes and mushrooms, trim the ends flat with a knife. Insert the food through the feed tube, standing each piece on a flat end. You can fill the tube to about 1-inch from the top. The bottom layer gives you perfect slices for garnish.

If you want all the slices to be perfect, it's best to process one layer at a time.

Long fruits and vegetables

Trim foods like bananas, celery and zucchini by cutting them into pieces a little shorter than the feed tube. Cut both ends flat. (Use a ruler as a guide, or the pusher assembly with the pusher pulled out as far as it will go.)

Fill the feed tube with the pieces, standing them vertically and adding enough pieces so they are solidly packed and cannot tilt sideways as they are sliced or shredded.

Small amounts of food

Use the small feed tube and the small pusher. Remove the small pusher from the pusher assembly. Slide the pusher assembly over the feed tube and press the sleeve down to lock it into place. Be sure the slide lock on the sleeve is locked.

Cut the food into lengths a little shorter than the feed tube. If you are slicing one or two long, thin vegetables like carrots, push them against the right. If you are slicing a few vegetables that are

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

wide at one end and narrow at the other—carrots, celery or scallions—cut them in half and pack in pairs, one wide end up, one narrow end up.

French-cut green beans

Trim fresh green beans to feed-tube widths. Blanch them for 60 seconds in boiling salted water. Plunge them immediately into cold water to stop the cooking. When they are cold to the touch, drain and dry them. Stack them in the feed tube horizontally to about 1 inch from the top. Use the standard 4mm Slicing Disc.

Be sure the small pusher is locked and the slide lock in the sleeve is unlocked. Apply light pressure to the pusher and press the lever down to PULSE until beans are sliced. To make long, horizontal slices or shreds of raw zucchini or carrots, use the same procedure.

Matchsticks or Julienne strips

Process the food twice to “double-slice” it. Insert any large fruit or vegetable — potatoes, turnips, zucchini, apples — in the feed tube horizontally. Apply pressure to the pusher while pressing the lever down to PULSE until the food is sliced. You will get long slices. Remove the slices from the work bowl and reassemble them as shown. Reinsert them in the feed tube, wedging them in tightly. Slice them again. You will obtain long julienne strips. With the optional Square Julienne Disc, you can make square julienne strips in one operation.

SLICING MEAT AND POULTRY

22

Cooked meat and poultry

The food must be very cold. If possible, use a chunk of food just large enough to fit the feed tube. To make julienne strips of ham, bologna or luncheon meat, stack slices of them. Then roll or fold them double and stand them upright in the feed tube, wedging in as many rolls as possible. This technique works better with square or rectangular pieces than with round ones.

Uncooked meat and poultry

Cut the food into pieces to fit the feed tube. Boned, skinned chicken breasts will usually fit when cut in half crosswise. Wrap the pieces in plastic wrap and put them in the freezer. They are ready to slice when they pass this "knife test." They are easily pierced with the tip of a sharp knife although semi-frozen and hard to the touch. Stand them in the feed tube, cut side down, and slice them *against* the grain, using firm pressure on the pusher. Or lay them flat in the feed tube, as many as will fit, and slice *with* the grain, using firm pressure.

Frankfurters, salami and other sausages


If the sausage is soft, freeze it until it is hard to the touch but easily pierced with the tip of a sharp knife. Hard sausages need not be frozen. If the sausage is thin enough to fit in the small feed tube, use that tube. Otherwise, cut the sausage into pieces to fit the large feed tube completely. Stand the pieces vertically, packing them in tightly so they cannot tilt sideways.

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

PICK UP 4 COLOR
PHOTOS FROM FILM

SLICING AND SHREDDING CHEESE

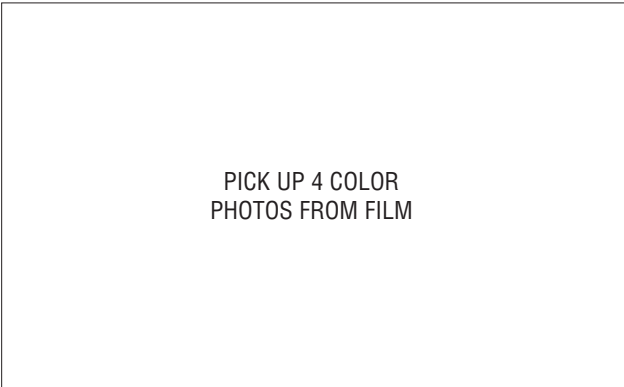

Firm Cheeses like Swiss and Cheddar

Cut the cheese into pieces to fit the feed tube. Put it in the freezer until it is semi-frozen—hard to the touch but easily pierced with the tip of a sharp knife. Stand the pieces in the feed tube and apply light pressure to the pusher.

IMPORTANT: Never try to slice soft cheese like Mozzarella or hard cheese like Parmesan. You may damage the slicing disc or the food processor itself. You can successfully shred most cheeses except for the softer ones. The exception is Mozzarella, which shreds well if thoroughly chilled. Hard cheeses like Parmesan shred well only at room temperature.

Therefore, only attempt to shred Mozzarella or Parmesan when at the appropriate temperature, otherwise the cheeses will not shred well or damage to the machine could occur.

TYPE OF CHEESE	CHOP	SHRED	SLICE
Soft <i>Brie, Camembert, ricotta, Liederkranz, cottage, cream</i>	yes	no	no
<i>exception: mozzarella</i>	yes	yes chill	no
Semi-Soft <i>Blue, Fontina, Bel Paese</i>	yes	yes chill chill chill	no
Semi-Hard <i>Cheddar, Monterey Jack, Longhorn, Swiss, Jarlsberg, Edam, Gouda, Provolone</i>	yes	yes chill chill chill chill	yes chill chill chill chill
Hard <i>Parmesan, Romano, Pecorino, Sapsago</i>	yes	yes room temp.	no

ADDITIONAL INFORMATION

24

IF YOU HAVE A PROBLEM

Most problems with the food processor are easily solved. Provided are some possible problems and their solutions.

Food is unevenly chopped

Do not process too much food at one time. Food should be in uniform pieces. Pulse several times and then run continuously.

Liquid leaks from bottom of bowl onto motor base

Remove bowl from base as soon as you finish processing. Do not remove metal blade first. When bowl and blade are removed together, blade drops down and forms an almost perfect seal against the bowl.

Liquid leaks out between bowl and cover when machine is running

You added too much liquid. Never use more than 2-3/4 cups thin or 5 cups thick liquid. The thicker the liquid, the more you can use. Examples of thick liquids include: pancake or cake batter.

Slices are uneven or slanted

Pack feed tube more carefully, as described on pages 16 and 17. Maintain even pressure on pusher.

Carrot, or similar food falls over in feed tube

Cut food into enough short pieces of equal height to fill feed tube. To slice one or two pieces, use small feed tube. Cut carrots in half and insert one piece point down and the other stem down.

Sliced or shredded food piles up on one side of work bowl

This is normal. Remove disc occasionally and even out food. When food gets close to bottom of disc, empty work bowl.

A few pieces of food remain on top of slicing or shredding disc

This is normal. In most cases, you can shred more of the food by moving the large pusher up and down, allowing the piece to be shredded, or by repositioning the piece in the feed tube and reshredding it.

Soft cheese like Mozzarella spreads out and collects on top of shredding disc

The cheese was not cold enough, or the pressure on the pusher was too hard. To shred soft cheese, do not push—rather let the cheese go through by itself. Tap on the pusher to guide cheese through.

CLEANING AND STORING

Keep your food processor ready to use on the kitchen counter. When not in use, leave unplugged. Don't leave the pusher assembly in locked position; this could damage the on-off mechanism.

Store the blades and discs as you would sharp knives — out of the reach of children. The Disc and Blade Holders (optional accessories) offer safe and convenient storage.

All parts except the motor base are dishwasher safe, and we recommend washing them in the dishwasher on **the top rack**. Due

to intense water heat, washing the work bowl and work bowl cover on the bottom rack may cause damage over time. Insert the work bowl upside down. Remember where you place sharp blades and discs, and be certain to unload the dishwasher carefully.

To simplify cleaning, rinse the work bowl, cover, pusher assembly and blade or disc immediately after use. Openings at the bottom of the large pusher provide drainage and make cleaning easy. If food lodges in the pusher, remove it by running water through pusher or using a bottle brush.

If you wash blades and discs by hand, do it carefully. Avoid leaving them in soapy water where they may disappear from sight. To clean the metal blade, fill the work bowl with soapy water, hold the blade by its plastic center and move rapidly up and down on the center shaft of the bowl. Use of a spray hose is also effective. If necessary, use a brush.

The work bowl is made of Lexan® plastic, which is shatter-resistant and heat-resistant. It should not be placed in a microwave oven, as the tube at the back of the bowl houses the metal rod that activates the motor.

Chopping certain foods may scratch or cloud the work bowl.

Among them are ice, whole spices and oils, like wintergreen. If you like to prepare your own spice blends, you may want to keep a second bowl just for that purpose.

The base housing is made of a durable, high impact resistant plastic. Its smooth surface will look new for years. Keep a sponge handy as you work to wipe spills from the base.

Four rubber feet under the base help keep it stable on most work surfaces even when processing heavy loads. If the feet leave spots on the counter, spray them with a spot remover like Fantastik® or K2-R® and wipe with a damp sponge. If any trace of the spot remains, repeat the procedure and wipe the area with a damp sponge and nonabrasive cleaning powder.

To clean the inside of the detachable stem, slide the stem release button up as far as it will go and hold as you run water through the stem.

IMPORTANT: Never store any blade or disc on the motor shaft. No blade or disc should be placed on the shaft except when the processor is about to be used.

FOR YOUR SAFETY

Like all powerful electrical appliances, a Food Processor should be handled with care. Follow these guidelines to protect you and your family from misuse that could cause injury.

▶ Handle metal blade and discs carefully. Their cutting edges are very sharp.

▶ Always place discs on flat, stable surface before connecting detachable stem.

▶ Never put blade or disc on motor shaft until work bowl is locked in place.

▶ Always be sure that the blade or disc is down on motor shaft as far as it will go.

▶ Always insert metal blade in work bowl before putting ingredients in bowl.

▶ When slicing or shredding food, always use pusher. Never put your fingers or spatula into feed tube.

▶ Always wait for blade or disc to stop spinning before you remove pusher assembly or cover from work bowl.

▶ Always remove work bowl from base of machine before you remove metal blade or dough blade.

▶ Be careful to prevent metal blade from falling out of work bowl when emptying bowl.

Remove blade before tilting bowl, or hold it in place with your finger, a spatula or spoon.

▶ Never use pusher assembly if sleeve becomes detached from pusher. Call Cuisinart Customer Service immediately at 1-800-726-0190.

SOME TECHNICAL DATA

The motor in your food processor operates on standard line operating current. The appropriate voltage and frequency for your machine are shown on a label under the base.

An automatic, temperature-controlled circuit breaker in the motor ensures complete protection against motor burnout. If the processor runs for an exceptionally long time when chopping, mixing or kneading a thick or heavy mixture in successive batches, the motor may overheat. If this happens, the processor will stop. Turn it off and wait for the motor to cool off before proceeding. It will usually cool off within 10 minutes. In extreme cases, it could take an hour.

Safety switches prevent the machine from operating when the work bowl or the cover is not locked into position. The motor stops within seconds when the motor is turned off, and a fast-stop circuit stops it instantly when the pusher assembly is unlocked.

RECIPES

APPETIZERS

GUACAMOLE	27
BLUE CHEESE AND PECAN SPREAD	27
CHEESE COINS	28

SOUPS

CHUNKY GAZPACHO	29
LEEK AND POTATO SOUP/VICHYSOISE	29
LENTIL SOUP	30
SPLIT PEA SOUP	30

MEATS AND FISH

MEATLOAF	31
CHILI	31
CHICKEN AND VEGETABLES STIR-FRY	32
CRAB CAKES	33

VEGETABLES

MASHED POTATOES	34
POTATOES AU GRATIN	34
SHREDDED CARROTS AND ZUCCHINI	35

SALADS

SLICED TOMATOES ON SHREDDED LETTUCE	35
CREAMY COLE SLAW	36
SHREDDED CARROT SALAD	36

SAUCES

PESTO	37
MEXICAN SALSA	37
NO-COOK CRANBERRY-ORANGE RELISH	37
RASPBERRY SAUCE	37
MAYONNAISE	38
PASTRY CREAM	38
CHOCOLATE SAUCE	38

PASTRY

BASIC PASTRY	39
--------------	----

QUICK BREADS, YEAST BREAD AND PIZZA

CORN BREAD	40
COFFEE CAKE	40
WHITE BREAD	41
PIZZA DOUGH	41
PIZZA IN A HURRY	42
PIZZA SAUCE	42

DESSERTS

BROWNIES	43
----------	----

CHOCOLATE CHIP OATMEAL COOKIES	44
CARROT CAKE	44
CREAM CHEESE FROSTING	45
PEAR FROZEN YOGURT	45
BANANA-APPLE SHERBET	45
APPLE PIE	46

WARRANTY	47
----------	----

CAPACITY

Recommended work bowl capacity.

FOODS	CUSTOM 11
Chopped and Puréed Fruit and Vegetables	2 cups
Chopped or Puréed Meat, Poultry, Fish or Seafood	1-3/4 pounds
White Bread Dough	2-1/2 pounds (5 cups flour, yielding two 1-1/4 pound loaves)
Nuts for Nut Butters	2 cups
Cream for Whipping	2 cups
Sliced or Shredded Fruit, Cheese or Vegetables	11 cups
Cake Batter	3 pounds (four 8-inch layers)
Cookie Dough	2-3/4 pounds (65 cookies)
Thin Liquid	2-3/4 cups
Thick Liquid	5 cups

TIP: Use the Compact Cover for added convenience when your recipe calls for chopping, mixing, puréeing or kneading. It is particularly useful when you are preparing baked goods such as cakes, cookies, pies and bread.

Guacamole

Serve with tortillas or crisp vegetables. For a less pungent taste, use flat-leaf parsley instead of cilantro.

INGREDIENTS	
1	large garlic clove, peeled
1	medium jalapeño pepper, halved and seeded
1/2	cup tightly packed cilantro leaves
1	medium scallion, white part and 2 inches of green, cut into 1-inch pieces
3	ripe medium avocados (1/2 pound each) peeled, halved and pitted
3	tablespoons lemon juice
	Pinch cumin
1/4	teaspoon salt
1/4	teaspoon chili powder
1	medium tomato, quartered, seeds removed

Use metal blade to chop garlic, pepper, cilantro, and scallion until minced, about 15 seconds; scrape work bowl. Add avocados and all remaining ingredients, except tomato. Process until smooth, about 1 minute, scraping bowl as necessary. Add tomato and pulse about 6 to 8 times, until finely chopped. Adjust salt if necessary.

Yield 2-1/4 cups.

Blue Cheese and Pecan Spread

You can substitute cottage cheese for all or part of the cream cheese, and you can substitute walnuts for pecans.

INGREDIENTS	
1/3	cup shelled pecans
8	ounces cream cheese, cut in 1-inch pieces
3	tablespoons blue cheese

Process nuts with metal blade until finely chopped, about 10 seconds. Add cream cheese and blue cheese. Process until well mixed and smooth, about 10 seconds. (If substituting cottage cheese, process until smooth, about 90 seconds.)

Yield 1-1/3 cups.

Cheese Coins

These tender and flavorful appetizers are easy to make, convenient to serve, and they can be refrigerated or frozen.

INGREDIENTS	
8	ounces Cheddar cheese, cut into 1-inch pieces
4	ounces unsalted butter, at room temperature, cut into 1-inch pieces
1/4	teaspoon salt
1/4	teaspoon Tabasco sauce
1	cup flour
	Vegetable oil cooking spray

Use metal blade to chop cheese until it resembles coarse meal, about 30 seconds. Add butter, salt and Tabasco sauce. Process until smooth, about 60 seconds; scrape bowl. Add flour and process until just mixed in. Chill dough until firm, about 1 hour.

Divide dough into 3 equal parts and roll each into a cylinder about 1-1/2 inches in diameter. Chill until firm, about 2 hours.

Preheat oven to 400°F. and coat baking sheets with vegetable oil cooking spray. Cut dough into 1/8-inch slices and place 1-1/2 inches apart on baking sheets. Bake until lightly colored, about 10 minutes, do not brown. Transfer to wire rack to cool.

Unbaked, plastic-wrapped cylinders keep for about a week in the refrigerator. Cooked cheese coins can be frozen and reheated for 6 to 8 minutes in a 300°F. oven.

Yield 100 cheese coins.

Chunky Gazpacho

This refreshing cold soup can be ready in less than 10 minutes. You may serve it at once, but it improves with chilling.

INGREDIENTS	
1/2	small jalapeño pepper*
4	scallions
1	celery stalk
1	medium cucumber
1	small garlic clove, peeled
1/2	medium bell pepper, cut into 3 pieces
2	tomatoes, seeds removed
2	cups tomato or V-8 juice
2	tablespoons lemon juice
1	teaspoon salt
1/4	teaspoon freshly ground black pepper

Halve jalapeño pepper and remove seeds. Trim scallions and celery and cut into 1-inch pieces. Peel cucumber and cut in half lengthwise. Remove seeds and cut to fit feed tube vertically.

Use metal blade to process garlic and jalapeño pepper until finely chopped. Add scallion, celery and bell pepper. Pulse/chop to medium chop. Put in large mixing bowl. Pulse/chop half of the tomatoes until coarsely chopped. Add to mixing bowl. Purée remaining tomatoes until smooth, about 1 minute. With machine running, pour in 1/2 cup of tomato juice. Add to mixing bowl with remaining tomato juice and stir.

Insert thin slicing disc, stand cucumber pieces upright in feed tube and slice, using light pressure. Add to mixing bowl with remaining ingredients and stir to combine. Cover and chill before serving.

*Handle hot peppers carefully. The oil can irritate the skin and eyes. Wash your hands after preparing them.

Yield 4-1/2 cups.

Leek and Potato Soup/Vichyssoise

Louis Diat, longtime chef at the New York Ritz Hotel, transformed the everyday Leek and Potato Soup into a cold soup suitable for parties.

INGREDIENTS	
2	medium leeks, white part only, thoroughly cleaned
1	small onion, peeled and halved
1	tablespoon unsalted butter
2	medium all-purpose potatoes, peeled
1-1/2	cups chicken stock
1	cup water
	Salt and freshly ground black pepper to taste
1	cup milk
1/4	cup heavy cream
	Chopped chives for garnish

Cut leeks to fit feed tube. Use standard slicing disc to slice leeks and onions. Melt butter in large saucepan over medium heat. Add leeks and onions; sauté, stirring often, until soft but not brown, about 10 minutes.

Cut potatoes in half crosswise, and use standard slicing disc to slice them. Add potatoes, stock and water to saucepan. Bring to boil, over medium-high heat. Reduce heat to low, cover and simmer gently, stirring occasionally, until vegetables are very tender, about 25 minutes. Adjust seasoning and serve hot as Leek and Potato Soup, or proceed as follows for cold Vichyssoise.

Strain liquid into large saucepan and set aside. Use metal blade to purée vegetables, stopping once to scrape bowl. Whisk puréed vegetables into reserved liquid, add milk and bring to a boil over moderate heat, stirring constantly. Remove from the heat and stir in cream. Season to taste with salt and pepper. Refrigerate until thoroughly chilled. Taste again for seasoning and sprinkle with chopped chives.

Yield 4 cups Leek and Potato Soup or 6 cups Vichyssoise.

Lentil Soup

This hearty winter soup is a meal on its own, accompanied by crusty bread and a salad.

INGREDIENTS	
8	ounces lentils
1	garlic clove, peeled
1/2	small onion, peeled and halved
1/2	medium celery rib, cut into 1-inch pieces
1/2	medium carrot, peeled, cut into 1" pieces
2	medium tomatoes, quartered
2-1/2	cups beef broth
2-1/2	cups water
2	teaspoons white wine vinegar
1/2	teaspoon paprika
1/2	teaspoon salt*
1/8	teaspoon freshly ground black pepper
	Pinch dried thyme
1/2	pound Polish kielbasa or other smoked sausage

Wash lentils under cold running water, drain and place in large saucepan.

Use metal blade to pulse/chop garlic, onion, celery and carrot until finely chopped. Put in pot with lentils. Add tomatoes to work bowl, and chop into fine pieces. Add to pot with all remaining ingredients, except sausage. Cover and cook over medium heat for about 1 hour.

Freeze sausage until hard to the touch but easily pierced with tip of sharp knife, about 30 minutes.

Drain and reserve soup liquid. Purée solids with metal blade. Return purée to broth and stir to combine. Use standard slicing disc to slice sausage. Add sausage to soup and reheat gently over medium-low heat until sausage is warm, stirring occasionally, about 20 minutes.

*Optional, omit salt if using salty sausage.

Yield 6 cups.

Spilt Pea Soup

A perfect family lunch or supper.

INGREDIENTS	
3/4	pound split green peas
1	garlic clove
3/4	large onion, quartered
1	pound smoked ham hocks
5-1/4	cups water
2	medium carrots, peeled
1	large celery rib
1	medium potato, peeled
	Salt
	Freshly ground black pepper

Rinse peas and place in large sauce pot. Use metal blade to chop garlic fine, about 10 seconds. Add onion and pulse until coarsely chopped, about 6 to 8 pulses. Transfer to saucepot with peas. Add ham hocks and water. Bring to a boil over medium-high heat. Reduce heat, cover and simmer for 1 hour, stirring occasionally. Uncover and simmer until hocks are tender, about 30 to 40 minutes. Stir occasionally and add more water if necessary. Remove hocks and let them cool while preparing vegetables.

Cut carrot in feed-tube lengths, then halve lengthwise. Cut celery into feed-tube lengths, then halve lengthwise. Cut potato in half crosswise, then quarter halves lengthwise. Insert standard slicing disc. Stand vegetables upright in feed tube and slice with medium to firm pressure. Reserve.

Purée soup with metal blade until smooth, about 15 seconds. Return to sauce pot. Remove meat from hocks and pulse until coarsely chopped, 4 to 6 pulses. Add to vegetables. Cover and simmer over medium-low heat until tender, stirring occasionally to prevent sticking. This will take about 20 minutes. Season to taste.

Yield 6 cups.

Meatloaf

For a spicier meat loaf, add a few drops of Tabasco sauce and a teaspoon of Worcestershire sauce.

INGREDIENTS	
1	small onion, quartered
1/3	cup loosely packed parsley leaves
1-1/2	slices day-old bread, broken into pieces
1-1/2	pounds boneless chuck, cut into 1-inch pieces*
3	tablespoons milk*
1	teaspoon salt
1/8	teaspoon dried thyme leaves
1	large egg

Preheat oven to 375°F. Put all ingredients except egg in work bowl and pulse/chop 4 to 6 times. Then process continuously until chopped fine. Add egg and pulse 4 or 5 times or until desired consistency is reached, watching carefully to avoid overprocessing. Pack mixture into loaf pan and bake at 350°F. until cooked through, about 40 to 50 minutes.

*You can vary these ingredients by using a mixture of beef, veal and pork or by replacing the milk with tomato juice.

Meatball Variation: Instead of making a meat loaf, shape mixture into balls of 2 tablespoons each, arrange them in single layer in baking dish and bake at 375°F. for about 25 minutes.

Yield 1-1/2 pounds of meatloaf.

Chili

Kids love chili and it's a versatile dish. Serve it on hot dogs, fill tacos or eat it plain. It freezes well for about 6 months.

INGREDIENTS	
3	medium garlic cloves
1	medium onion, quartered
1	pound boneless beef chuck, chilled, fat trimmed, cut into 1-inch cubes
1-1/2	teaspoons whole cumin seed
2	tablespoons vegetable oil
2	tablespoons chili powder
2	tablespoons paprika
1	teaspoon salt
1/8	teaspoon crushed red pepper
1	8-oz. can whole tomatoes
1	cup water
2	cups red kidney beans

Process garlic and onion with metal blade until finely chopped, about 15 seconds. Reserve. Process beef cubes until coarsely chopped, about 10 to 12 pulses.

Brown cumin in medium saucepot over medium heat. Shake pan constantly and cook until cumin begins to smoke, about 1 minute. Reserve.

Heat vegetable oil in same saucepot over medium heat. Add garlic and onion; cook for 2 minutes. Add beef and cook, stirring often, until no pink color remains, about 5 minutes.

Reduce heat to low. Stir in cumin, chili powder, paprika, salt and crushed red pepper; cook uncovered for 5 minutes, stirring occasionally.

Use metal blade to coarsely chop tomatoes. Add to saucepot with water and bring to boil, covered, over medium-high heat. Reduce heat to low and simmer, partially covered, for 45 minutes, stirring occasionally. Stir in the beans and cook until heated through.

Garnish with shredded Cheddar or Monterey Jack cheese if desired.

Yield 4-1/2 cups.

Chicken and Vegetable Stir-Fry

Stir-frying and the food processor are a most effective combination for putting a meal on the table in no time.

INGREDIENTS

3	pounds boneless/skinless chicken breasts
2	red peppers, cored, seeded, stemmed and cut vertically into 3 slabs
8	scallions, cut to fit feed tube horizontally
3	zucchini, cut to fit feed tube horizontally
1	yellow squash, cut to fit feed tube horizontally
1/2	cup water
3	tablespoons dry sherry
3	tablespoons soy sauce
1	tablespoon Oriental sesame oil
1/4	teaspoon freshly ground black pepper
1	tablespoon cornstarch
1-1/2	garlic cloves, peeled
1	1-inch piece fresh ginger
1/4	cup vegetable oil

Split chicken breasts lengthwise. Tuck ends under to form compact shapes of uniform thickness. Wrap individually in plastic wrap and freeze on baking sheet until firm to the touch but easily pierced with the tip of a sharp knife.

Insert standard slicing disc. Stand peppers on long ends and slice, using light pressure. Lay scallion pieces in feed tube horizontally and slice into slivers, using light pressure.

Insert shredding disc. Shred zucchini and squash, using light pressure. Remove and reserve vegetables.

Use metal blade to mix water, sherry, soy sauce, sesame oil, ground pepper and cornstarch until smooth, about 15 seconds. Reserve.

Use metal blade to finely chop garlic and ginger. Do not empty work bowl. Insert standard slicing disc. Unwrap chicken pieces and cut to fit feed tube vertically. Stand chicken pieces tightly in feed tube and slice, using firm pressure. Leave in work bowl.

Heat vegetable oil in skillet over medium-heat.

Add chicken mixture and cook, stirring vigorously, until chicken is opaque, about 3-5 minutes.

Add vegetable mixture and stir-fry until crisp-tender, about 2 minutes. Add soy sauce mixture, cook, stirring, until sauce thickens, about 1 minute. Serve over brown or white rice.

Yield 8 servings.

Crab Cakes

These delicate seafood cakes are perfect with drinks. If you're feeling festive, substitute cooked lobster meat for half of the crabmeat.

INGREDIENTS

4	slices white bread, lightly toasted
1	medium garlic clove, peeled
1	small onion, peeled and quartered
1	tablespoon unsalted butter
1	tablespoon parsley leaves
1	pound lump crabmeat, picked over to remove cartilage
1/4	cup mayonnaise
1	large egg
1	tablespoon lemon juice
1/4	teaspoon salt
	Tartar sauce (see recipe on page 40)

Preheat oven to 375°F. Break bread slices in quarters and process with metal blade to fine crumbs, about 40 seconds. Reserve 1/4 of crumbs and put remainder in pie plate.

With machine running, drop garlic through feed tube and process until finely chopped, about 10 seconds. Add onion and chop fine, about 10 seconds. Melt butter in a medium skillet over medium heat. Add garlic/onion mixture and cook until golden brown, stirring, about 10 minutes.

Using metal blade chop parsley fine, about 5 seconds. Add cooked onion mixture, crabmeat, mayonnaise, egg, lemon juice, salt and reserved bread crumbs; pulse until combined, about 8 times.

Form mixture into 1-1/2 inch cakes. (About 1/2 ounce each.) Coat them with crumbs in pie plate and place on buttered baking sheet. (Recipe may be prepared ahead to this point and refrigerated up to 4 hours.) Bake in preheated oven until golden brown, about 10 to 15 minutes. Serve with Tartar Sauce.

Yield 54 1/2- ounce crab cakes.

Mashed Potatoes

The shredding disc processes cooked potatoes to the right texture. Be careful not to overprocess when you mix them with the other ingredients.

INGREDIENTS	
1/4	cup hot milk
2	tablespoons butter, cut into 1-inch pieces
1/2	teaspoon salt
	Freshly ground black pepper
	Pinch of nutmeg (optional)
3	large potatoes, peeled, boiled and drained

Put all ingredients except potatoes in work bowl and insert shredding disc. Place potatoes in large feed tube and process. Leave in work bowl. Remove shredding disc and carefully insert metal blade. Pulse 2 or 3 times, until liquid is absorbed. Potatoes will become gluey if you overprocess.

Wonderfully light, fluffy mashed potatoes can also be made with the optional Whisk Attachment (DLC-855).

Yield 4 servings.

Potatoes au Gratin

You can use baking or boiling potatoes for this elegant dish.

INGREDIENTS	
3	ounces Gruyère cheese, cut into 1-inch cubes
2	medium garlic cloves
1	medium onion, peeled and quartered
2-1/2	cups milk or half-and-half
1	teaspoon salt
	Freshly ground white pepper
3	large potatoes (about 10 ounces each), peeled and cut flat at ends

Preheat oven to 400°F. and butter an 8-quart baking dish. Process cheese with metal blade until it is finely grated. Reserve. With machine running, drop onion and garlic through feed tube and process until finely chopped. Put onion/garlic mixture in a medium saucepan with milk, salt and pepper.

Insert shredding disc and shred potatoes, one at a time, using firm pressure on pusher. Add shredded potatoes to saucepan and bring mixture to a boil over medium-high heat, stirring continuously to prevent scorching.

Spread potato mixture in prepared baking dish and sprinkle with reserved cheese. Bake for 25 minutes, or until potatoes are tender and cheese is golden. Let stand for 10 minutes before serving.

Yield 16 servings.

Shredded Carrots and Zucchini

Because shredded vegetables cook so quickly, all their natural flavor and crispness is preserved.

INGREDIENTS

3	medium carrots, peeled
2	medium zucchini
1/4	cup unsalted butter
	Salt
	Freshly ground black pepper to taste
1/2	teaspoon chopped fresh tarragon or
	1/4 tsp. dried

Cut carrots and zucchini to fit feed tube horizontally. Process with shredding disc.

Melt butter in large skillet over medium-high heat. Add shredded vegetables, salt and pepper. Cover and cook until crisp, about 2 or 3 minutes. Season with tarragon.

Yield 4 servings.

Sliced Tomatoes on Shredded Lettuce

You can prepare all the elements of this salad in the work bowl.

INGREDIENTS

1/4	cup parsley leaves, loosely packed
1	medium shallot, peeled
1-1/2	tablespoons red-wine vinegar
4-1/2	tablespoons safflower oil
1/2	teaspoon Dijon-style mustard
1/2	teaspoon sugar
1/2	teaspoon salt
	Freshly ground black pepper
4	firm, ripe, medium tomatoes, cored and cut flat at ends
1	medium head romaine lettuce, washed

Use metal blade to finely chop parsley and shallots. Add oil, vinegar, mustard, salt and sugar through the feed tube while the machine is running. Leave in work bowl. Remove metal blade and insert standard slicing disc. Slice tomatoes, using light pressure.

Cut lettuce into sections to fit feed tube. Insert standard slicing disc and slice lettuce, using medium pressure.

Transfer contents of work bowl to platter, arranging tomatoes over lettuce in an attractive pattern.

Yield 6 servings.

TIP: When preparing a meal, make the dishes with the least amount of wet ingredients first. In many cases, wiping the bowl with a paper towel between recipes is sufficient.

SALADS

Creamy Cole Slaw

Cole slaw only takes minutes to prepare when you don't have to slice the cabbage by hand.

INGREDIENTS	
1/4	cup loosely packed parsley leaves
1	1-oz. piece peeled onion
1/3	cup mayonnaise
1/2	tablespoon red wine vinegar
1/4	teaspoon salt
1/4	teaspoon freshly ground black pepper
1/2	large carrot, peeled
1/2	medium head green cabbage

Process parsley with metal blade until minced. Add onion and process until minced. Add all remaining ingredients, except carrot and cabbage; process 5 seconds to combine. Remove metal blade.

Cut carrot in half crosswise. Core cabbage and cut it into wedges. Insert shredding disc and shred carrot, using firm pressure. Insert thin slicing disc and slice cabbage, using firm pressure. Add contents of work bowl to mixing bowl and toss to combine. Adjust seasoning. Serve immediately or refrigerate for up to 24 hours. Before serving, drain excess liquid and adjust seasoning. Serve chilled.

Yield 5 cups.

Shredded Carrot Salad

The brilliant colors of carrots and peas make this fresh and simple salad a welcome addition to a party buffet table.

INGREDIENTS	
2	pounds young carrots, peeled
3	large scallions, trimmed in 1-inch pieces
1/4	cup fresh lemon juice
1/4	cup vegetable oil
1	teaspoon salt
1	teaspoon sugar
	Pinch of allspice
	Pinch of cinnamon
	Freshly ground black pepper
1/2	cup cooked peas, fresh or frozen

Cut carrots to fit feed tube horizontally. Parboil them in salted water until you can just pierce them with the tip of a sharp knife, about 3 to 5 minutes. Drain and rinse under cold water. When cool, blot dry with paper towels.

Process scallions with metal blade until they are finely chopped. Add lemon juice, oil, salt, sugar, allspice, cinnamon, and pepper; process for about 3 seconds. Leave the dressing in the work bowl.

Insert shredding disc. Pack carrots horizontally in feed tube and shred, using medium pressure. Transfer contents of work bowl to serving bowl. Add peas and toss gently to coat all ingredients with dressing. Serve cold or at room temperature. Adjust seasoning just before serving.

Yield 8 servings.

Pesto

A classic pasta sauce from Italy. One cup is enough for 1 pound of pasta. It's also good on boiled potatoes or in soups.

INGREDIENTS	
4	ounces imported Parmesan cheese, at room temperature, cut into 1-inch (2.5cm) pieces
4	small garlic cloves
2-2/3	cups tightly packed fresh basil leaves
1/3	cup pine nuts
3/4	teaspoon salt
1/3	cup olive oil

Use metal blade to chop cheese and garlic, about 30 seconds. Add remaining ingredients, except oil, and process until combined, about 8 pulses. With machine running, pour oil through feed tube. Process until combined, about 10 seconds. Scrape bowl and continue processing until smooth, about 20 seconds.

Pesto keeps for up to 5 days in the refrigerator and it also freezes well. Some people prefer to omit the cheese when freezing pesto and add it just before serving.

Yield 1-1/3 cups.

No-Cook Cranberry-Orange Relish

Only 1 cup of sugar sweetens 1 pound of cranberries. Most cooked relishes call for 2 cups of sugar.

INGREDIENTS	
2	cups fresh cranberries
1/2	navel orange, unpeeled and quartered
1/2	cup sugar

Use metal blade to coarsely chop fruit, about 8 to 10 pulses. Add sugar and process to combine, about 20 seconds. Store in refrigerator.

Yield 1-3/4 cups.

Mexican Salsa

Serve this sauce as a topping for tacos, or with grilled fish or chicken. It is best when fresh; it may become slightly bitter after standing a day.

INGREDIENTS	
2	jalapeño peppers*
1/3	cup packed cilantro leaves**
1	tablespoon lime juice
1/8	teaspoon salt
5	medium tomatoes, cored and quartered
1	medium onion

Use metal blade to process peppers and cilantro until finely chopped, about 20 seconds. Scrape bowl. Add lime juice and salt; pulse twice to combine.

Add tomatoes and onions; pulse until coarsely chopped, about 10 to 12 times.

Transfer to serving dish. Stir and serve within 1 or 2 hours.

*Handle hot peppers with care. Their oil may irritate your skin and cause your eyes to sting. Wash hands after handling them.

** Substitute flat-leaf parsley if cilantro is not available.

Yield 2-2/3 cups.

Raspberry Sauce

A fine finish for ice cream, sherbet or cake. You can substitute strawberries for the raspberries.

INGREDIENTS	
1	10-oz. package frozen raspberries in syrup, thawed
1	tablespoon honey

Use metal blade to purée raspberries and honey for 30 seconds. Transfer to fine sieve placed over a mixing bowl. Press solids through the sieve with back of spoon and discard seeds. Serve at room temperature or warm slightly to serve over ice cream.

Yield 1 cup.

Classic Mayonnaise with Cooked Eggs

Adding oil very slowly is essential for the mayonnaise emulsion – the hole in the pusher adds the oil at just the right speed for success. Flavored vinegar or fresh or dried herbs can be added for a flavored mayonnaise.

INGREDIENTS	
2	large egg yolks
2	tablespoons wine vinegar or lemon juice
2	tablespoons water
1	teaspoon granulated sugar
1	teaspoon dry mustard powder
1/2	teaspoon kosher salt
1/8	teaspoon ground white pepper
1	cup flavorless vegetable oil

Have a shallow pan of ice water ready. In a small skillet, use a whisk to stir together the egg yolks, vinegar or lemon juice, sugar, dry mustard, salt, and pepper until completely blended. Cook over very low heat, stirring constantly, until the mixture bubbles in 1 or 2 places – do not allow eggs to scramble. Remove from the heat and place in the ice water bath, stir to cool down.

Insert the metal blade. Place the egg mixture in the work bowl. Cover and insert the pusher. Turn the machine on and add half the oil to the pusher, the oil will run through the pusher very slowly into the work bowl to create the emulsion. When it has totally run through, add the remaining oil to the pusher, as the emulsion is made, the sound of the machine will become deeper. Transfer mayonnaise to a container, cover and chill until ready to use. Will keep for 2 to 3 days in the refrigerator.

Herb Mayonnaise: Add 1/4 cup tightly packed fresh green herbs when you put in the egg. Recommended herbs are parsley, dill and tarragon, with stems removed.

Tarter Sauce: Triple the amount of lemon juice. When mayonnaise is finished, add these ingredients: 3 small gherkins, 1/4 small onion, 1 tablespoon capers, 1 tablespoon bottled horseradish and 3 drops Tabasco sauce. Process until gherkins and onion are chopped fine, about 10 seconds

*Yield 1-1/4 cups mayonnaise.
Recipe may be doubled.*

Pastry Cream

Spread about one cup of this cream in a cooked 9-inch tart shell and arrange sliced fresh fruit on top.

INGREDIENTS	
1-1/4	cups milk
2	large egg yolks
1/4	cup sugar
1/2	teaspoon vanilla extract
3	tablespoons all-purpose flour
2	tablespoons unsalted butter, softened

Bring milk to boil in small saucepan over medium heat. Insert metal blade and add egg yolks, sugar, vanilla and flour. Process until just combined. With the machine running pour hot milk through feed tube in steady stream. Return mixture to saucepan and whisk over medium heat until it boils. Reduce heat to low and simmer for 2 minutes, whisking constantly. Remove from heat and stir in butter. Cool to lukewarm before using.

Yield 1-1/2 cups.

Chocolate Sauce

You can make a delicious chocolate sauce in 1 minute! No more worries about melting chocolate on top of the stove.

INGREDIENTS	
5	ounces semi-sweet chocolate, broken into 1/2-inch pieces
1/4	cup super-fine sugar
1/3	cup very hot water

Use metal blade to coarsely chop chocolate and sugar, about 6 pulses. Then process continuously until chopped to a fine powder, about 60 seconds. With machine running, slowly pour hot water through feed tube. Process until chocolate melts, about 45 seconds, stopping once to scrape bowl.

Mint variation: Add 1 tablespoon of peppermint extract, crème de menthe or peppermint schnapps to water after it is heated.

Yield 7/8 cup.

Basic Pastry

This is the basic dough for pies, tarts and quiches.

INGREDIENTS	
2-2/3	cups all-purpose flour
2	sticks very cold unsalted butter, cut into 1-inch pieces
1	teaspoon salt
1/2	cup ice water

Use metal blade to process flour, butter and salt until mixture is like coarse meal, about 8 seconds. Add ice water and pulse until dough begins to clump together. Do not let it form a ball. Divide dough into three equal parts and put each in a plastic food storage bag. Work through bag to press dough together into a ball, then flatten into a disc. Refrigerate dough for at least 1 hour.

Roll each disk of dough on lightly floured surface into a circle about 1/8 inch thick. Press into place in pie pan. Use kitchen shears to trim dough, leaving 1-inch overlap beyond pan. Fold overlap under and pinch crust to form decorative edge. Prick bottom and sides with fork and refrigerate crust for 30 minutes, or until firm.

Preheat oven to 400°F. 15 minutes before baking.

Line pie shell with parchment paper and fill it with uncooked beans or rice. Bake for 12 minutes. Remove paper, beans or rice. Prick shell again and bake it 6 minutes longer, or until it is lightly browned. Remove shell from pan and let cool on wire rack.

Yield 3 9-inch pie shells.

Fruit Tart Variation:

Use a 9-inch tart pan instead of a pie pan. Bake shell according to above directions. When cooked shell is thoroughly cool, fill with about 1 cup of pastry cream (see recipe on page 38.) Arrange sliced, fresh fruit (kiwi, peaches, raspberries, etc.) decoratively on top.

BREADS, COFFEE CAKE AND PIZZA

40

Corn Bread

This a particularly moist and flavorful corn bread which is best served warm.

INGREDIENTS	
4	tablespoons butter
1	cup yellow cornmeal
1	cup all-purpose flour
2	tablespoons sugar
1/3	tablespoon baking powder
1/4	teaspoon baking soda
1/4	teaspoon salt
1-1/3	cups buttermilk
2	large eggs
1/2	cup fresh, frozen or canned corn kernels

Preheat oven to 425°F. Melt butter in a 9"x 9" baking pan. Coat sides and bottom of pan with melted butter; Reserve.

Use metal blade to process dry ingredients until combined, about 10 seconds. Add melted butter, buttermilk and eggs; process until mixed, about 5 seconds. Scrape work bowl and gently stir in corn kernels.

Pour into prepared pan and bake until a toothpick inserted in center comes out clean, about 25 minutes.

Muffin Variation: For corn muffins, pour batter into greased, standard-size muffin tins. Fill them 3/4 full. Bake in preheated 425°F. oven for about 25 minutes. Makes 8 muffins.

Coffee Cake

This makes an excellent breakfast or brunch cake. Also serve as a sweet addition to lunch or supper.

INGREDIENTS	
1	package dry yeast
2	tablespoons sugar, divided
1/4	cup warm water
1/3	cup sour cream
1/4	cup cold milk
1	large egg
1	teaspoon vanilla
3	cups flour
4	tablespoons cold butter, in 1 inch pieces
1/2	teaspoon salt
2	tablespoons melted butter, divided

Filling

1/2	cup light brown sugar
1/2	cup dates, cut into 1-inch pieces
1/2	cup pecans
1	teaspoon cinnamon

In a 2-cup liquid measure dissolve yeast and 1 tablespoon sugar in warm water. Let stand until foamy. Stir together the sour cream, milk, egg and vanilla extract and add to the yeast mixture.

Using the metal blade, process flour, cold butter, salt and remaining sugar for 10 seconds. With machine running, add yeast mixture through feed tube in steady stream as fast as flour absorbs it. After dough cleans inside of work bowl, continue processing 40 seconds more to knead it.

Shape dough into ball and place it in lightly floured plastic food storage bag. Squeeze out air and close top with wire twist. Let rise in warm place until double in size, about 1 hour.

Roll dough on lightly floured surface into 20x12-inch rectangle. Brush with 1 tablespoon of melted butter. With remaining butter, brush inside of a 9x13-inch pan.

Use metal blade to combine brown sugar, dates, pecans and cinnamon until coarsely chopped, about 45 seconds. Spread filling over dough. Roll dough up, jelly-roll fashion, from long side.

Continued on page 41.

Use sharp knife to cut rolled dough into 3/4-inch slices. Place slices in pan, cut side up, and let rise until doubled in size.

Preheat oven to 375°F. 15 minutes before baking. Bake coffee cake until golden and bubbly, about 20 to 25 minutes. Serve warm.

White Bread

We used unbleached all-purpose flour and had great results.

INGREDIENTS	
1	package dry yeast
1/3	cup warm water
1	tablespoon sugar
5	cups all-purpose flour
4	tablespoons unsalted butter, cut into 1-inch size pieces
1-1/2	teaspoons salt
1-1/3	cups ice water
	Vegetable oil for pans

Stir yeast and sugar into warm water in 2-cup measure and let stand until foamy, 3 to 5 minutes. Use dough blade to process flour, butter and salt for 20 seconds. Add ice water to yeast mixture.

With machine running, pour liquid through feed tube in steady stream, only as fast as flour absorbs it. Continue processing until dough cleans inside of work bowl and forms a ball. Then let machine run for 60 seconds to knead dough.

Shape dough into ball and place in lightly floured plastic storage bag. Squeeze out air and close end with wire twist, allowing space for dough to rise. Let rise in warm place until dough has doubled in size, about 1 to 1-1/2 hours.

Punch dough down and shape into 2 loaves. Place each in greased 6-cup loaf pan. Cover with oiled plastic wrap and let rise in warm place until dough just rises above top of pan, about 45 minutes. Preheat oven to 375°F. 15 minutes before baking. Bake until top is browned, about 35-40 minutes. Remove from pan and cool on wire rack.

Whole Wheat Variation: Replace 1/2 of all-purpose flour with an equal amount of whole wheat flour.

Yield two 1-1/4 pound loaves.

Basic Pizza Dough

With this dough, you can make large pizza crusts to serve several, or small ones to serve a few.

INGREDIENTS	
1	package active dry yeast
1	teaspoon sugar
2/3	cup warm water
1-2/3	cups all-purpose flour
3/4	teaspoon salt
2	teaspoons oil
	Vegetable oil for pan
1-1/2	tablespoons cornmeal for pan

Stir yeast and sugar into warm water and let stand until foamy, about 10 minutes. Insert metal blade, put flour and salt in work bowl and turn on machine. Pour yeast mixture through feed tube and process about 45 seconds, until dough pulls away from sides of bowl. Add oil through feed tube and process 60 seconds longer.

If dough sticks to sides of bowl, add more flour, 1 tablespoon at a time, processing 10 seconds after each addition, until dough leaves sides of bowl but remains soft.

Roll dough on floured surface into circle, rotating and turning dough often and using enough flour so it doesn't stick. If dough resists rolling, let it rest for a few minutes and try again. Roll dough into 15-inch circle for flat 14-inch pizza pan, or into 10-inch circle for flat 9-inch pizza pan.

Fudgy Brownies

These easy-to-make brownies are always a favorite in lunch boxes or for after school snacks.

INGREDIENTS	
4	ounces unsweetened chocolate
1-1/2	cups light brown sugar, divided
1/2	cup butter, melted
4	large eggs
1-1/2	teaspoons vanilla extract
1	cup flour
1/4	teaspoon salt
1-1/2	teaspoons baking powder
3/4	cup pecan halves

Preheat oven to 250°F. Spray 9 x 9" pan with vegetable oil cooking spray.

Use metal blade to coarsely chop chocolate with half the sugar, about 6 to 8 pulses. Then process continuously until finely chopped, about 20 seconds.

With machine running, pour hot butter through feed tube. Process until smooth, about 30 seconds. Add remaining sugar, eggs and vanilla. Pulse twice, then process 10 seconds more. Add dry ingredients and nuts. Pulse/chop until just mixed, about 6 to 8 times. Spread in prepared pan.

Bake until outside is lightly crusty and inside is still moist, about 20 minutes. Cool completely and cut into squares.

Yield 24 brownies.

Apple Pie

INGREDIENTS	
Pastry for two 9-inch pie shells (see Basic Pastry recipe, page 39.)	
1/2	cup sugar
3	tablespoons flour
3/4	teaspoon cinnamon
1/8	teaspoon nutmeg
2	pounds apples, peeled and cored

Preheat oven to 375°F. Roll out 2 pastry shells as directed in Basic Pastry recipe (page 39). Place one in a 9-inch pie plate and reserve remaining pastry shell.

Use the metal blade to process the sugar, flour, cinnamon and nutmeg, about 5 seconds. Leave in work bowl.

Insert the standard slicing disc. Slice apples using medium pressure. Transfer apple/spice mixture to the pie plate. Place second crust over apples.

Pinch crust edges together and form a decorative edge. With a sharp knife, make 6-8 small cuts in top crust to allow steam to escape. Place pie on a baking sheet and bake until juices bubble, about 45 minutes.

Yield 1 9-inch pie.

Oil pan(s) lightly and sprinkle with cornmeal. Fold rolled dough in half loosely, then in half again. Position point at center of pan and gently unfold. Press into place from center outward, turn under the 1-inch overhang and shape it into a rim. Crust(s) is now ready to bake and fill.

Yield one 14-inch pizza crust or two 9-inch pizza crusts

Pizza in a Hurry

It takes no longer to make this pizza than to wait for one you order to take out.

INGREDIENTS	
1	14-in. pizza crust (see recipe pg. 41)
4	ounces Parmesan cheese, at room temperature
2	ounces pepperoni, cut into 3 pieces
12	ounces Mozzarella cheese, very cold
1	small onion, peeled, ends cut flat
1	medium green pepper, cored, seeded and cut flat at stem
1	medium tomato, cored and cut flat at ends
1	cup Tomato Pizza sauce (see recipe on page 42)
	Pinch of sugar
	Freshly ground black pepper
1/2	teaspoon dried basil
1/2	teaspoon dried oregano

Preheat oven to 425°F. and place rack in lower third. Bake pizza crust for 6 minutes. In the meantime, prepare filling.

Use metal blade to process Parmesan cheese and pepperoni until coarsely chopped. Reserve.

Insert shredding disc and process Mozzarella cheese. Reserve.

Insert standard slicing disc and slice onion. Reserve. Slice green pepper and reserve. Slice tomato, using light pressure. Set aside on paper towels to drain.

Use rubber spatula to spread tomato sauce evenly over crust, leaving rim exposed. Separate onion slices into rings and distribute them over sauce. Distribute shredded Mozzarella over onions. Arrange tomato slices over cheese and sprinkle with pinch of sugar and pepper.

Distribute Parmesan cheese and pepperoni mixture, then green pepper slices, over tomatoes. Sprinkle evenly with basil and oregano. Return pizza to oven and bake for 18 minutes, or until rim of crust is golden and bottom is deep brown.

Yield 1 14-inch pizza.

Tomato Pizza Sauce

When this sauce stands, liquid may accumulate on the surface. Pour off all but 2 tablespoons, then stir well before using.

INGREDIENTS	
2	large tomatoes, peeled, seeded and quartered
1	cup canned tomato sauce
1/4	cup canned tomato paste
3/4	teaspoon dried oregano
3/4	teaspoon dried basil
1	teaspoon sugar
	Salt and freshly ground black pepper

Use metal blade to coarsely chop tomatoes about 6 times. Add remaining ingredients and pulse 4 times to mix.

Yield 2 cups.

Chocolate Chip Oatmeal Cookies

Toasted nuts and oatmeal make these cookies good for you as well as delicious.

INGREDIENTS	
3/4	cup quick-cooking oatmeal
1	cup pecans
1	cup butter, in 1-inch pieces
1/2	cup sugar
3/4	cup firmly packed light brown sugar
2	large eggs
1	teaspoon vanilla extract
1-1/2	cups flour
1	teaspoon baking soda
3/4	teaspoon salt
9	ounces semi-sweet chocolate chips
	Vegetable oil cooking spray

Preheat oven to 350°F. and place rack in center. Toast oatmeal and pecans on baking sheet until lightly browned, about 10 minutes. Remove and reserve. Turn oven up to 375°F.

Use metal blade to process butter and both sugars until smooth, about 2 minutes. Scrape work bowl as necessary. Add eggs and vanilla; pulse until just mixed, about 6 times.

Add toasted pecans, flour, baking soda, salt and half the toasted oatmeal. Pulse until mixed, about 8 times. Remove to large bowl, add remaining oatmeal and chocolate chips and stir to mix. Drop by rounded teaspoonfuls onto greased baking sheets 1 inch apart and bake until golden brown, about 11 minutes.

Yield 48 2-1/2 inch cookies.

Carrot Cake

To make this delicious, moist cake look really professional, place a marzipan carrot in the center. You can buy them at many pastry or candy shops.

INGREDIENTS	
	Butter for pans
	Fine, dry bread crumbs for dusting pans
1/2	pound carrots, peeled
1/2	cup granulated sugar
1/2	cup firmly packed dark brown sugar
2	large eggs
1/2	cup corn oil
1	teaspoon vanilla extract
3/4	cup walnut pieces
1	cup all-purpose flour
1/2	tablespoon unsweetened cocoa
1	teaspoon baking powder
1	teaspoon cinnamon
1/2	teaspoon baking soda
1/2	teaspoon salt
1/2	cup raisins, steamed over boiling water for 10 minutes
	Cream Cheese Frosting (recipe follows)

Preheat oven to 350°F. Butter two 8-inch round cake pans, line bottoms with parchment paper and butter paper. Dust pans with bread crumbs.

Cut carrots into lengths to fit tube horizontally. Use shredding disc to shred carrots; reserve.

Process sugars, eggs, oil and vanilla with metal blade until smooth, about 15 seconds. Add walnuts and dry ingredients; pulse until combined, about 6 times, stopping once to scrape down work bowl. Use spatula to stir in raisins and carrots.

Divide batter between prepared pans and bake in preheated oven until a cake tester inserted in the center comes out clean, about 35 to 40 minutes. Cool in pans for 2 to 3 minutes and turn out onto wire racks to cool completely. Remove paper.

Spread frosting between layers and on top and sides of cake.

Yield 8 to 10 servings.

Cream Cheese Frosting

This quick, easy frosting is delicious on carrot cake, but it is also good on many other cakes.

INGREDIENTS	
1/2	pound cream cheese, in 1-inch pieces
1/2	stick butter, in 1-inch pieces
1	cup confectioner's sugar
1/2	teaspoon vanilla extract

Use metal blade to process cream cheese and butter until combined, about 10 seconds. Add sugar and process until smooth, about 5 seconds. Add vanilla and process until smooth, about 15 seconds.

Frosts 2 8-inch layers.

Pear Frozen Yogurt

INGREDIENTS	
4	medium pears, peeled and cored
1/3	cup confectioner's sugar
2/3	cup yogurt
1-1/2	tablespoons lemon juice

At least 5 hours before serving, prepare fruit by cutting it into 1-inch pieces. Freeze all of fruit in a single layer on baking sheet.

A few minutes before serving, process frozen fruit and sugar with metal blade, pulsing about 8 times. Then process continuously until fruit is finely chopped, scraping work bowl and cover as necessary.

Add yogurt and lemon juice; process just until mixture becomes smooth and creamy, scraping down work bowl as necessary. Taste for sweetness, adding more sugar if necessary.

Serve immediately, or freeze for later use. To prepare frozen mixture for serving, cut into 1-inch chunks. Process with metal blade just until mixture becomes smooth and creamy.

Banana-Apple Sherbet

INGREDIENTS	
3	medium Golden Delicious apples, peeled and cored
3	small bananas
1-1/2	tablespoons confectioner's sugar
2	tablespoons lemon juice

At least 5 hours before serving, prepare fruit by cutting it into 1-inch pieces. Freeze 3/4 of fruit in a single layer on baking sheet and refrigerate remaining fruit.

A few minutes before serving, process frozen fruit and sugar with metal blade, pulsing about 8 times. Then process continuously until fruit is finely chopped, scraping work bowl and cover as necessary.

Add refrigerated fruit and lemon juice; process just until mixture becomes smooth and creamy, scraping down work bowl as necessary. Taste for sweetness, adding more sugar if necessary.

Serve immediately, or freeze for later use. To prepare frozen mixture for serving, cut into 1-inch chunks. Process with metal blade just until mixture becomes smooth and creamy.

WARRANTY

46

CUISINART® PRO CUSTOM 11™ FOOD PROCESSOR LIMITED THREE-YEAR WARRANTY ON THE ENTIRE MACHINE.

FULL FIVE-YEAR WARRANTY ON MOTOR

This warranty supersedes all previous warranties on Cuisinart® Pro Custom 11™ Food Processors.

This warranty is available to consumers only. You are a consumer if you are the owner of a Cuisinart® Pro Custom 11™ Food Processor that was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Pro Custom 11™ Food Processor will be free of defects in material and workmanship under normal home use for three years from the date of original purchase.

We warrant that the motor for your Cuisinart® Pro Custom 11™ Food Processor will be free of defects in material and workmanship under normal home use for five years from the date of original purchase. This motor warranty covers the motor and excludes all other parts in the motor base assembly area such as the upper and lower plastic housings, work bowl and cover, blades and all electrical components and vertical projecting motor shaft sheath.

We suggest that you complete and return the enclosed product

registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Pro Custom 11™ Food Processor should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it, without charge to you. To obtain warranty service, call our toll-free number 800-726-0190 for additional information from our Customer Service Representatives. Or send the defective product to Customer Service at Cuisinart, 150 Milford Road, East Windsor, New Jersey 08520. To facilitate the speed and accuracy of your return, please enclose a check or money order for \$10.00 shipping and handling. **DO NOT SEND CASH.**

Under California law, only proof of purchase is required. California residents should call 800-726-0190 for shipping instructions. If the problem with the machine is determined to be a defect of the motor within the warranty period, all postage and handling charges will be refunded.

Please be sure to include a return address, daytime telephone number, description of the product defect, product serial number, original date of purchase, and any other information

pertinent to the product's return.

Your Cuisinart® Pro Custom 11™ Food Processor has been manufactured to the strictest specifications and has been designed for use with Cuisinart® Pro Custom 11™ Food Processor authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair service other than those authorized by Cuisinart.

This warranty excludes all incidental or consequential damages.

Warning:

Our Pro Custom 11™ Food Processor and Accessories have been carefully designed and manufactured with the highest quality materials to assure your satisfaction and safety. Although accessories sold by companies other than Cuisinart may be compatible with your Cuisinart® machine, they may also be extremely dangerous, and expose the user to serious injury.

We specifically caution you not to use other brand accessories, such as juicers, which permit your machine to operate with exposed cutting or shredding discs. We also caution you not to use the large feed tube on this machine with machines built by other manufacturers.

If you have any questions about the safety features of your Cuisinart® Pro Custom 11™ Food Processor or any Cuisinart® product, please contact us at 800-726-0190.

Cuisinart®

SAVOR THE GOOD LIFE®



Coffeemakers



Ice Cream
Makers



Toasters



Hand
Mixers



Blenders

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life®.

www.cuisinart.com

© 2003 Cuisinart
Cuisinart® is a registered trademark of
Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China
03CU13135

IB-4274A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>