


IMPORTANT NOTE!

This gauge has an hour meter and odometer preset option available only for the first 1.0 engine hour and 10 miles (16km). See "ODO/HR PRESET" for instructions.

Dakota Digital

UTV-1200 Multi Gauge for 2008 Yamaha Rhino

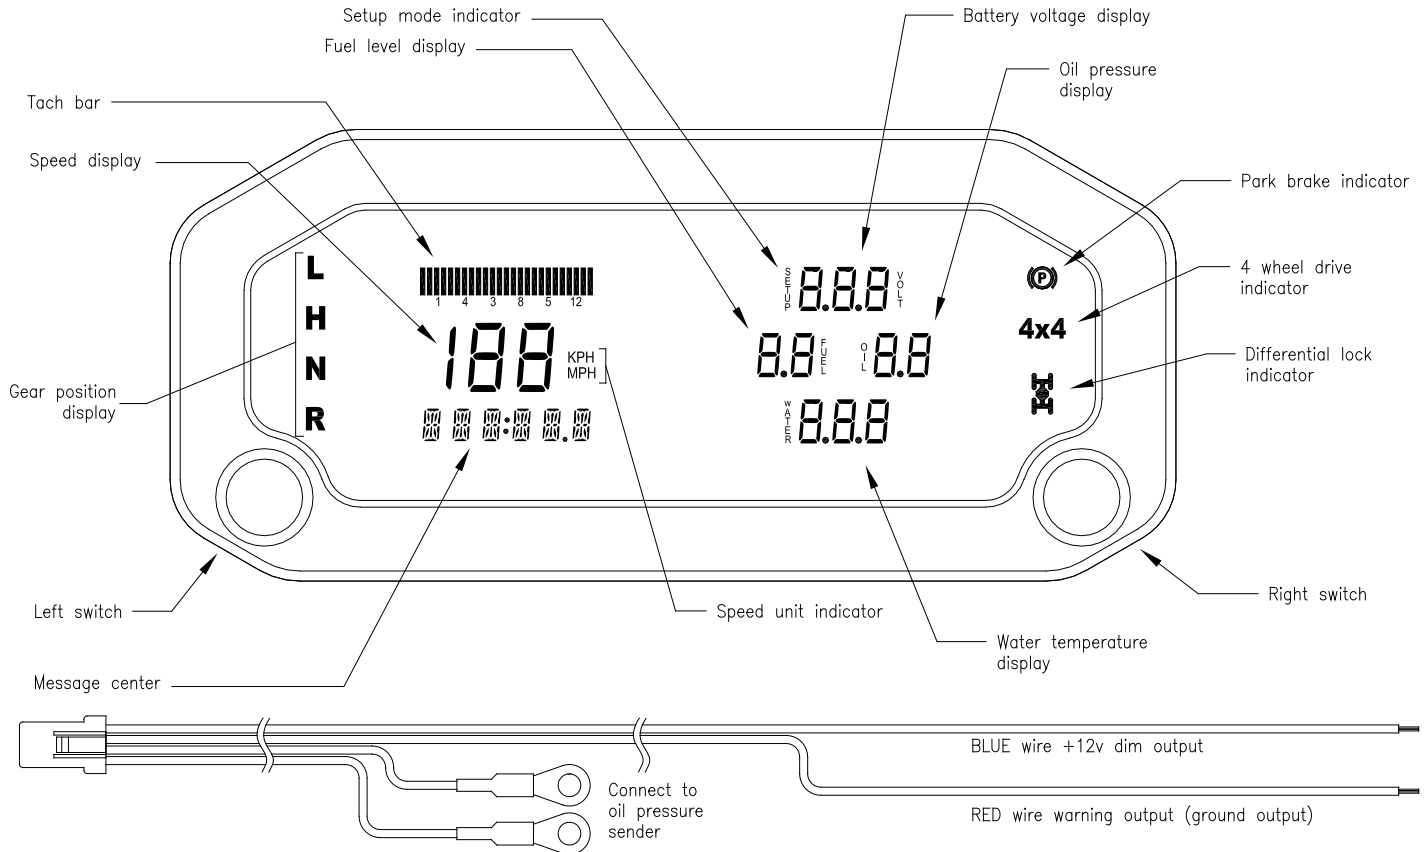

Operation menu

Left switch functions

Pressing the left switch during normal gauge operation will move through the below commonly viewed functions for convenience.

000000
12:00A

Odometer

Clock (hold left switch to set)

Setting clock:

Left switch press moves between hours and minutes

Right switch press changes current value

Hold left switch again to exit clock set mode

H 00

Hourmeter

Right switch functions

Pressing the right function switch during normal operation will scroll through the following display functions. A heading will first appear after each press to display the currently selected function. After about 2 seconds, the display will show the data for the selected function.

Heading

TRIP A

TRIP B

SRV MI (SRV KM)

SRV HR

MPH (KPH)

TACH

Data

A 00

B 00

S 0000

SH 000

00 MPH (00 KPH)

R 0000

Description

Trip A (hold right switch to reset)

Trip B (hold right switch to reset)

Count down Service odometer if enabled (hold right switch to reset)

Count down service hour meter if enabled (hold right switch to reset)

Alternate speed display (hold right switch to change primary unit)

Tachometer displays in information center

INSTALLATION:

1. Disconnect the battery to prevent possible damage to the electrical system or gauge during install.
2. Remove the stock gauge or indicator panel (see service manual for removal instructions). The UTV gauge will mount in this mounting location.
3. Remove the seats, console/engine cover, front engine cover, and center floor/front drive shaft cover (refer to service manual). This allows access to sensor locations on the engine and wire routing locations.
4. Oil sender installation:
 - a. Turn the provided oil sender into the oil pressure sender hose fitting. Sealant tape may be used on this sender as the gauge provides ground through the harness.
 - b. Tighten the sender into the fitting with appropriate wrenches.
 - c. Cut either one of the hoses going to the oil cooler toward the front of the engine to allow the installation of the oil sender T-fixture. It doesn't matter which hose. Have some rags handy as the hose will leak some oil.
 - d. Place a hose clamp onto each end of the cut oil cooler hose. Two hose clamps are included with the gauge.
 - e. Insert the fitting into the hose and tighten hose clamps onto hose and fitting.
 - f. Remove terminal thumb nuts on oil pressure sender and put ring terminals from oil sender harness onto the terminals. Secure with terminal thumb nuts. The sender terminals don't have a polarity so just connect one wire to each terminal.
 - g. Route oil sender harness up to the gauge mounting location. Zip tie the harness with provided zip ties so that it will not be pinched or damaged.
 - h. **Be sure to check engine oil level and add oil if needed.**
5. Route the wires from the UTV gauge through the hole in the gauge opening and place gauge into opening. Secure the gauge with the three provided washers and thumb nuts.
6. Plug the four pin connector from the oil pressure harness into the four pin connector in back of gauge.
7. Locate the 6 pin gauge connector in the Rhino harness. This connector will be located close to the gauge mount location on the under hood side of the dash panel.
8. Plug the 6 pin gauge connector 6 pin connector on the Rhino.
9. Reconnect battery.
10. Turn the key on and verify that the gauge functions as expected.
11. Start engine and check for oil leaks. Shut off engine.
12. If there are no oil leaks, reinstall the floor panels, engine covers and seats as described in the service manual.
13. Installation is now complete. If you experience difficulties check the troubleshooting section in this manual.



SETUP

- a. To enter setup for speed calibration changes: Press and hold left switch while starting engine.
- b. To enter setup for all other setup options: Press and hold left switch while turning the key on.

- Press the left switch to move through the menus or change the settings after a menu option is selected.
- Hold the left switch for more than 2 seconds to scroll through options or settings
- Press the right switch to select a menu option or to save a setting and go back to the menu.

SETUP	Release switch to enter setup menu
INFO	Information menu
VER	Displays software version
0121	Current software version
SP CAL	Displays current speed cal value
150000	Current speed cal value
MAIN	Returns to info menu

SPEED	Speed gauge menu
UNIT	Select unit for speed
AUTO	Toggle between MPH and KPH (select unit to use for calibration)
ADJUST	Auto calibrate speed to a marked mile or kilometer
ADJUST	Pulls up all values \ll on speed and speed pulses in odometer
SRV MI (SRV KM)	Press Right switch to finish cal and save value
OFF (OFF)	Adjust speed cal while driving
500 (800)	Each press of left switch toggles direction of adjustment, right switch to save and exit
...	Sets value of service odometer set when service odometer is reset
7500 (12000)	Turns off the count down service odometer (default)
MAIN	Sets service to 500 mi or 800 km when resetting service odometer.
	Service point can be set in 500 mi (800km) increments.
	Sets service to 7500 mi or 12000 km when resetting service odometer.
	Returns to info menu
TACH	Tachometer gauge menu
UPDATE	Sets update rate for tachometer readout screen
SLOW	tach updates at slowest rate (default)
MEDIUM	
FAST	fastest update on tach
WARN	Sets RPM warning point (default 5500 RPM)
W 2250	Minimum warning point of 2250 RPM
...	Warning point can be set in 250 RPM increments
W 9750	Maximum warning point of 9750 RPM
SRV HR	Sets service hour value used when resetting count down service hour meter
OFF	Service hour meter disabled (default)
10	Minimum service hour set point
...	Service hour reset point can be set in 10 hr increments
3 10	Maximum service hour set point
MAIN	Returns to info menu
GAUGES	Gauge option menu
VLT HI	Set high voltage warning point (default 15.4V)
VLT LO	Set low voltage warning point (default 11.1 V)
OIL LO	Set low oil pressure warning point (default 9 PSI)
WTR HI	Set high water temp warning point and set temperature unit (default 251F)
DEG F (DEG C)	Select temp unit, press left switch to change, right switch to save
WTR HI	Select high warning, left switch to change, right switch to save
MAIN	Returns to info menu
OPTION	Option menu
DIM LV	Adjust dimming point on gauge
OFF	Dimming function is off
LVL 1	Gauge will dim when light on gauge face is very low (default)
...	7 selectable dimming levels
LVL 7	Gauge will dim early when more light is on gauge face
DIM OUT	Enables/disables dim output for other gauges
ON	Dim output will be high when gauge is dimming
OFF	Dim output will be disabled (default)
WUN OUT	Selects which gauges provide a warn out signal on warn out wire (default all on)
WUN OUT	Gauges that provide signal out are lit up, left switch to change, right switch to save
NO WUN	Warn output wire is disabled
CLOCK±	Adjust clock speed for accuracy
-7 SEC	Subtract 7 seconds from clock every 24 hrs
...	
0 SEC	No adjustment to factory clock speed (default)
...	
+7 SEC	Add seven seconds to clock every 24 hrs
ST 000	Allows presetting of odometer value on initial install (not available after 10 miles / 16km)
SET HR	Allows presetting of hour meter value on initial install (not available after 1.0 hrs)
MAIN	Returns to info menu
DONE	Leaves setup menu if selected

ADDITIONAL SETUP NOTES:

SPEED – AUTO

This setup option allows calibrating to a known mile or kilometer. By default, the speed is calibrated to use the Rhino Factory speed signal. Calibration should only be needed if the factory calibration is no longer correct due to changes to tires or gearing.

1. Start with vehicle at the beginning of the marked mile or kilometer and turn the key off.
2. Start engine while holding the left switch to enter setup.
3. Select speed option in setup and select appropriate unit (if you will be calculating to a known kilometer choose KPH, else choose MPH).
4. Select the Auto option. The gauge will light all the displays and the speed display will read `CL`.
5. Begin driving the mile or kilometer. The message center will read the number of pulses read from the speed signal. This value cannot be used to determine if a mile or kilometer has been driven.
6. At the end of the mile or kilometer, stop the vehicle and press the right switch to save the new speed calibration. The gauge will return to the speed setup menu.

SPEED – ADJUST

This setup option allows adjustment to speed while driving. By default, the speed is calibrated to use the Rhino Factory speed signal. Calibration should only be needed if the factory calibration is no longer correct due to changes to tires or gearing.

1. Start vehicle while holding the left switch to enter setup.
2. Select speed option in setup and select appropriate unit (if you will be calculating to a known kilometer choose KPH, else choose MPH).
3. Select the ADJUST option. The gauge will light all the displays and the message center will read `ADJUST`.
4. Follow another vehicle traveling at a constant known speed. Hold the left switch to begin increasing the speed reading. To decrease the speed reading, release the switch and press and hold the switch again.
5. The direction of adjustment will change each time the switch is released.
6. When the speed has been adjusted, press the right switch to save the new speed calibration. The gauge will return to the speed setup menu.

ODO/HR PRESET

Within the first 10 miles (16 km) and 1.0 engine hours after first installing the gauge, the option is available for a ONE TIME preset of the odometer and hour meter to the reading(s) of the previous gauge. If this option is not used within the first 10 miles (16 km) or 1.0 engine hours or an incorrect reading is saved, the gauge will need to be returned to Dakota Digital for any odometer/hour meter adjustment. The procedure to preset the meters is as follows:

1. If setting odometer select `ST ODO` option in setup. If setting hour meter select `SET HR`.
2. For odometer preset, verify that correct unit is displayed above message center. If not, turn key off to leave setup and use unit option under speed to set correct unit. **NOTE: Preset MUST be done with correct unit or odometer will not be set correctly!**
3. The current odometer / hour meter value is displayed with the first digit blinking.
4. Press and release the left switch to change the digit. Press and release the right switch to move on to the next digit.
5. Repeat step 4 until all digits are set. After tenths digit is set, press and release the right switch.
6. Water temp display will read `"no"`. Check the current unit (if in odo preset) and the odometer / hour meter value to make sure it is correct. If not, press and release the right switch to go back and make changes.
7. **NOTE: Check the displayed odometer value VERY carefully before next step. After selecting yes, you will no longer be able to change the odometer / hour meter.**
8. If the settings are all correct, press and release the left switch. Water temp display will read `"YES"`.
9. Press and release the right switch to preset the odometer / hour meter to the new value.

SERVICE METERS

This gauge has two service meters. These are a countdown hour meter and a countdown odometer. Both service meters can be disabled, or enabled independently. This allows for setting of two individual service points, one based on engine run time, the other based on odometer. This could also allow for setting a service point on whichever service point comes first, hourly or odometer.

When the setup point is reached, `SERVICE DUE` will scroll in the message center. Pressing either switch will clear the message until the next time the key is turned on. Once the service has been done, use the left switch to select the service meter that is due (display will show a negative value or zero). Press and hold the right switch to reset the service meter to the value set in setup.

The service meter can be disabled by selecting `OFF` in setup. If a new value is set for the service meter, and the meter was previously set to `OFF`, the service message may immediately be displayed. Reset the service meter to begin a new countdown.

OPTION – DIM OUT

The dim out option allows the dim output to be turned on or off. The dim output is used if you have installed other Dakota Digital gauges and would like this gauge to also control the dimming of these gauges. If the dim out option is turned on, 12v is sent out on the dim out wire when the gauge is dimming. In this mode, the gauge will be either in dim mode or full brightness mode.

If no other gauges are to be dimmed, this option can be set to off. In this mode the gauge will fade when dimming and gauge dimming will be less noticeable.

TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
Gauge does not light up	Gauge has bad ground or power	Check connections to wiring harness and check wiring harness and gauge wires for pinched or broken wires.
Speed reads incorrectly	Speedometer needs to be recalibrated	See setup for speed calibration instructions.
Gauge does not dim	Dim level is set to off or set too low	Set dim level to higher level (see setup)
Gauge is always dim	Dim level is set too high Light sensor over left switch is covered	Set dim level to lower level (see setup) Make sure left side of lens is not covered.
EEE is displayed in fuel or oil display	No sender connected.	Check proper connection to sender. Check for broken or pinched sensor wires.
--- is displayed in fuel or oil display.	Sensor wire is shorted to ground.	Check sensor wire harness for correct connection to sensor. Check for pinched or broken sensor wire harness.
SERVICE DUE is scrolled in the message center	One of the countdown service meters has reached zero	Perform service and reset service meter by holding right switch when service meter is displayed. If service meter operation is not desired, disable service meter by setting to OFF in the setup menu.
ERR 01 to ERR 99 is displayed in the message center	The Rhino engine computer is sending error codes to the gauge.	See your Yamaha dealer for appropriate service.
ERR 11 is displayed in message center	Gauge has poor bus connection to Rhino engine computer.	Check for good connection to gauge harness.
ERR 12 is displayed in message center	Bus wire is always in high state. Gauge bus circuit damaged.	Check for shorts to 12V on bus wire. Repair needed.
ERR 13 is displayed in message center	Bus wire is shorted to ground.	Check for shorts to ground on bus wire. Check for proper connection to Rhino harness.

GAUGE WIRE COLOR CHART

VIOLET / BLACK	Data bus
BLACK / RED	Keyed power
WHITE / BLUE	Ground
WHITE	Fuel sender
GREEN / BLUE	Constant power

SERVICE AND REPAIR

DAKOTA DIGITAL offers complete service and repair of its product line. In addition, technical consultation is available to help you work through any questions or problems you may be having installing one of our products. Please read through the Troubleshooting Guide. There, you will find the solution to most problems.

Should you ever need to send the unit back for repairs, please call our technical support line, (605) 332-6513, to request a Return Merchandise Authorization number. Package the product in a good quality box along with plenty of packing material. Ship the product by UPS or insured Parcel Post. Be sure to include the RMA number on the package, and include a complete description of the problem with RMA number, your full name and address (street address preferred), and a telephone number where you can be reached during the day. Any returns for warranty work must include a copy of the dated sales receipt from your place of purchase. Send no money. We will bill you after repair.

Dakota Digital 24 Month Warranty

DAKOTA DIGITAL warrants to the ORIGINAL PURCHASER of this product that should it, under normal use and condition, be proven defective in material or workmanship within 24 MONTHS FROM THE DATE OF PURCHASE, such defect(s) will be repaired or replaced at Dakota Digital's option.

This warranty does not cover nor extend to damage to the vehicle's systems, and does not cover removal or reinstallation of the product. This Warranty does not apply to any product or part thereof which in the opinion of the Company has been damaged through alteration, improper installation, mishandling, misuse, neglect, or accident.

This Warranty is in lieu of all other expressed warranties or liabilities. Any implied warranties, including any implied warranty of merchantability, shall be limited to the duration of this written warranty. Any action for breach of any warranty hereunder, including any implied warranty of merchantability, must be brought within a period of 24 months from date of original purchase. No person or representative is authorized to assume, for Dakota Digital, any liability other than expressed herein in connection with the sale of this product.

Dakota Digital

4510 W. 61ST St. N., Sioux Falls, SD 57107
Phone: (605) 332-6513 FAX: (605) 339-4106

www.dakotadigital.com

dakotasupport@dakotadigital.com

©Copyright 2009 Dakota Digital Inc.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>