



iMediaChassis series

- ***iMediaChassis/20***
- ***iMediaChassis/6***
- ***iMediaChassis/3***

Operation Manual



FCC Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B computing device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which the user will be required to correct the interference at his own expense.

Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

The use of non-shielded I/O cables may not guarantee compliance with FCC RFI limits. This digital apparatus does not exceed the Class B limits for radio noise emission from digital apparatus set out in the Radio Interference Regulation of the Canadian Department of Communications.

Le présent appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique publié par le ministère des Communications du Canada.

Warranty

IMC Networks warrants to the original end-user purchaser that this product, EXCLUSIVE OF SOFTWARE, shall be free from defects in materials and workmanship under normal and proper use in accordance with IMC Networks' instructions and directions for a period of six (6) years after the original date of purchase. This warranty is subject to the limitations set forth below.

At its option, IMC Networks will repair or replace at no charge the product which proves to be defective within such warranty period. This limited warranty shall not apply if the IMC Networks product has been damaged by unreasonable use, accident, negligence, service or modification by anyone other than an authorized IMC Networks Service Technician or by any other causes unrelated to defective materials or workmanship. Any replaced or repaired products or parts carry a ninety (90) day warranty or the remainder of the initial warranty period, whichever is longer.

To receive in-warranty service, the defective product must be received at IMC Networks no later than the end of the warranty period. The product must be accompanied by proof of purchase, satisfactory to IMC Networks, denoting product serial number and purchase date, a written description of the defect and a Return Merchandise Authorization (RMA) number issued by IMC Networks. No products will be accepted by IMC Networks which do not have an RMA number. For an RMA number, contact IMC Networks at PHONE: (800) 624-1070 (in the U.S and Canada) or (949) 465-3000 or FAX: (949) 465-3020. The end-user shall return the defective product to IMC Networks, freight, customs and handling charges prepaid. End-user agrees to accept all liability for loss of or damages to the returned product during shipment. IMC Networks shall repair or replace the returned product, at its option, and return the repaired or new product to the end-user, freight prepaid, via method to be determined by IMC Networks. IMC Networks shall not be liable for any costs of procurement of substitute goods, loss of profits, or any incidental, consequential, and/or special damages of any kind resulting from a breach of any applicable express or implied warranty, breach of any obligation arising from breach of warranty, or otherwise with respect to the manufacture and sale of any IMC Networks product, whether or not IMC Networks has been advised of the possibility of such loss or damage.

EXCEPT FOR THE EXPRESS WARRANTY SET FORTH ABOVE, IMC NETWORKS MAKES NO OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, WITH RESPECT TO THIS IMC NETWORKS PRODUCT, INCLUDING WITHOUT LIMITATION ANY SOFTWARE ASSOCIATED OR INCLUDED. IMC NETWORKS SHALL DISREGARD AND NOT BE BOUND BY ANY REPRESENTATIONS OR WARRANTIES MADE BY ANY OTHER PERSON, INCLUDING EMPLOYEES, DISTRIBUTORS, RESELLERS OR DEALERS OF IMC NETWORKS, WHICH ARE

INCONSISTENT WITH THE WARRANTY SET FORTH ABOVE. ALL IMPLIED WARRANTIES INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED TO THE DURATION OF THE EXPRESS WARRANTY STATED ABOVE.

Every reasonable effort has been made to ensure that IMC Networks product manuals and promotional materials accurately describe IMC Networks product specifications and capabilities at the time of publication. However, because of ongoing improvements and updating of IMC Networks products, IMC Networks cannot guarantee the accuracy of printed materials after the date of publication and disclaims liability for changes, errors or omissions.

Table of Contents

FCC Radio Frequency Interference Statement	ii
Warranty.....	ii
About the iMediaChassis/20	1
iMediaChassis/20 Features	1
Alarm Reset, Last Gasp and Temperature Gauge	1
Reset Alarm Switch	2
Last Gasp Alarm	2
Temperature Gauge	2
SNMP Write Lock	2
SNMP Management Module LEDs	3
Installing the iMediaChassis/20	4
Wiring Instruction Guidelines for iMediaChassis/20-2DC.....	5
DC Power Supply Module Wiring Instructions.....	5
Installing SNMP Management and Application Modules.....	6
Replacing Power Supply Modules	7
User-Replaceable Power Supply Modules	7
Dual AC, Part Number 850-10960-2AC.....	7
Dual DC, Part Number 850-10954-2DC.....	8
Dual AC, Part Number 850-10956-2AC.....	8
iMediaChassis/20 Specifications	9
About the iMediaChassis/6	10
iMediaChassis/6 Features	10
Alarm Reset, Last Gasp, and Temperature Gauge	10
Alarm Reset Switch	10
Last Gasp Alarm	10
SNMP Write Lock	11
SNMP Management Module LEDs	11
Installing the iMediaChassis 6	12
Installing Management and Application Modules.....	13
Installing Applications Modules	13
DC Power Wiring, Replacing Power Supply Modules and Fans	14
DC Power Supply Wiring Instructions.....	14
User-Replaceable Power Supply Modules	14
Fans	14
iMediaChassis/6 Specifications	15

About the iMediaChassis/3	16
iMediaChassis/3 Features	16
Alarm Reset, Last Gasp, and Temperature Gauge	16
Alarm Reset Switch	16
Last Gasp Alarm	16
Installing the iMediaChassis/3	17
Installing Management and Application Modules.....	17
Installing Applications Modules	17
SNMP Write Lock	18
SNMP Management Module LEDs	19
DC Power Wiring, Replacing Power Supply Modules and Fans	19
DC Power Supply Module Wiring Instructions.....	19
Power Supply Modules	20
Fans	20
iMediaChassis/3 Specifications	20
Hardware Feature Matrix	21
IMC Networks Technical Support.....	22
Electrostatic Discharge Precautions.....	22
Safety Certifications.....	23

About the iMediaChassis/20

The iMediaChassis series is a modular chassis platform designed for use with IMC Networks' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/20 is a 3U high, Rackmountable chassis that features 20 slots for installing application series modules plus an additional slot for installing an SNMP Management Module. Some iMediaChassis/20 models are capable of redundant power supply modules. Power supply modules are user-replaceable and hot-swappable.

iMediaChassis/20 Features

The iMediaChassis/20 line offers models available in dual AC and dual DC versions. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and a Reset Alarm Switch.



Alarm Reset, Last Gasp and Temperature Gauge

The iMediaChassis series supports power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair.

User-Replaceable Power Supply Modules



Reset Alarm Switch

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power module. The alarm can be silenced by pressing the Reset Alarm switch, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply module itself also indicate power supply module failures.)

Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:


- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

Temperature Gauge

The iMediaChassis/20 includes a temperature monitoring gauge with a heat sensor on the backplane of the chassis. Users define a threshold for chassis temperature via SNMP. If the chassis' temperature rises above the specified level, the SNMP agent sends a trap (configured in iView²) to the administrator. There is also an LED indicator on the SNMP Management Module for chassis temperature.

SNMP Write Lock

There is an SNMP Write Lock switch located below slot #3 on the front of the iMediaChassis/20. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.

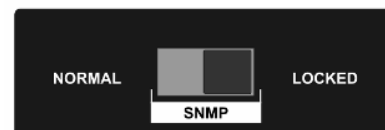

NOTE


Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about how to configure and operate. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:

- | | |
|----------------------|--|
| LNK/ACT | Glows green when a link is established on port.
Blinks green when data activity occurs. |
| FDX/COL | Glows yellow when port is in Full-Duplex mode.
Blinks yellow when port is operating in Half-Duplex mode and collisions occur. |
| TEMP | Glows yellow when temperature of unit surpasses a user-defined level. |
| PS | Glows yellow when one module malfunctions. |
| FAN A / FAN B | Glows yellow when a fan malfunctions. |



Installing the iMediaChassis/20

Install the chassis first before installing any modules into an iMediaChassis. When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:


1. Stay within the chassis' power rating to prevent overload of supply circuits or damage to any overcurrent protection and supply wiring.
2. Maintain a reliable ground, especially when connecting to a power strip instead of directly to a branch circuit.
3. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
4. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.
5. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
6. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
7. Plug the chassis into a reliable, filtered power source.
8. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
9. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
10. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
11. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
12. Reliable Grounding - Reliable grounding of Rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).
13. Both AC and DC versions are intended for use in a Restricted Access Location (RAL).

Wiring Instruction Guidelines for iMediaChassis/20-2DC

1. Connection of a suitable grounding conductor to the grounding terminal at each power supply module (a minimum 14AWG copper conductor should be suitable based on a 15A circuit breaker requirement).
2. Connection of suitable supply wiring to the plus and minus terminals at each power supply module (a minimum 14AWG copper conductors is considered suitable based on the 11A input maximum). The input terminal block at the power supply module is suitable for 22-14 AWG copper wire.
3. A suitable listed circuit breaker shall be provided in the building installation as the unit's disconnect device. The branch circuit rating (i.e. minimum 15A listed circuit breaker, etc.).

DC Power Supply Module Wiring Instructions

The following diagram shows the wiring configuration for a -48 VDC power supply module for the iMediaChassis/20-2DC.

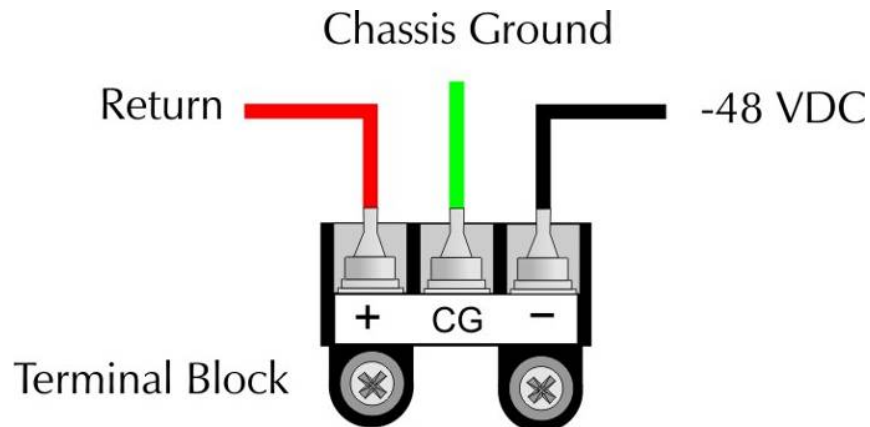

NOTE

The chassis is protected against incorrect wiring configurations. When wired incorrectly, the chassis will not function, but no damage will occur.

Installing SNMP Management and Application Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. IMC Networks recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

- Install the iMediaChassis/20 SNMP Management Module into the first slot of the chassis.

NOTE

This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules in this slot.



Replacing Power Supply Modules


User-Replaceable Power Supply Modules

While power supply modules are redundant, failed power supply modules should promptly be replaced to maintain network integrity and prevent data loss.


To replace a power supply module:

1. Disconnect the power source from the power supply module.
2. Remove the screws of the retainer plate (on some AC modules).
3. Move the Power Supply Release switch toward the right or unscrew captive release screw.
4. Before grasping the power supply module by the silver handle, slide out of the chassis (Power supply modules are hot-swappable).
5. Install new power supply module. If module is equipped with an ON/OFF switch install the module with the switch in the OFF position.


Dual AC, Part Number 850-10960-2AC

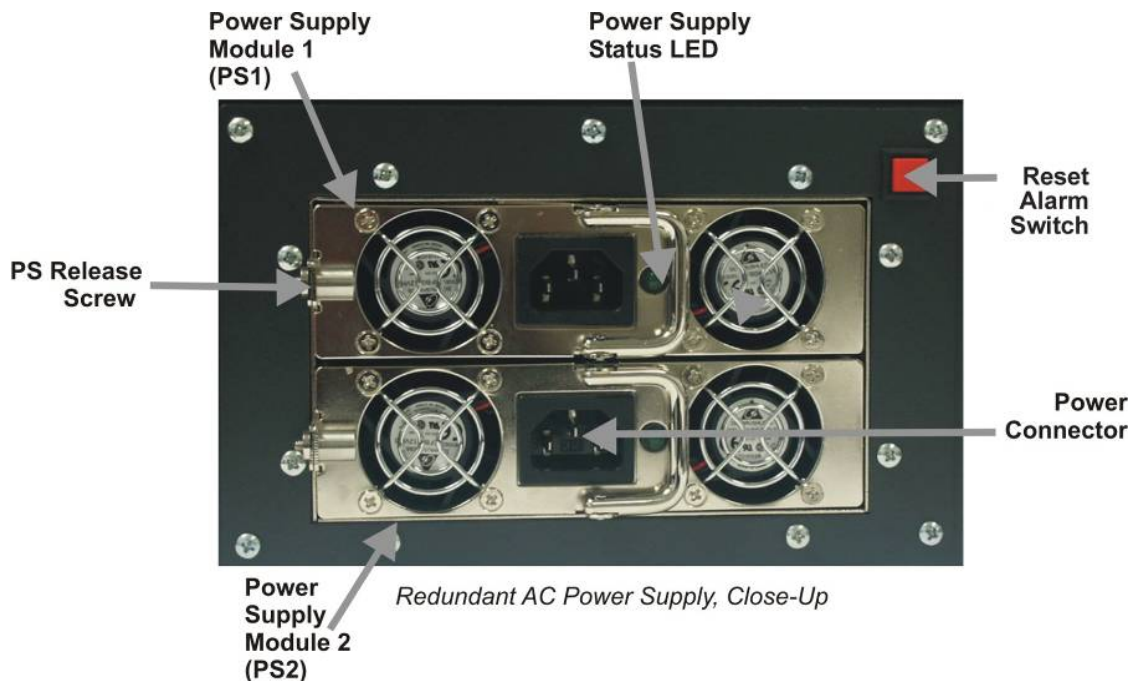

Dual DC, Part Number 850-10954-2DC

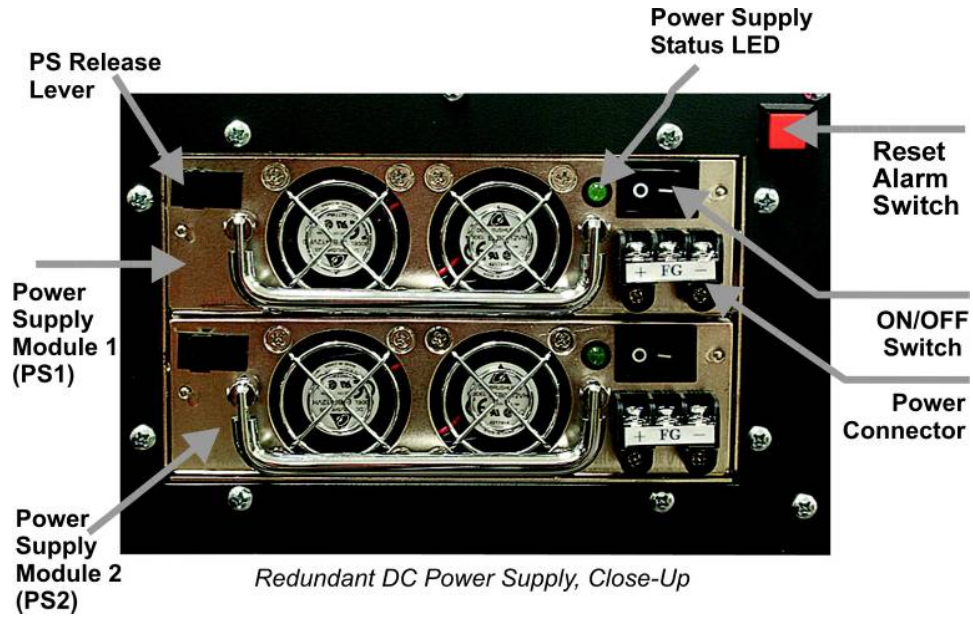

Dual AC, Part Number 850-10956-2AC

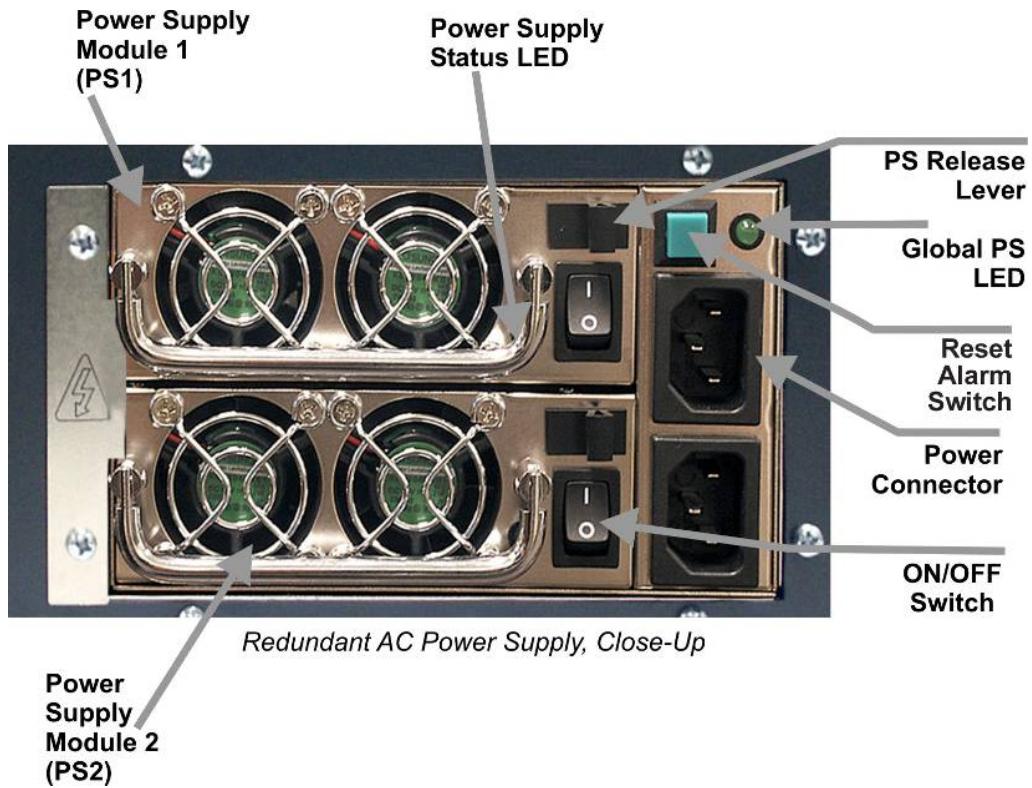

NOTE
<i>Do not mix AC and DC power supply modules.</i>

iMediaChassis/20 Specifications

Input Specifications

Dual AC Input: 100 to 240V \pm 10%, 47-63Hz, 6.3A Dual AC

Dual DC Input: -38 to -72V DC 11A max (per module)

Operating Temperature: 0° C to 50° C (32° F to 122° F)

Storage Temperature

Dual AC: -20° C to 80° C (-4° F to 176° F)

Dual DC: -20° C to 60° C (-4° F to 140° F)

Humidity:

Dual AC & DC: 20 to 90% (non-condensing at 40° C)

Shipping Weight

Dual AC: 30 lbs (13.6 kg)

Dual DC: 29 lbs (13.15 kg)

Dimensions: 5.2" x 19.0" x 13.8" (13.21cm x 48.26cm x 35.05cm)

About the iMediaChassis/6

The iMediaChassis series is a modular chassis platform designed for use with IMC Networks' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/6 is 1U high, Rackmountable, capable of offering redundant power supply modules, as well as an SNMP Management Module.

iMediaChassis/6 Features

The iMediaChassis/6 series offers a line of models including single AC, single DC and dual AC. It offers features such as end-user replaceable power supply modules, temperature monitoring, Last Gasp and an Reset Alarm Switch.



Alarm Reset, Last Gasp, and Temperature Gauge

The iMediaChassis series supports modular power supply modules, so that worn parts can be replaced without having to send an entire unit in for repair. Keeping fans functional ensures that the modules will operate within their temperature specifications.

Alarm Reset Switch

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply module. The alarm can be silenced by pressing the Alarm Reset Switch, located next to the power connector on the power supply module. If this occurs, remove and replace the power supply module immediately. (LEDs on the Management Module and the power supply itself also indicate power supply failures.) After stopping the alarm, remove the power supply and replace the power supply module.


Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

SNMP Write Lock

There is an SNMP Write Lock switch located above the SNMP module slot on the front of the iMediaChassis/6. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.

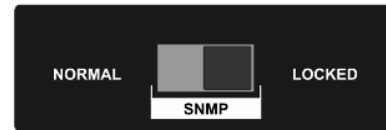

NOTE


Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about how to configure and operate. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:

- | | |
|----------------------|--|
| LNK/ACT | Glows green when a link is established on port.
Blinks green when data activity occurs. |
| FDX/COL | Glows yellow when port is in Full-Duplex mode.
Blinks yellow when port is operating in Half-Duplex mode and collisions occur. |
| TEMP | Glows yellow when temperature of unit surpasses a user-defined level. |
| PS | Glows yellow when one power supply module malfunctions. |
| FAN A / FAN B | Glows yellow when a fan malfunctions. |



Installing the iMediaChassis 6

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Stay within the chassis' power rating to prevent overload of supply circuits or damage to any overcurrent protection and supply wiring.
2. Maintain reliable ground, especially when connecting to a power strip instead of directly to a branch circuit.
3. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
4. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

To install a 6-slot Rack Mount chassis:

1. Have four #10 screws and four clip nuts available (hardware may vary depending on rack type). The rest of the hardware is supplied with the unit.
2. Locate a suitable location in the rack for installation and secure the clip-nuts onto the mounting rails. Use screws to attach the chassis to the rack.
3. Plug the chassis into a reliable, filtered power source.
4. Elevated Operating Ambient - If installed in a closed or multi-unit rack assembly, the operating ambient temperature of the rack environment may be greater than room ambient. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
5. Reduced Air Flow - Installation of the equipment in a rack should be such that the amount of air flow required for safe operation of the equipment is not compromised.
6. Mechanical Loading - Mounting of the equipment in the rack should be such that a hazardous condition is not achieved due to uneven mechanical loading.
7. Circuit Overloading - Consideration should be given to the connection of the equipment to the supply circuit and the effect that overloading of the circuits might have on over current protection and supply wiring.
8. Reliable Grounding - Reliable grounding of Rackmounted equipment should be maintained. Particular attention should be given to supply connections other than direct connections to the branch circuit (e.g., use of power strips).

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB-9 serial port, and supports SNMP V1/V2c.

Installing Management and Application Modules

Installing Applications Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. IMC Networks recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)
4. When installing modules observe ESD precautions, refer to the Electrostatic Discharge Precautions section.

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

- Install the iMediaChassis/6 slot into the first slot on the far left of the chassis.

NOTE


This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules into this slot.



DC Power Wiring, Replacing Power Supply Modules and Fans

DC Power Supply Wiring Instructions

The following diagram shows the wiring configurations for -48 VDC power supply modules for the iMediaChassis/6.

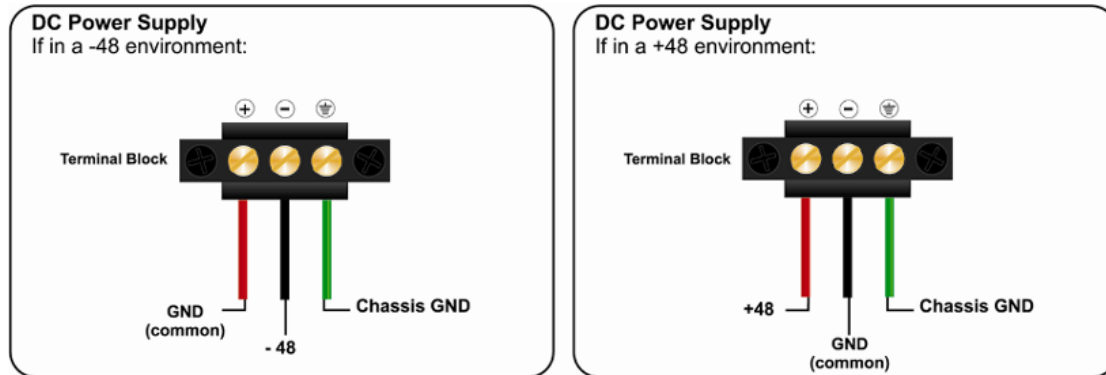

User-Replaceable Power Supply Modules

The iMediaChassis/6 ships from IMC Networks with one or two power supply modules installed depending on the model. Chassis ordered with one power supply come with a filler tray installed in the second slot.

To install a second power supply:

1. Remove the filler tray.
2. Slide the power supply module into the chassis and click into place.
3. Attach power cord.

To remove a power supply module:

1. Disconnect the power source from the power supply.
2. Move the Power Supply Release switch toward the right and hold while grasping the power supply module by the silver handle.
3. Slide out of the chassis. (Power supply modules are hot-swappable.)
4. Install new power supply module.

Fans

Users can define a threshold for fan operation via SNMP (when installed in a managed environment). If a fan's speed falls below the specified level, SNMP sends a trap (configured in iView²) to the administrator. There are also two LED indicators on the SNMP Management Module for fan failure.

The red Reset Alarm Switch also functions as a Fan Test button. To verify fan functionality, hold the button down for several seconds, the fans should engage. The fans will turn off when the button is released.

iMediaChassis/6 Specifications

Input Specifications

Dual AC Input: 100/240VAC 47-63Hz
1.8A @10VAC
115V @ 1.6A and 230V @ 0.8A (single)

Dual DC Input: 48VDC, 3.3A

Operating Temperature:

AC: -25° C to 50° C (-130° F - 122° F)

DC: -40° C to 100° C (-40° F - 212° F)

Storage Temperature:

AC: -40° C to 85° C (-40° F - 185° F)

DC: -55° C to 125° C (-67° F - 257° F)

Humidity: 5 - 90% (non-condensing); 0-10,000 ft. altitude

Shipping Weight: 13 lbs (5.90 kg)

Dimensions: 1.75" x 17.35" x 10.65" (4.45cm x 44.07cm x 27.05cm)

About the iMediaChassis/3

The iMediaChassis series is a modular chassis platform designed for use with IMC Networks' Simple Network Management Protocol (SNMP) manageable series of modules. The iMediaChassis/3 is a 1U high, a Rackmountable, capable of offering redundant power supply modules, as well as an SNMP Management Module.

iMediaChassis/3 Features

The iMediaChassis/3 series offers a line of models including single AC, single DC, dual AC and dual DC. All contain internal fixed power supply modules that are not end-user replaceable. It offers features such as redundant power supply modules, temperature monitoring, Last Gasp and an Alarm Reset Switch.



Alarm Reset, Last Gasp, and Temperature Gauge

The iMediaChassis/3 ships with one or two AC or DC power supply modules, depending on the model. Fans are included in all models.

Alarm Reset Switch

When one power supply module malfunctions, an audible alarm sounds indicating the loss of the power supply. The alarm can be silenced by pressing the Alarm Reset Switch, located next to the power connector on the power supply module. If this occurs the unit needs to be returned to IMC for repair.

Last Gasp Alarm

The iMediaChassis series includes the Last Gasp trap feature, "Remote Chassis Down", which sends a Trap when the following occurs:

- Both power supply modules malfunction
- Both power supply modules are powered down
- When the AC line fails

Installing the iMediaChassis/3

Install the chassis first before installing any modules into an iMediaChassis.

When installing the chassis, be sure to observe the following precautions to prevent electrical or mechanical damage:

1. Stay within the chassis' power rating to prevent overload of supply circuits or damage to any overcurrent protection and supply wiring.
2. Maintain reliable ground, especially when connecting to a power strip instead of directly to a branch circuit.
3. Protect the chassis from exposure to sunlight and electrical or magnetic fields.
4. Ensure that the equipment rack remains stable, even with the addition of the chassis and its associated cabling.

SNMP Management Modules include two twisted pair ports, one for management and one reserved for future use. The Management Module also features a DB-9 serial port, and supports SNMP V1/V2c.

Installing Management and Application Modules

Installing Applications Modules

To install a module:

1. Remove the blank bracket (if present) covering the slot where the module will be installed. IMC Networks recommends installing blank brackets in unused module slots.
2. Slide the module into the chassis using the card guides.
3. Secure the module to the chassis by tightening the captive screw. (Refer to the documentation shipped with the module for configuration information.)

In order to manage an iMediaChassis series, the SNMP Management Module needs to be installed in the appropriate slot of the chassis.

- Install the iMediaChassis/3 slot into the bottom left slot.


NOTE

This slot is ONLY for the Management Module; do not install Application Modules such as media conversion and mode conversion modules in this slot.



SNMP Write Lock

The SNMP Write Lock switch is located on the back of the iMediaChassis/3. The SNMP Write Lock switch prevents a new management board from re-configuring the application module settings (e.g., the status of features such as LinkLoss, FiberAlert, Force mode, etc.) made via SNMP on any previous Management Modules.

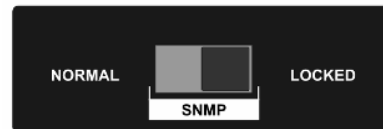

NOTE


Leave this switch in the **NORMAL** position during day-to-day operation; the **LOCKED** position should only be used when changing the SNMP management board.

The SNMP Management Module can be removed and replaced as necessary. Refer to the SNMP Management Module manual for complete instructions about how to configure and operate. If an SNMP Management Module is installed, refer to the LED panel below for indicators of Link, Temperature, Power Supply modules and other functions.

SNMP Management Module LEDs

The SNMP Management Module features several LEDs. The LED functions are:


LNK/ACT	Glows green when a link is established on port. Blinks green when data activity occurs.
FDX/COL	Glows yellow when port is in Full-Duplex mode. Blinks yellow when port is operating in Half-Duplex mode and collisions occur.
TEMP	Glows yellow when temperature of unit surpasses a user-defined level.
PS	Glows yellow when one power supply module malfunctions.
FAN A / FAN B	Glows yellow when a fan malfunctions.

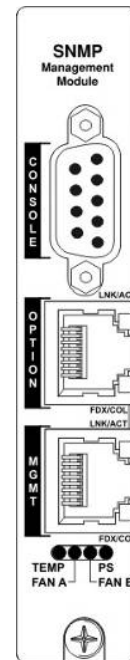

DC Power Wiring, Replacing Power Supply Modules and Fans

DC Power Supply Module Wiring Instructions

The following diagram shows the wiring configuration for a -48 VDC power supply module for the iMediaChassis/3.

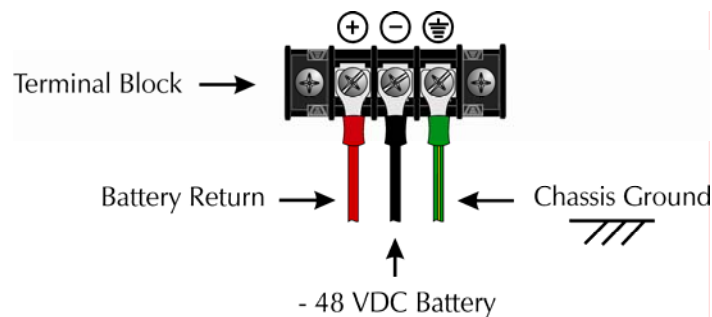

NOTE

Incorrect wiring will result in chassis malfunction.

The iMediaChassis/3 is compliant with Isolated Grounding Plane practices. The POSITIVE and NEGATIVE terminals are isolated from chassis ground and must have a ground reference at the power-sourcing equipment.

Power Supply Modules

Power supply modules in all models of the iMediaChassis/3 are fixed, and not end-user replaceable.

Fans

The iMediaChassis/3 includes temperature-triggered fans. When the temperature of the chassis reaches 40° C, the two fans activate to cool the chassis. The fans operation can be tested by holding the Reset Alarm Switch down for 4 to 5 seconds. The fans will activate and then they will turn off when the button is released. If the fans do not activate, contact IMC Networks. Fans are not end-user replaceable.

The red Alarm Reset Switch also functions as a Fan Test button. To verify fan functionality, hold the button down for several seconds, the fans should engage. The fans will turn off when the button is released.

iMediaChassis/3 Specifications

Input Specifications

Dual AC Input: 90 to 264 VAC, 47-440Hz

AC Inrush Current: <60A Peak @230VAC

AC Input Power: <74W

Dual DC Input: 35 to 75VDC

DC Input Current: 2.7A maximum @35VDC, Full Load

Operating Temperature:

AC: 0° C to 50° C (32° F to 122° F)

DC: -40° C to 100° C (-67° F to 257° F)

Storage Temperature:

AC: -40° C to 85° C (-40° F to 185° F)

DC: -55° C to 125° C (-40° F to 212° F)

Humidity: 5 to 90% (non-condensing); 0 to 10,000 ft. altitude

Shipping Weight: 5 lbs (2.3 kg)

Dimensions: H=1.73" W=7.50" D=8.74" (4.4 x 19.0 x 22.0 cm)

Hardware Feature Matrix

Power Supply	iMediaChassis/20	iMediaChassis/6	iMediaChassis/3
Versions	AC, 2AC, 2DC	AC, 2AC, DC, 2DC	AC, 2AC, DC, 2DC
Type	Modular	Modular	Fixed
End user replaceable	No	Yes	No
LEDs	Yes	Yes	Yes
Redundant upgrade on single slot chassis	No	Yes	No

*Trap can be set for exceeding a temperature value

** Active only when triggered by temperature reaching 40° C

IMC Networks Technical Support

Tel: (949) 465-3000 or (800) 624-1070 (in the U.S. and Canada);
+32-16-550880 (Europe)

Fax: (949) 465-3020

E-Mail: techsupport@imcnetworks.com

Web: www.imcnetworks.com

Electrostatic Discharge Precautions

Electrostatic discharge (ESD) can cause damage to your add-in modules. Always observe the following precautions when installing or handling an add-in module or any board assembly.

1. Do not remove unit from its protective packaging until you're ready to install it.
2. Wear an ESD wrist grounding strap before handling any module or component. If you do not have a wrist strap, maintain grounded contact with the system unit throughout any procedure requiring ESD protection.
3. Hold boards by the edges only; do not touch the electronic components or gold connectors.
4. After removal, always place the boards on a grounded, static-free surface, ESD pad or in a proper ESD bag. Do not slide the board over any surface.



WARNING! Integrated circuits and fiber optic components are extremely susceptible to electrostatic discharge damage. Do not handle these components directly unless you are a qualified service technician and use tools and techniques that conform to accepted industry practices.

Safety Certifications

UL/CUL: Listed to Safety of Information Technology Equipment, including Electrical Business Equipment.

CE: The products described herein comply with the Council Directive on Electromagnetic Compatibility:

iMediaChassis/20 (89/108/EC)

iMediaChassis/6 and 3 (89/336/EEC)

The Council Directive on Electrical Equipment Designed for use within Certain Voltage Limits:


iMediaChassis/20 (2006/95/EC)

iMediaChassis/6 and 3 (73-23-EEC)

Certified to Safety of Information Technology Equipment, Including Electrical Business Equipment. For further details, contact IMC Networks.



European Directive 2002/96/EC (WEEE) requires that any equipment that bears this symbol on product or packaging must not be disposed of with unsorted municipal waste. This symbol indicates that the equipment should be disposed of separately from regular household waste. It is the consumer's responsibility to dispose of this and all equipment so marked through designated collection facilities appointed by government or local authorities. Following these steps through proper disposal and recycling will help prevent potential negative consequences to the environment and human health. For more detailed information about proper disposal, please contact local authorities, waste disposal services, or the point of purchase for this equipment.

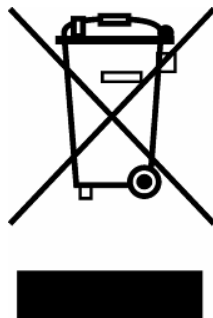



19772 Pauling • Foothill Ranch, CA 92610-2611 USA
TEL: (949) 465-3000 • FAX: (949) 465-3020
www.imcnetworks.com

**ISO 9001:2000
REGISTERED**



© 2008 IMCNetworks. All rights reserved.

The information in this document is subject to change without notice. IMC Networks assumes no responsibility for any errors that may appear in this document. iMediaChassis series is a trademark of IMC Networks. Other brands or product names may be trademarks and are the property of their respective companies.

Document Number 50-80954-01 A0

December 2008

If the product's part number begins with an "8", it is compliant with the Restriction of Hazardous Substances (RoHS) directive.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>